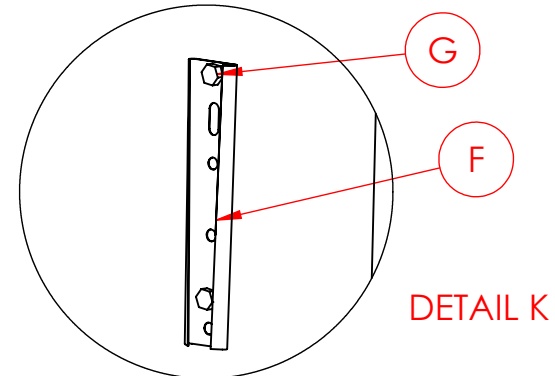 
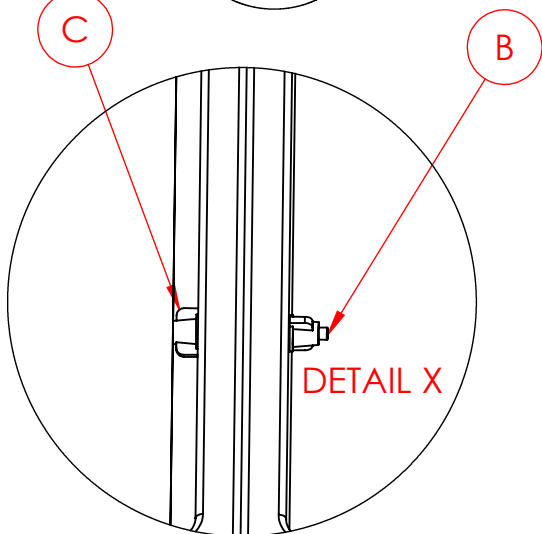 
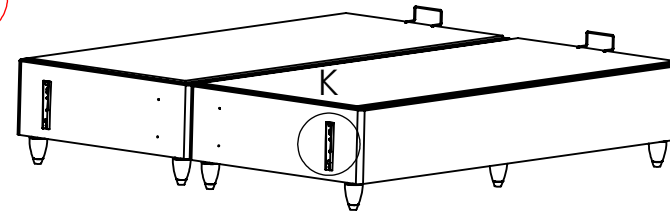 
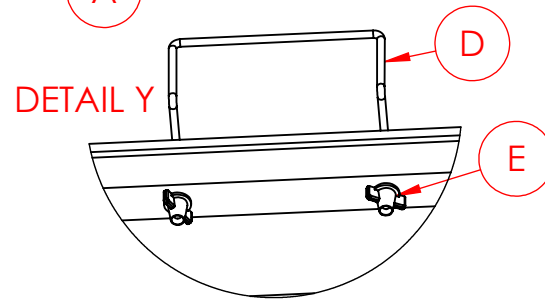 
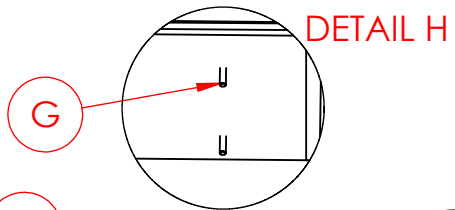 
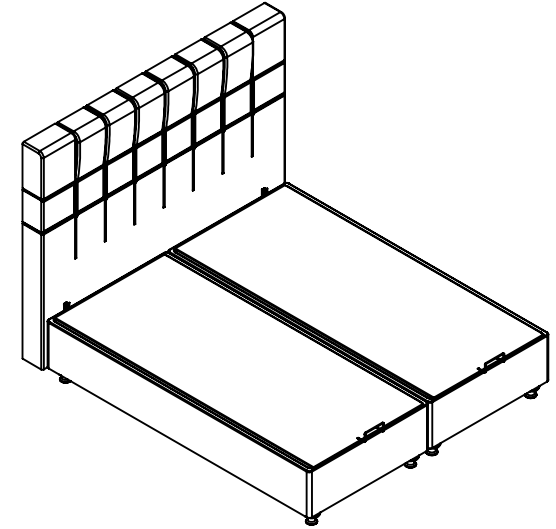 
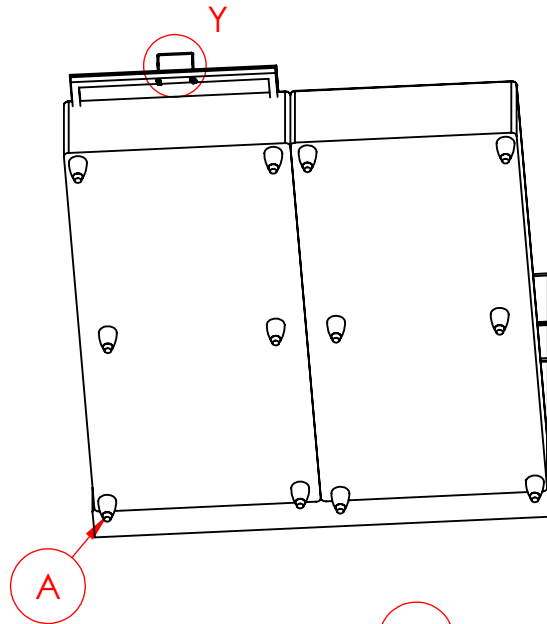 
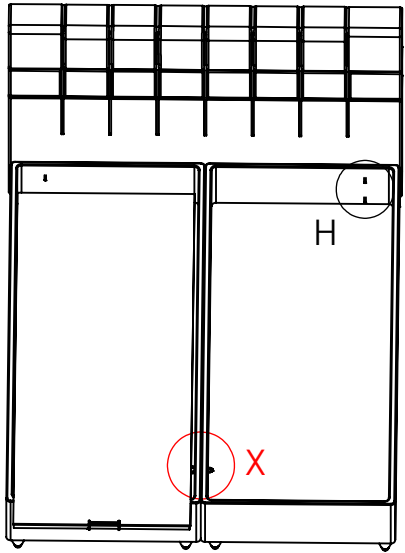 

 

 


 
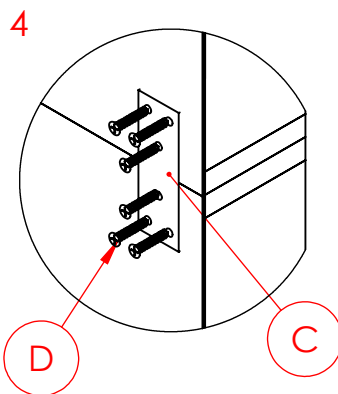 
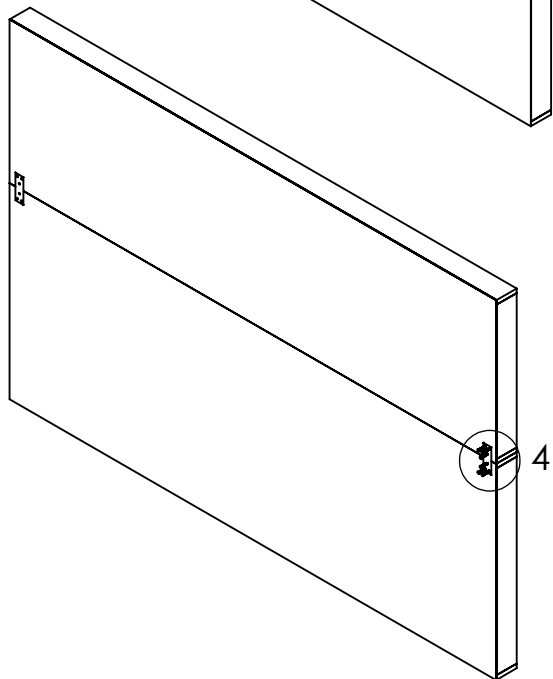 
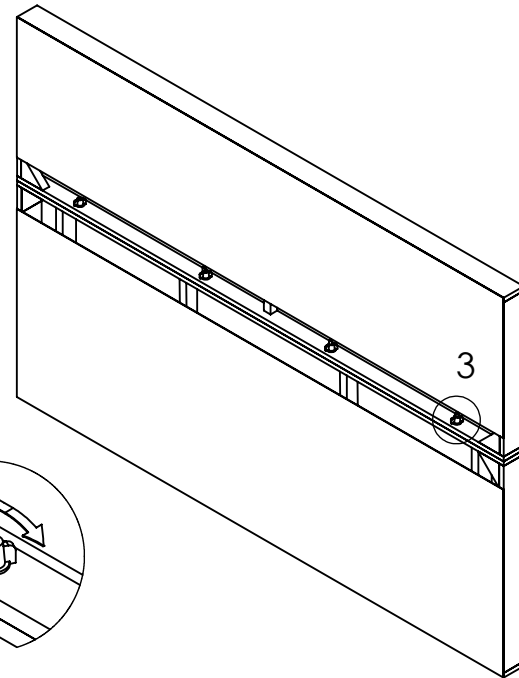 
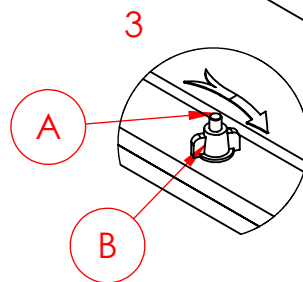 
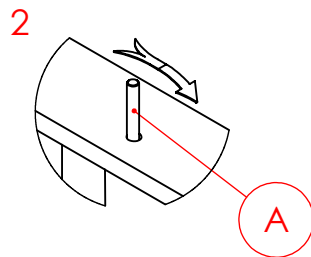 
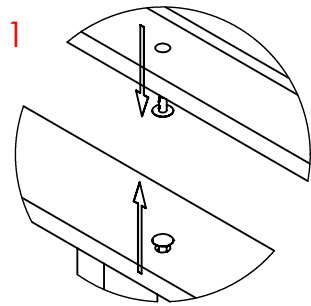 
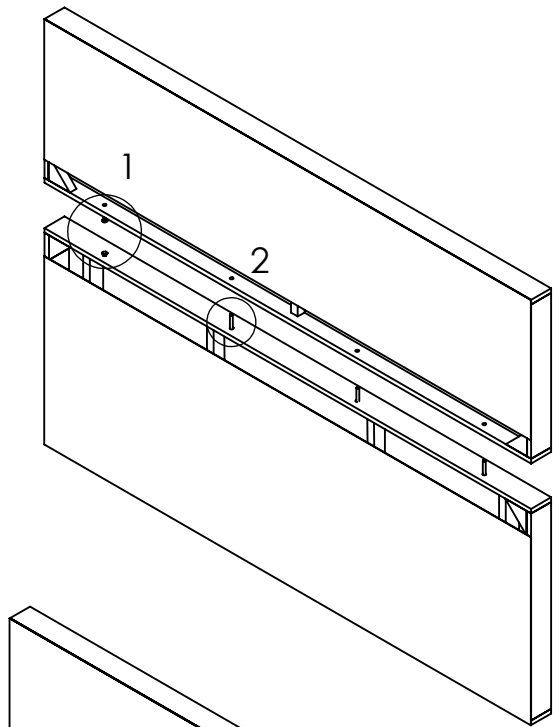 


MONTAGEANLEITUNG NAOMI



AX12	
BX2	
CX4	
DX2	
EX4	
FX2	
GX4	

MONTAGEANLEITUNG - NAOMI



AX4
BX4
CX2
DX12