
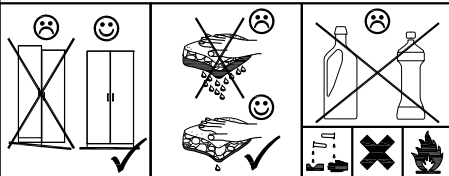


Montageanleitung

Zero 3

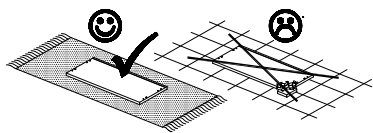

DE - Sicherheitsvorschriften

Beachten Sie bitte unbedingt die angegebenen Aufbauvorschriften.

EN - Caution



Follow carefully the assembling Instructions described in the directions.













FR - Sécurité


Respecter les Instructions de montage décrites dans la notice.

NL - Veiligheid


De In de Gebruiksaanwijzing beschreven Instructies respecteren.

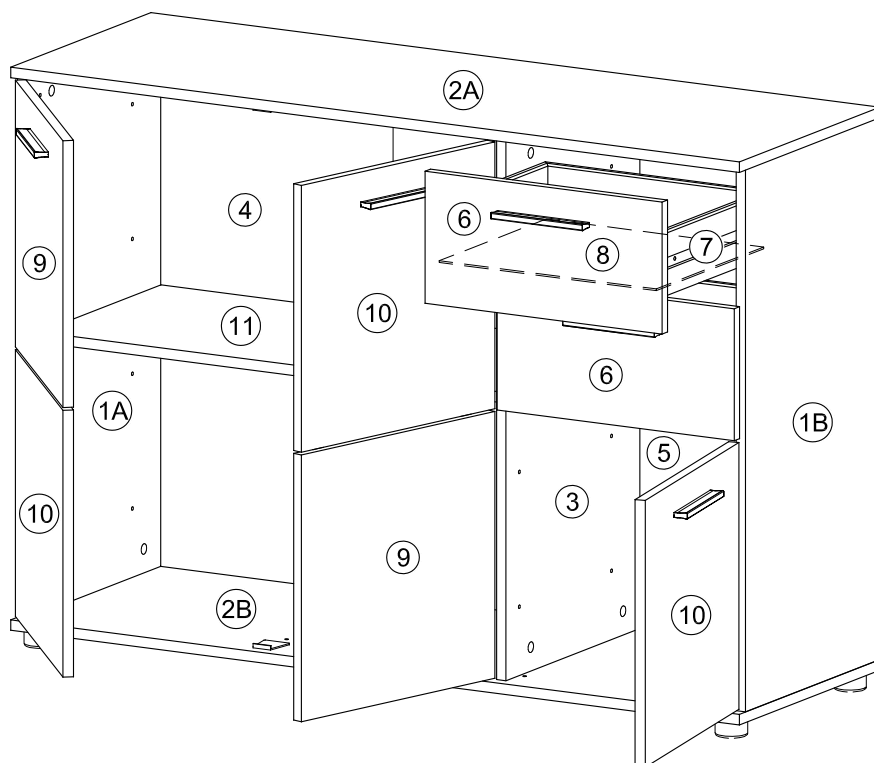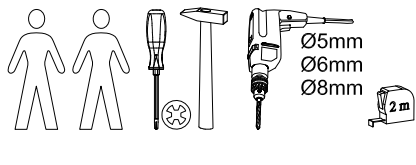


	
8x ADK-EX	2x ADK-26
	
12x EX	12x VB
	
8x40	1x WBF
	
8x RD8x40	8x KP0-26
	
8x TB26-8	8x TB26-8
	
3,5x13	4x BT
	
26x SP1	4x BT
	
M4x9	2x LM
	
4x MS9	2x LM
	
4x SKS2	8x ES11
	
6,3x11	8x ES11
	
2x TS	4x FV
	
5x KG	4x FV
3,5x30	5x SP5
5x GLD-128	5x SP5
4x27	10x RWS27
1x NH	10x RWS27
50x NA	5x RWS15
4x15	5x RWS15

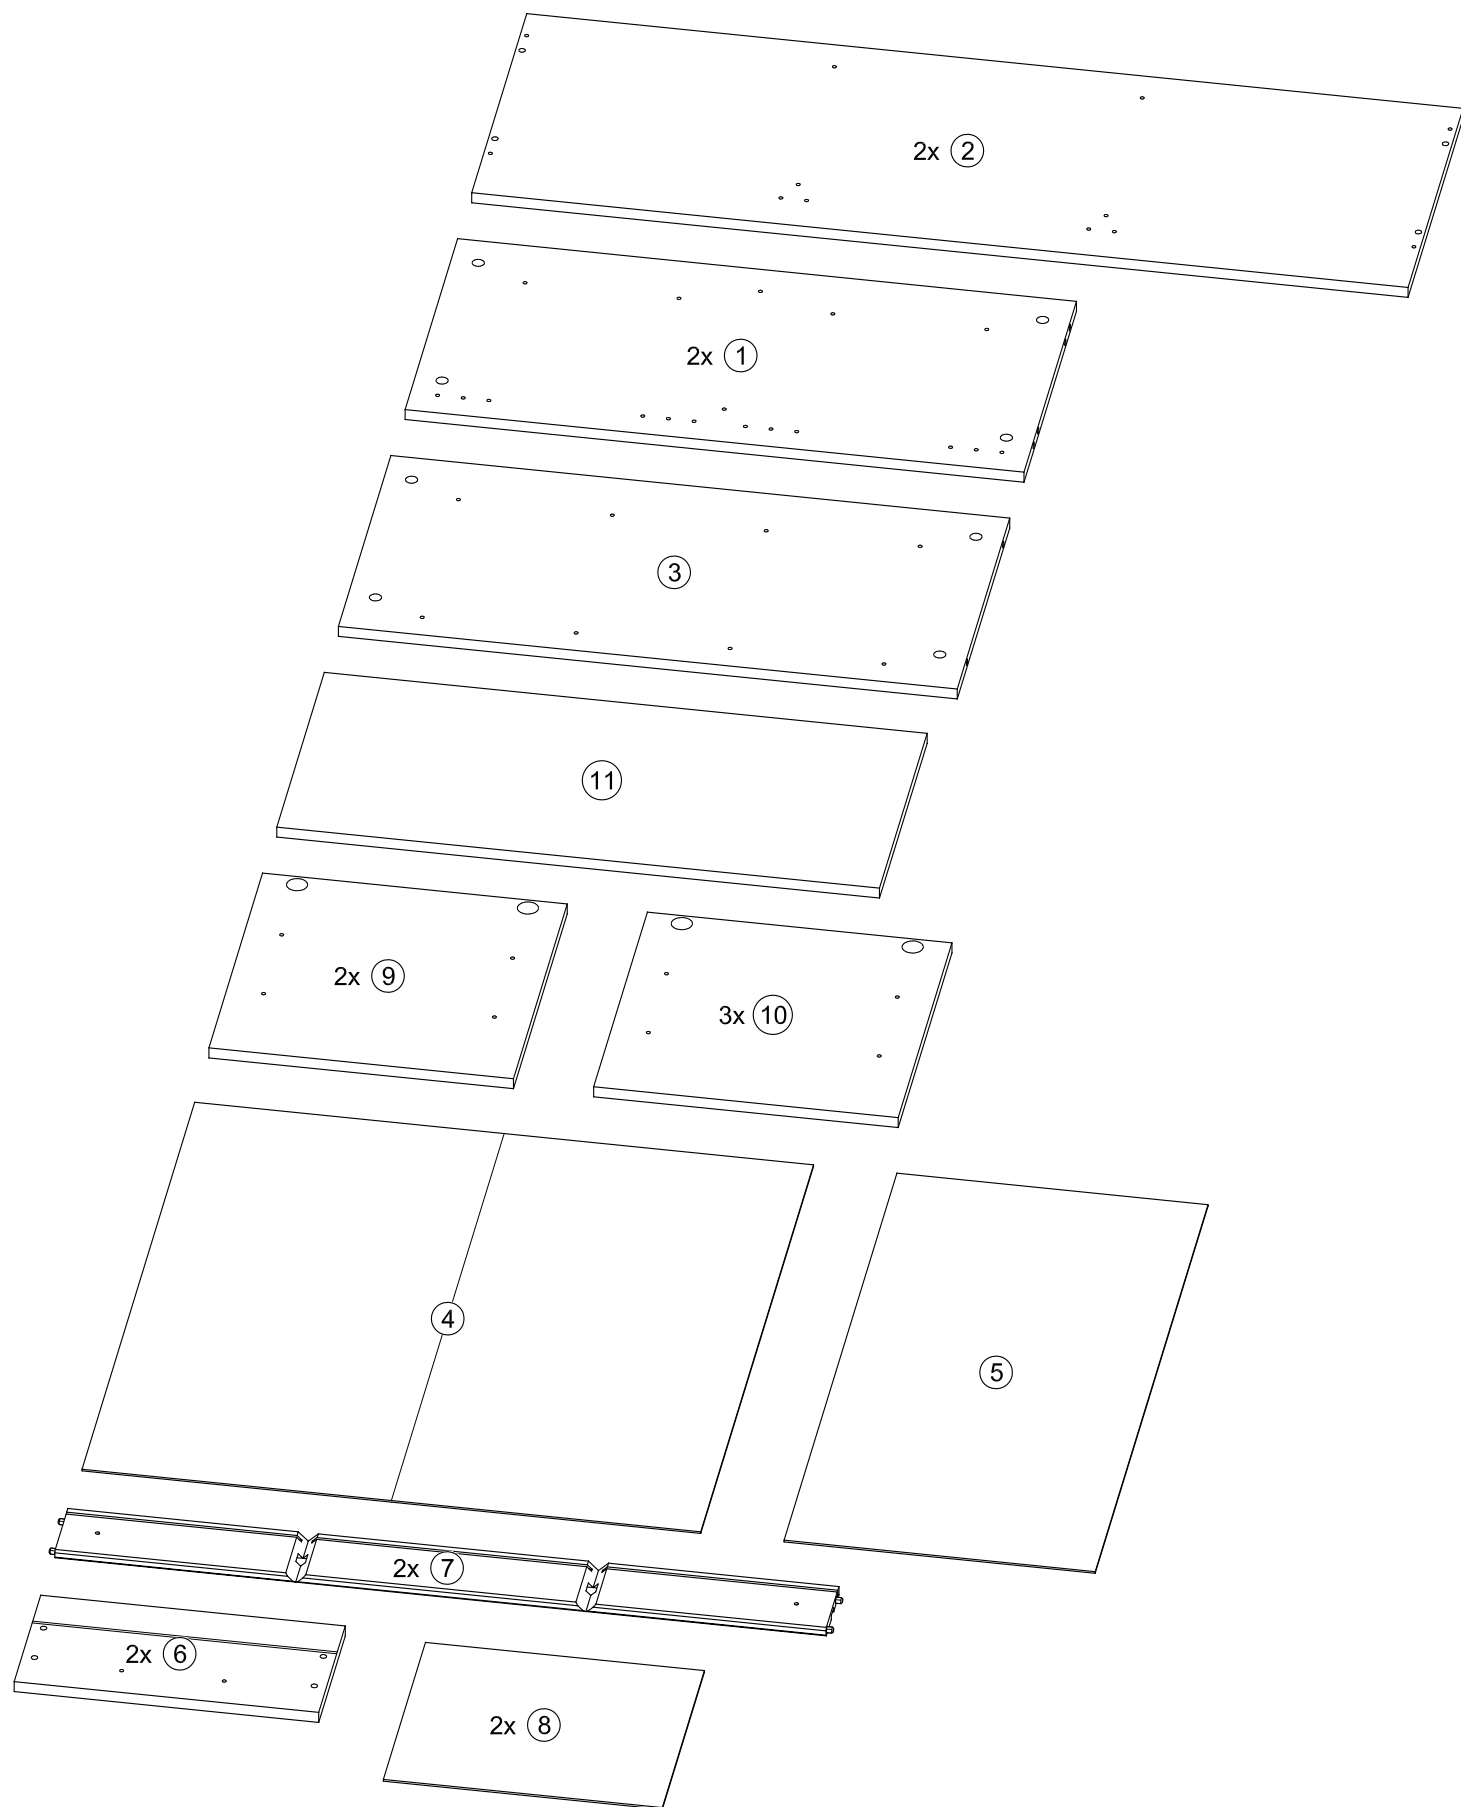


A



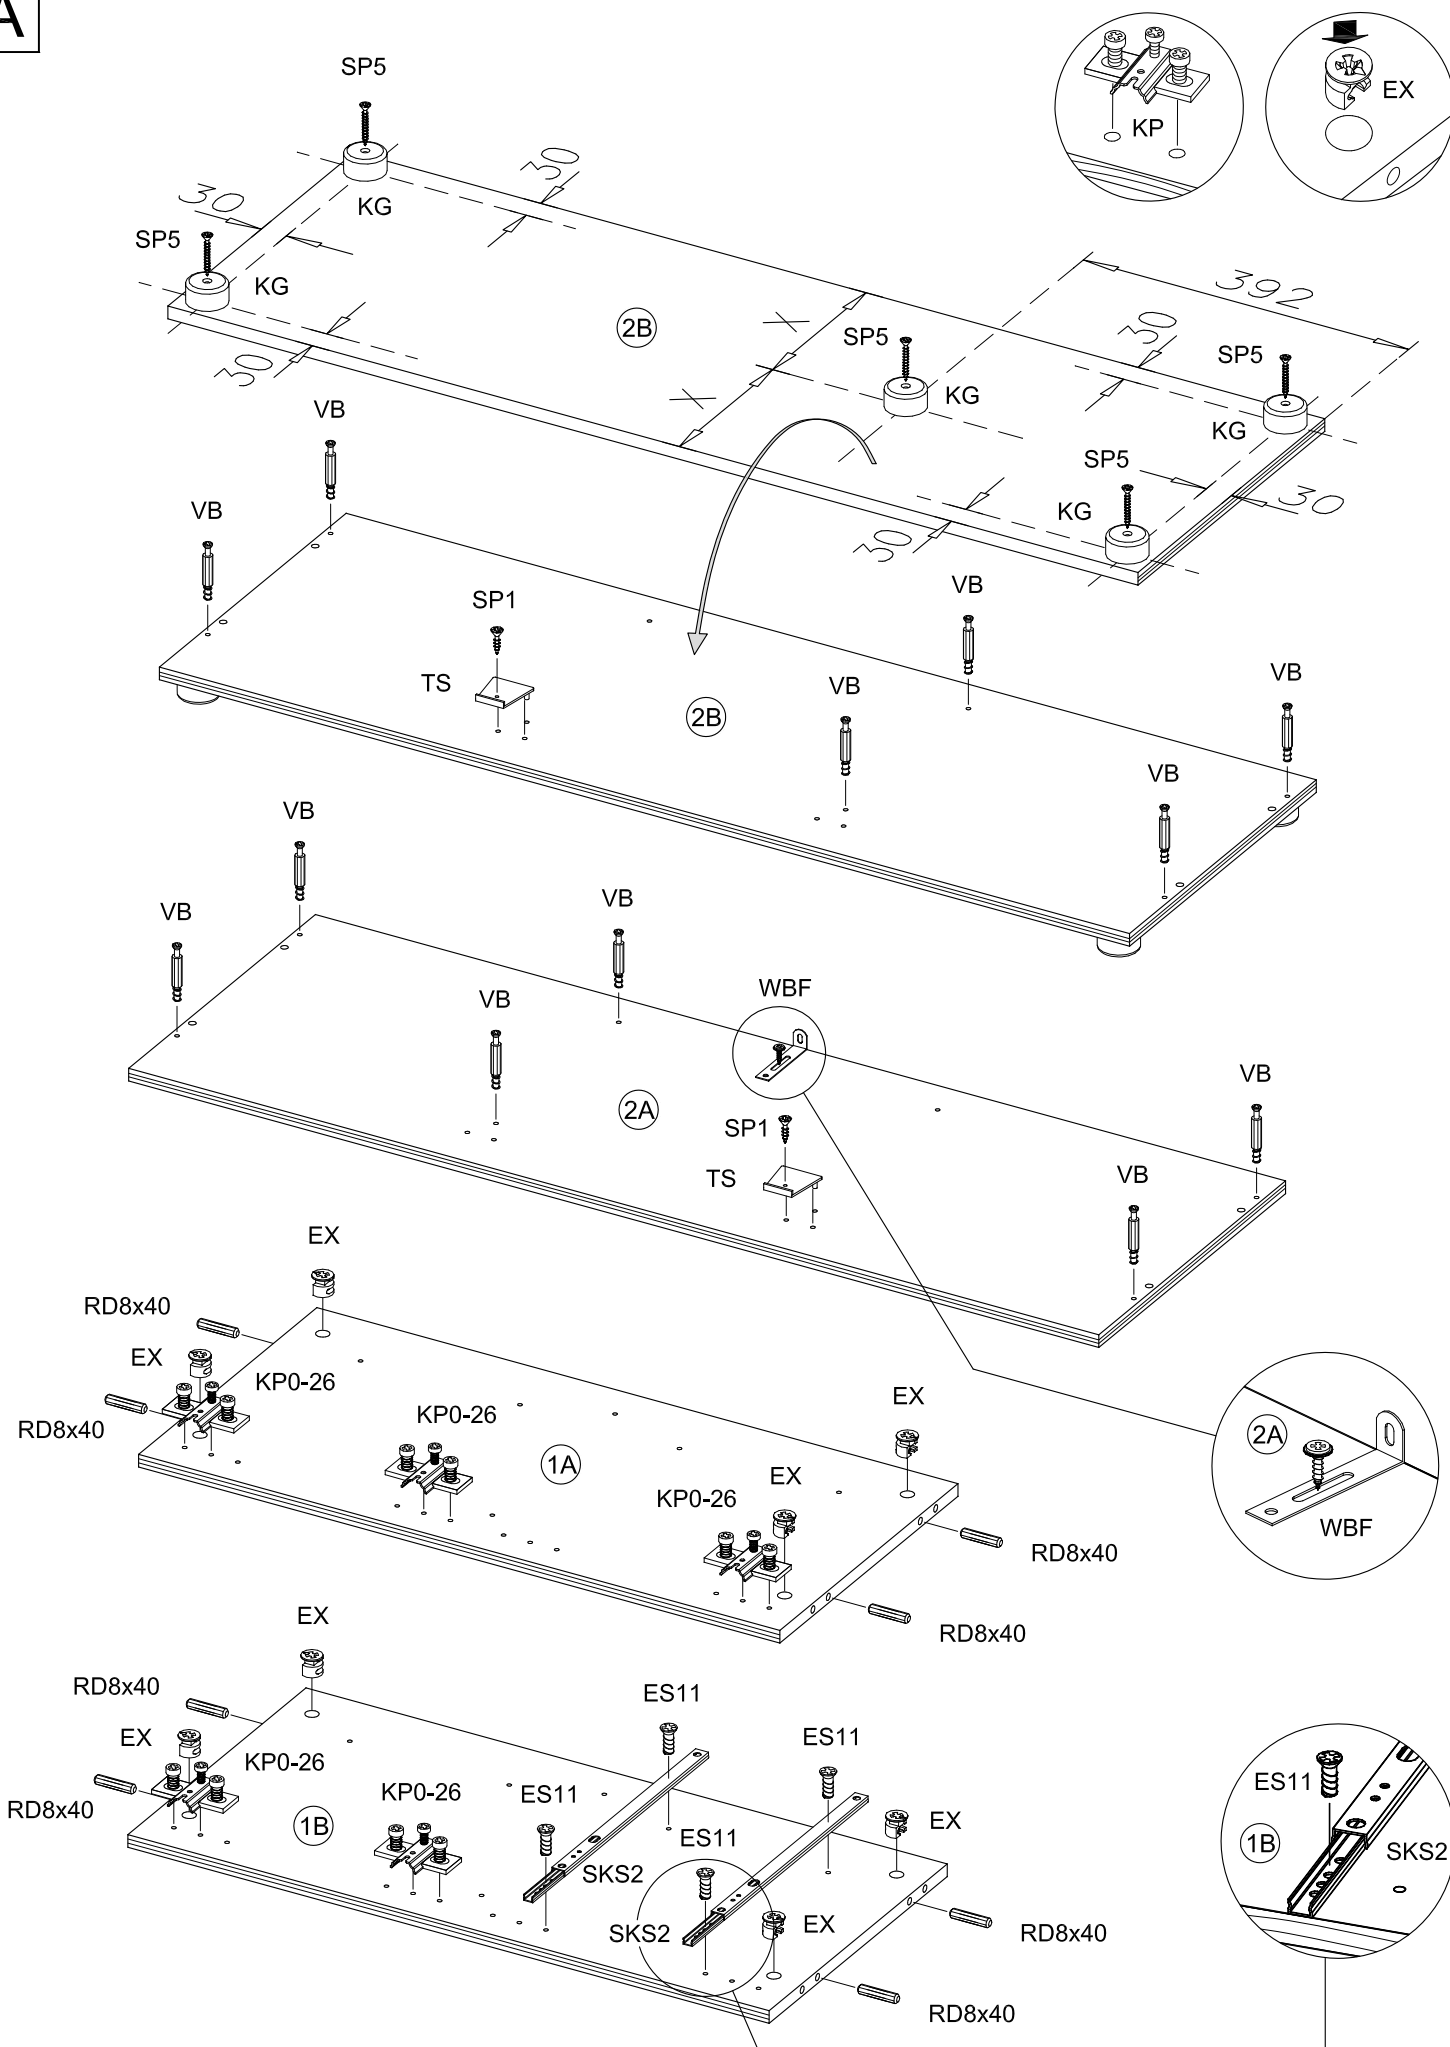


B

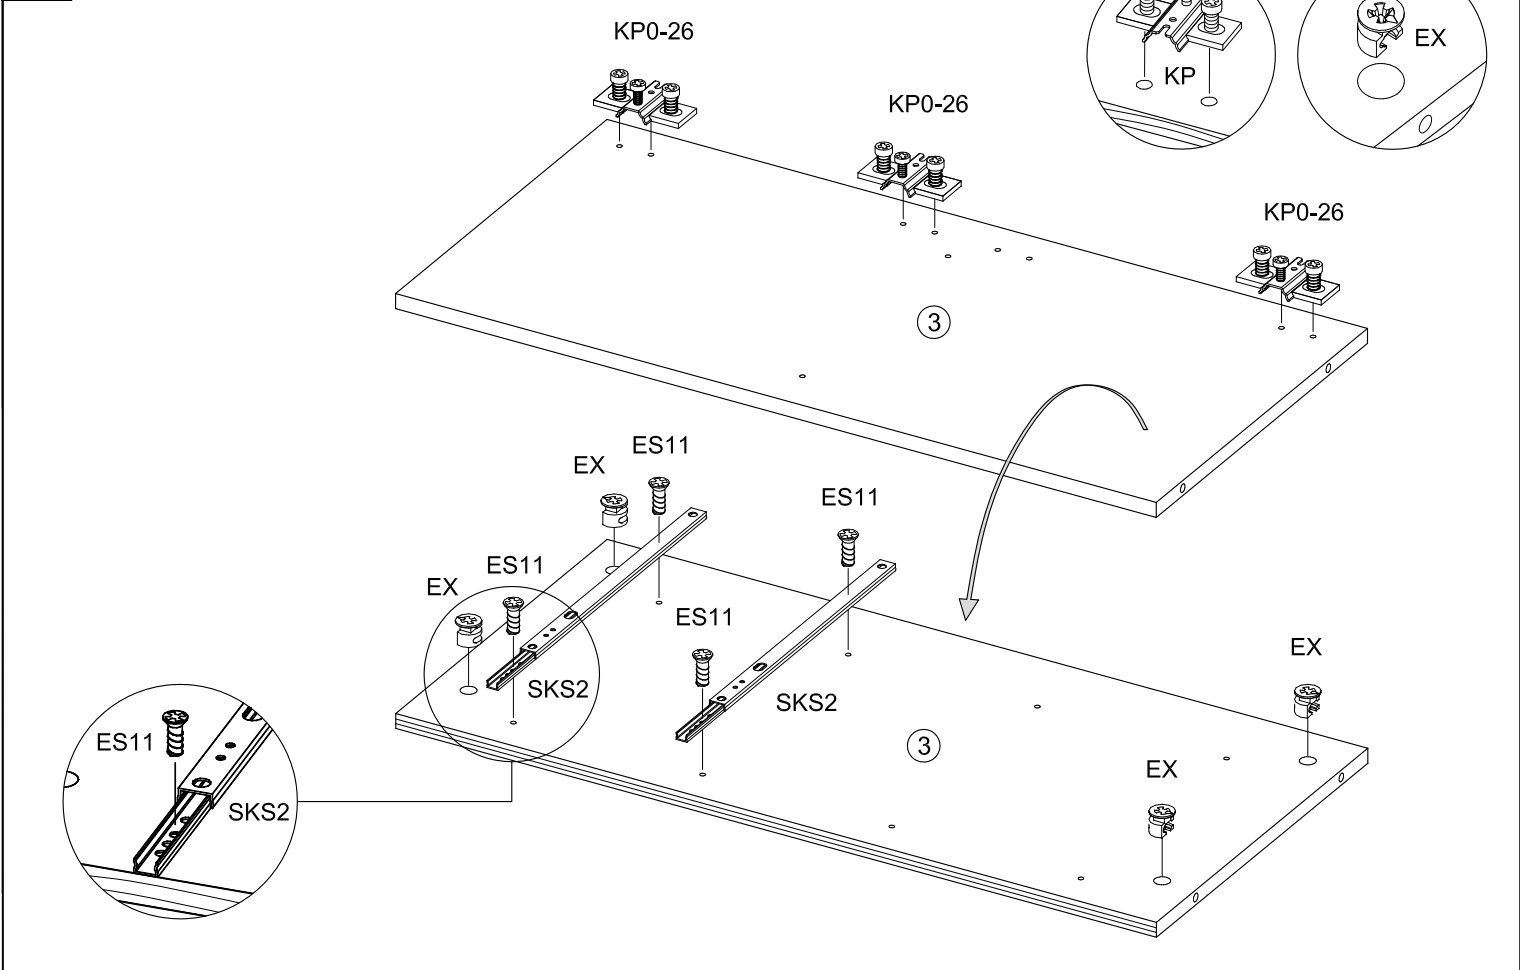

C

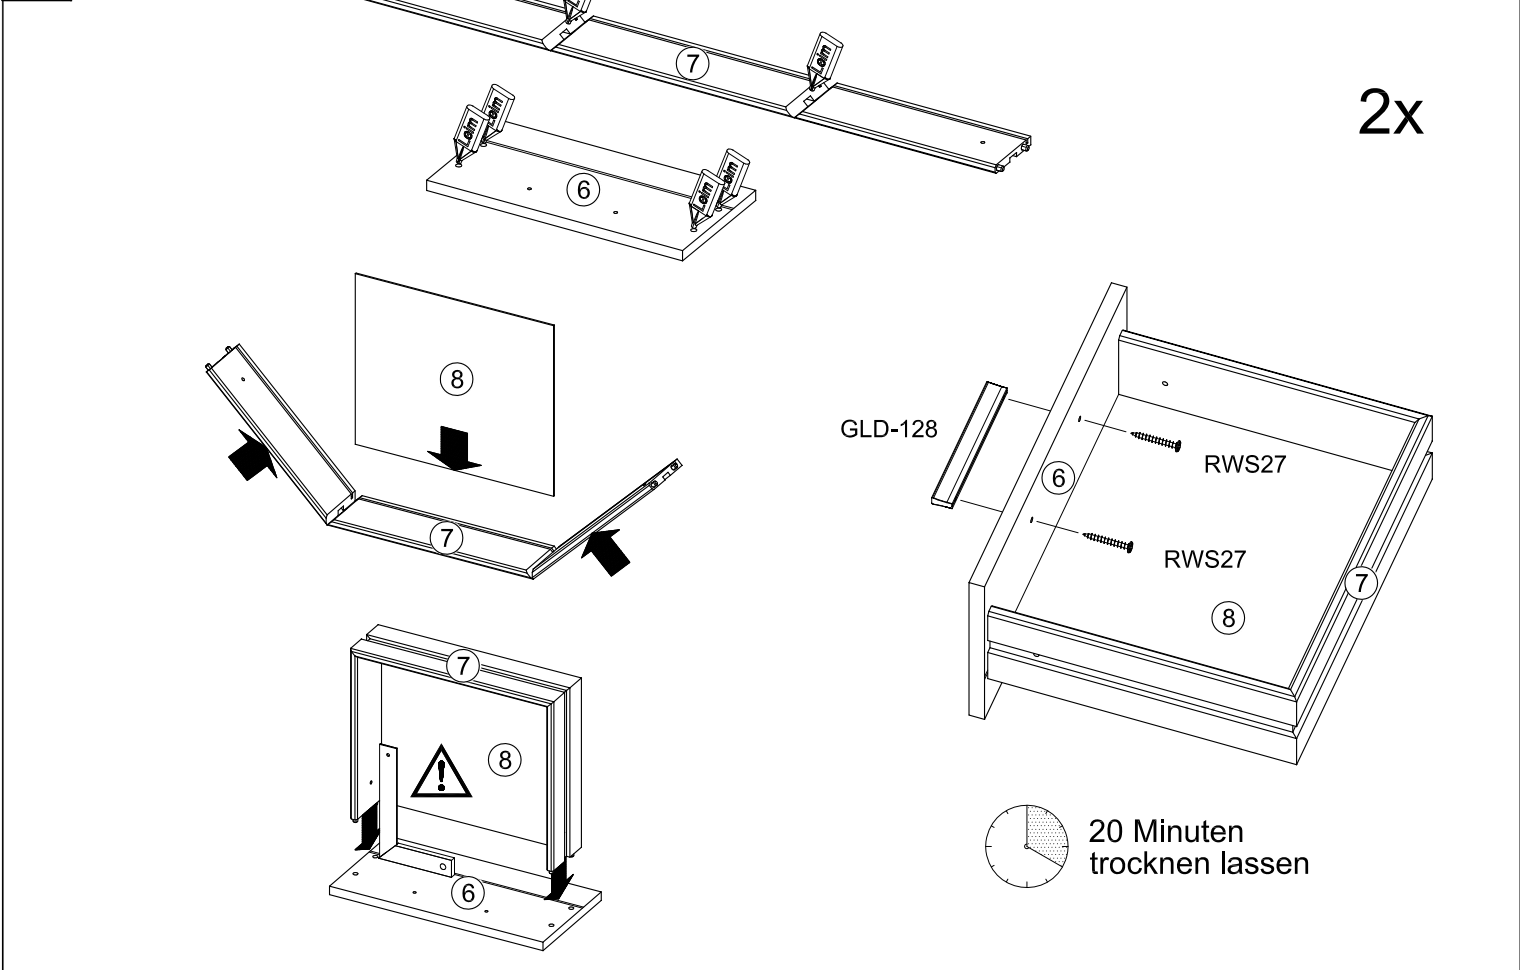

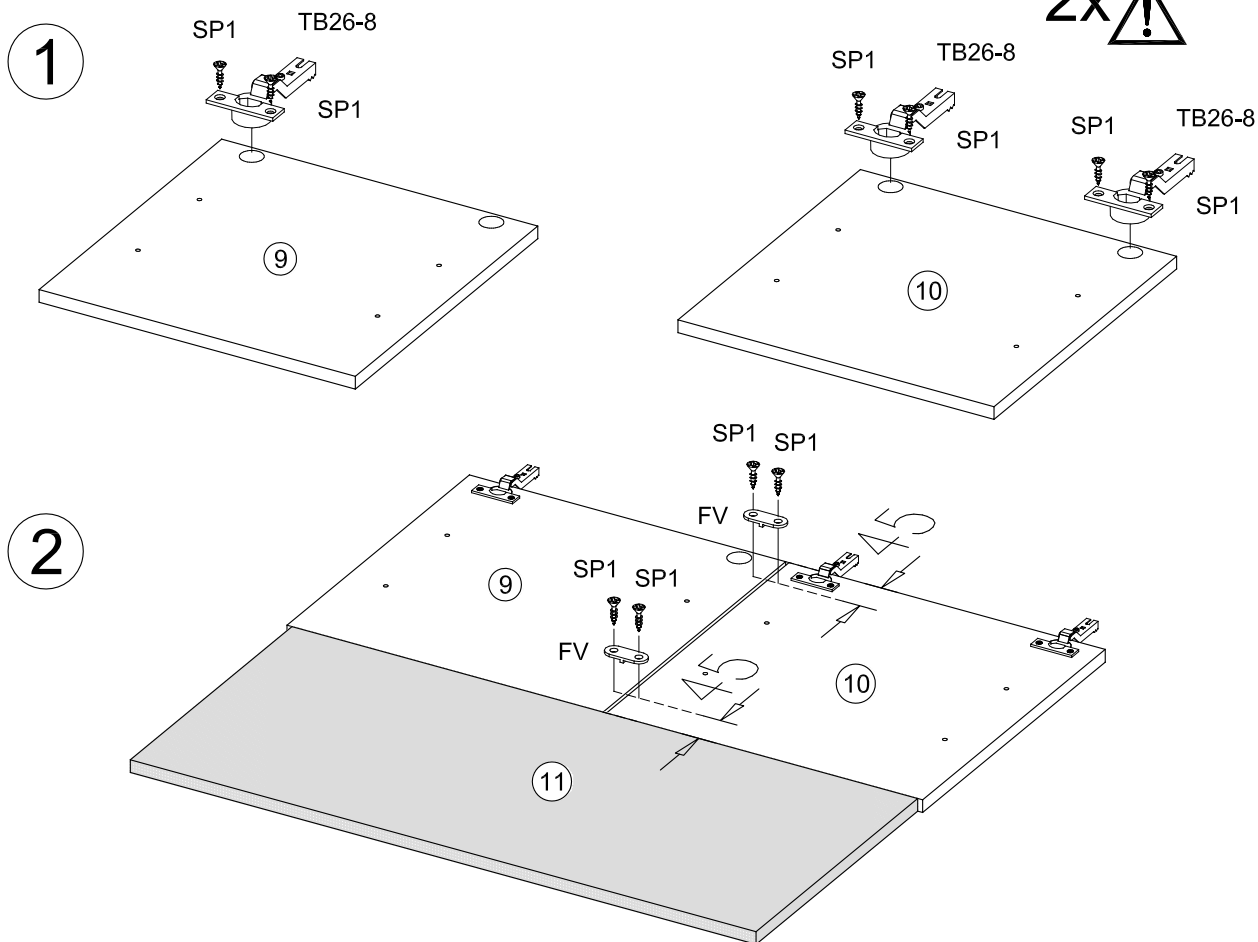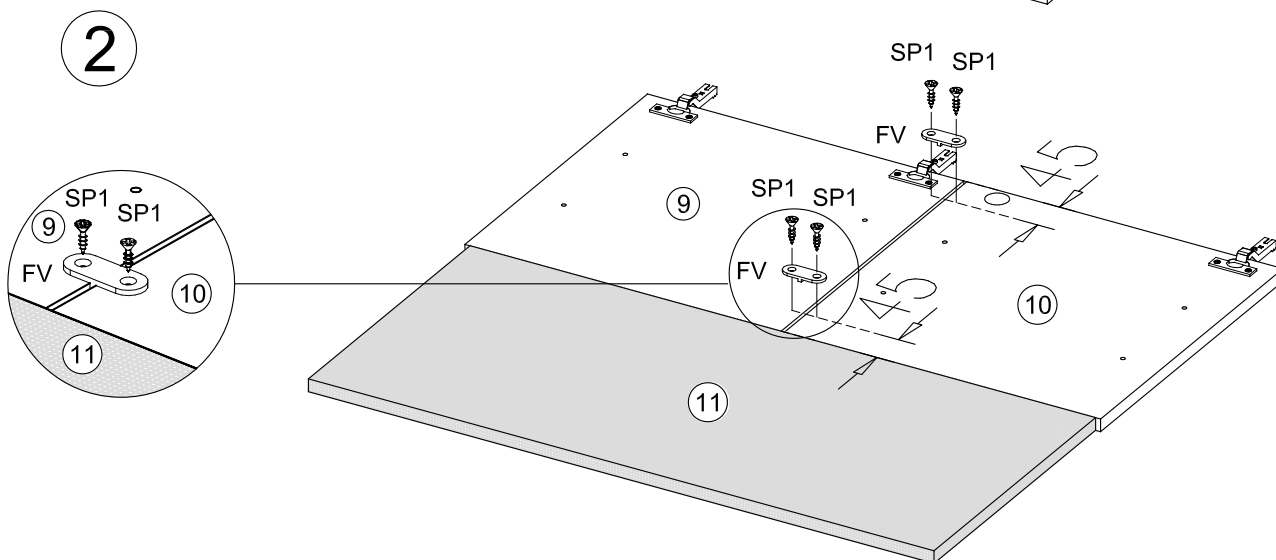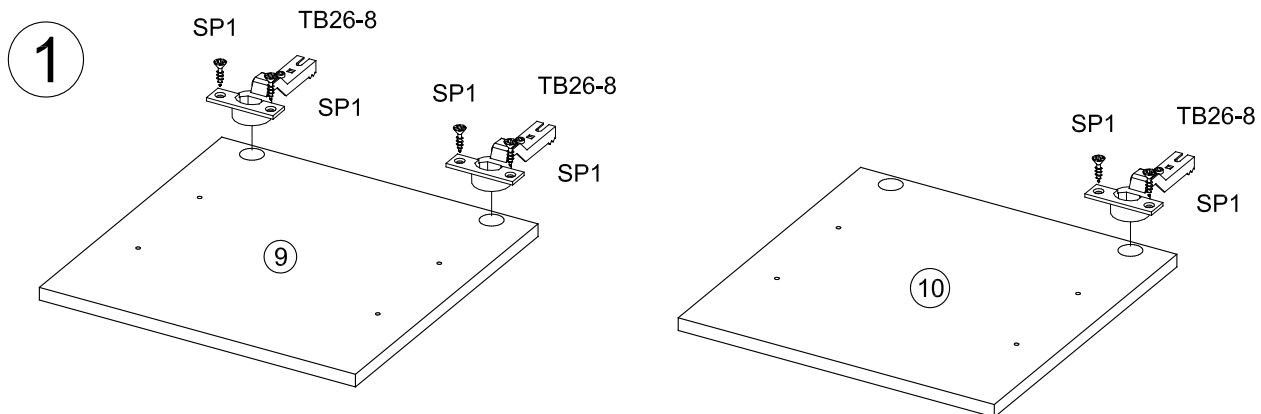

E

This diagram illustrates the final assembly steps of a furniture unit. It shows the top panel (1A) being attached to the side panels (1B) using screws. The side panels (1B) are already equipped with wheels (2B). The diagram includes a circular inset showing a 180-degree rotation of a wheel. Arrows indicate the direction of assembly for the top panel and the side panels.

F

1

2

NA

RWS15

2m

a

b

a=b

4

5

6

1B


2B

NA

RWS15

NH

G

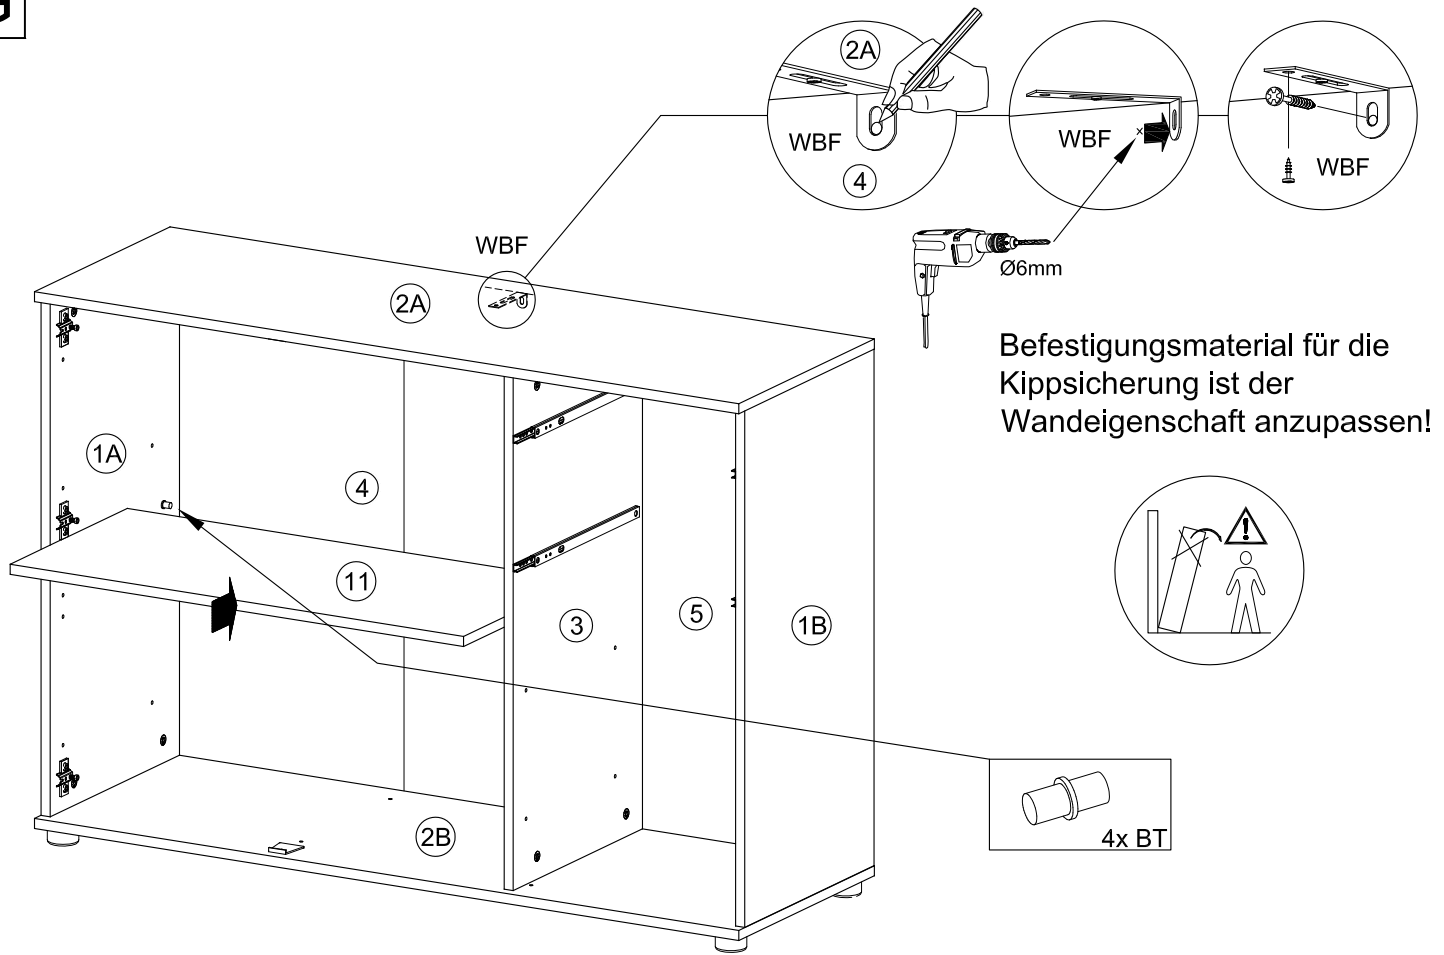

H

