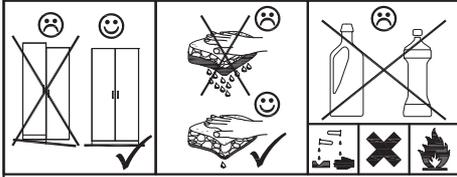
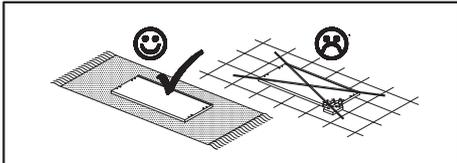


Montageanleitung Mailand 52 Hochschrank



DE - Sicherheitsvorschriften

Beachten Sie bitte unbedingt die angegebenen Aufbauvorschriften.

EN - Caution

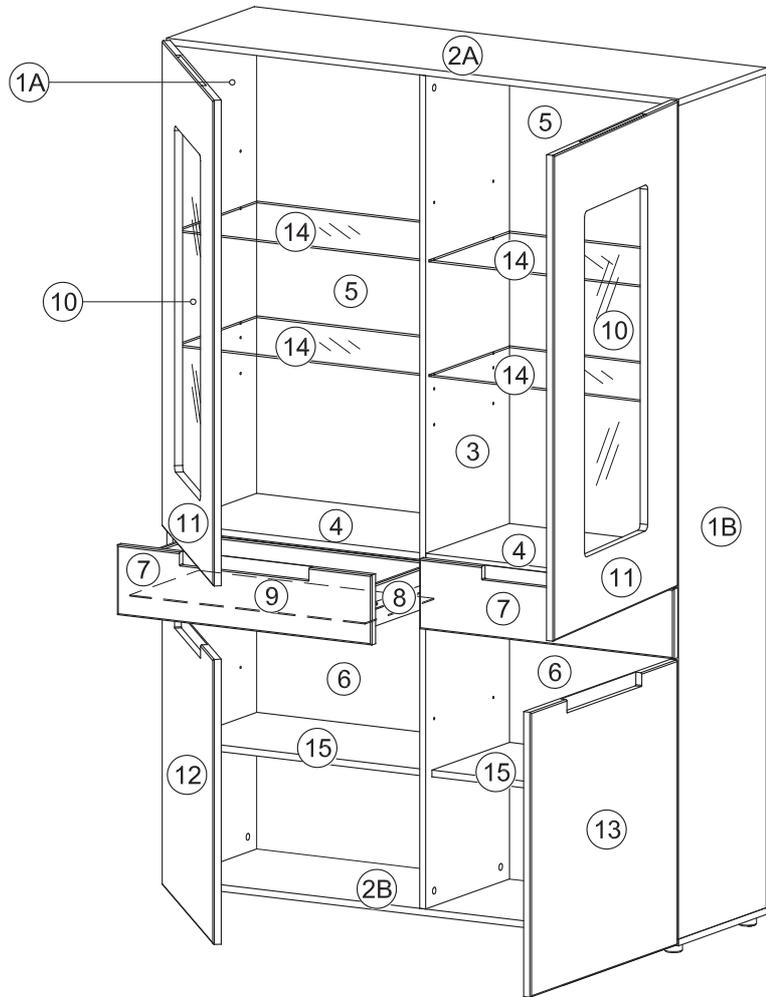
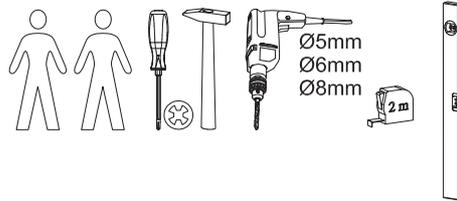

Follow carefully the assembling instructions described in the directions.

FR - Sécurité


Respecter les instructions de montage décrites dans la notice.

NL - Veiligheid


De in de Gebruiksaanwijzing beschreven Instructies respecteren.




16x VB	20x EX	12x ADK-EX
4x VBM	4x HUE	
8x40 8x RD8x40	1x WBF	
Leim 2x LM	24x BTG	
4x SKS2	M4x9 4x MS9	
6x11 4x ES11	M4x16 4x SKM16	
10x KP2-35	4x DS1	
10x TB35-0	3,5x13 20x SP1	
2,5x16 12x SP16	12x SPH	
4x15 14x RWS15	8x SB	
5x KG	3,5x30 5x SP5	

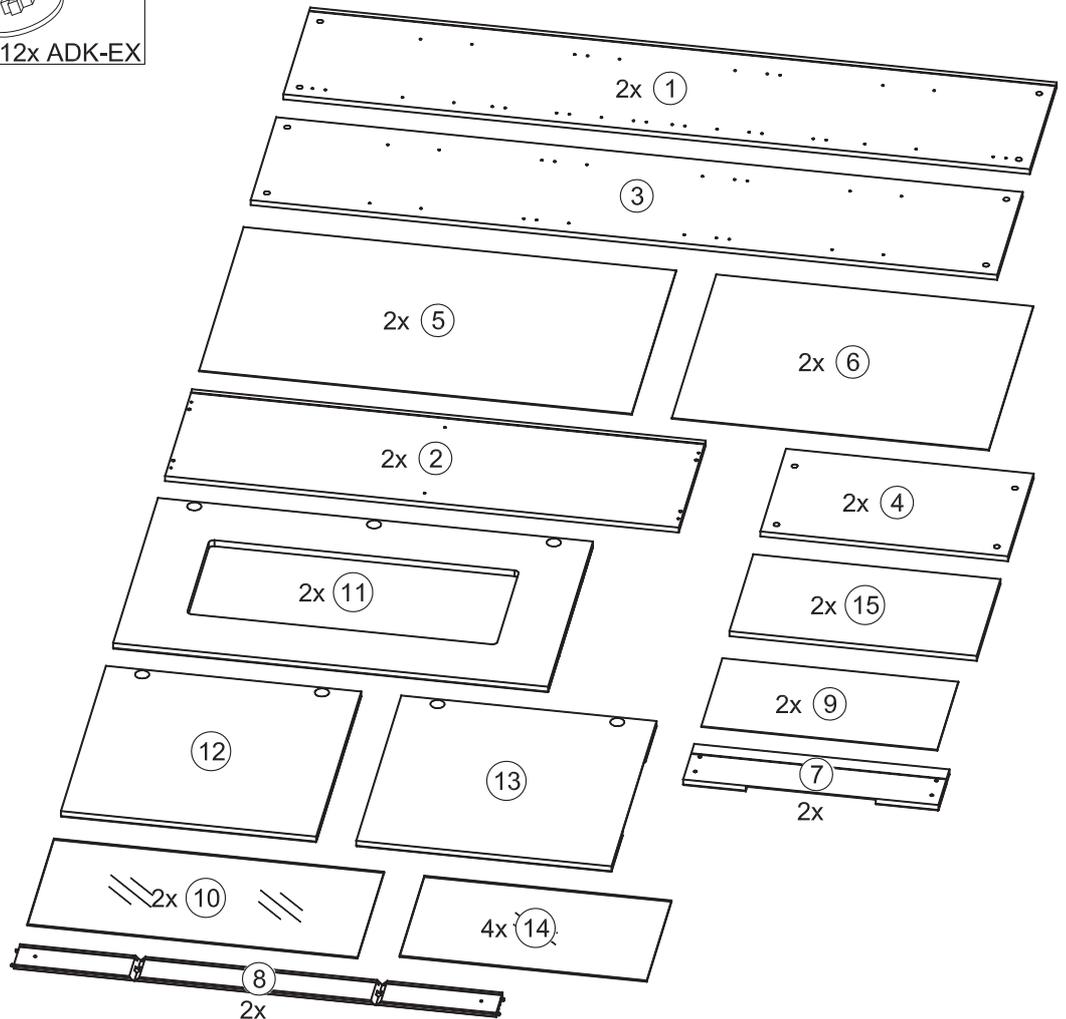

B

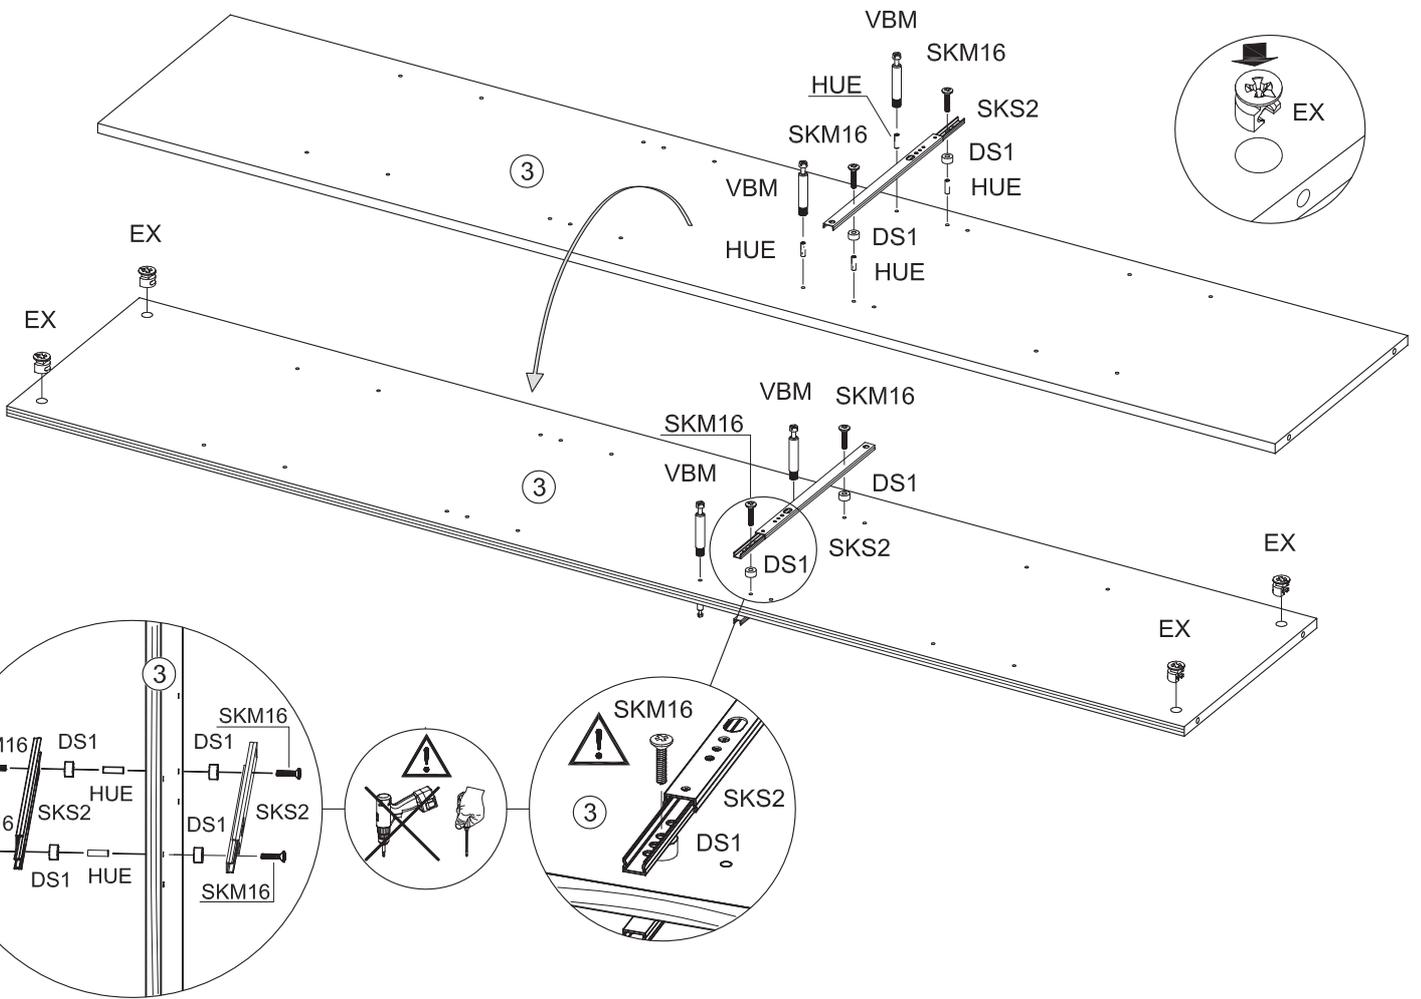


C

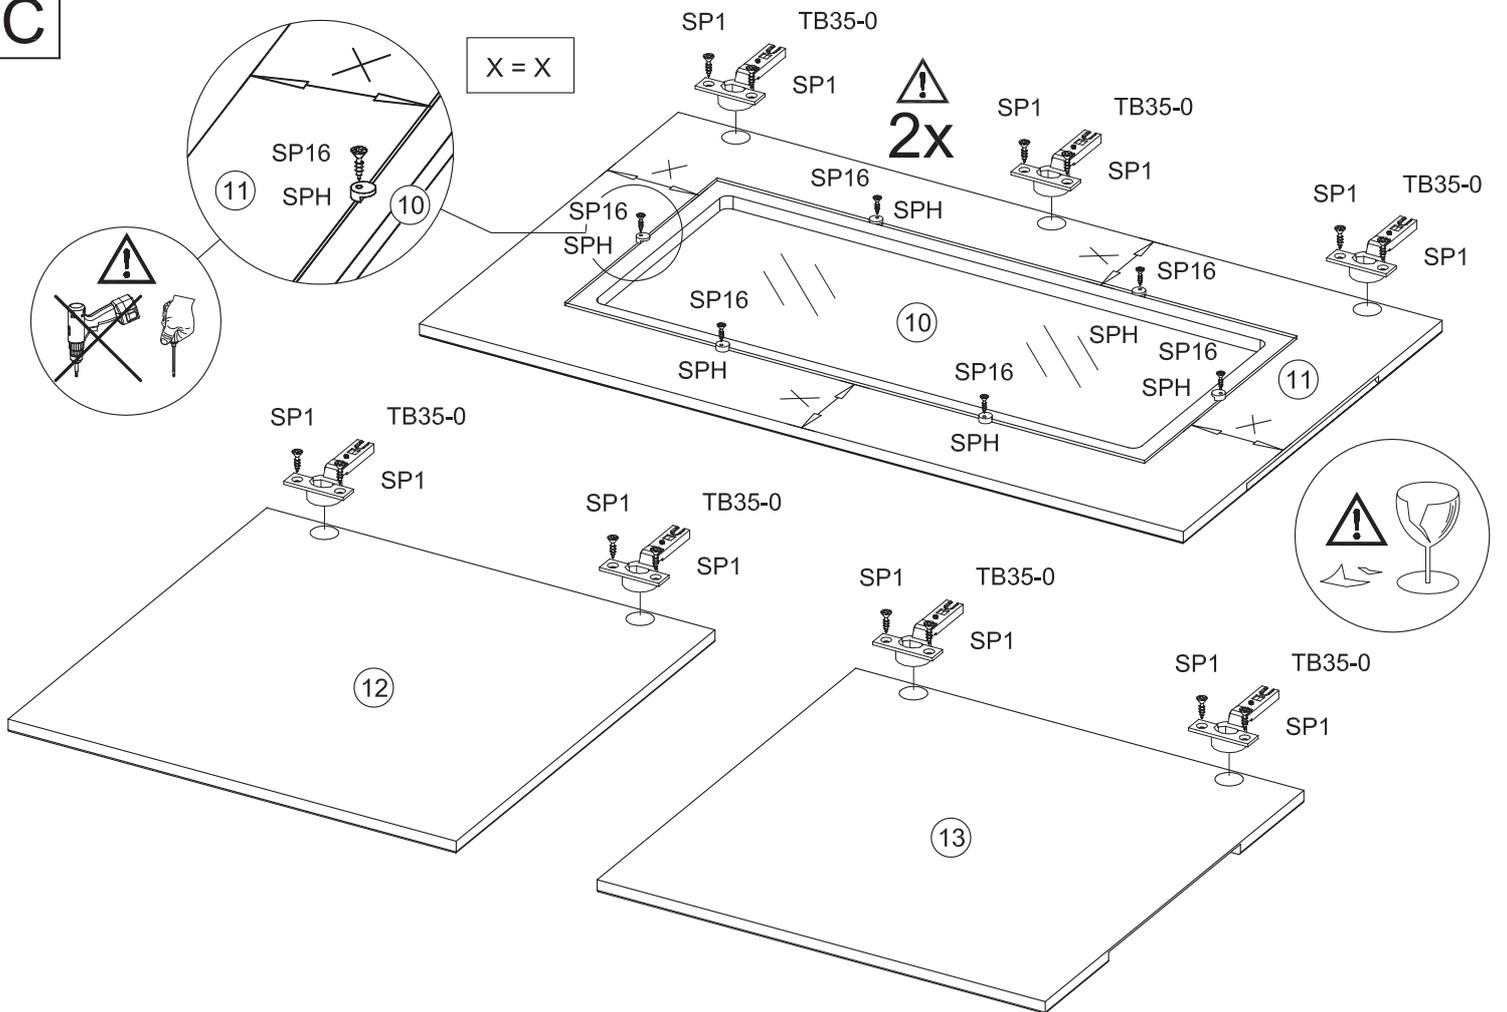



D

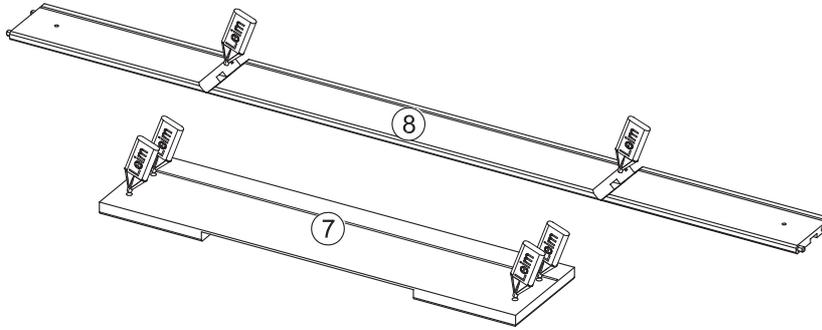1




2x



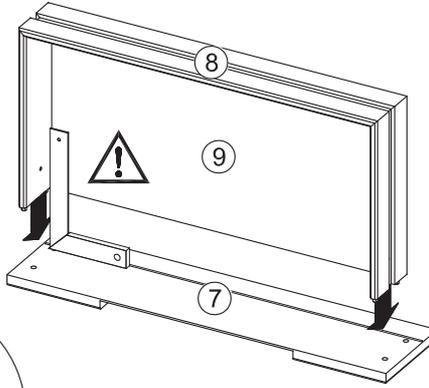
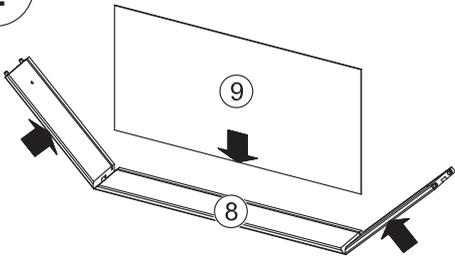
2




4


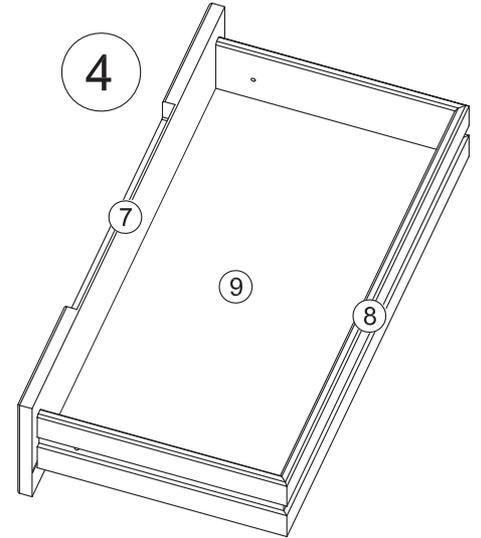




3

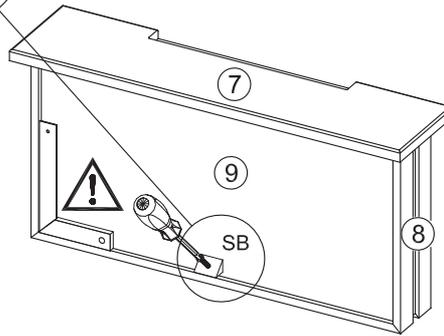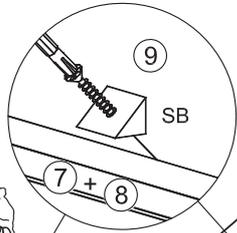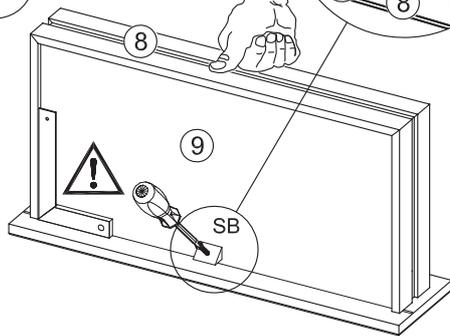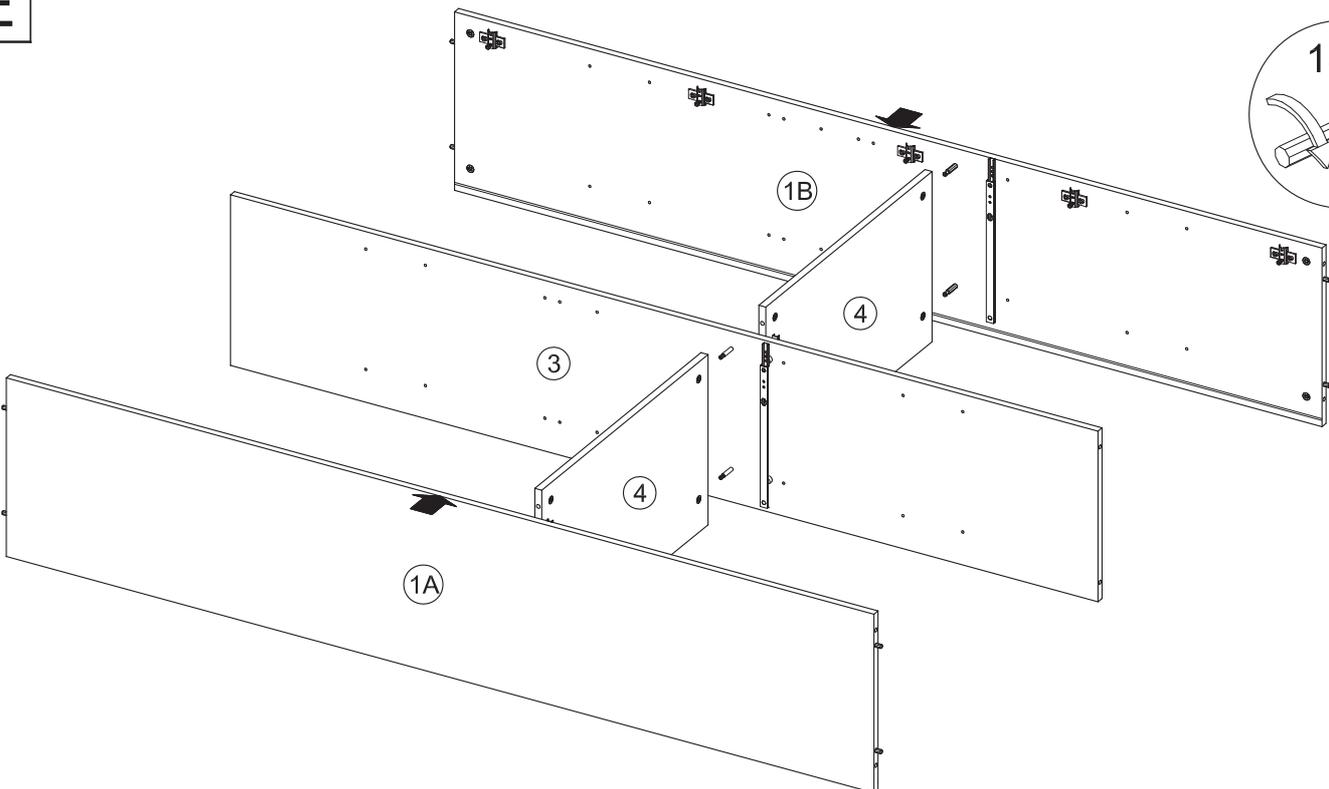
20 Minuten
trocknen lassen**E**

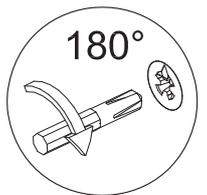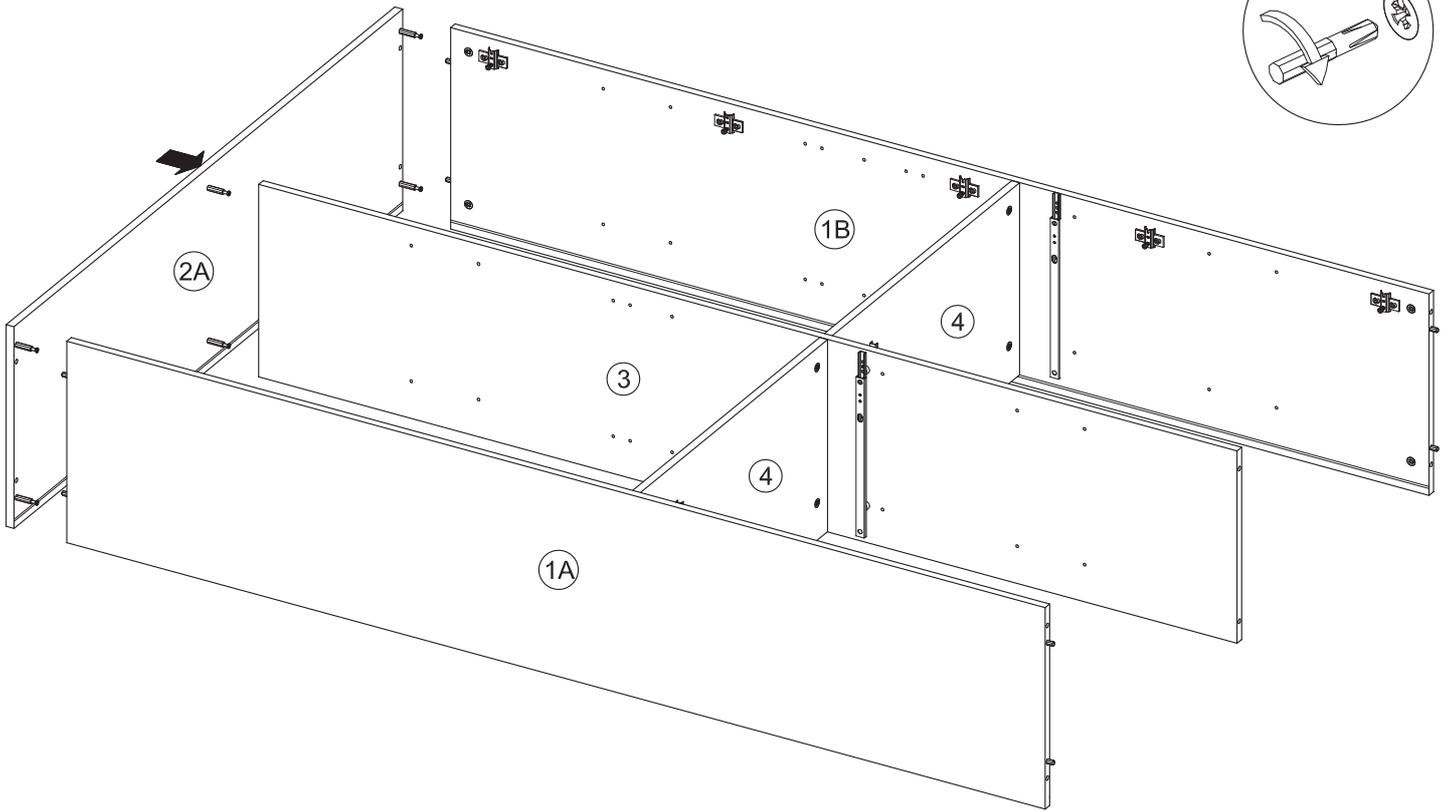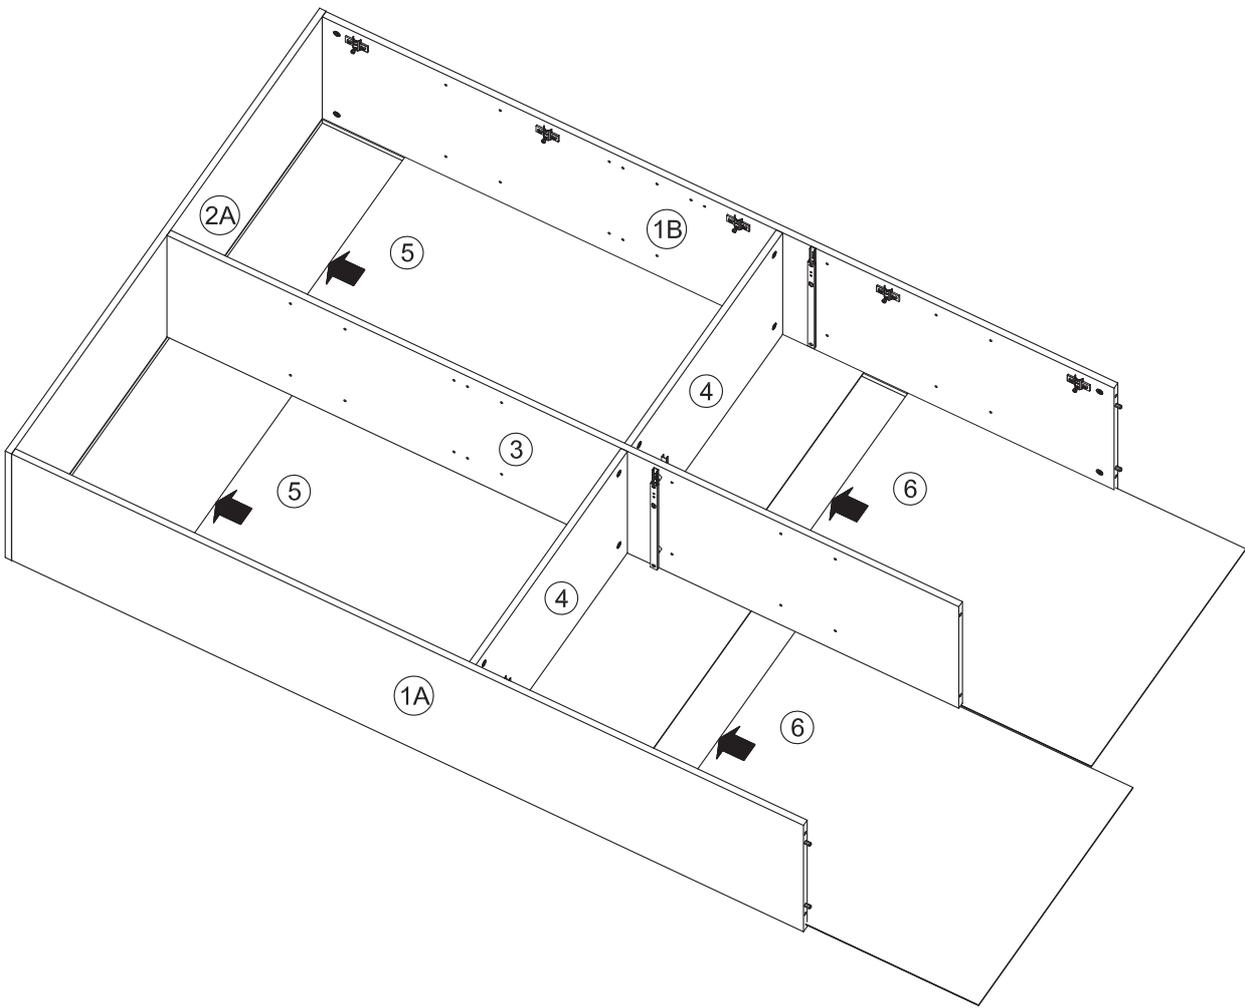180°









F**G**

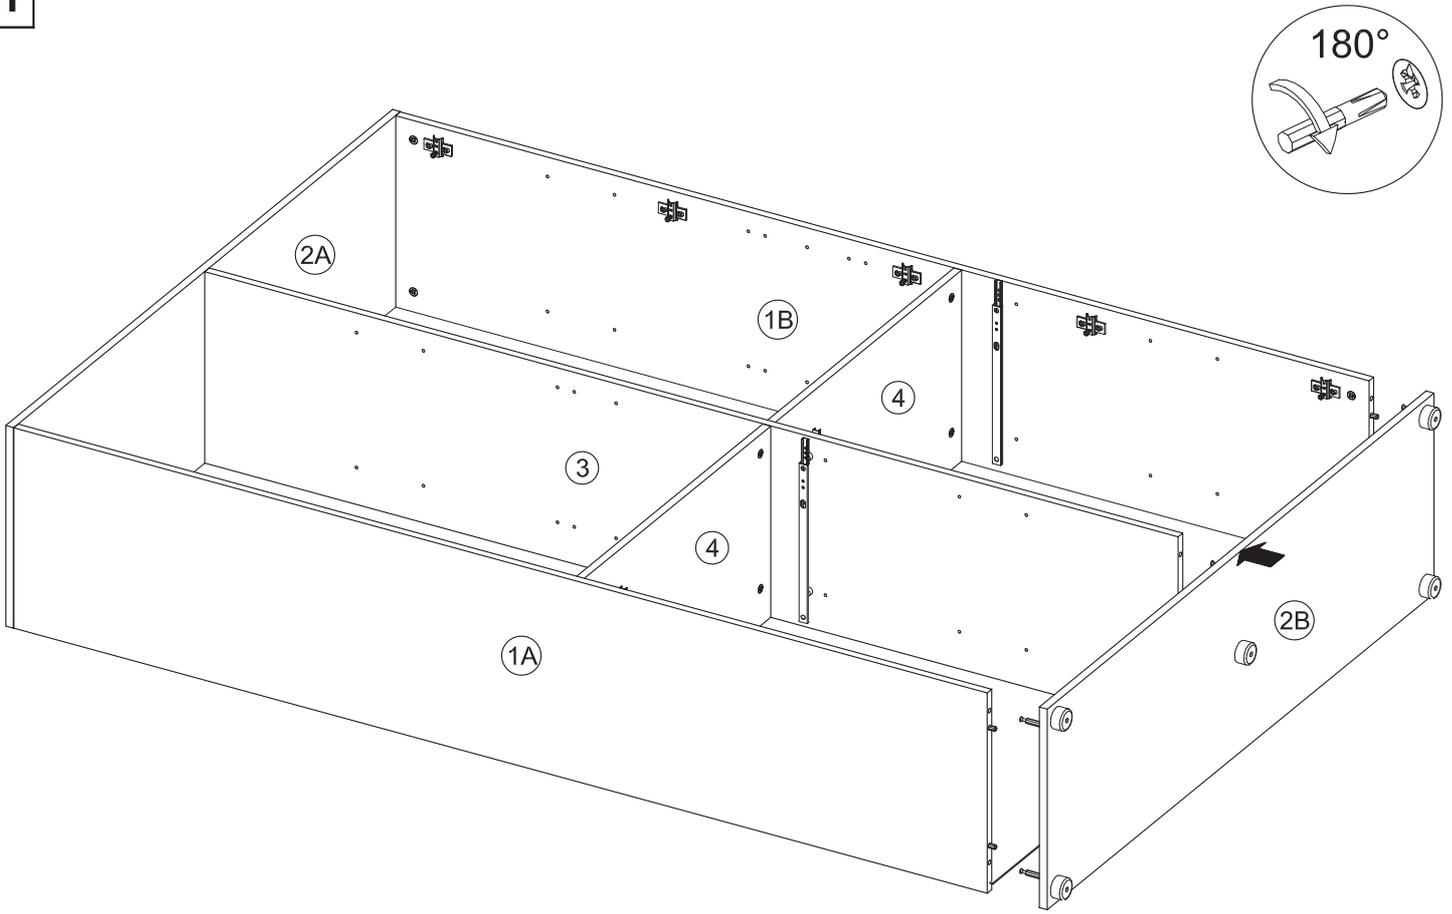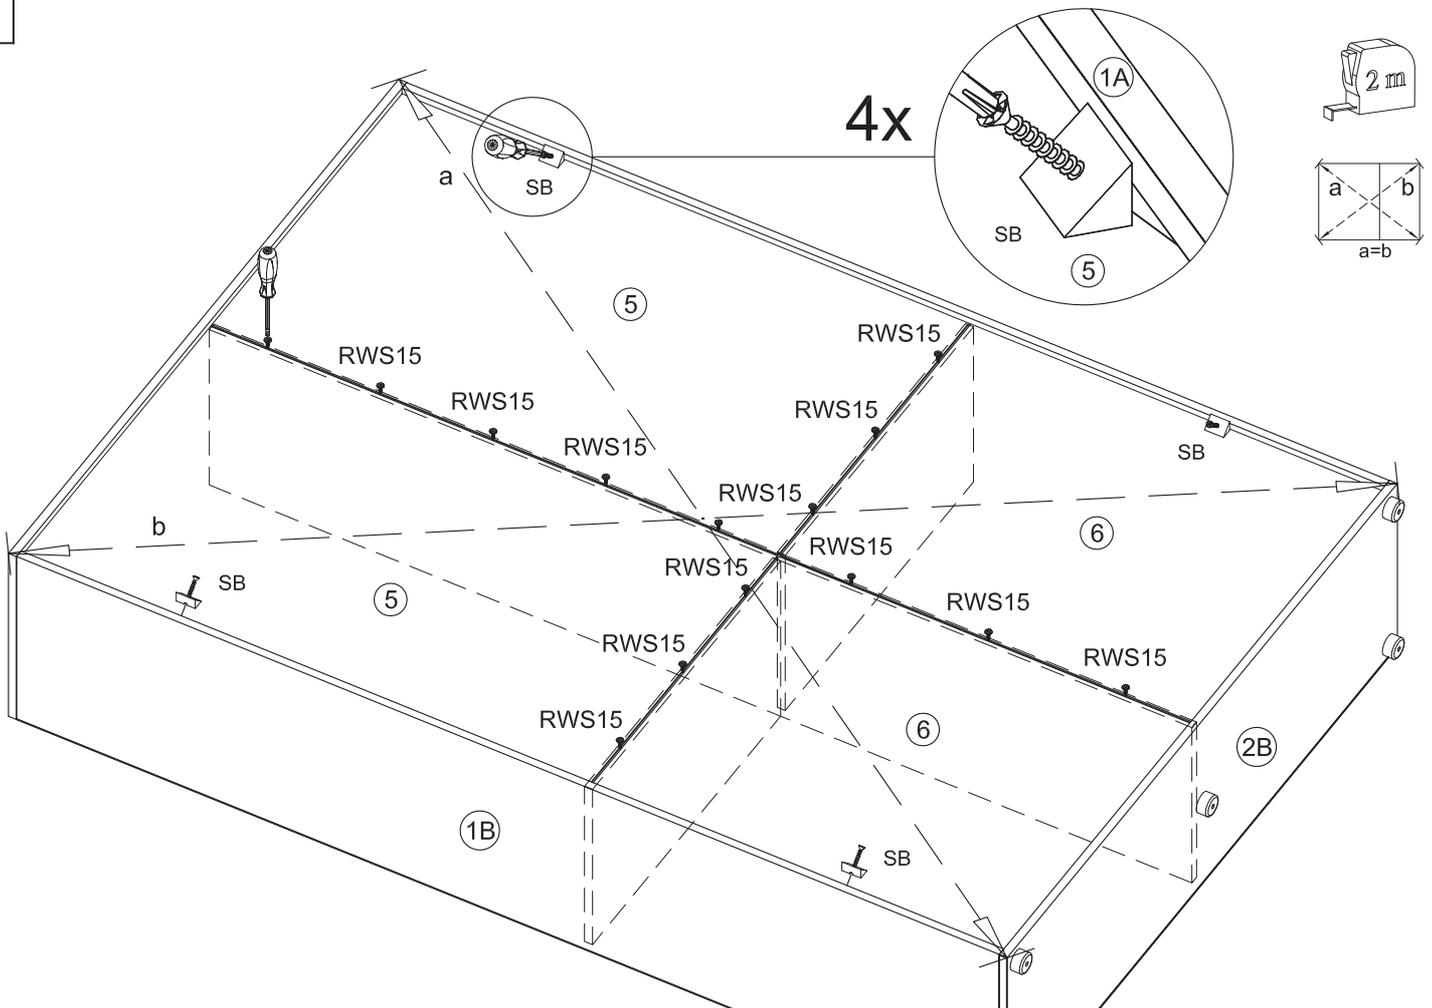H**I**

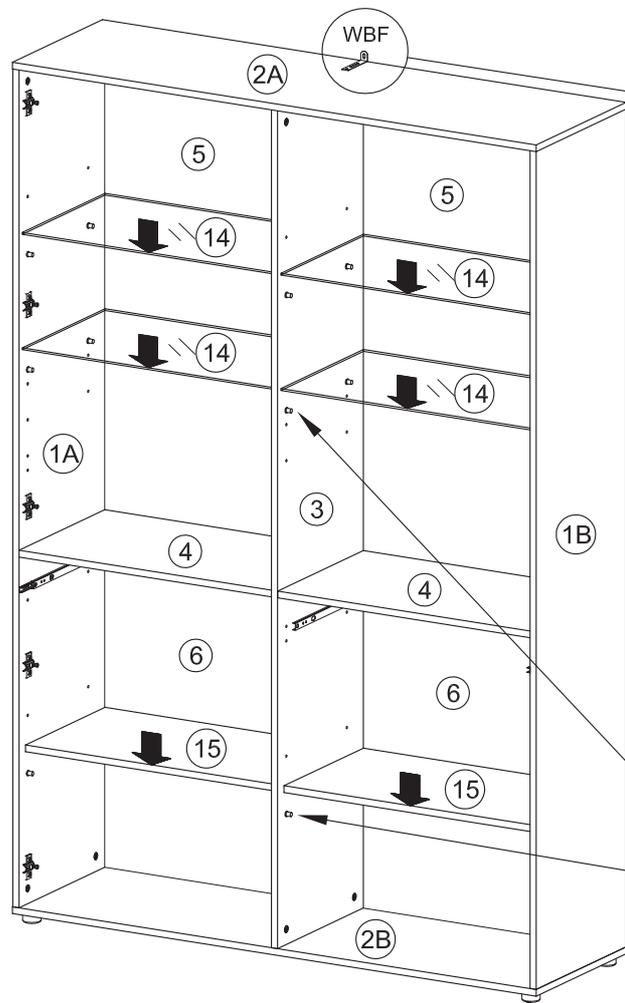J

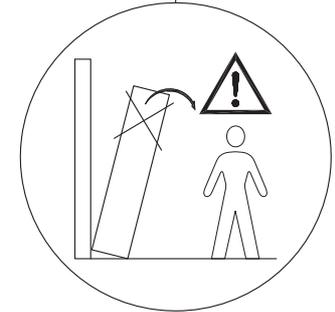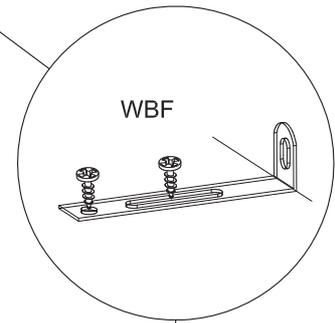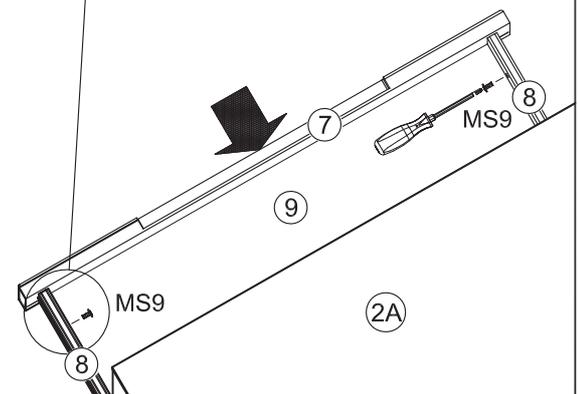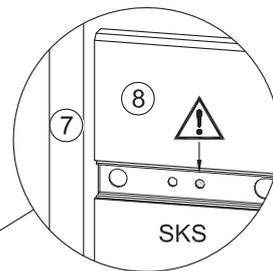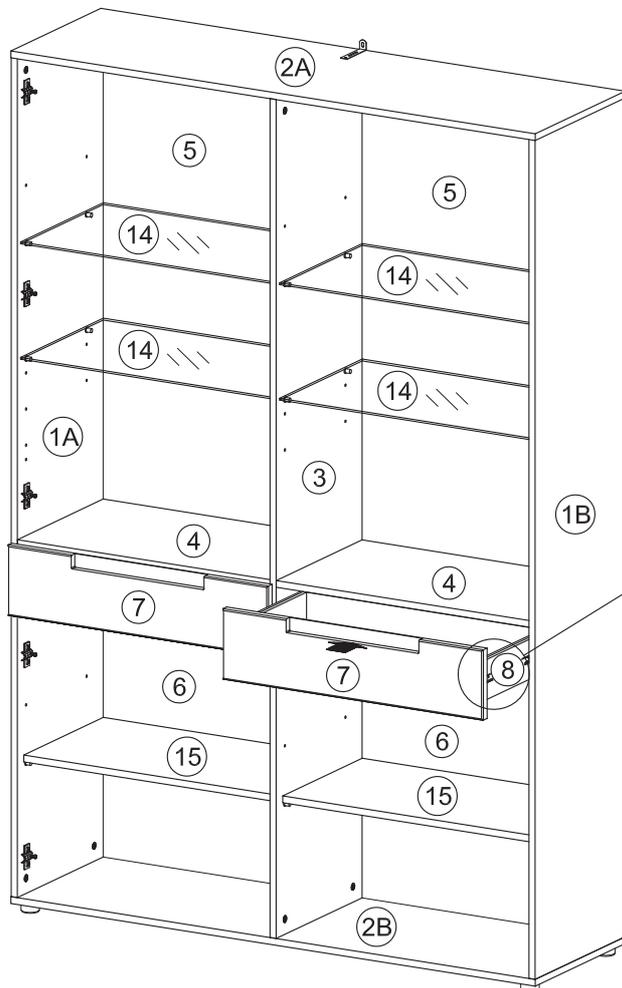Befestigungsmaterial für die Kippsicherung ist der Wandeigenschaft anzupassen!

**K**

L

