
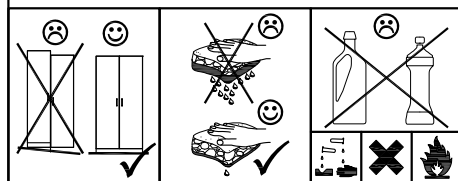


Montageanleitung

Bad Mailand Hängeschrank

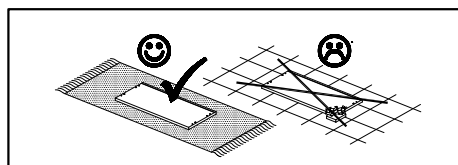

DE - Sicherheitsvorschriften

Beachten Sie bitte unbedingt die angegebenen Aufbauvorschriften.

EN - Caution



Follow carefully the assembling Instructions described in the directions.

FR - Sécurité


Respecter les Instructions de montage décrites dans la notice.

NL - Veiligheid


De In de Gebruiksaanwijzing beschreven Instructies respecteren.

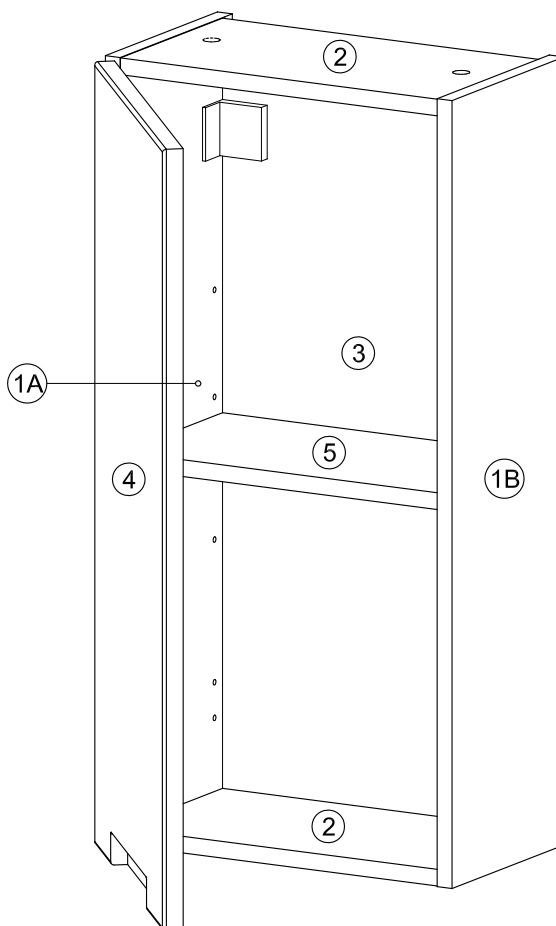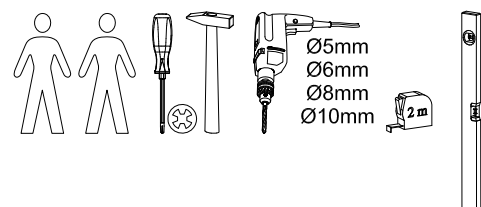


4x EX	4x VB
4x ADK-EX	8x RD8x40
4x SP1	2x KP0-26
2x TB26-0	10x NA
4x ES11	2x PH3
2x DS14	2x SB
2x SAH	4x BT

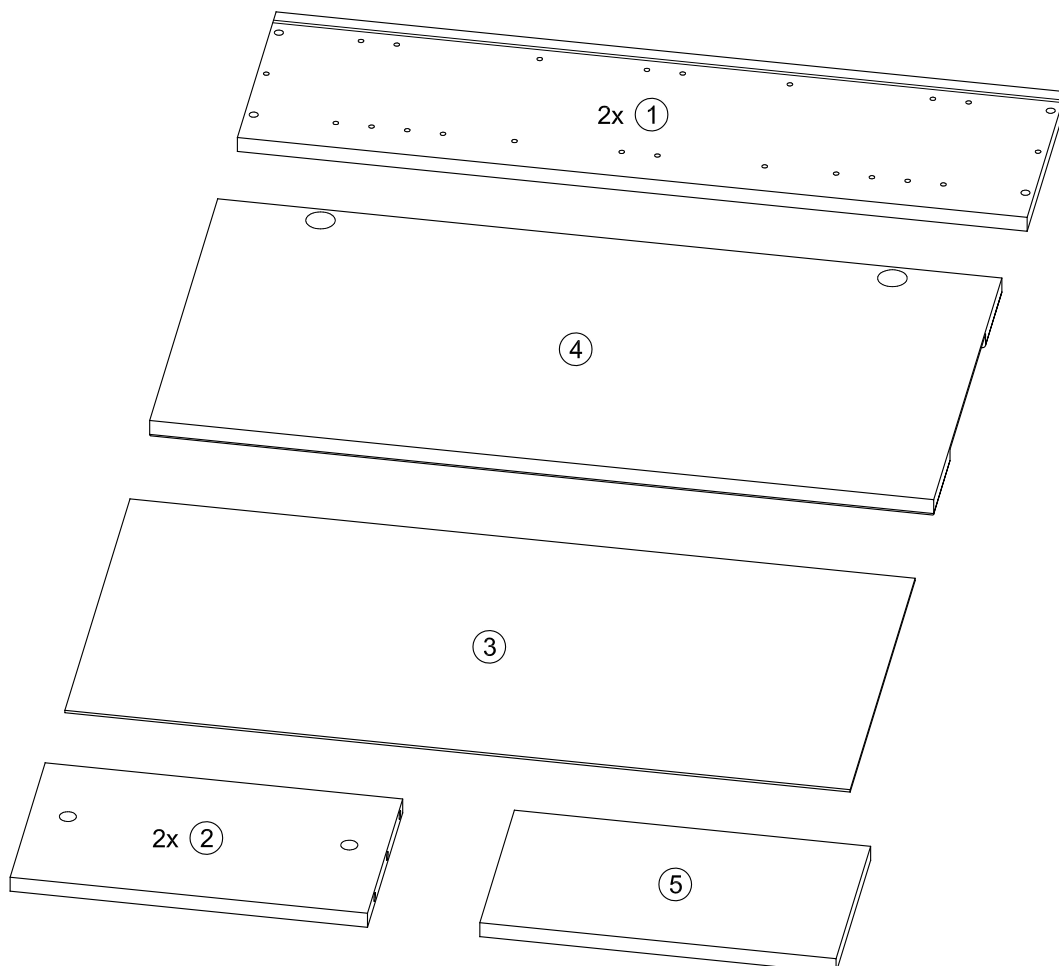


A

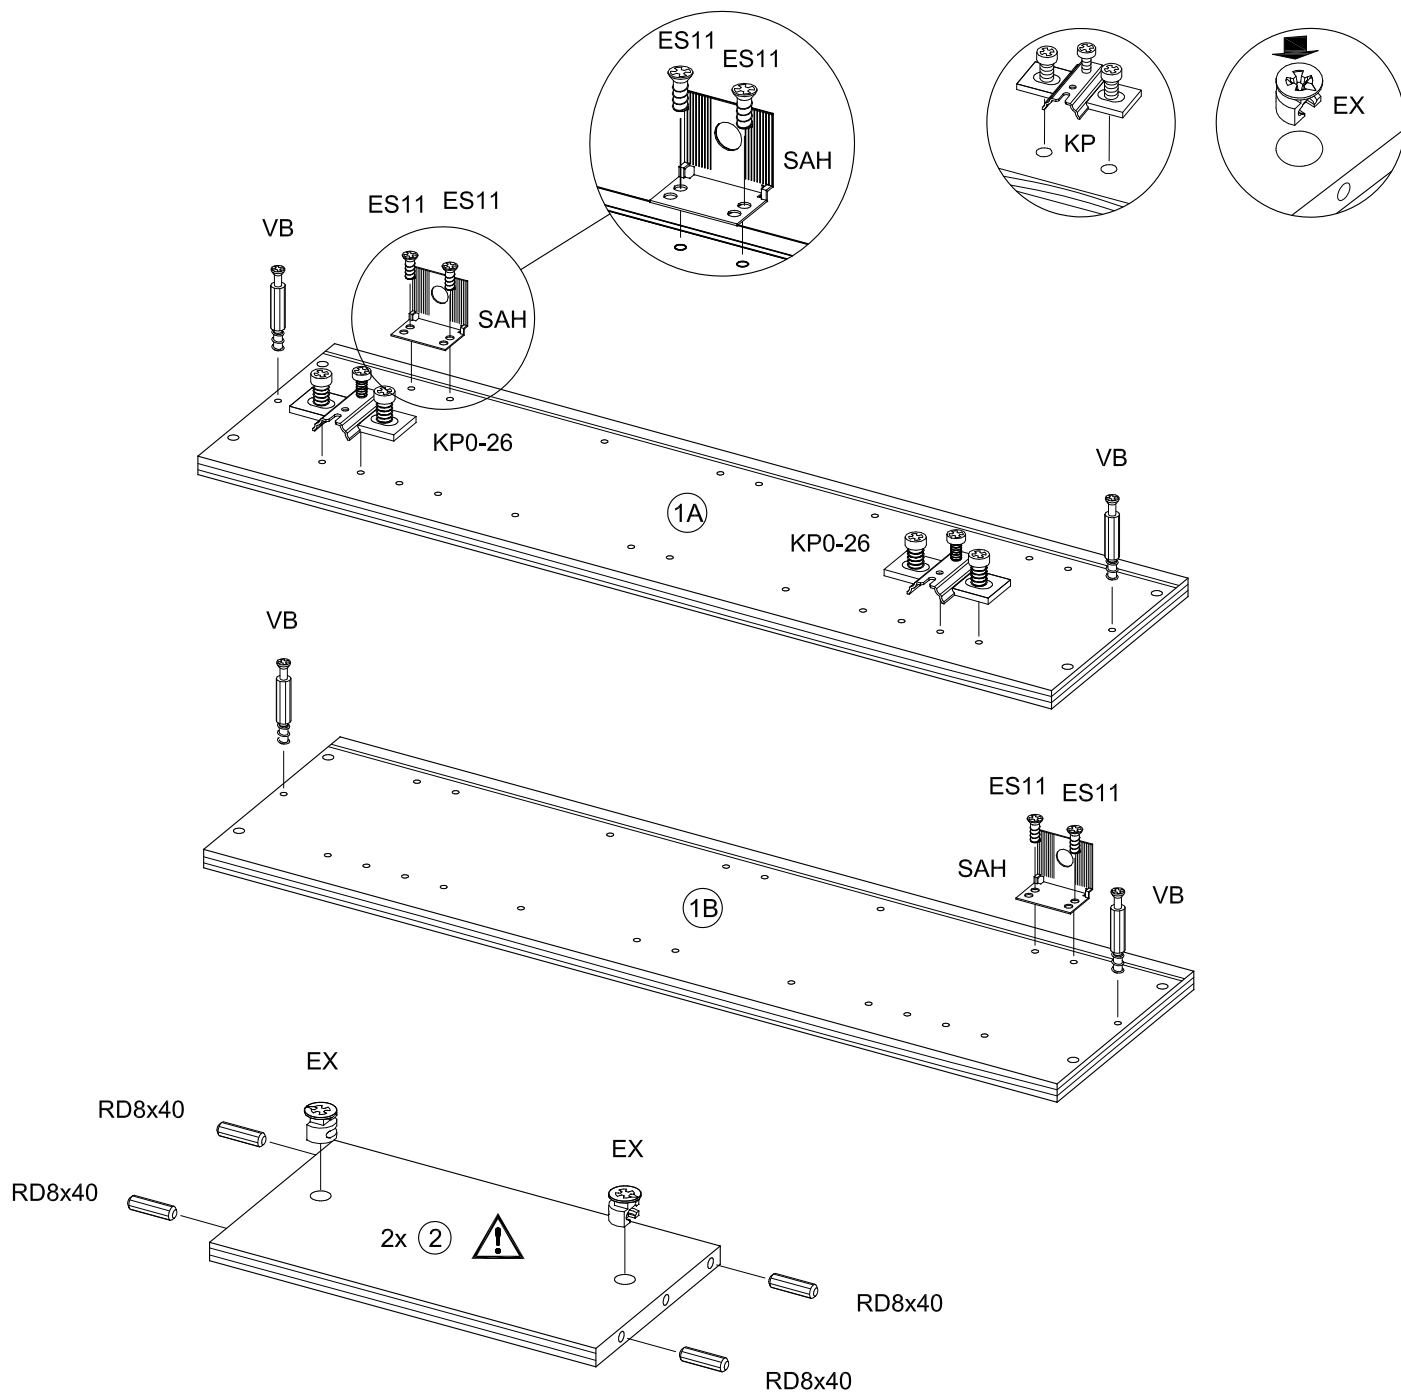


B

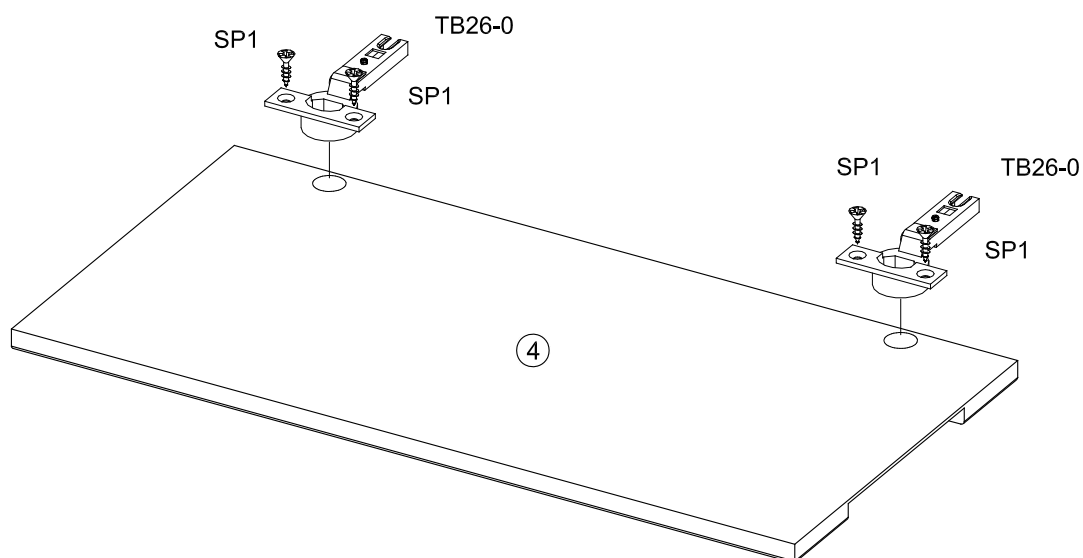


C

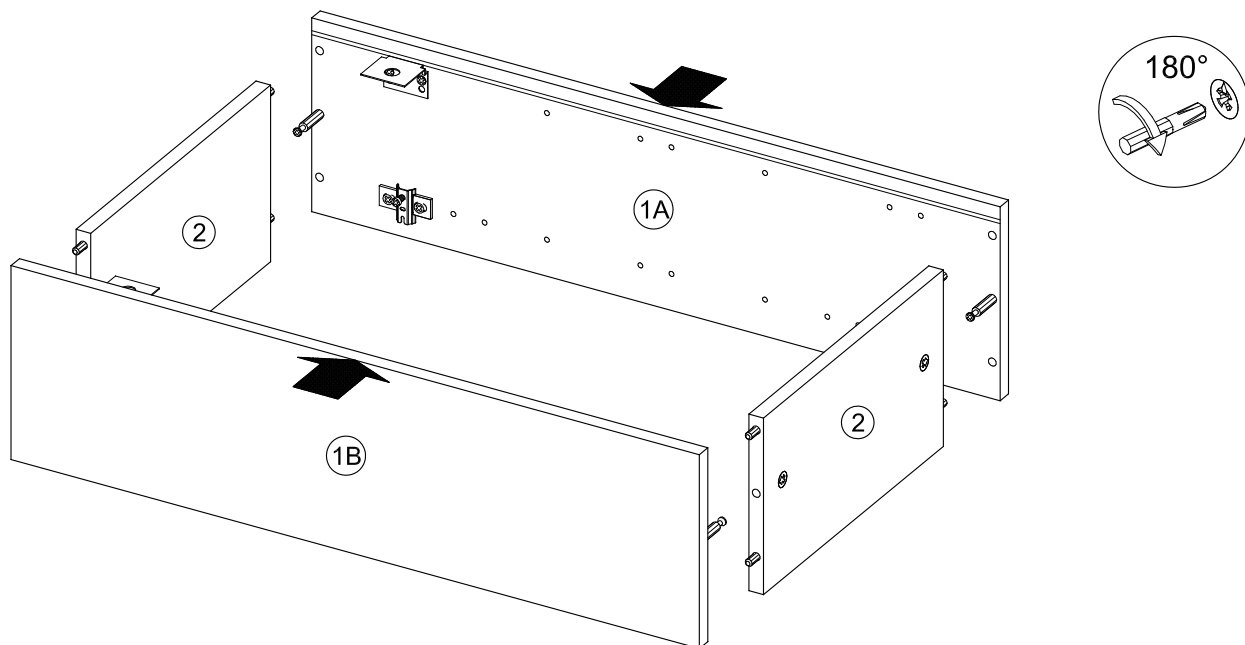


D

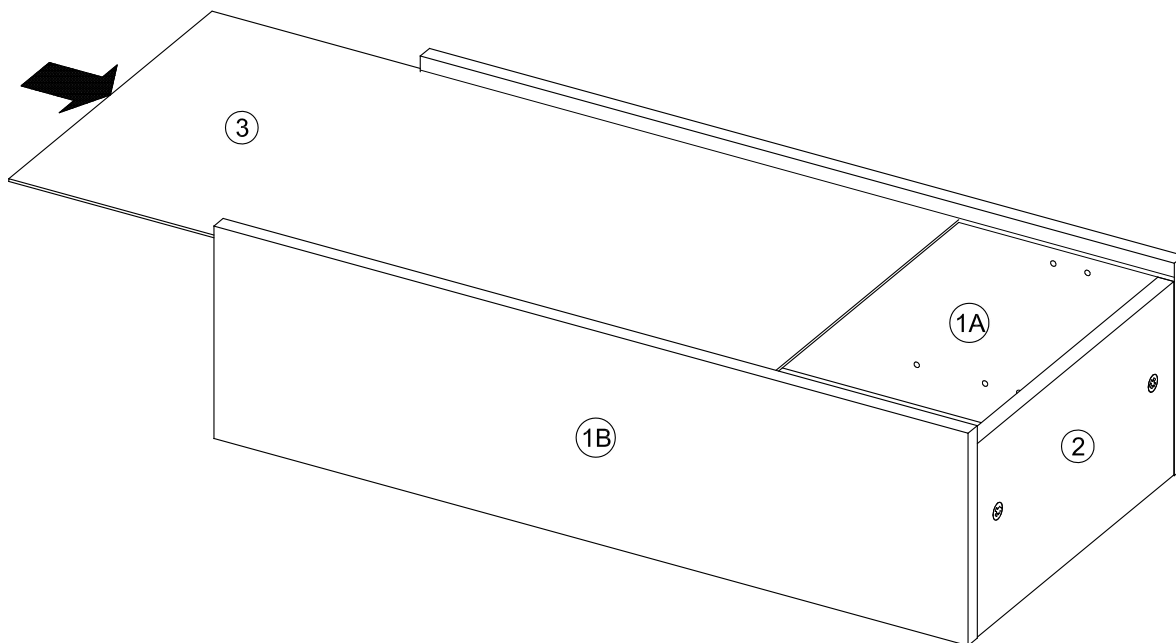

E

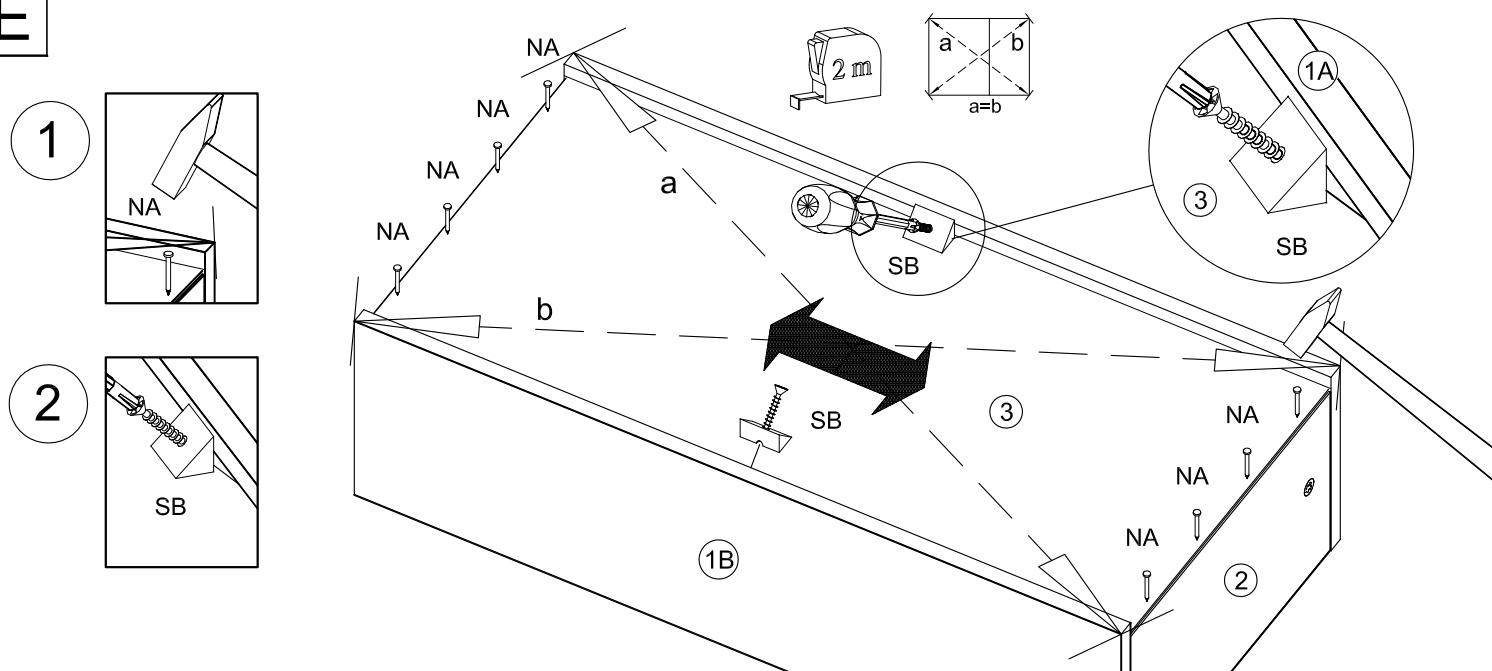


F


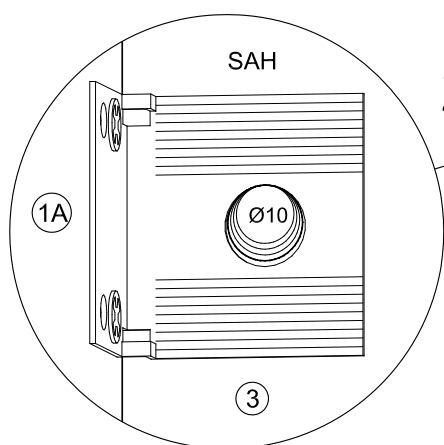


mind. Ø10mm oben ansetzen
nach unten größer werden
max. Ø15mm

2x

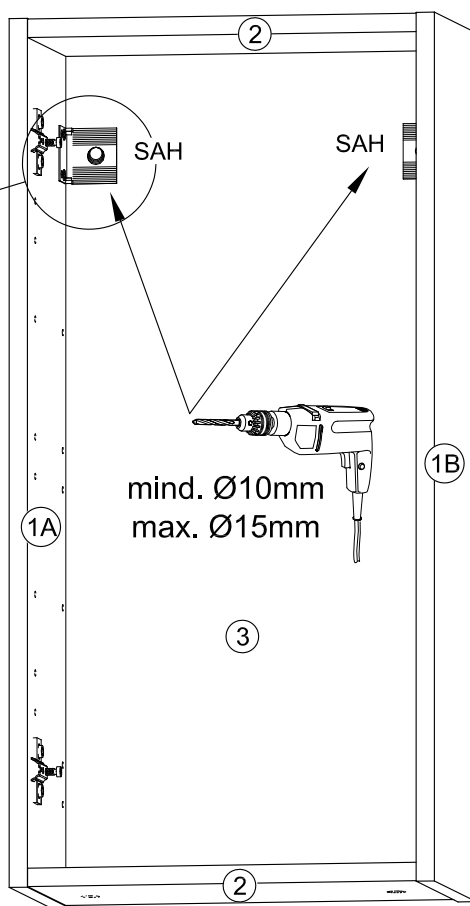


G

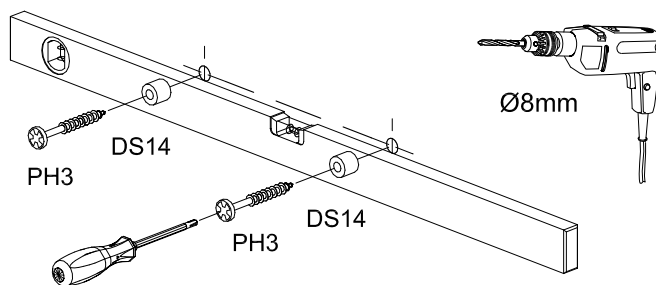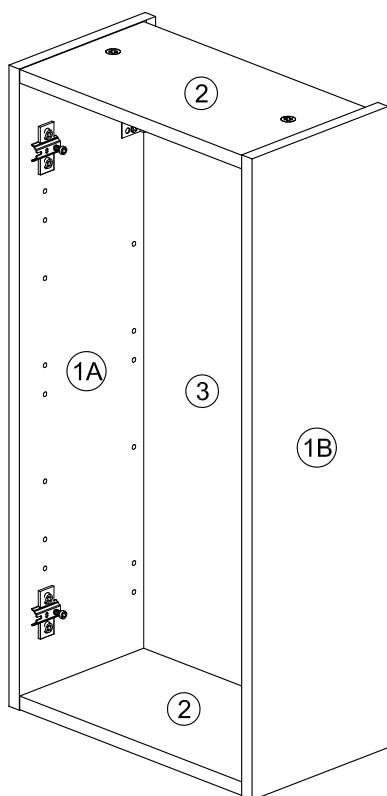


Befestigungsmaterial für die
Aufhängung ist der
Wandeigenschaft anzupassen!

2x

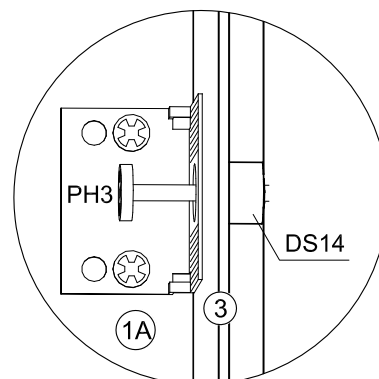

H

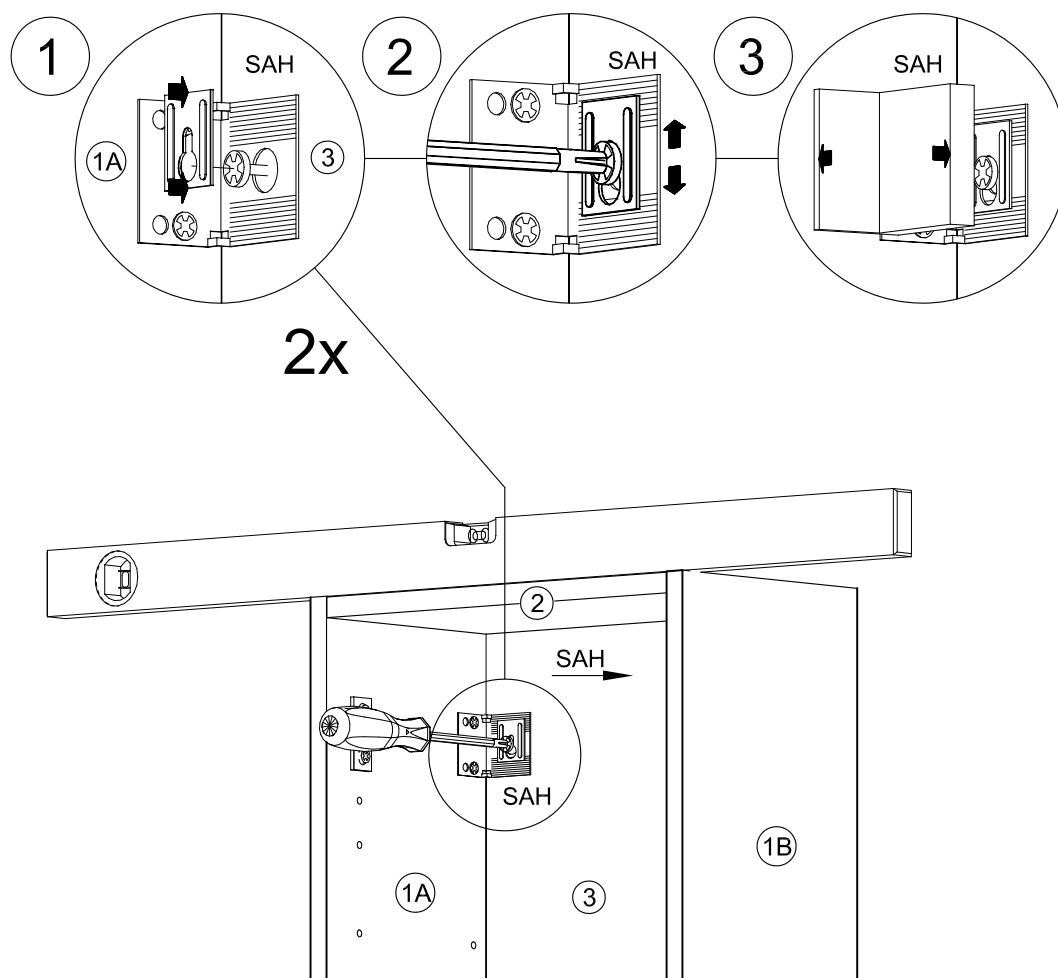

I

