
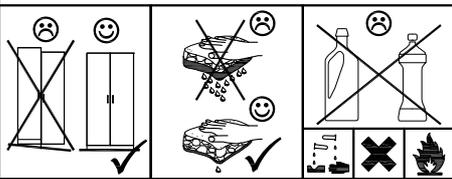


# Montageanleitung Mailand 17 Schubkastenkommode 3SKV

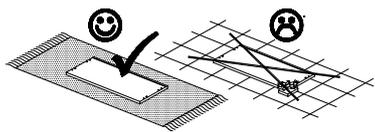

## DE - Sicherheitsvorschriften

Beachten Sie bitte unbedingt die angegebenen Aufbauvorschriften.

## EN - Caution




Follow carefully the assembling Instructions described in the directions.

## FR - Sécurité


Respecter les Instructions de montage décrites dans la notice.

## NL - Veiligheid


De In de Gebruiksaanwijzing beschreven Instructies respecteren.

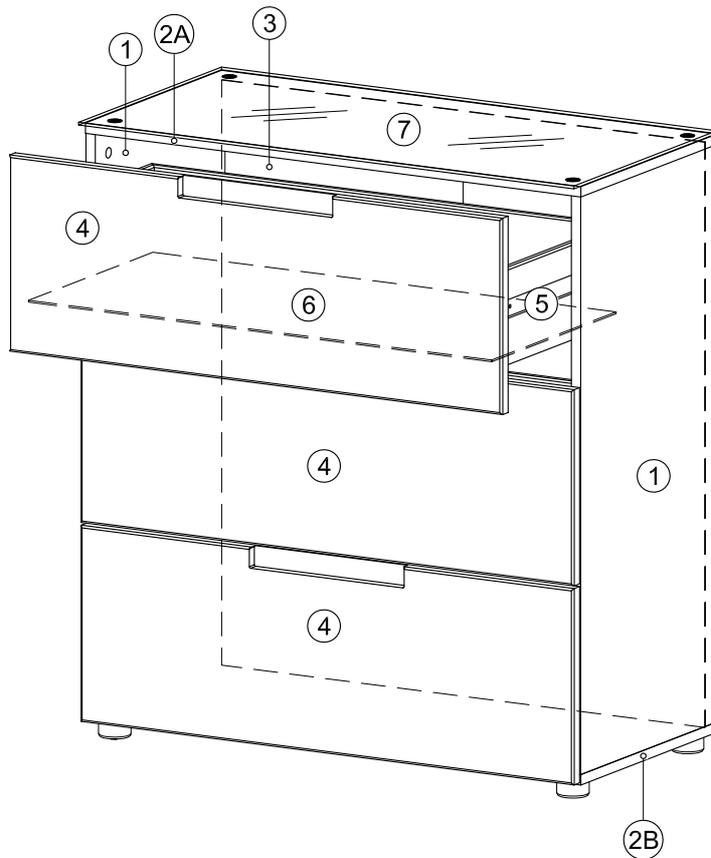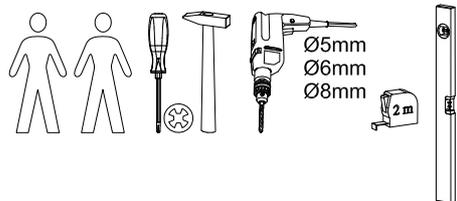

	8x EX
	8x VB
	8x40 8x RD8x40
	6,3x11 12x ES11
	3,5x13 12x SP1
	6x SKS3
	M4x9 6x MS9
	4x KG
	3,5x30 4x SP5
	10x SB
	4x ASB20
	3x LM
	1x WBF

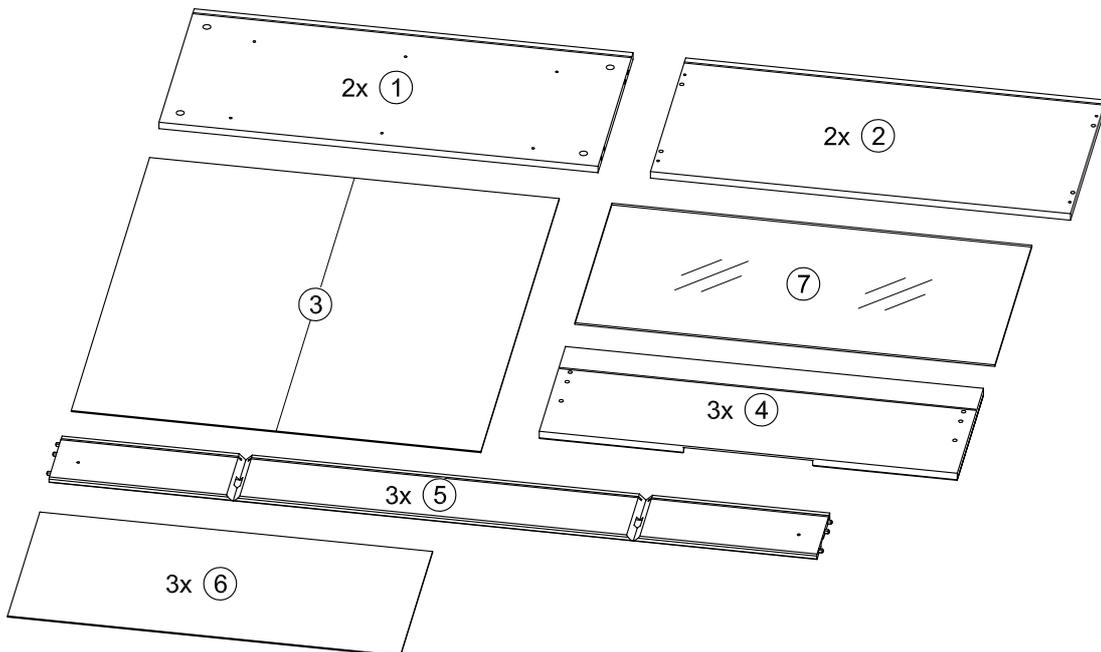


A

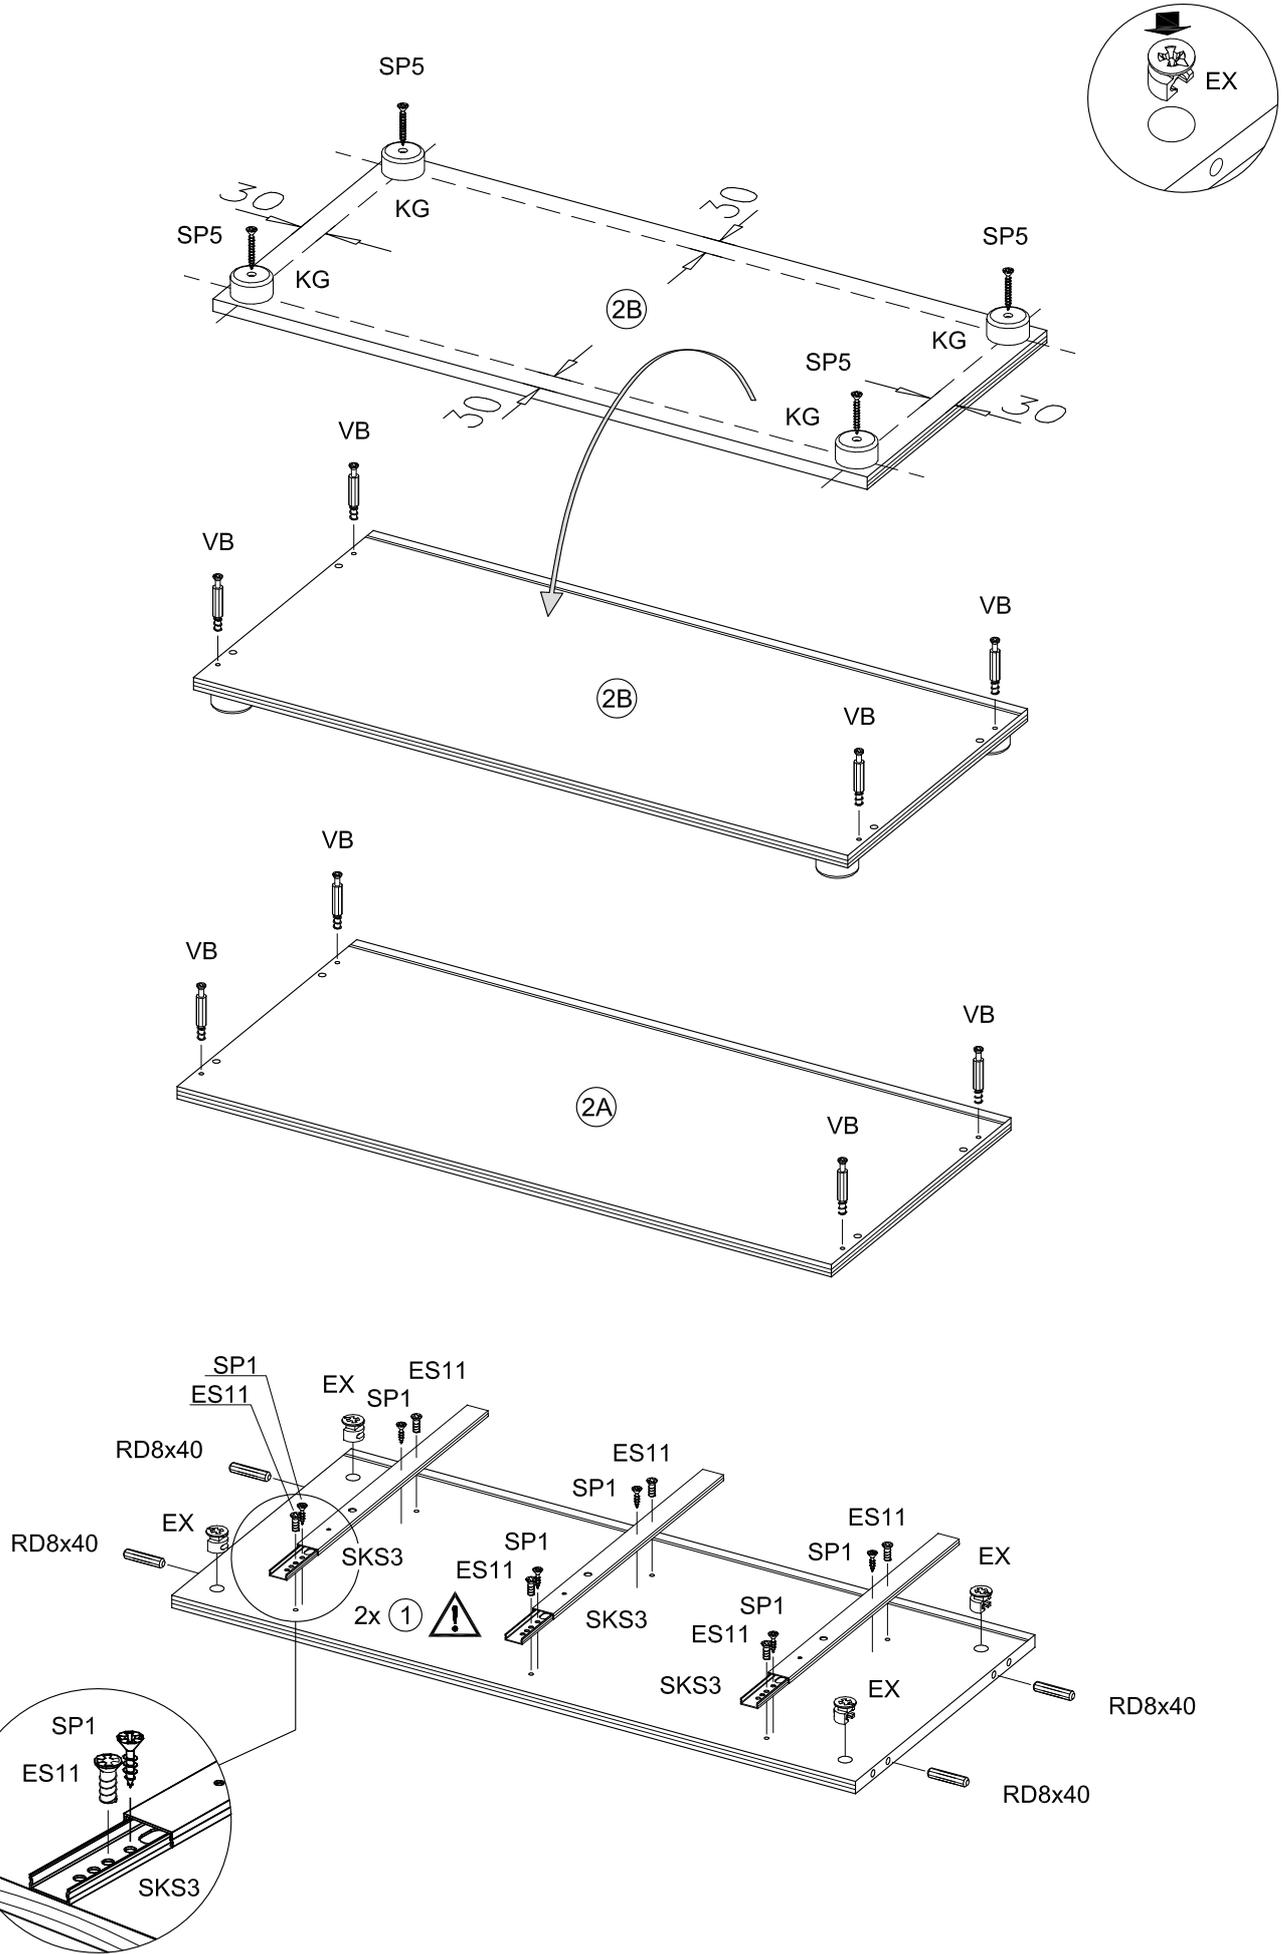



**B**

1

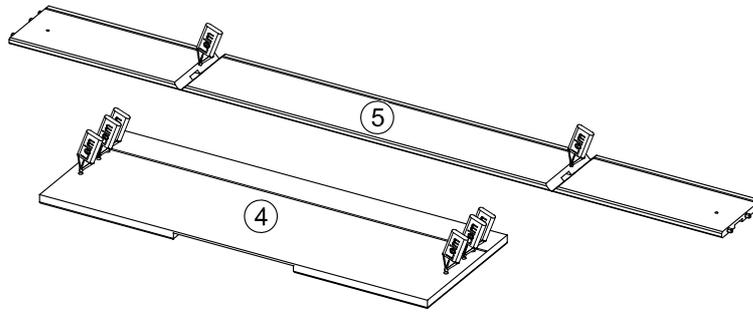


3x






2

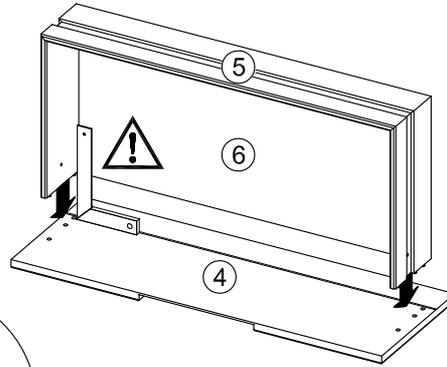
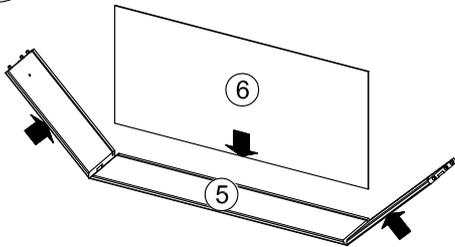


4



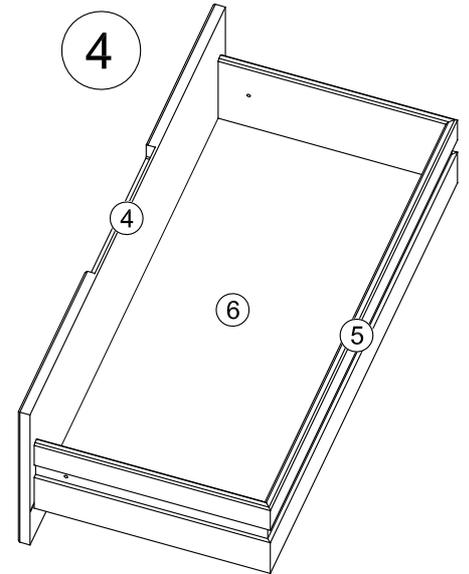


3

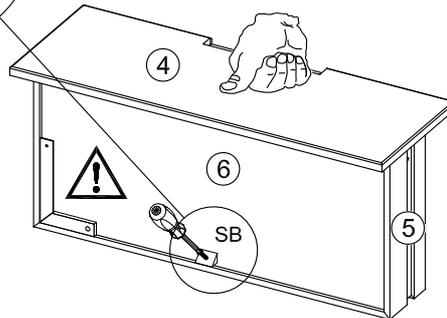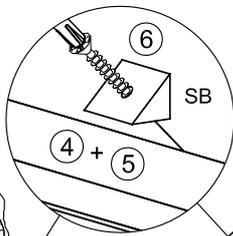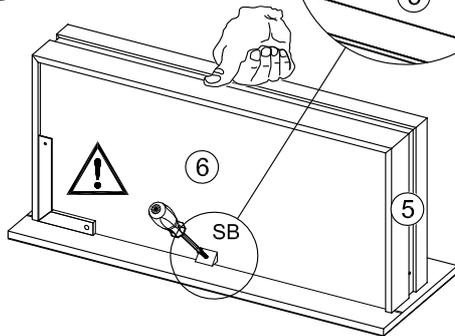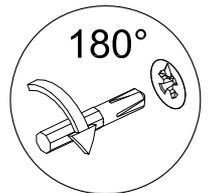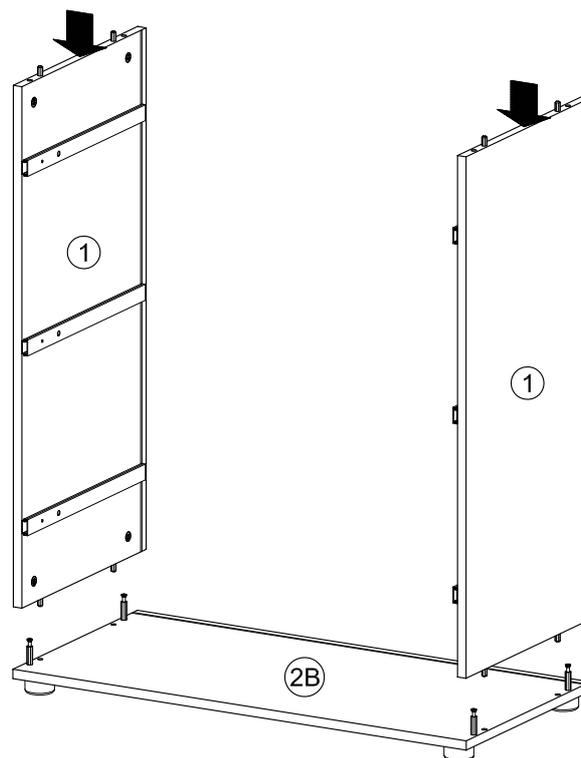
20 Minuten  
trocknen lassen**C**

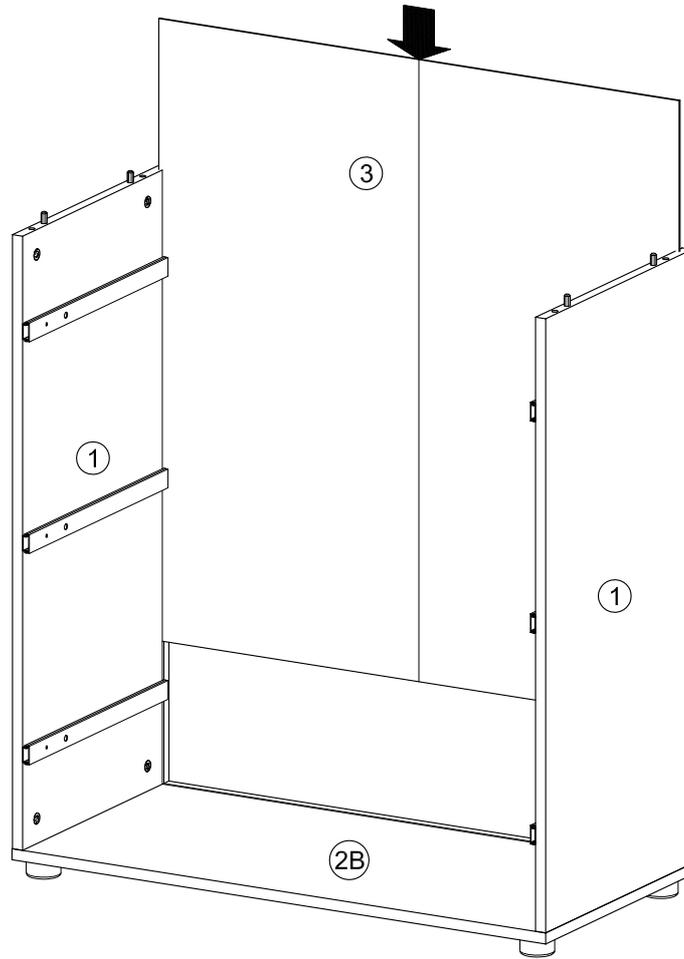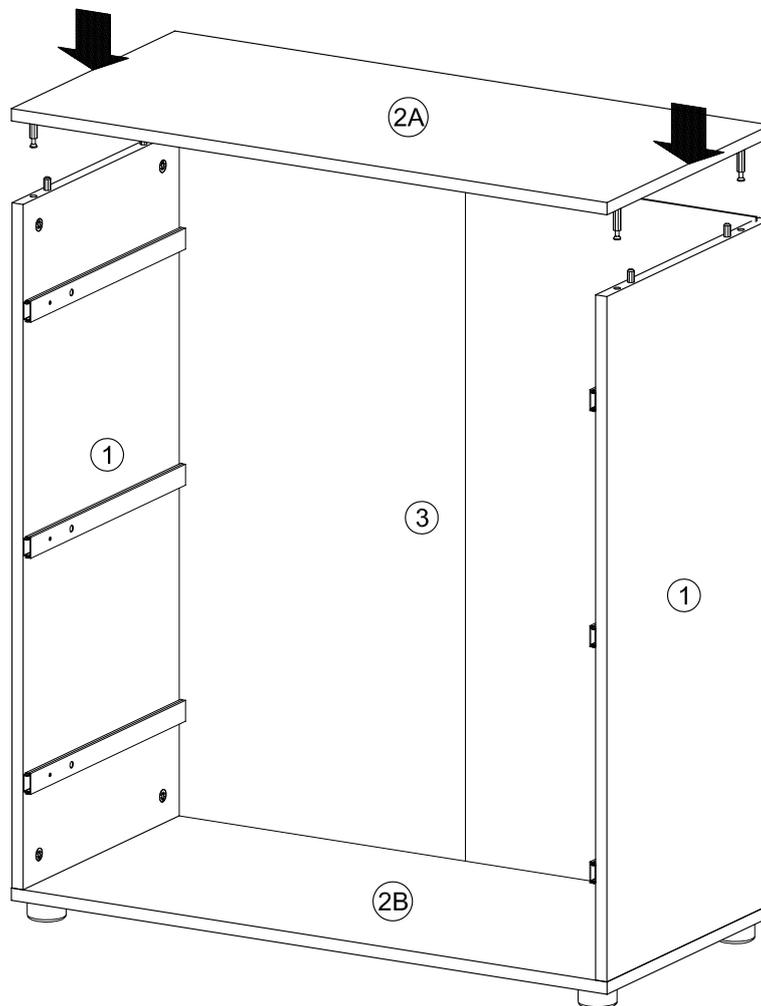**D****E**





F

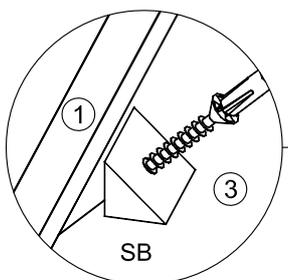


4x


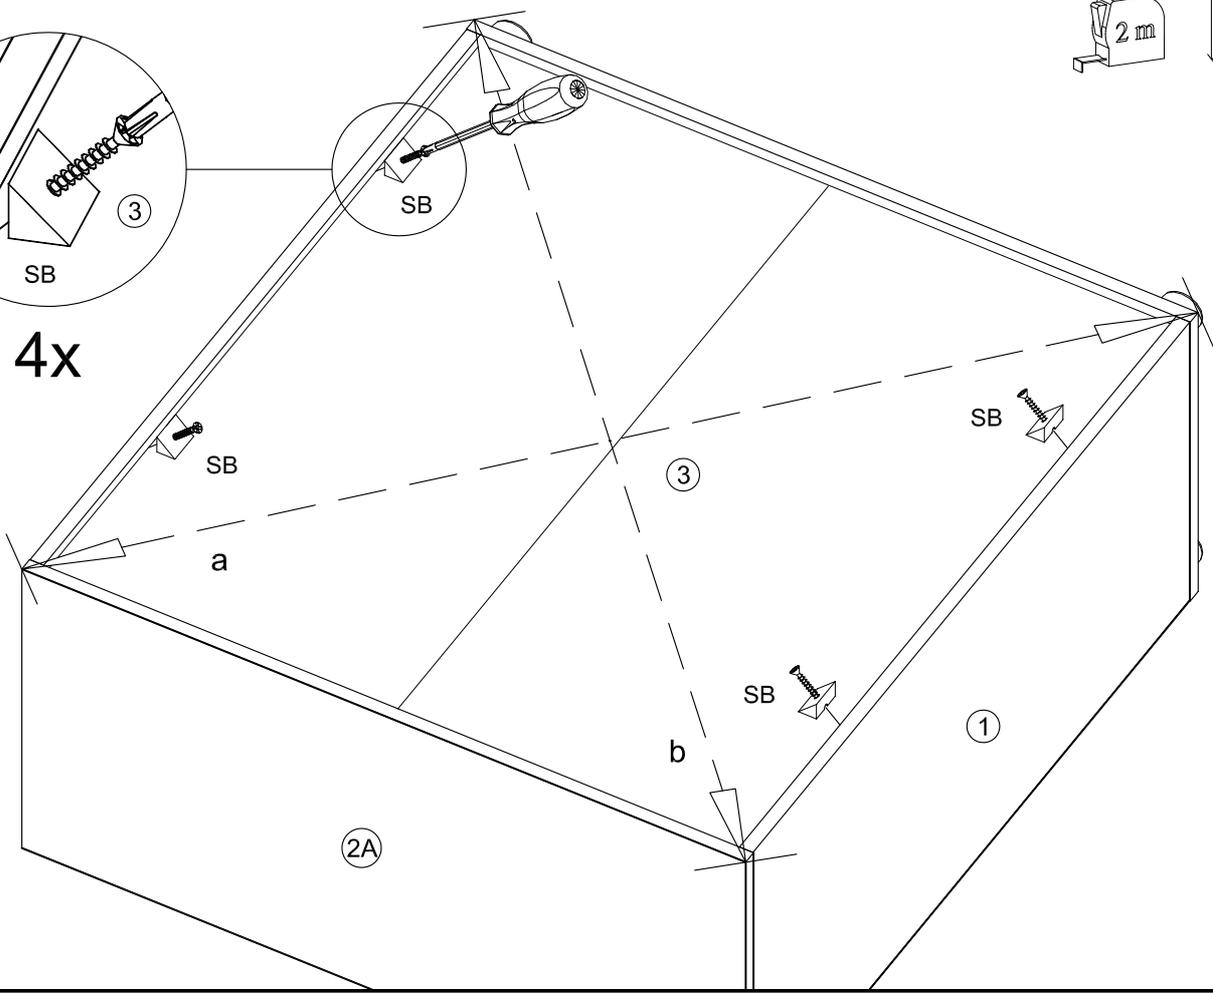


G

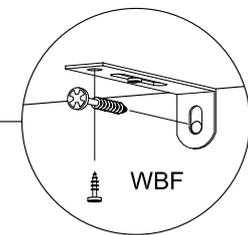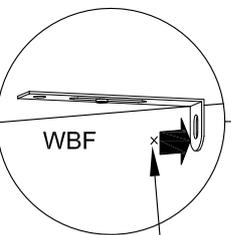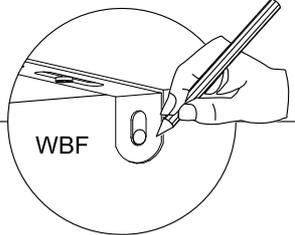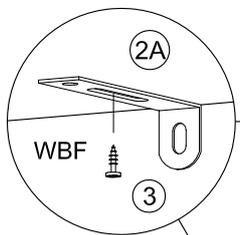

Befestigungsmaterial für die Kippsicherung ist der Wandegenschaft anzupassen!

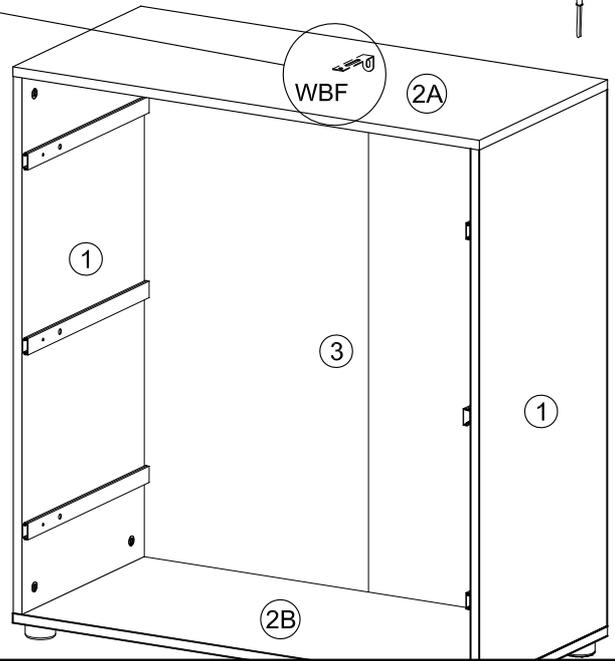

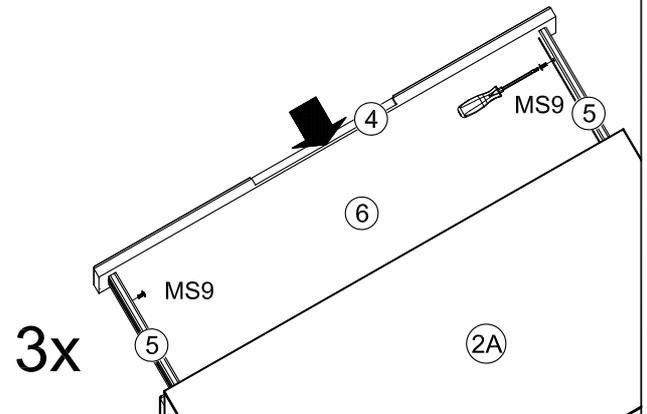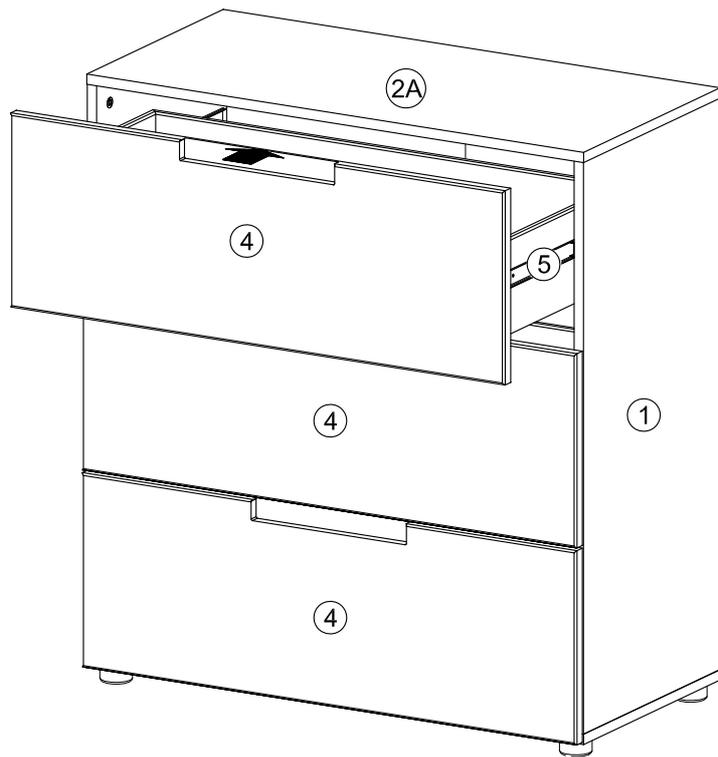**H****I**