


PARINI 3

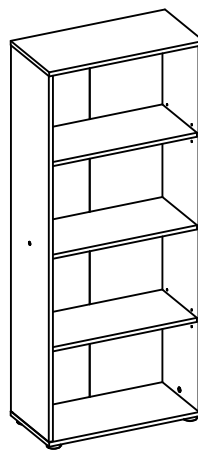

Montageanleitung / Notice de Montage / Assembling Instruction

ART. NR: 19 500 030

EAN: 40 10 340 19 50 34

ORDER : -----

DE: Wichtige Montage – Tipps hier zum herunterladen:

EN: Important assembling suggestions download:

FR: Conseils de montage importants à télécharger ici :

BG: Важни съвети за сглобяване, които да изтеглите от тук:

CZ: Důležité montážní tipy ke stažení zde:

EE: Olulised kokkupanemisetpanekute allalaadimine:

DK: Vigtige montage tips til at downloade:

ES: Descarga de sugerencias de montaje importantes:

FI: Tärkeät kokoamisedotukset ladataan:

GR: Λήψη σημαντικών προτάσεων συναρμολόγησης:

HR: Preuzimanje važnih prijedloga za sastavljanje:

HU: Fontos összeszerelési javaslatok letöltése:

IT: Download importanti suggerimenti di montaggio:

LT: Svarbūs surinkimo pasiūlymai atsisiųsti:

LU: Wichtig Versammlungsvorschläge eroflueden:

LV: Svarīgu montāžas ieteikumu lejupielāde:

NL: Belangrijke montagesuggesties downloaden:

NO: Viktige nedlastingsforslag:

PL: Pobieranie ważnych sugestii montażowych:

PT: Download de sugestões importantes de montagem:

RO: Descărcare de sugestii importante de asamblare:

RS: Преузимање важних предлога за састављање:

RU: Важные предложения по сборке скачать:

SL: Prenos pomembnih predlogov za sestavljanje:

SE: Viktiga hämtningsförslag:

SK: Stiahnutie dôležitých návrhov na zostavenie:

TR: Önemli montaj önerileri indir:

ARB: المهمة التجميع اقتراحات تنزيل:




Z. A. du Niederwald
F-67470 Seltz
www.interlink-sas.com



PARINI 3

①		12 x
②		4 x
③		4 x
④		4 x
⑤		8 x
⑥		1 x
⑦		8 x
⑧		8 x
⑨		4 x
⑩		2 x
⑪		2 x
⑫		10 x
⑬		1 x
⑭		1 x

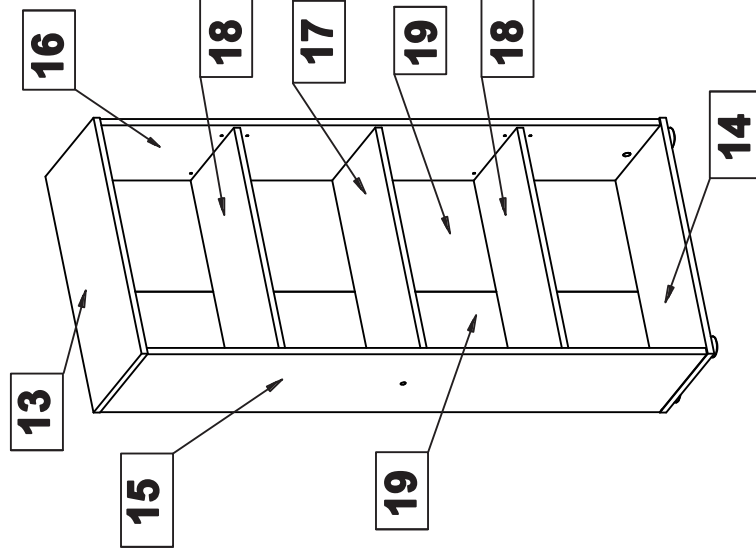

Inter Link SAS

Z. A. du Niederwald
F-67470 Seltz
Frankreich/France

International:

Téléfon: (0033) 3 88 05 55 50
Téléfax: (0033) 3 88 05 55 68

National:



Téléphone 03 88 05 55 59
Télécopie 03 88 05 55 79

e-mail: service@interlink-sa.com
www.interlink-sa.com




40 min.

1-8

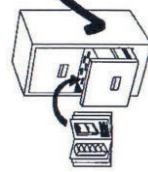


PARINI 3

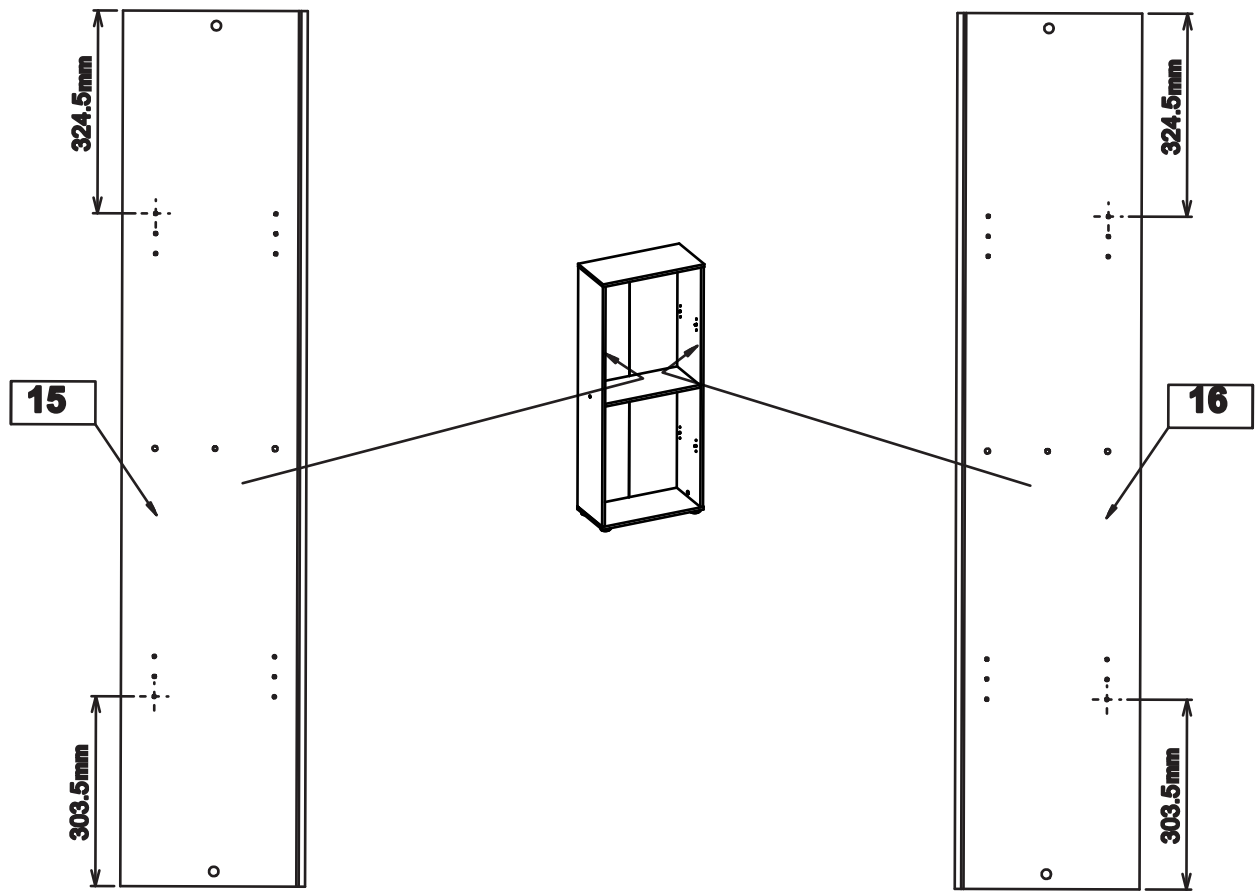


2-9

PARINI 3

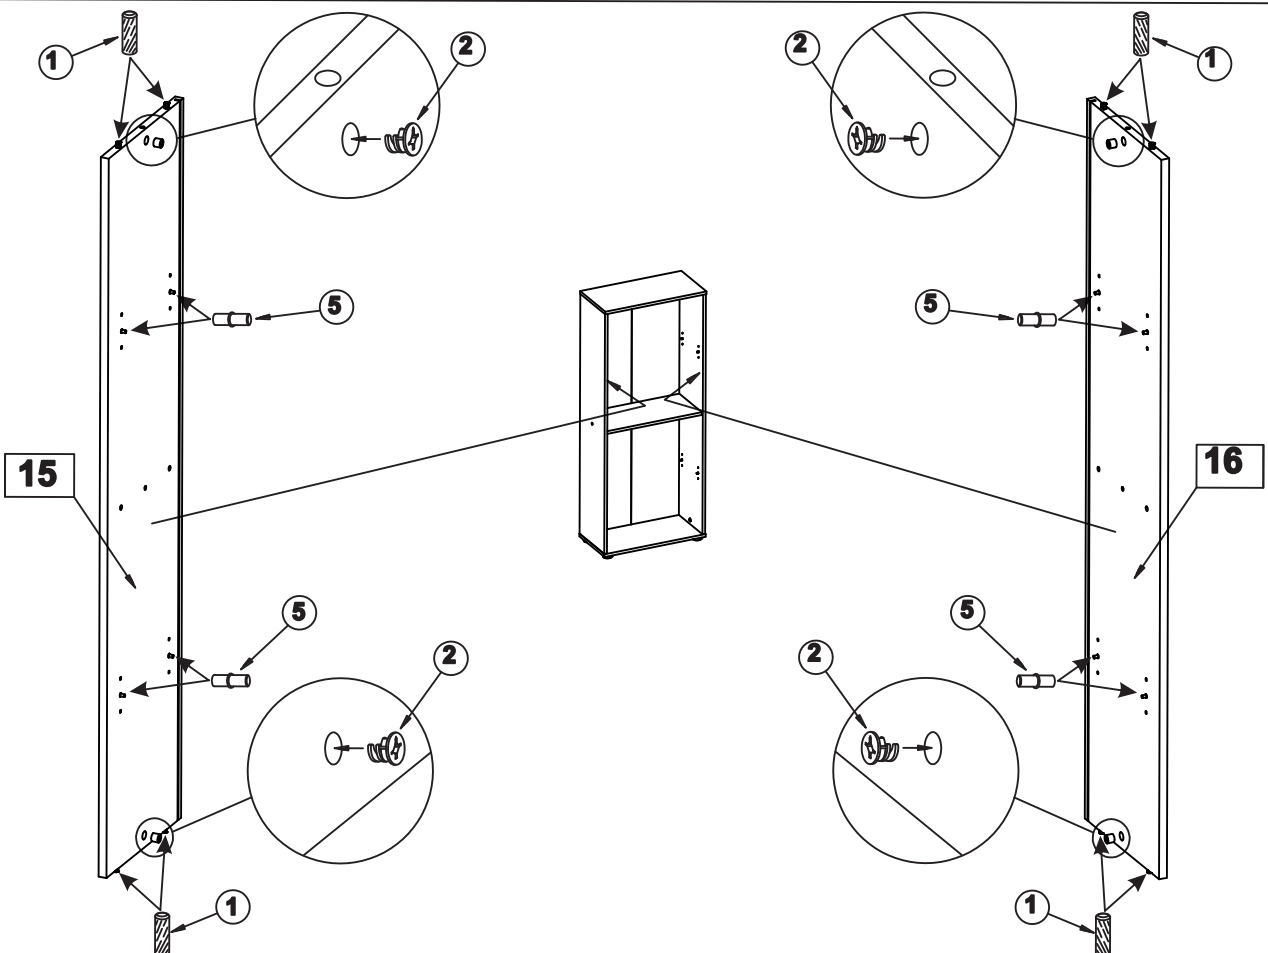



3-9

PARINI 3

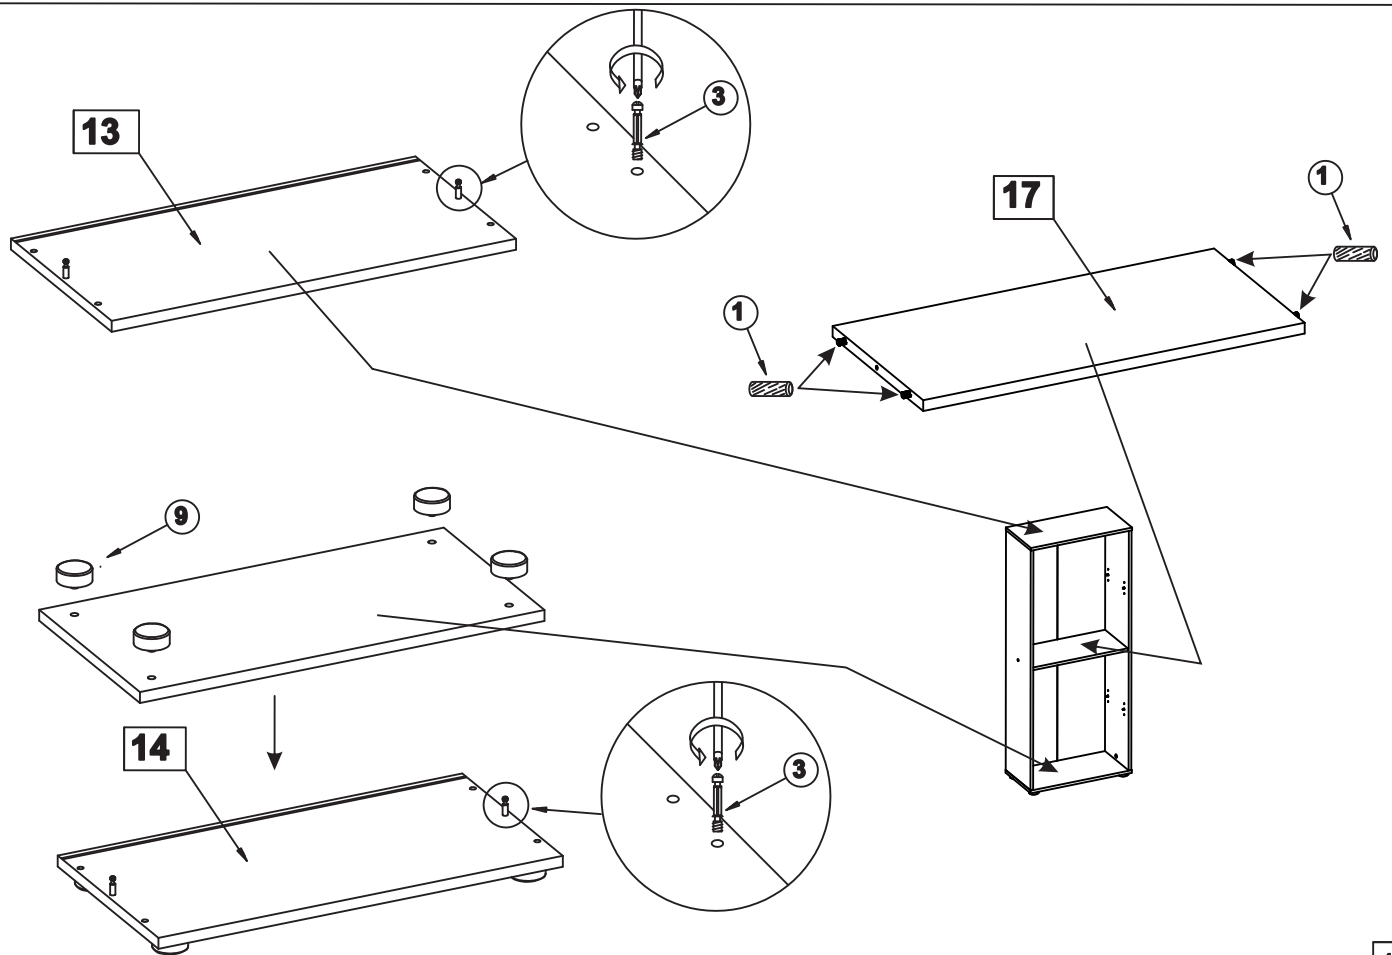




4-9

PARINI 3

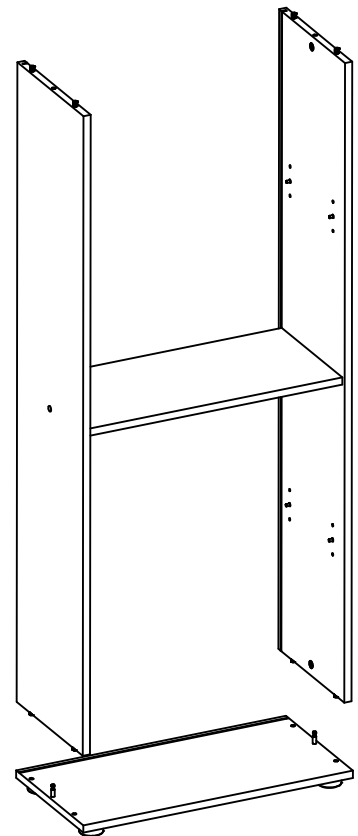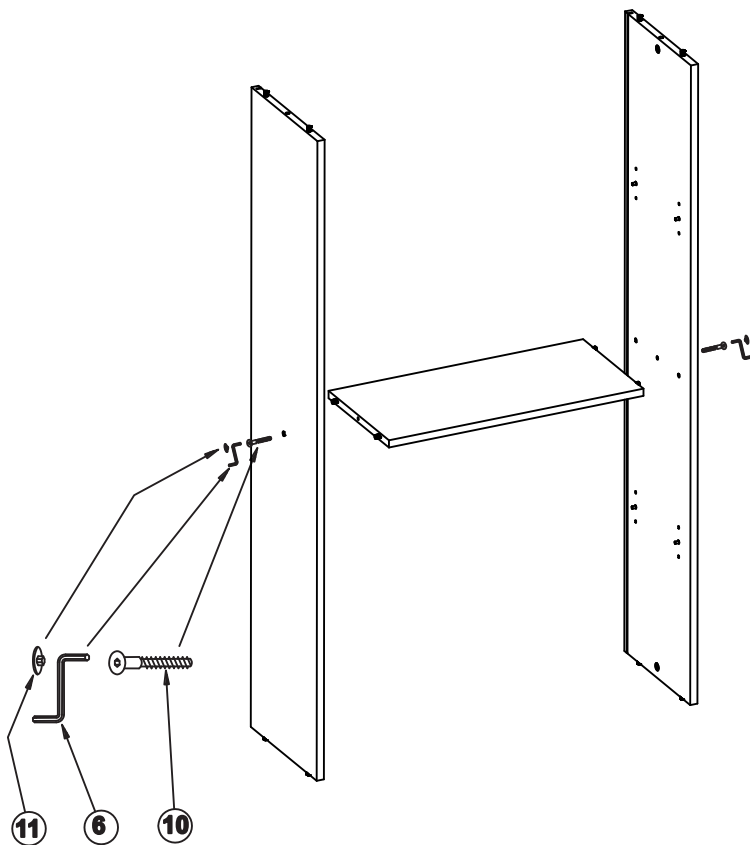





5-9

PARINI 3

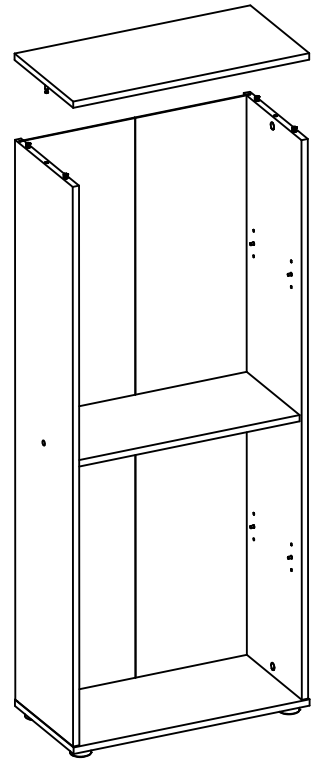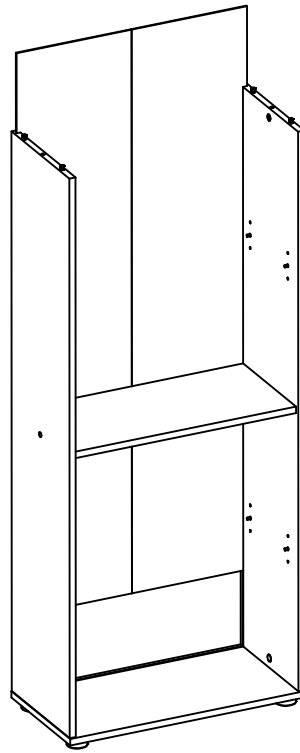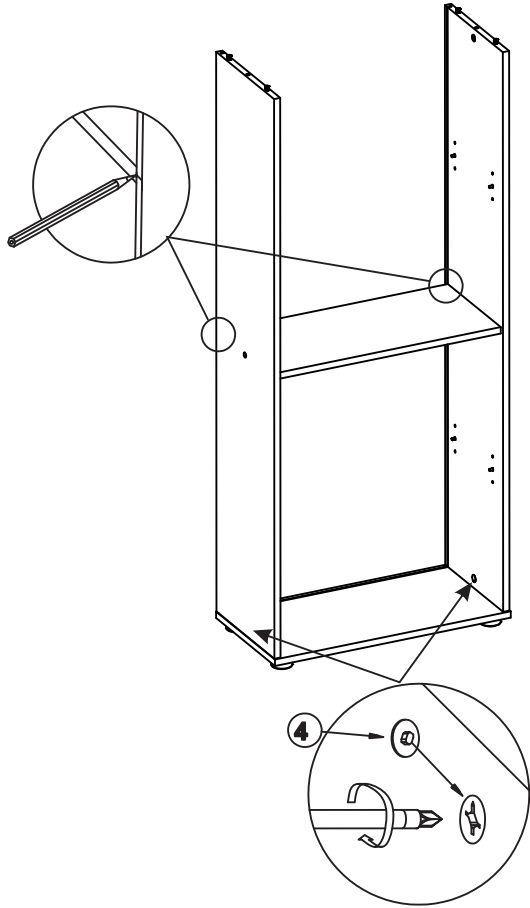



6-9

PARINI 3

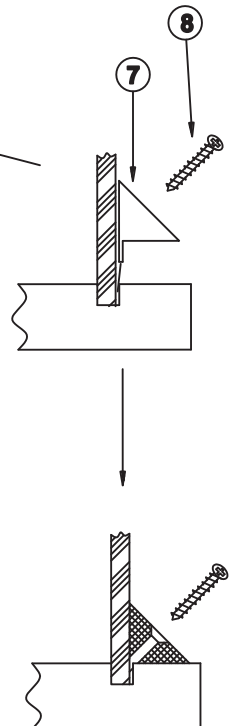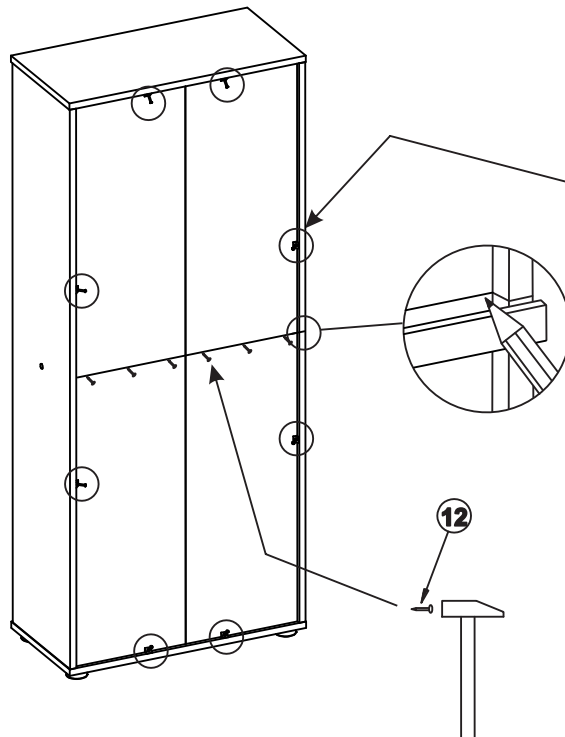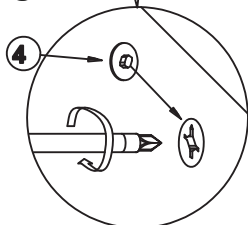
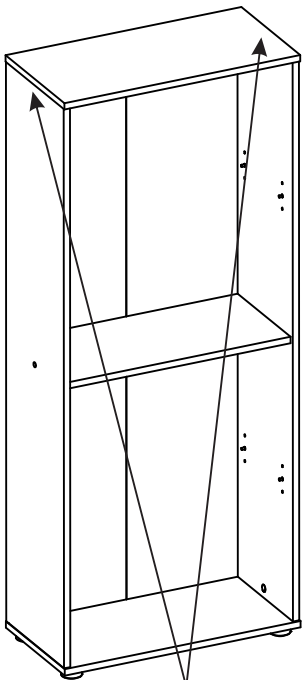


7-9

PARINI 3

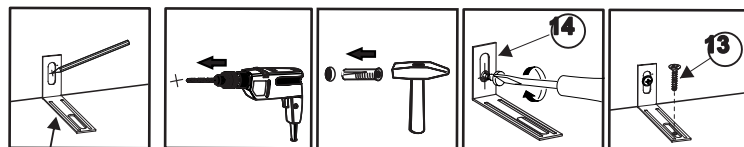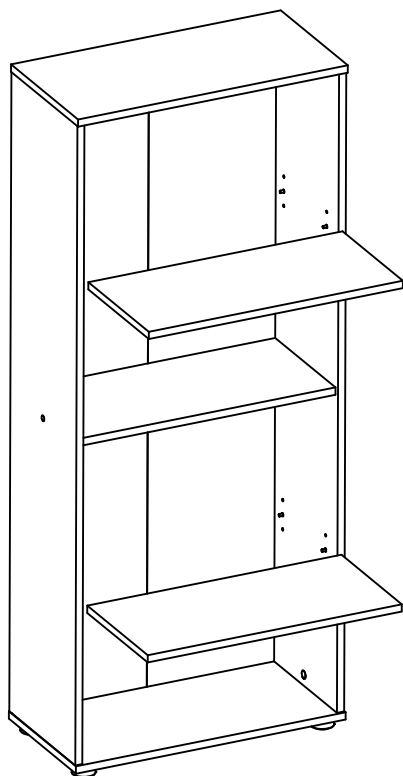


14

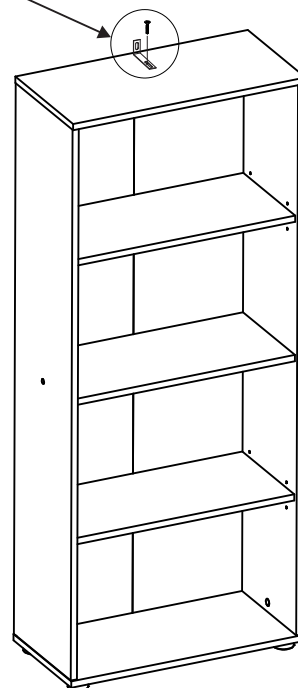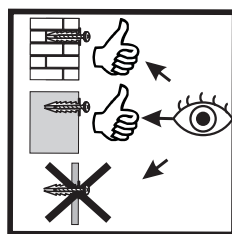

8-9

PARINI 3

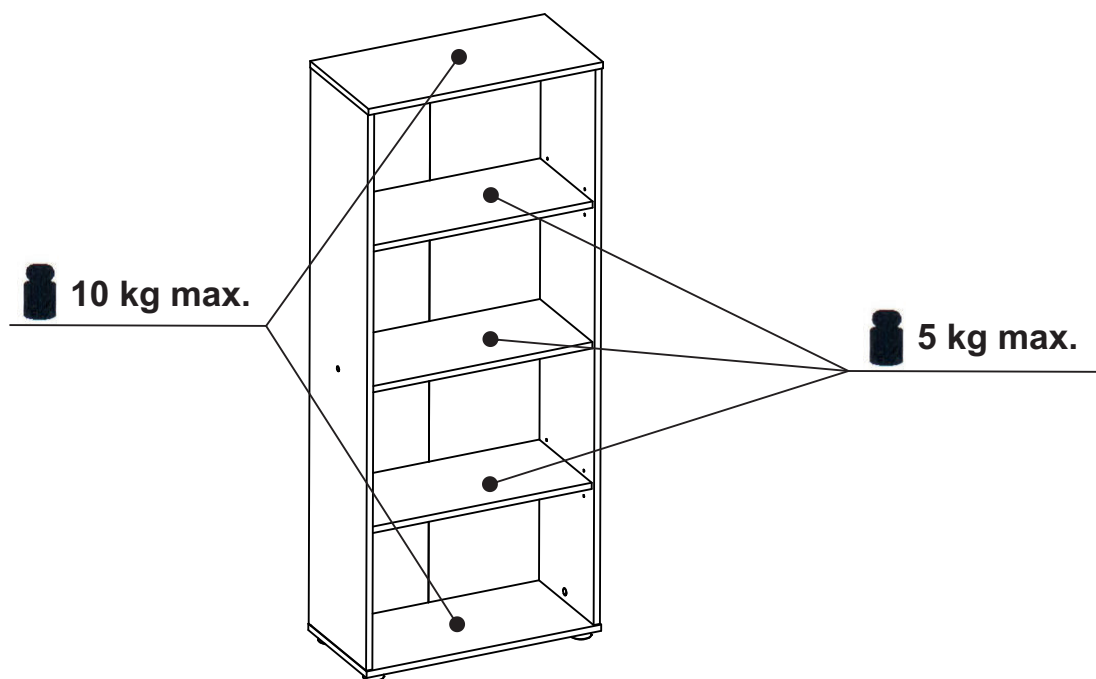

9-9