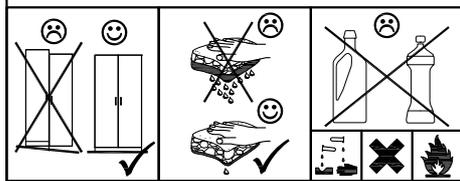
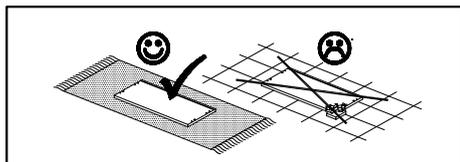


Montageanleitung

Mailand 18 Schubkastenkommode 4SKV



DE - Sicherheitsvorschriften

Beachten Sie bitte unbedingt die angegebenen Aufbauvorschriften.

EN - Caution

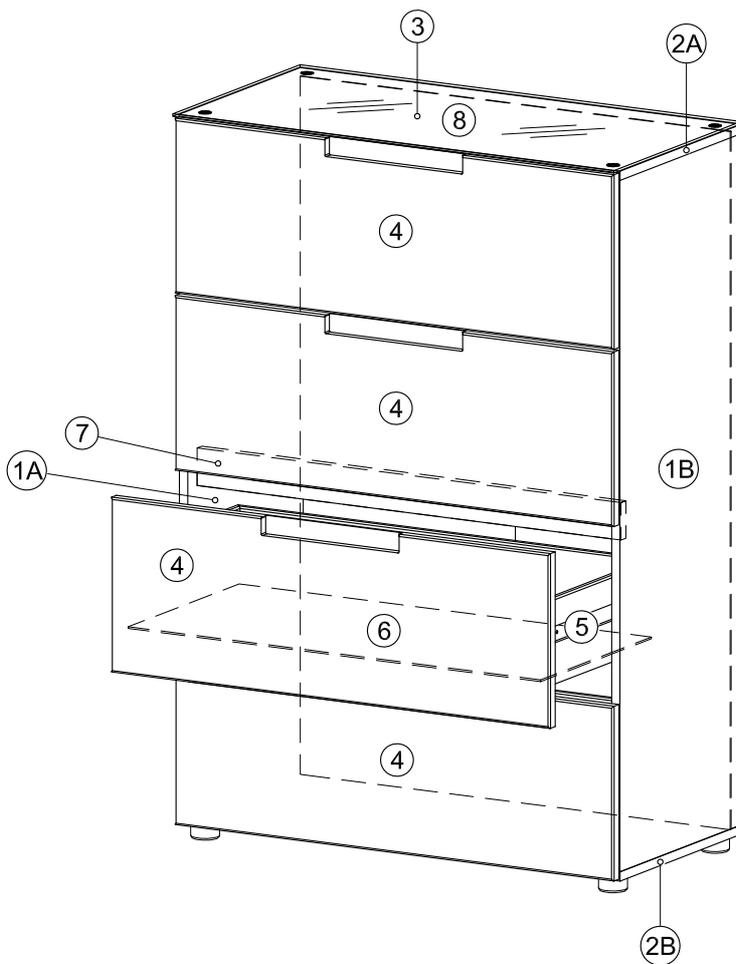
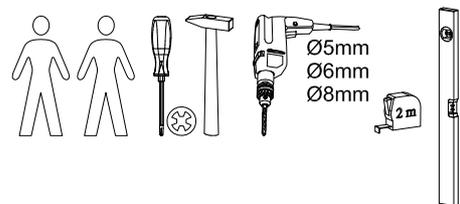
Follow carefully the assembling instructions described in the directions.

FR - Sécurité


Respecter les Instructions de montage décrites dans la notice.

NL - Veiligheid

De In de Gebruiksaanwijzing beschreven Instructies respecteren.




	10x EX		5x40
	10x VB		2x RD5x40
	6,3x11		8x40
	16x ES11		8x RD8x40
	3,5x13		16x SP1
	8x SKS3		8x MS9
	4x KG		4x SP5
	10x SB		4x ASB20
	4x LM		1x WBF

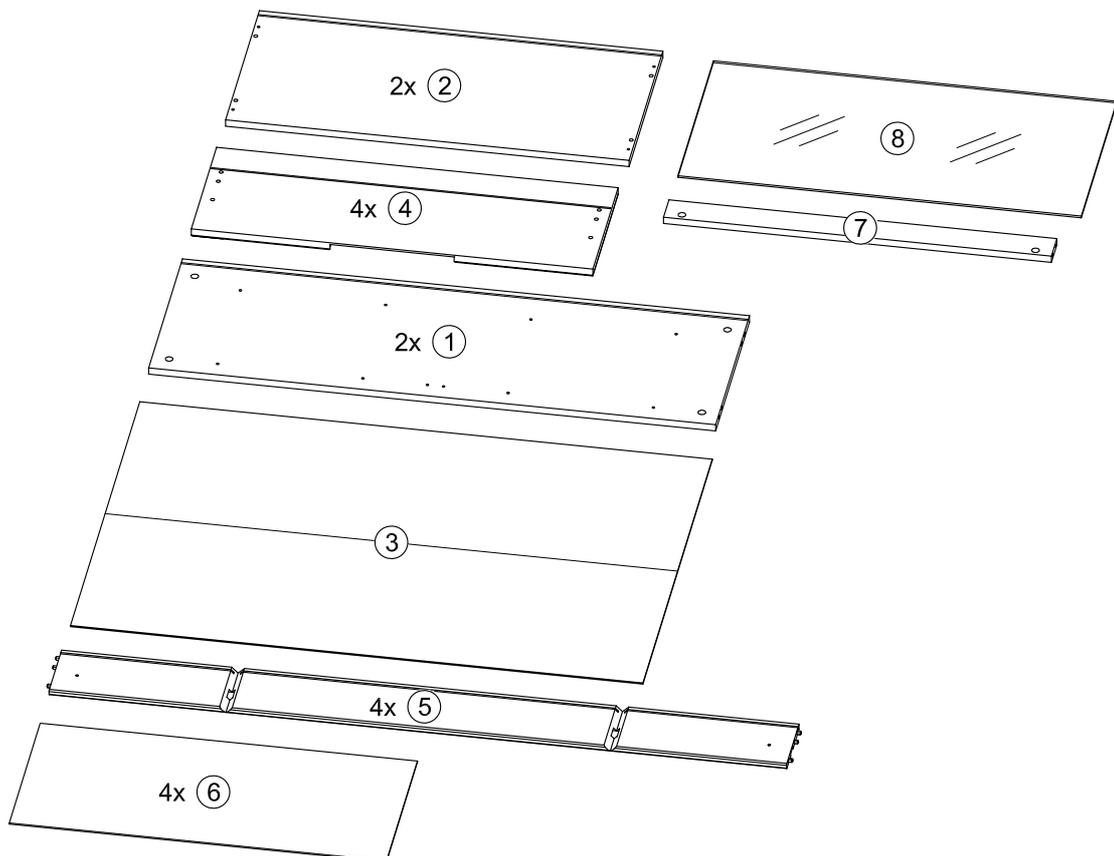



B

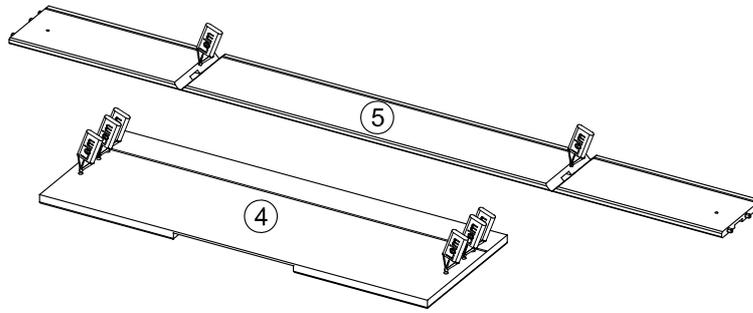1




4x




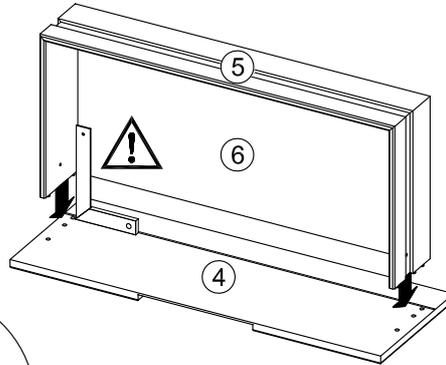
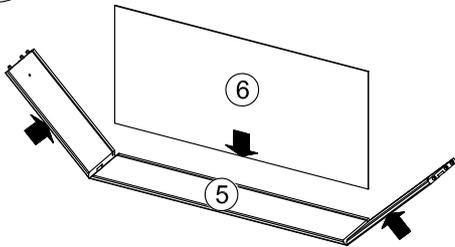
2







4









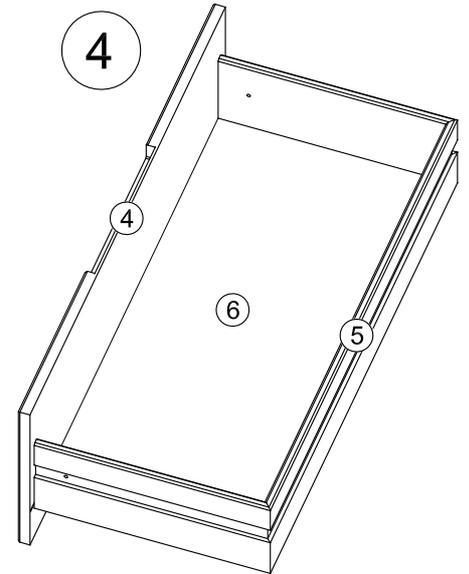


3

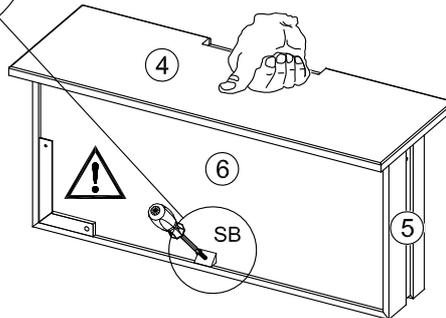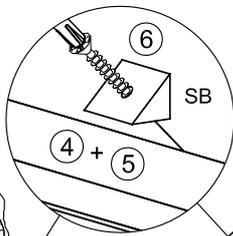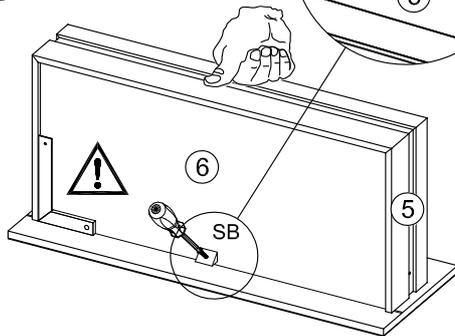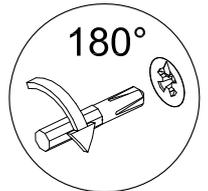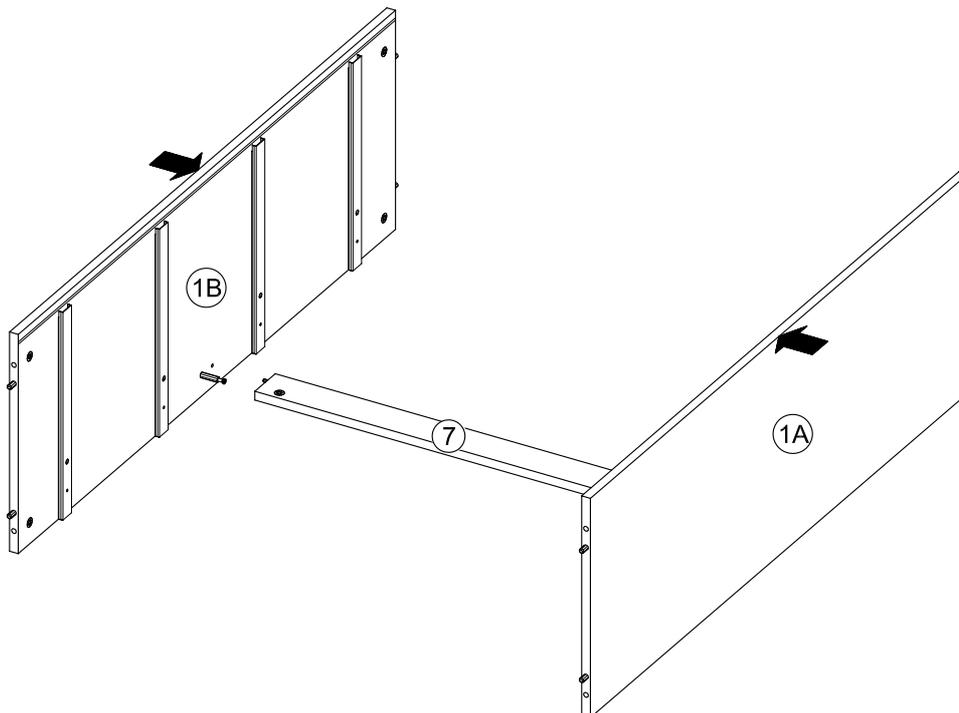
20 Minuten
trocknen lassen**C**

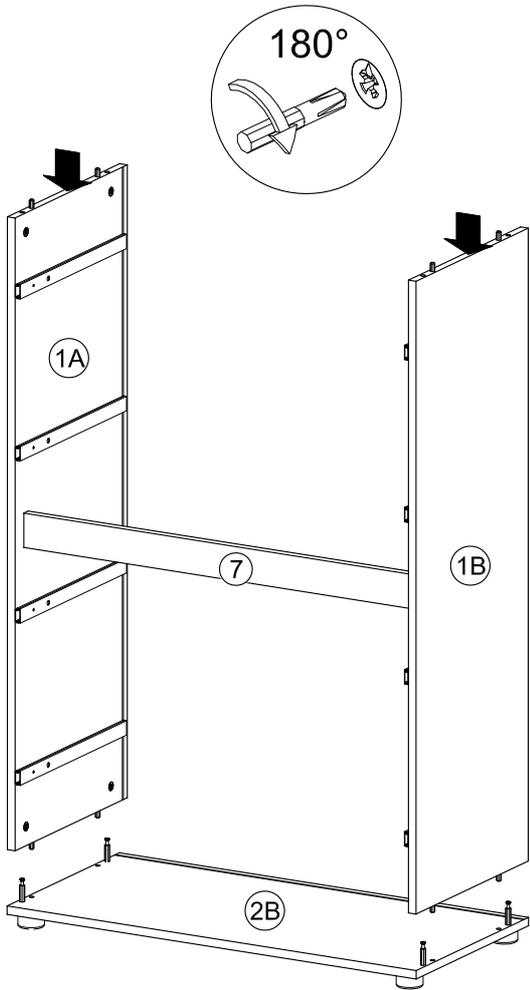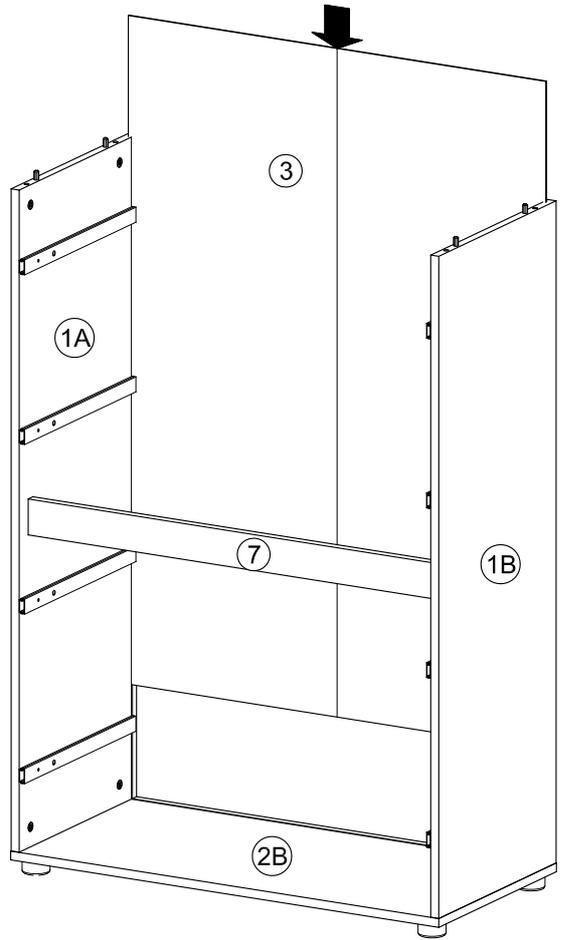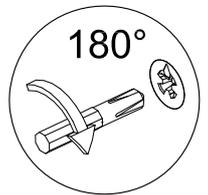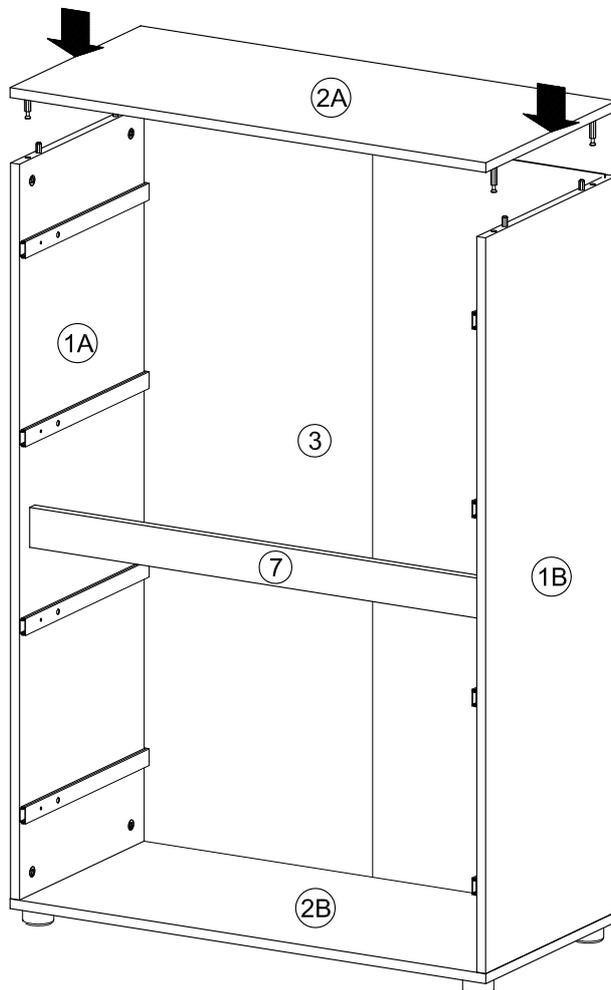180°



D**E****F**

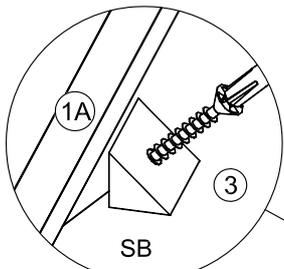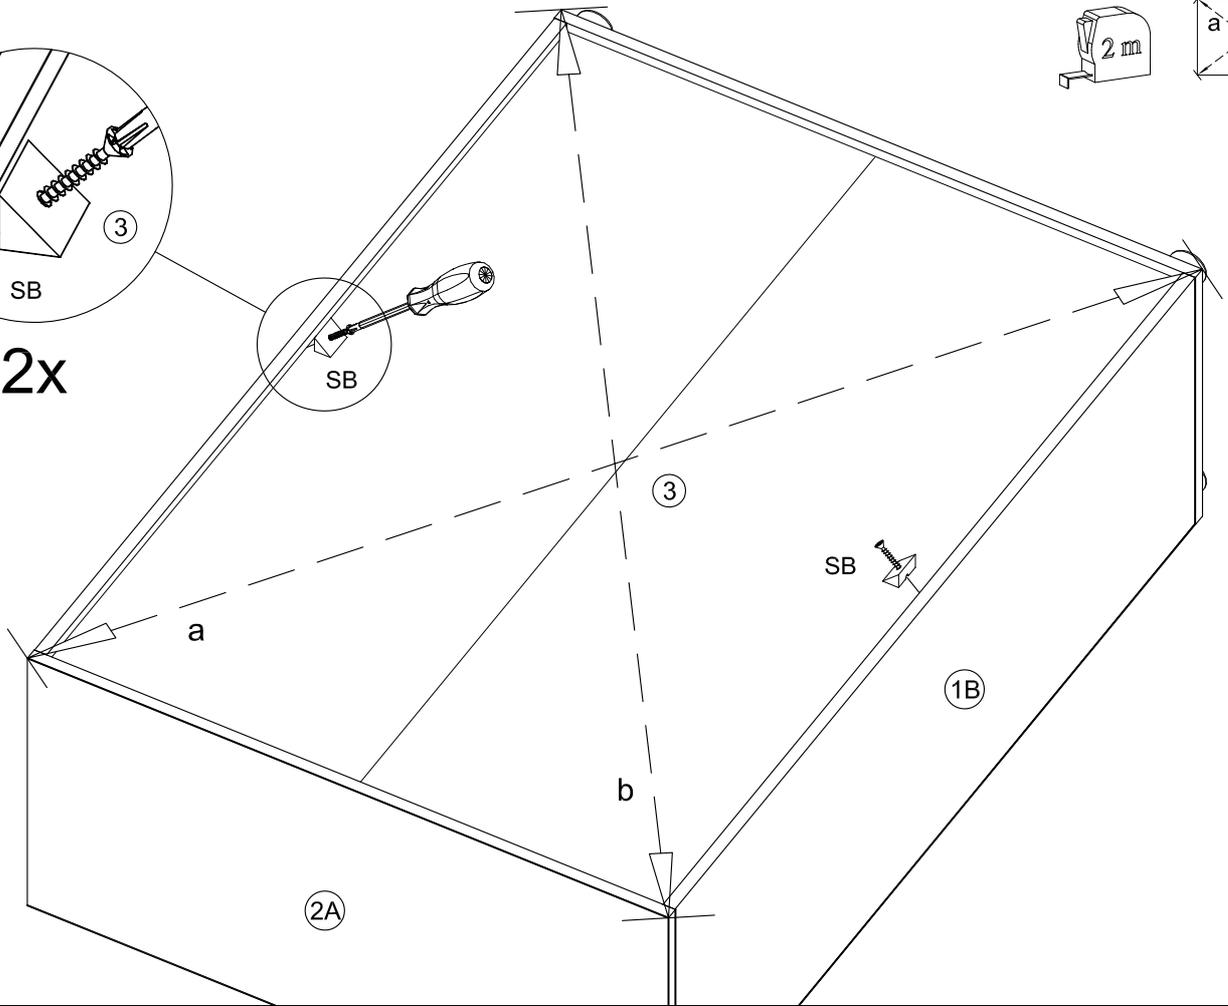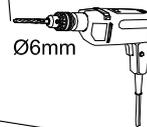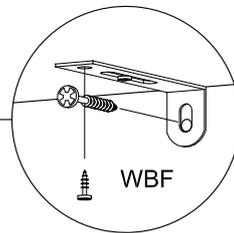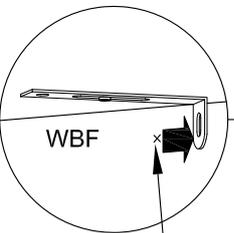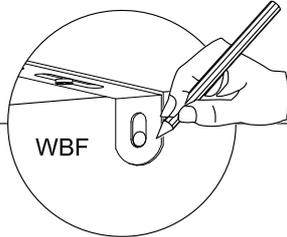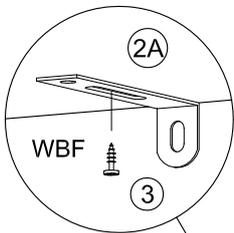G**2x****H**

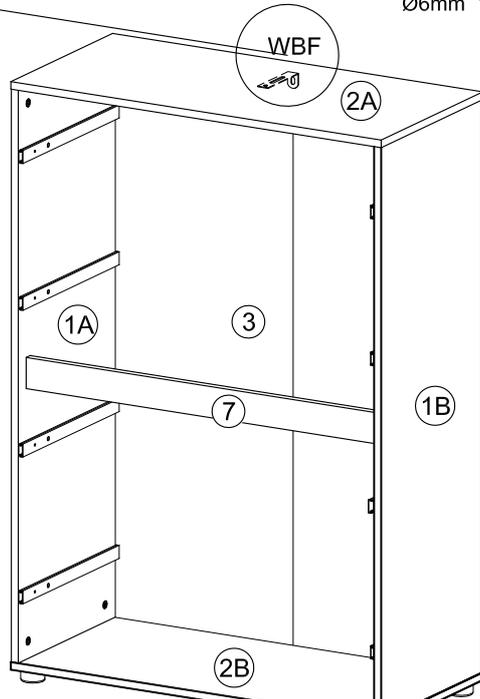Befestigungsmaterial für die Kippsicherung ist der Wandeigenschaft anzupassen!



I

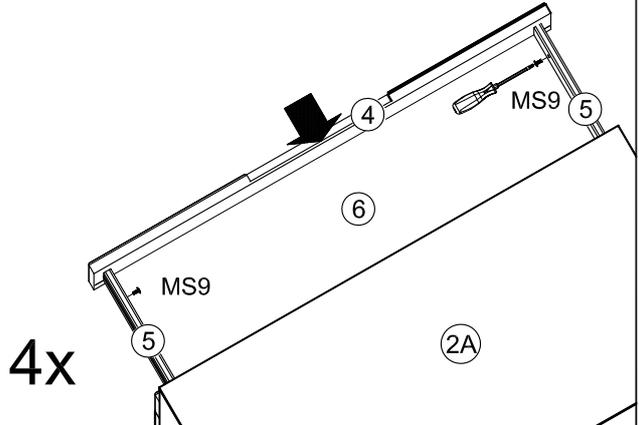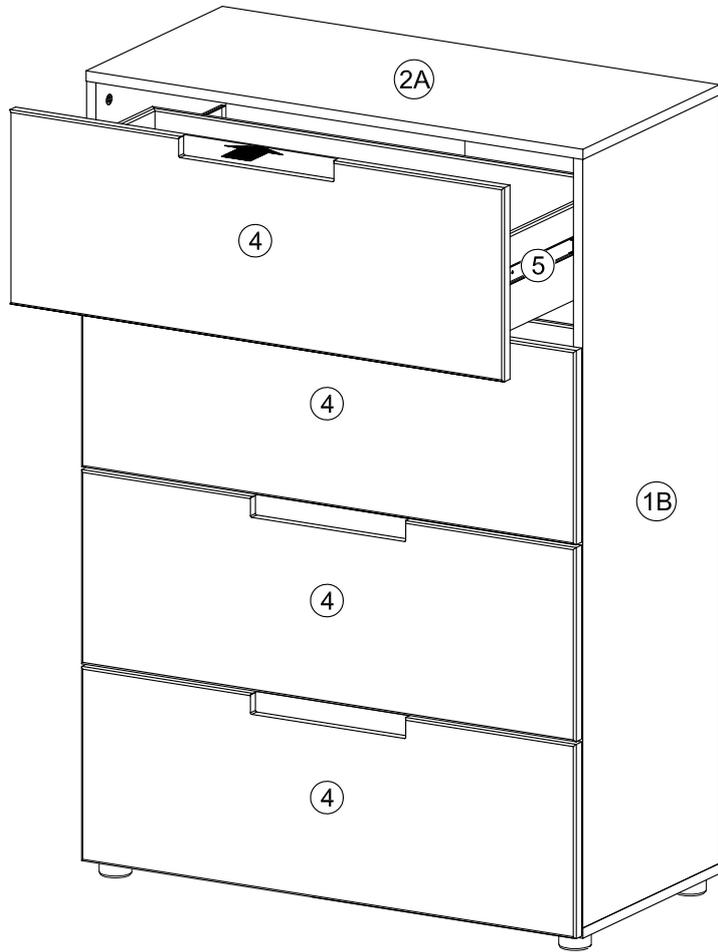

J

