


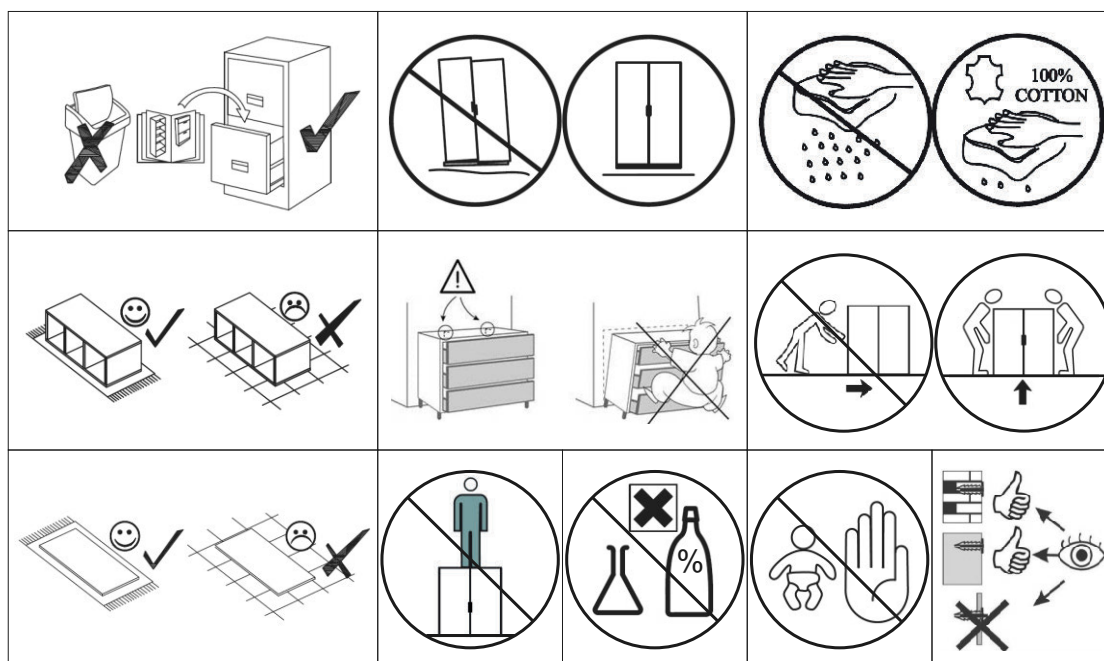
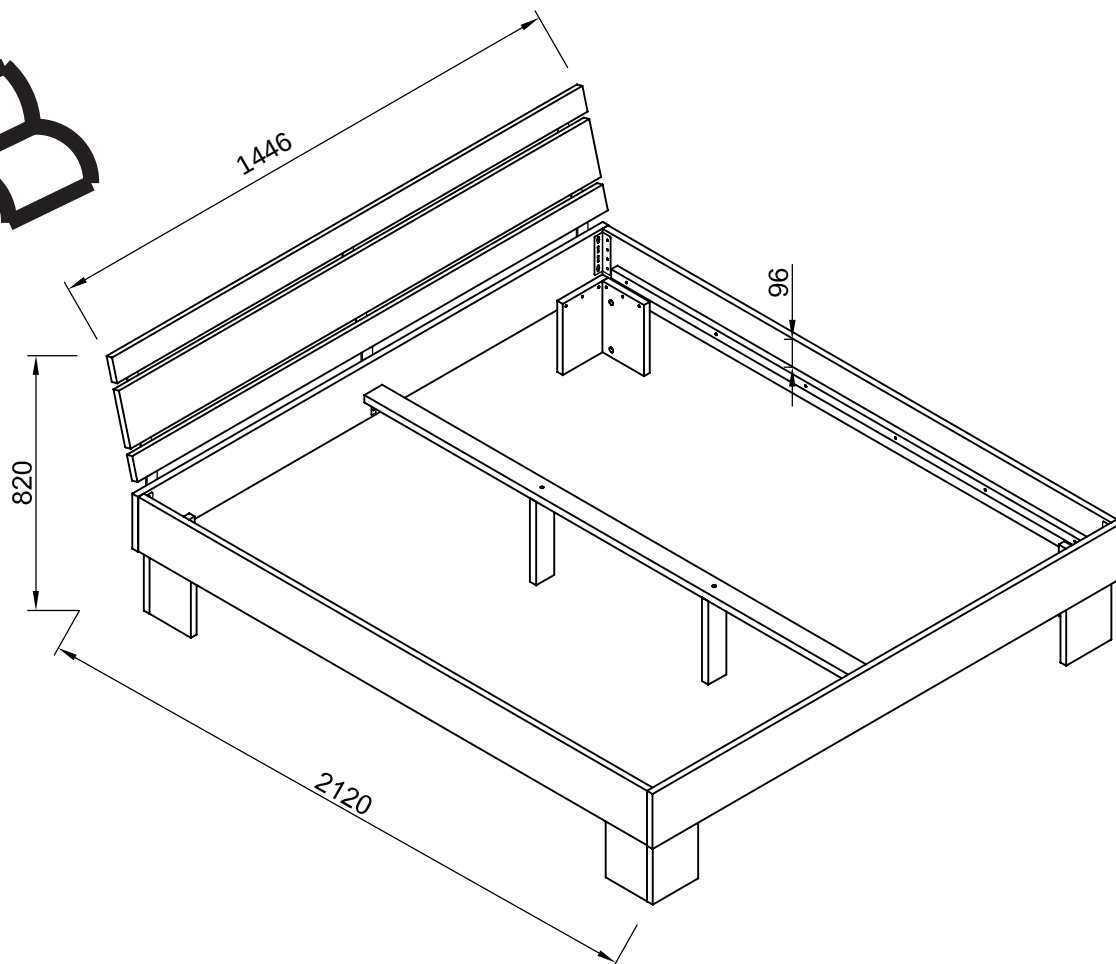
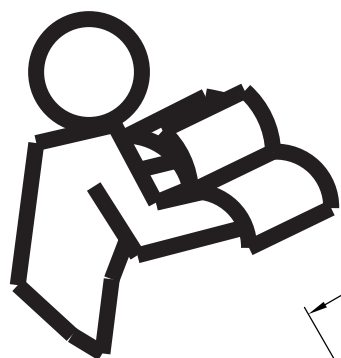


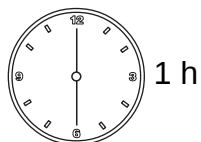
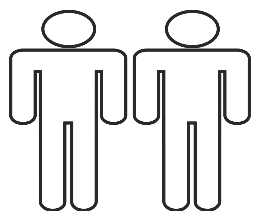




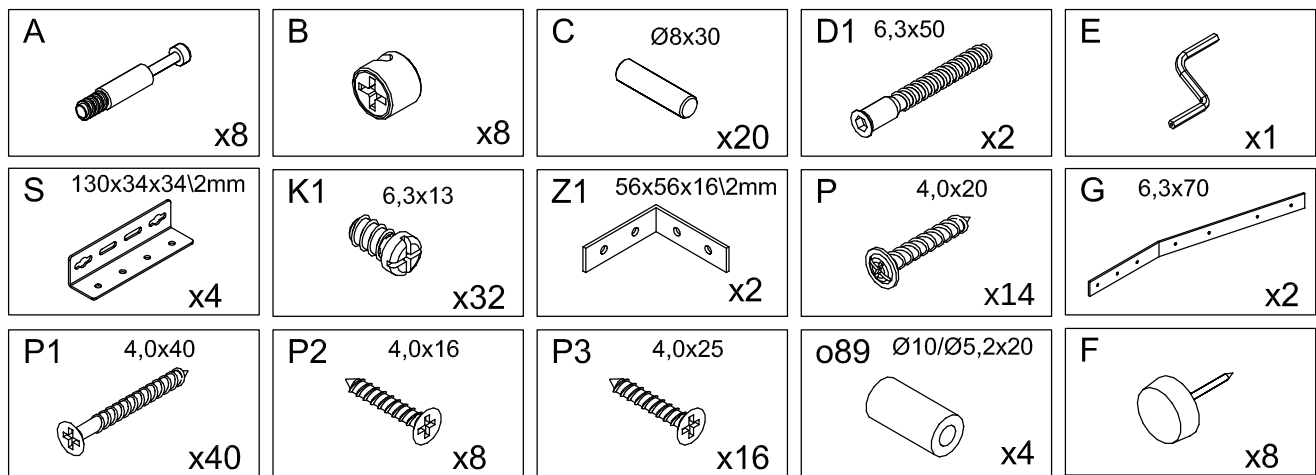

1/1



Bett 140

NR	DIM	QTE	COLLI
1	1997 x 185 x 22	2	1/1
2	1446 x 187 x 22	1	1/1
3	1446 x 187 x 22	1	1/1
4	242 x 187 x 22	2	1/1
5	242 x 163 x 22	2	1/1
6	242 x 187 x 22	2	1/1
7	242 x 163 x 22	2	1/1
8	1880 x 30 x 25	2	1/1
9	1997 x 70 x 25	1	1/1
10	278 x 70 x 25	2	1/1
11	1446 x 80 x 22	1	1/1
12	1446 x 180 x 22	1	1/1
13	1446 x 80 x 22	1	1/1





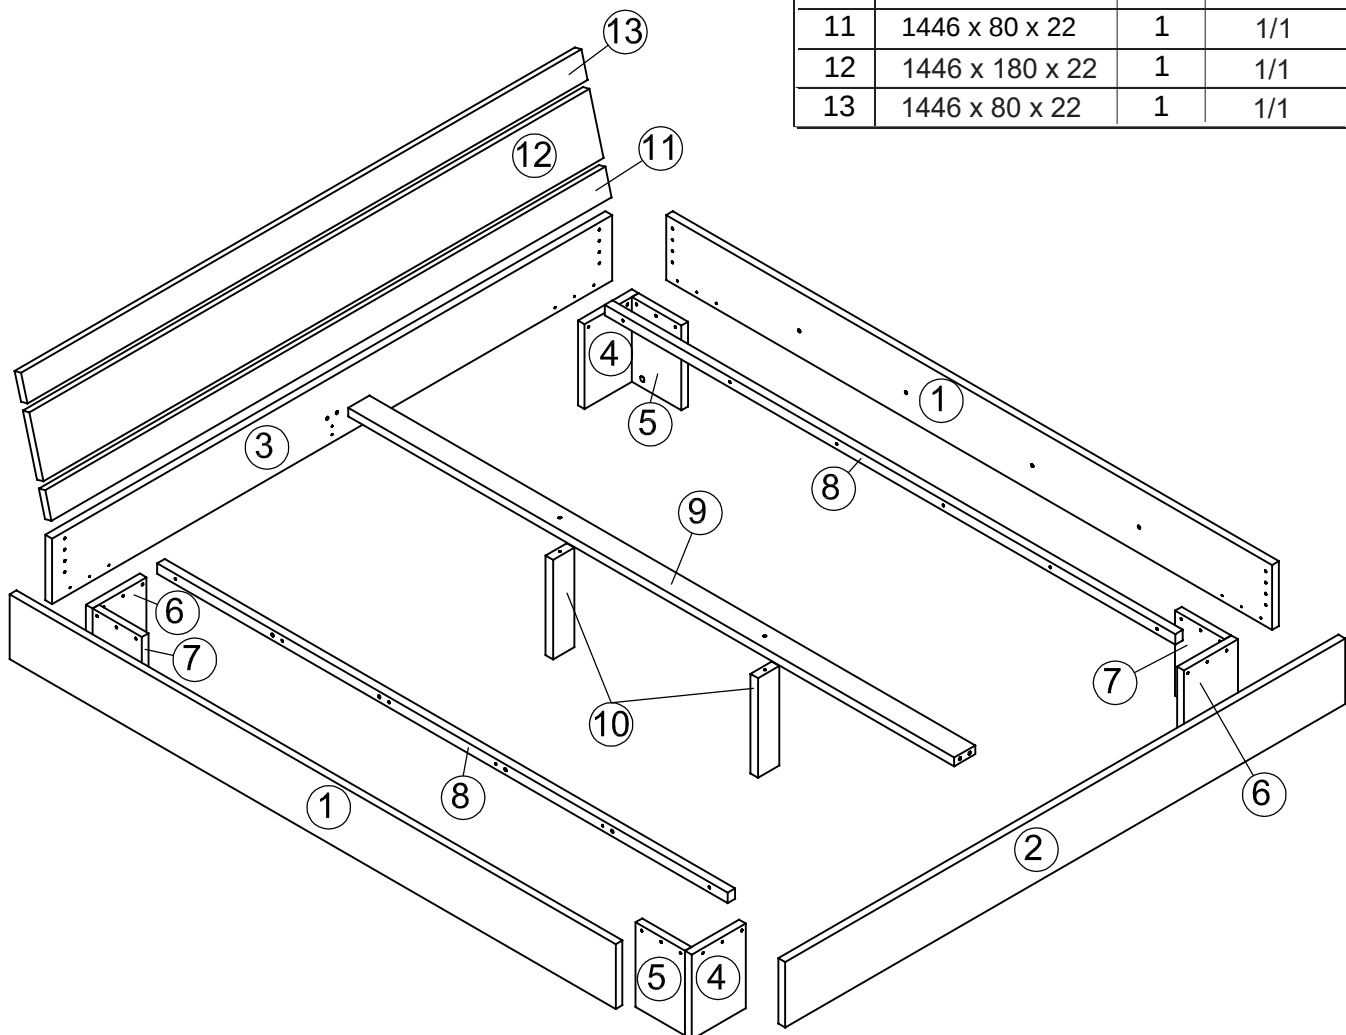


Diagram illustrating the assembly of two long, thin rectangular panels (2 and 3) using screws (K1, 6,5x15, x8). A circular inset shows a close-up of a screw being inserted into a hole in panel 3, with a 4 mm dimension line indicating the depth of the hole.




3

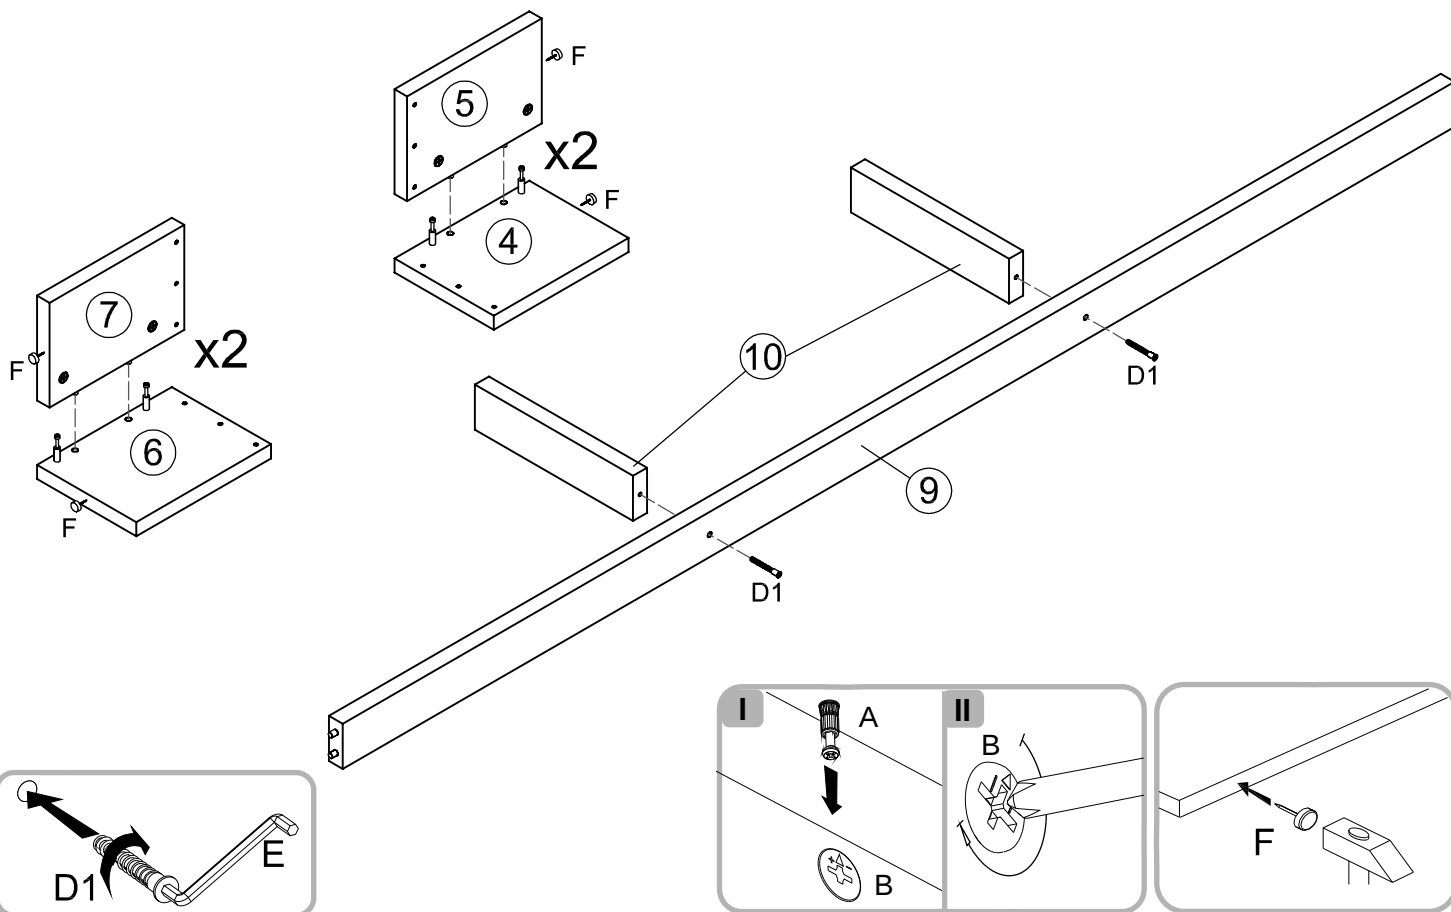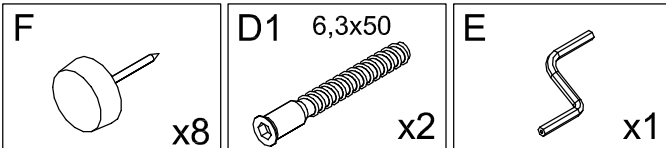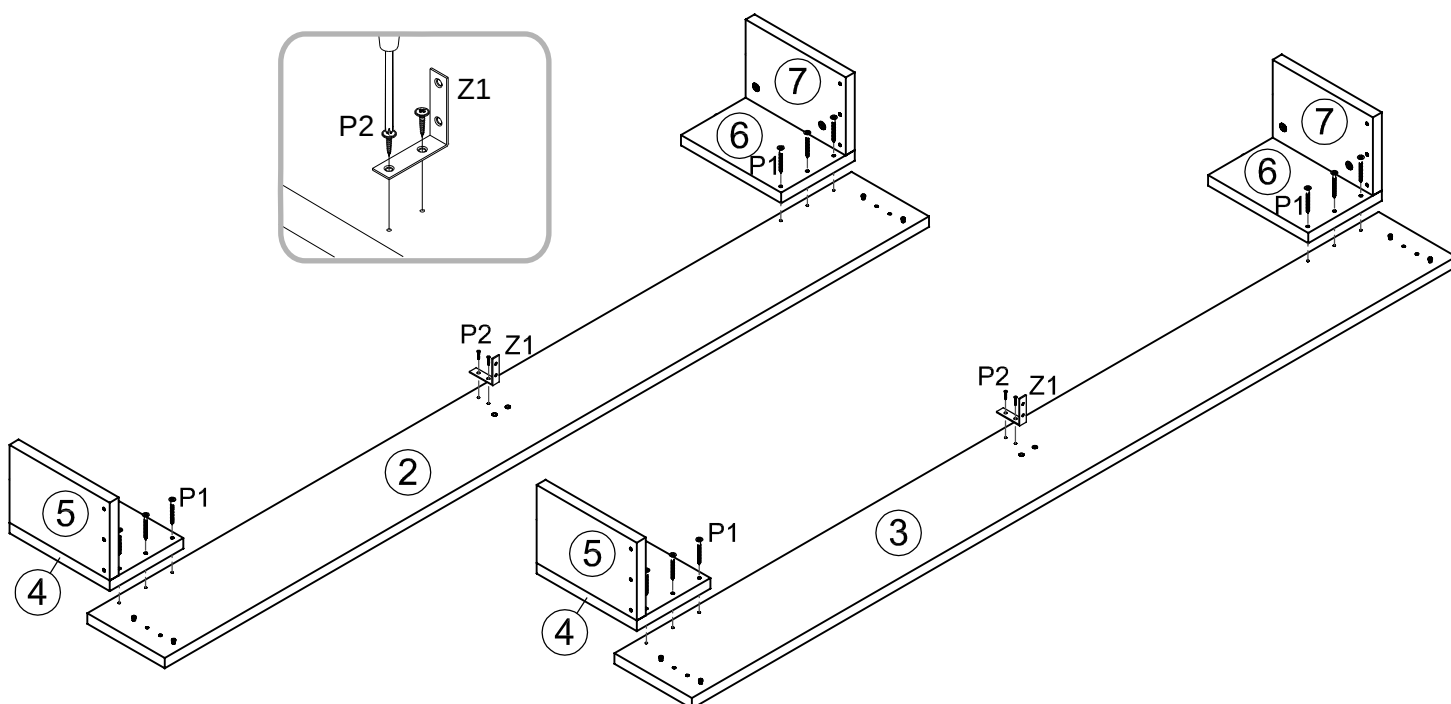






4

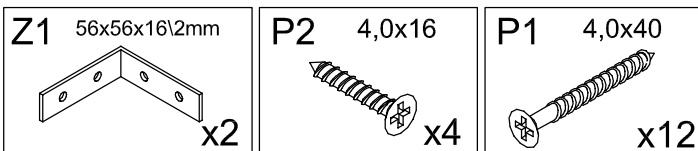




5

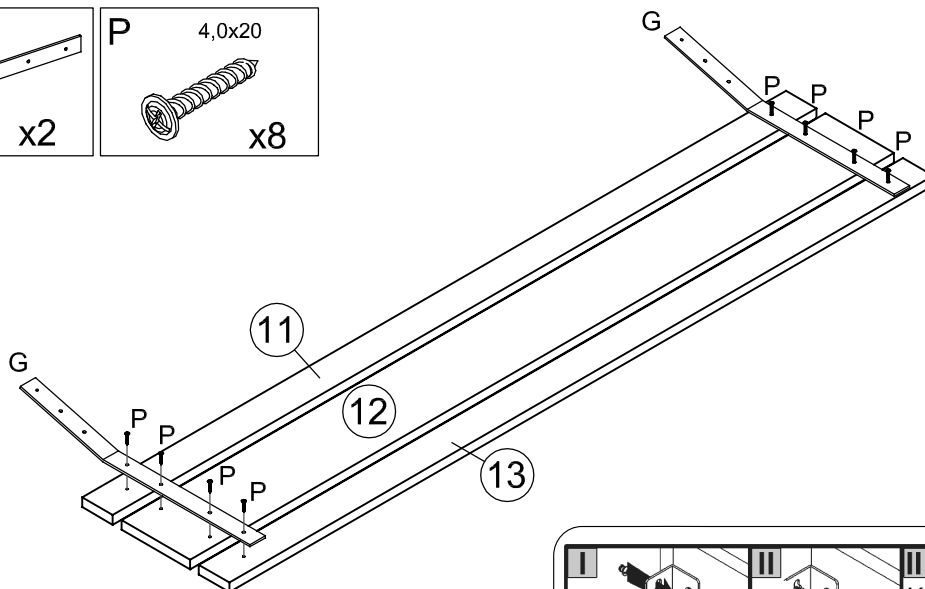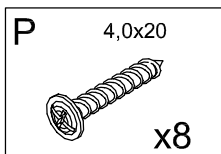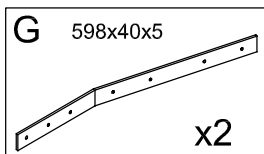


6

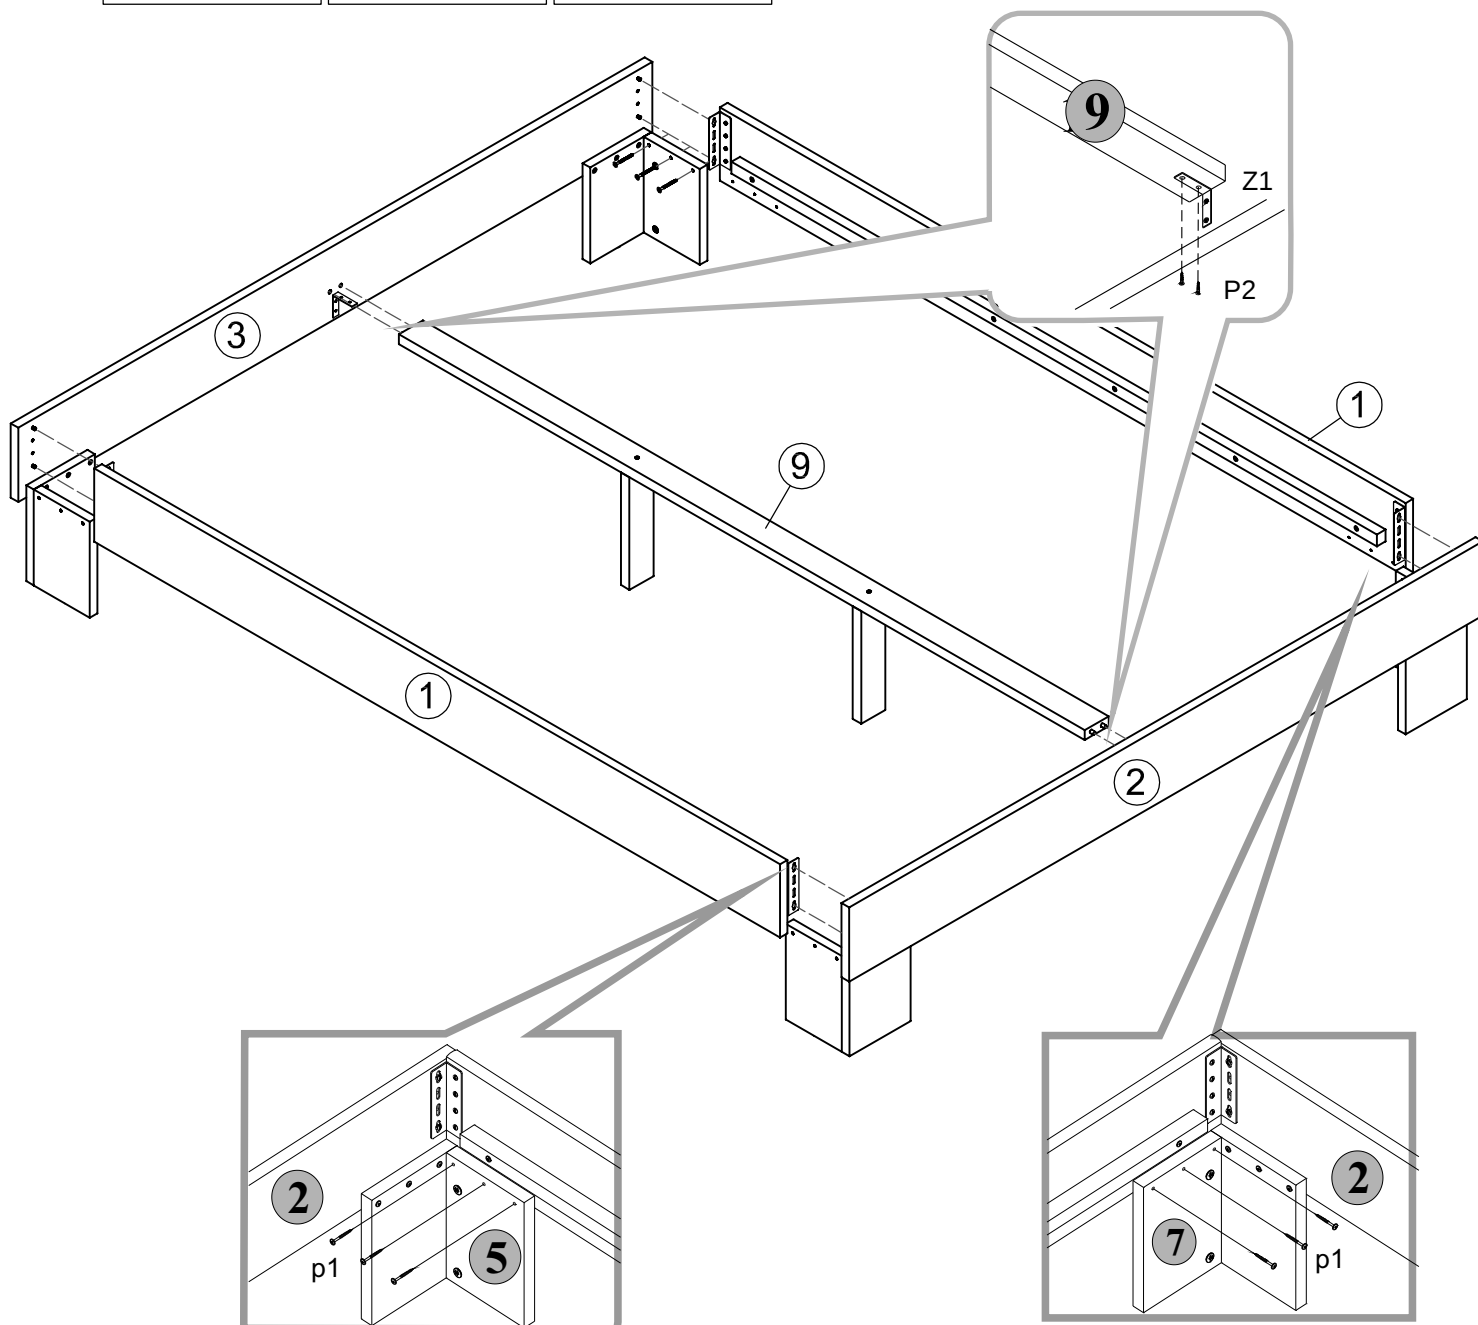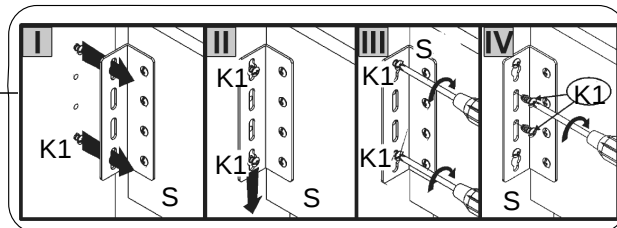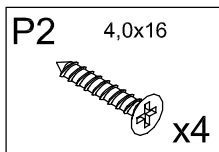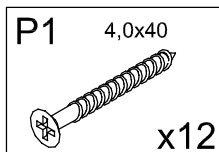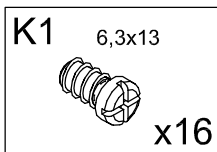




7

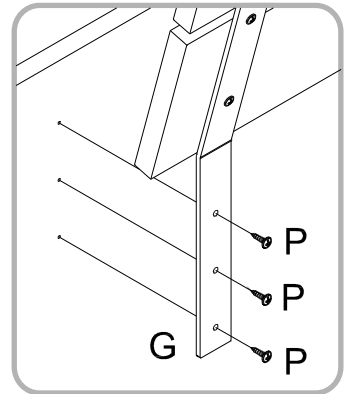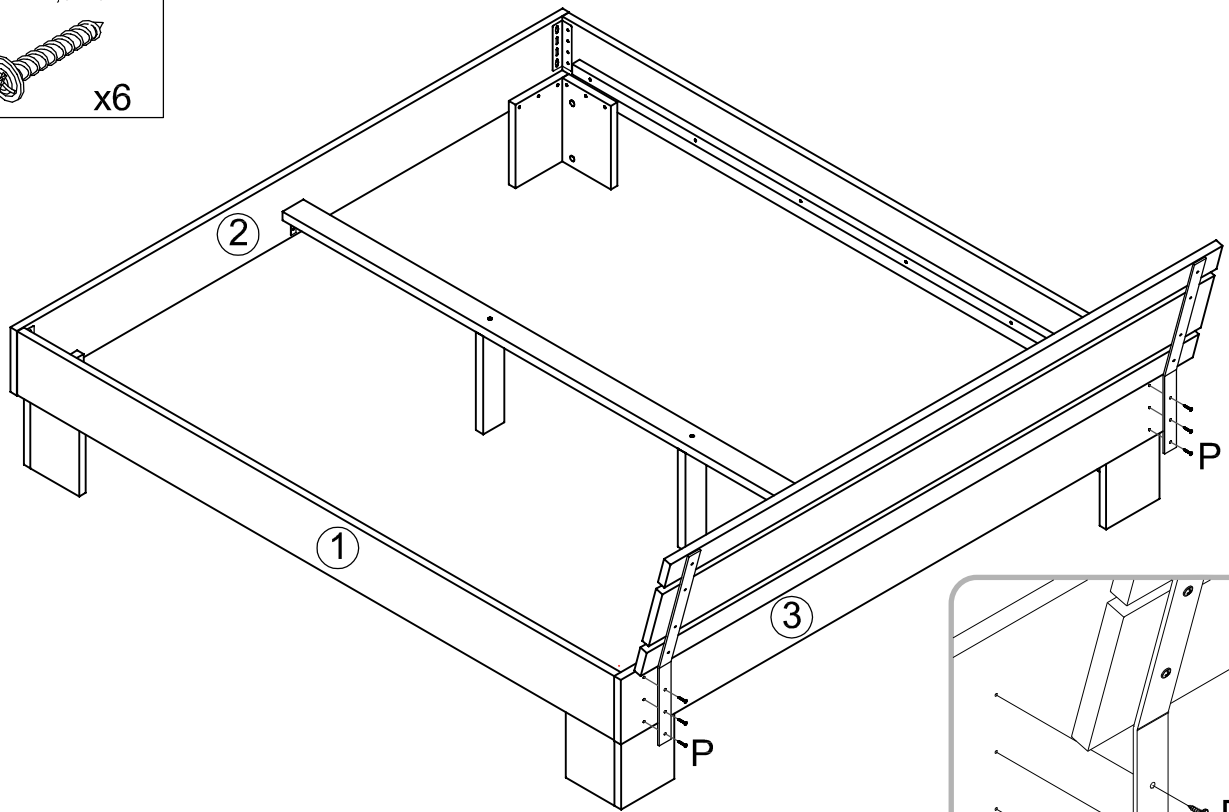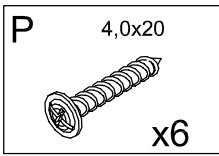

8

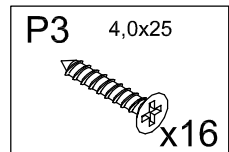


Option 1

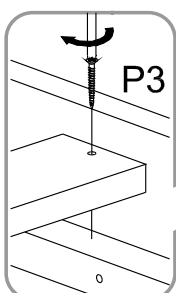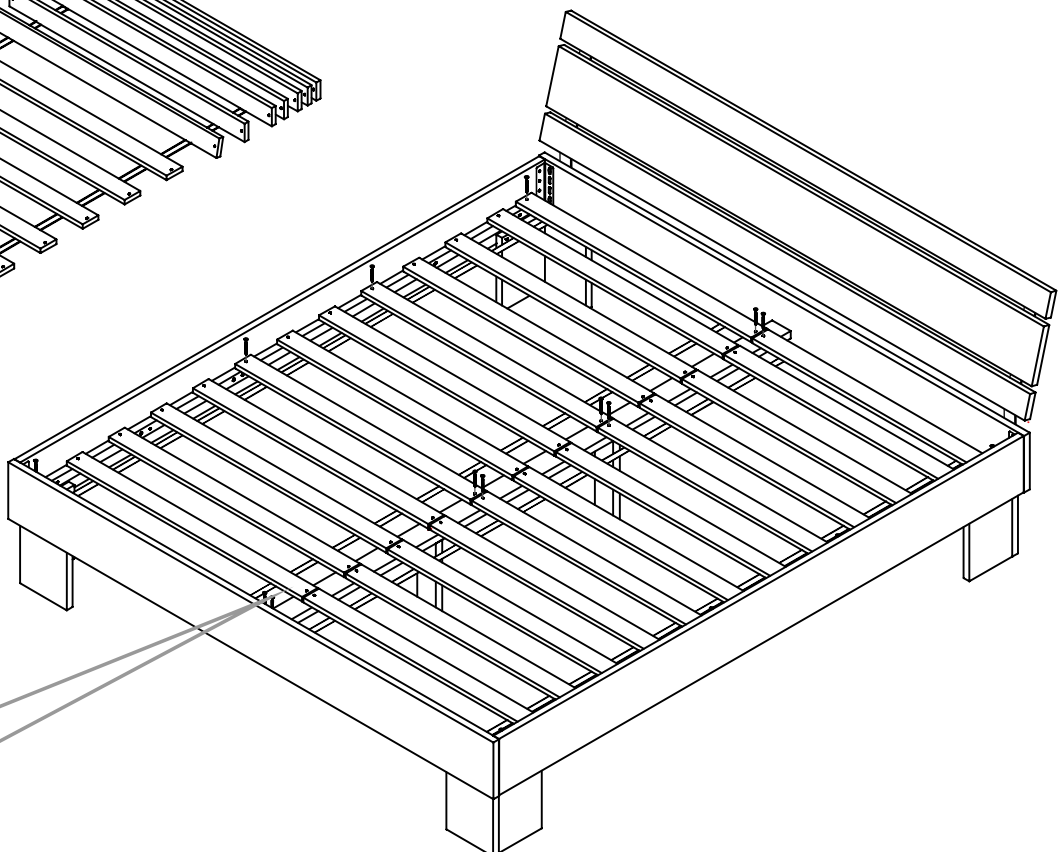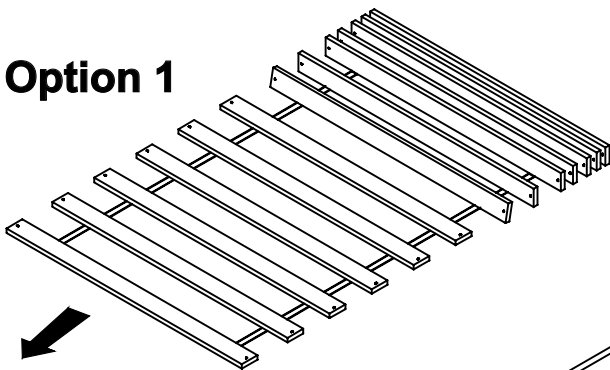


9

o89 Ø10/Ø5,2x20



x4

P1 4,0x40



x4

Option 2

