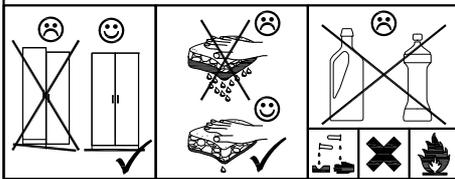
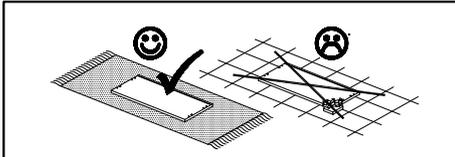


Montageanleitung Bad Mailand Spiegelschrank



DE - Sicherheitsvorschriften

Beachten Sie bitte unbedingt die angegebenen Aufbauvorschriften.

EN - Caution

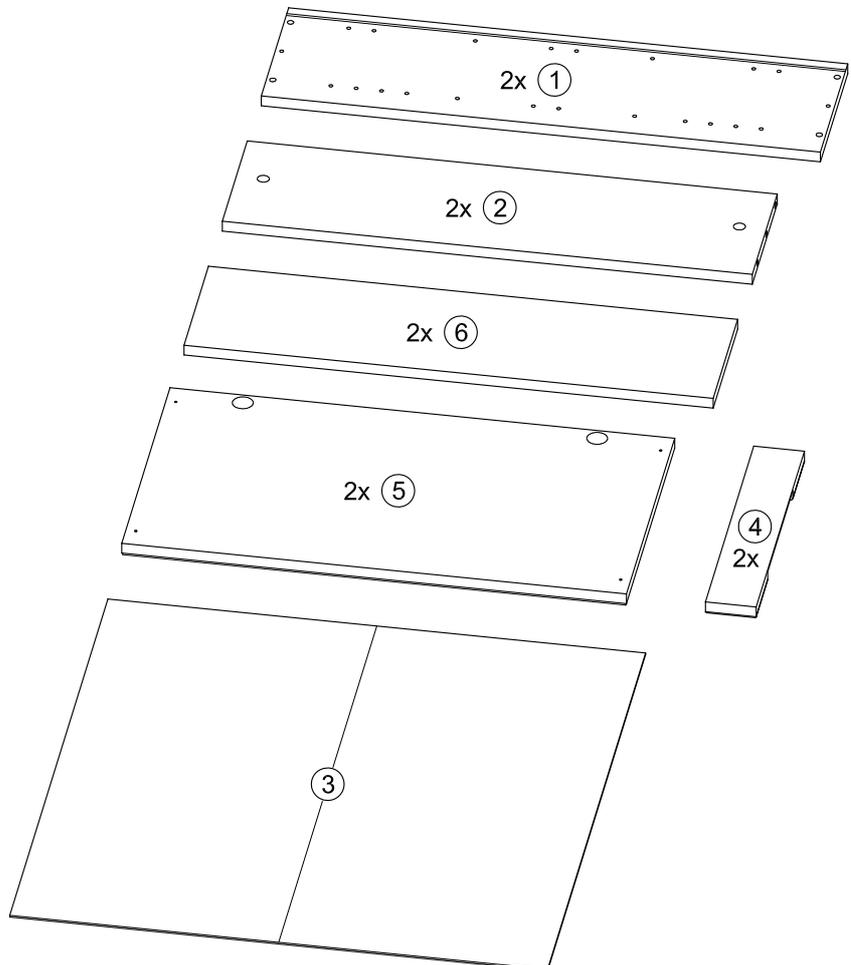
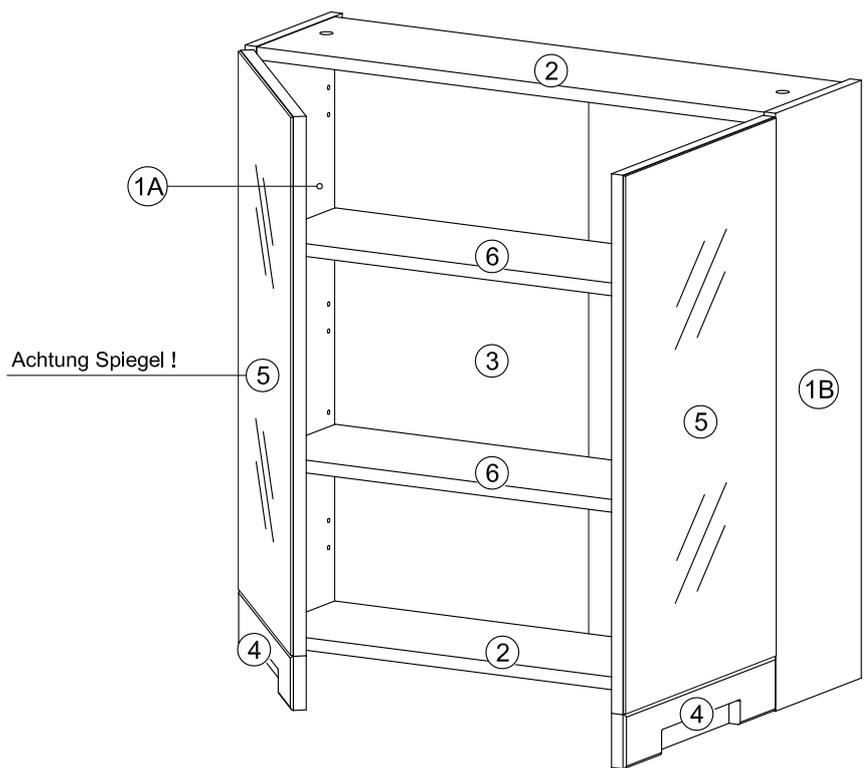
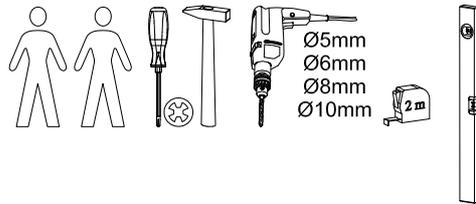

Follow carefully the assembling instructions described in the directions.

FR - Sécurité

Respecter les Instructions de montage décrites dans la notice.

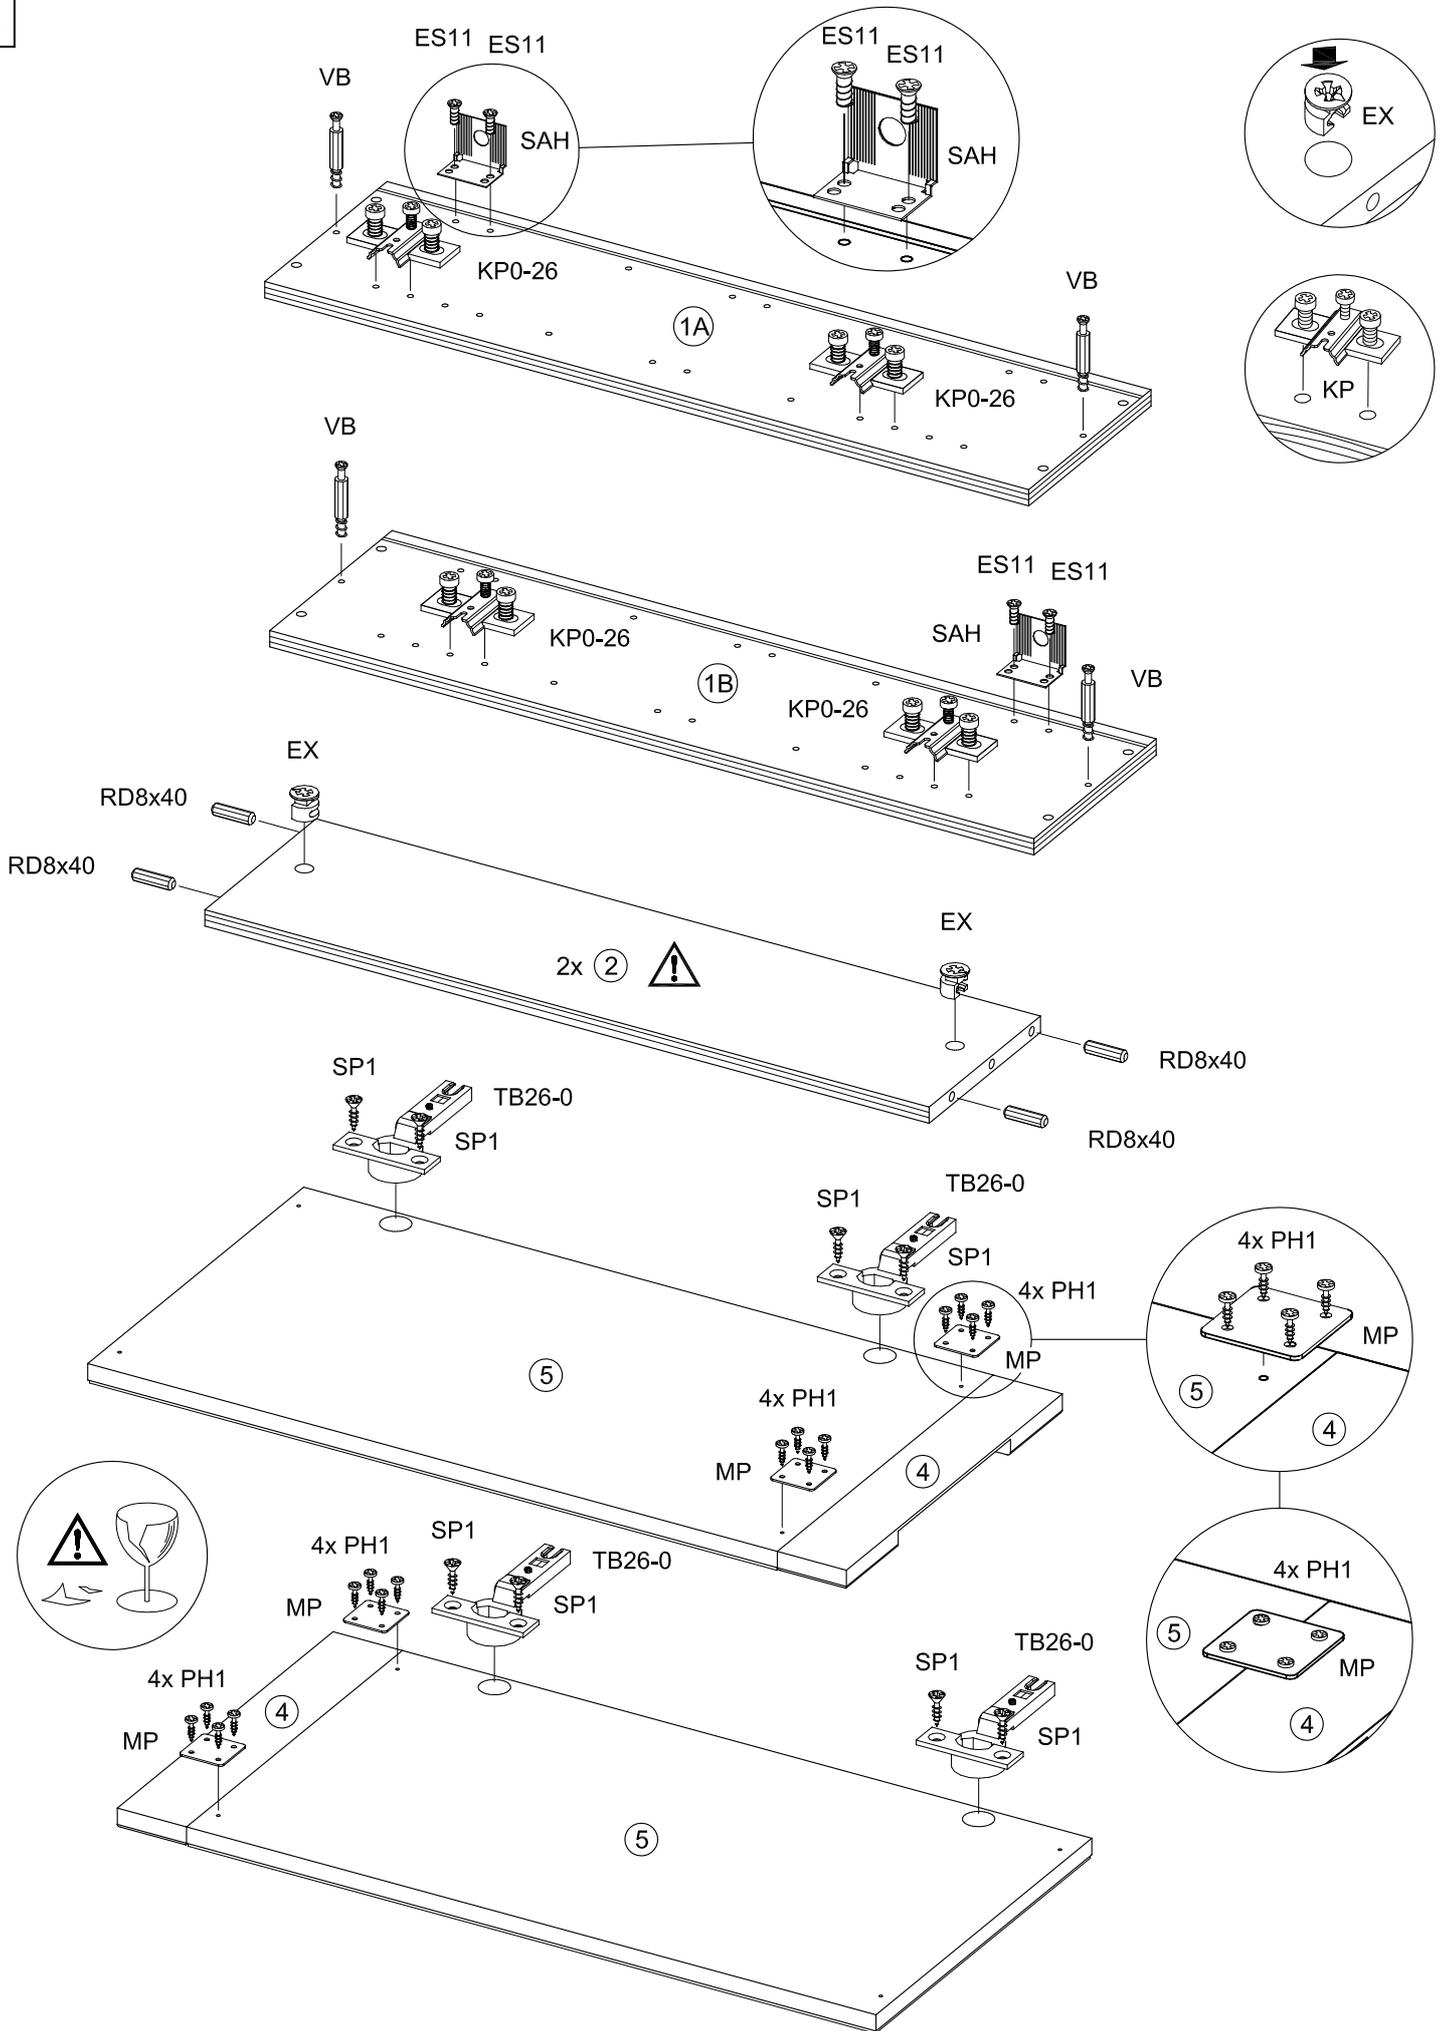
NL - Veiligheid

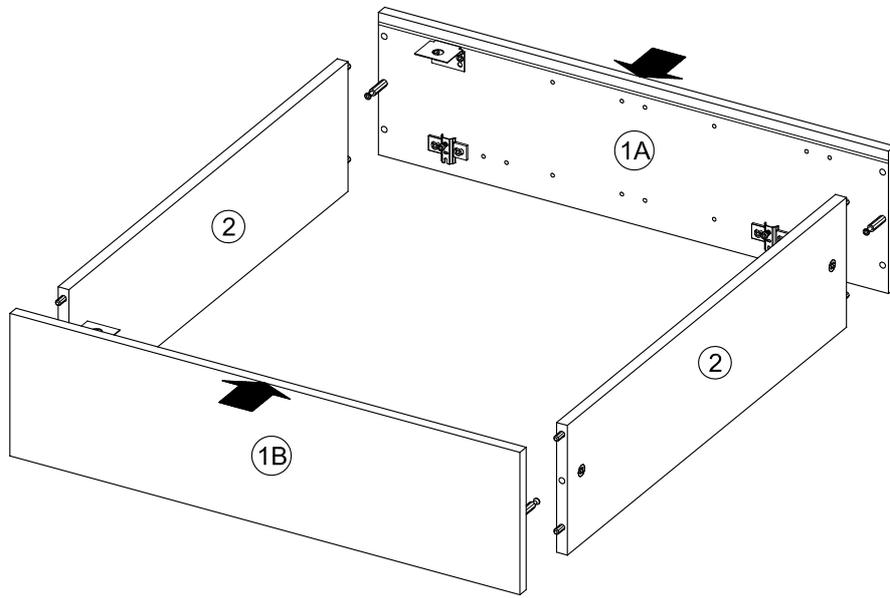
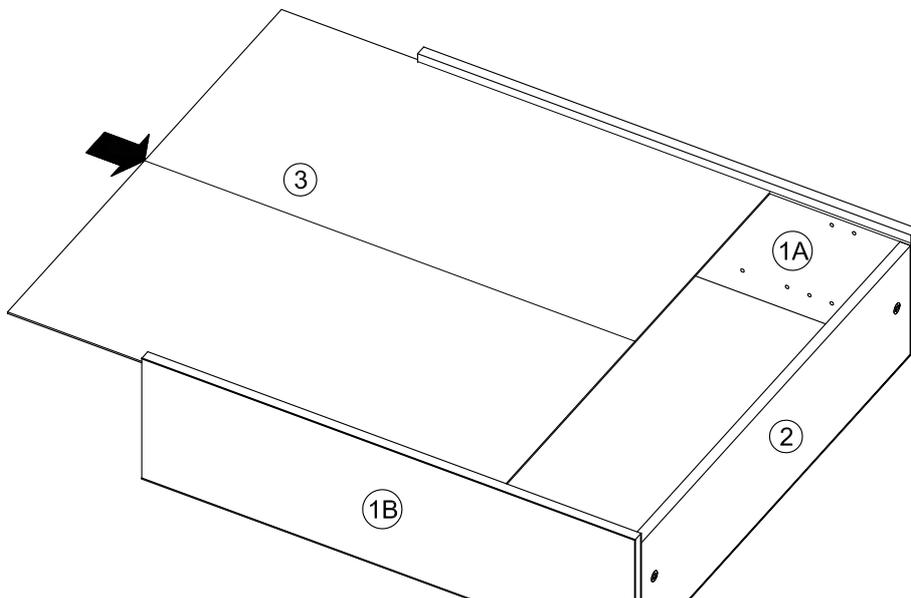
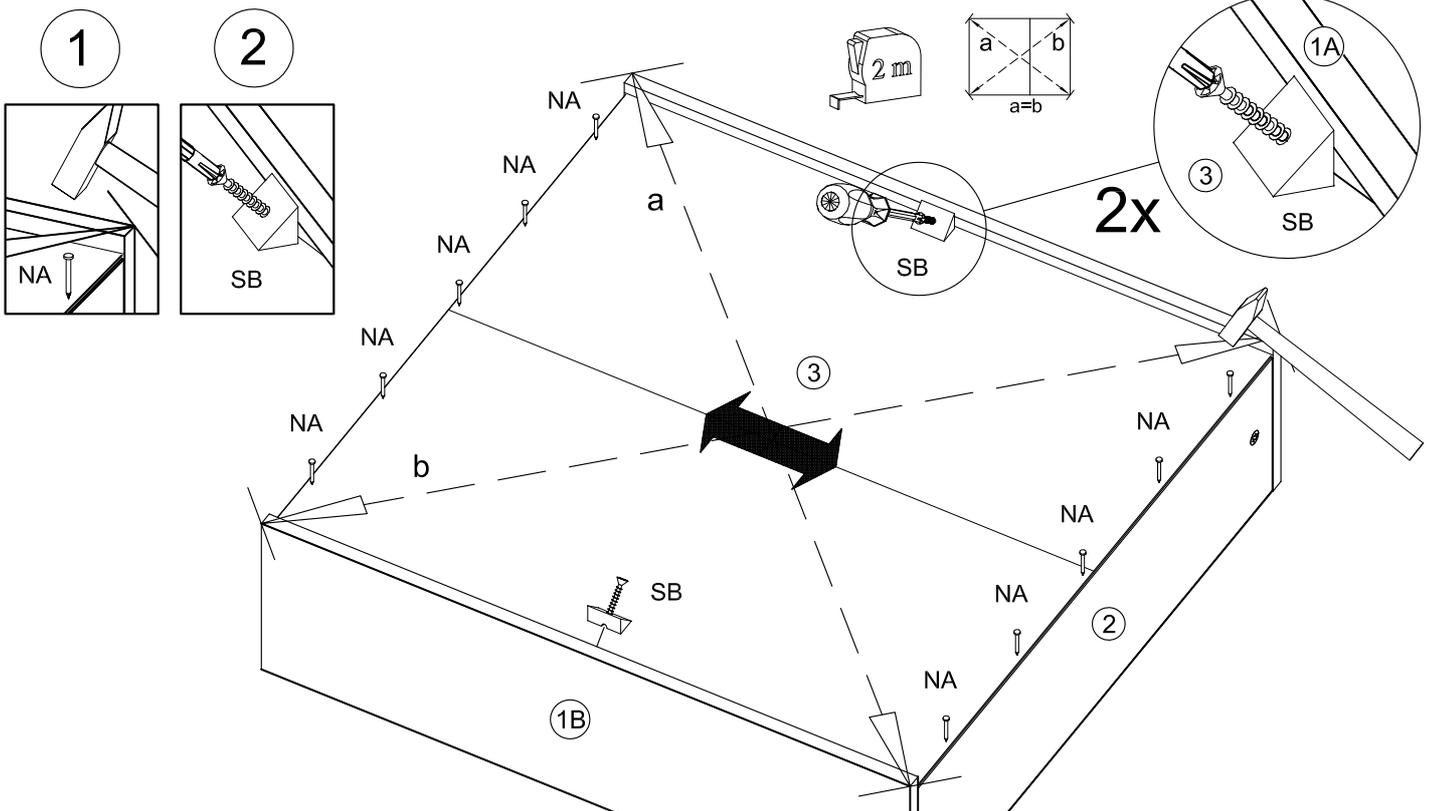
De In de Gebruiksaanwijzing beschreven Instructies respecteren.

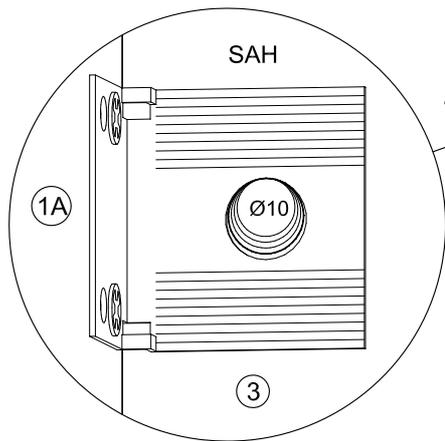


| | |
|-------------------|-------------------|
| 4x EX | 4x VB |
| 4x ADK-EX | 8x RD8x40 |
| 3,5x13 8x SP1 | 4x KP0-26 |
| 4x TB26-0 | 10x NA |
| 6,3x11 4x ES11 | 5,5x70 2x PH3 |
| 2x SB | 2x DS14 |
| 2x SAH | 8x BT |
| 4x MP | 4,0x15 16x PH1 |

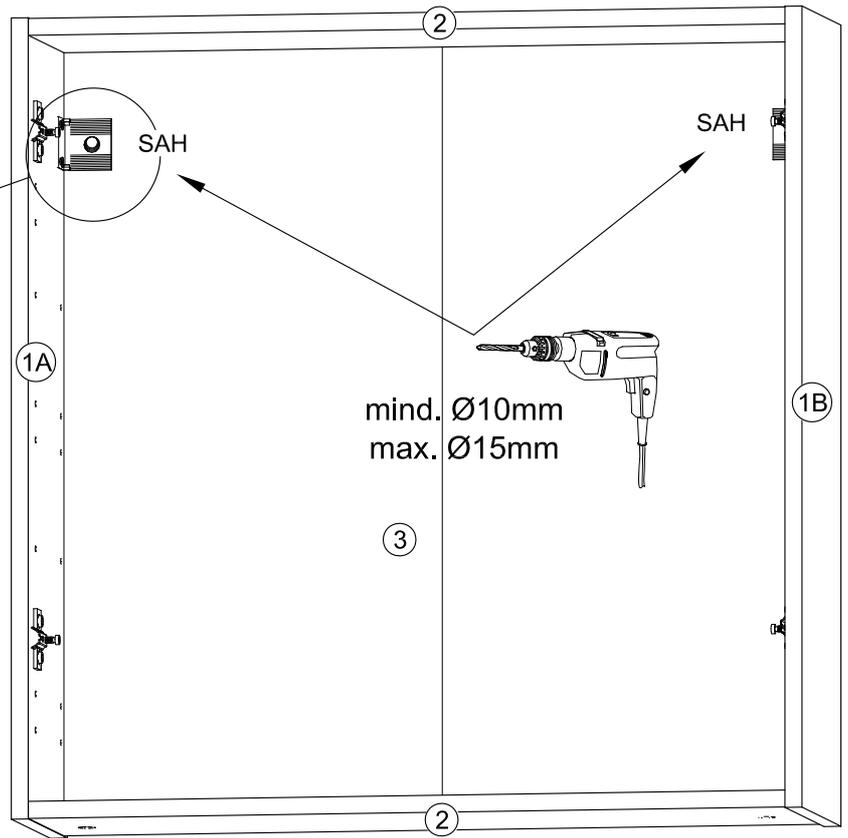
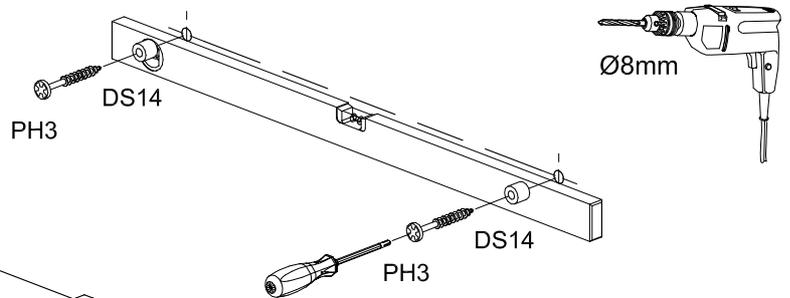
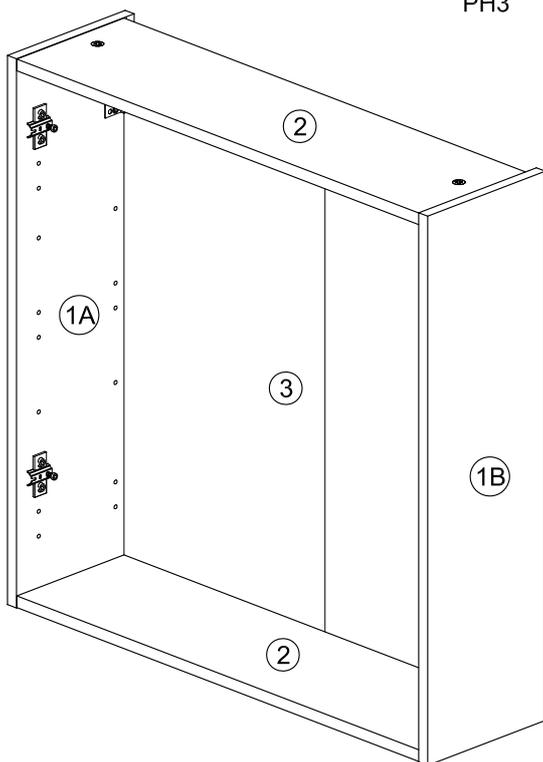
A



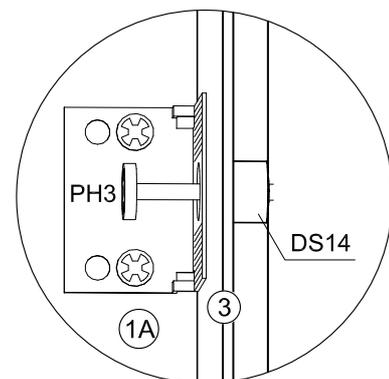
B**C****D**

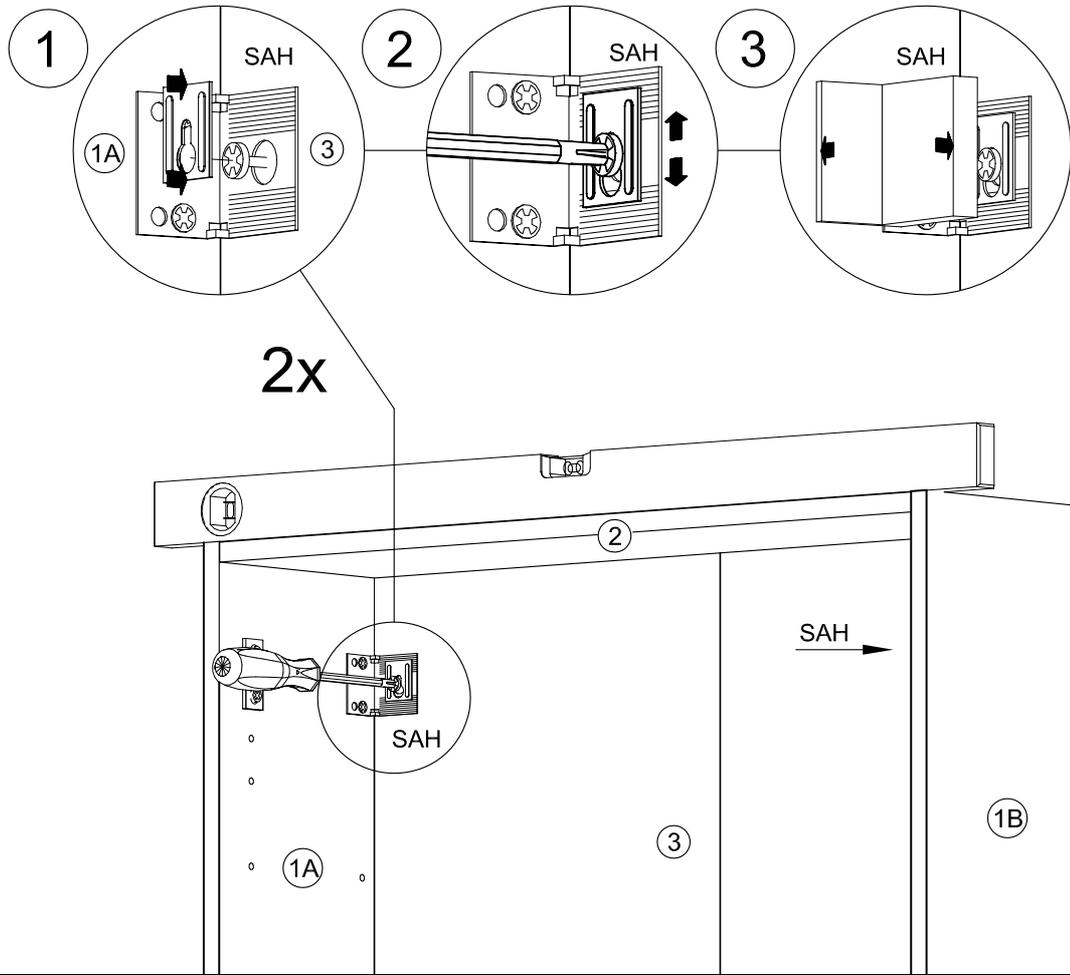
E

mind. Ø10mm oben ansetzen
nach unten größer werden
max. Ø15mm

2x**F**

Befestigungsmaterial für die
Aufhängung ist der
Wandegenschaft anzupassen!

2x

G**H**