
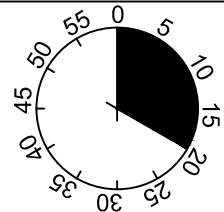
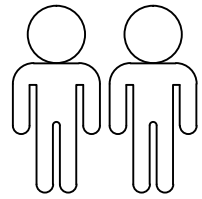





Florentina

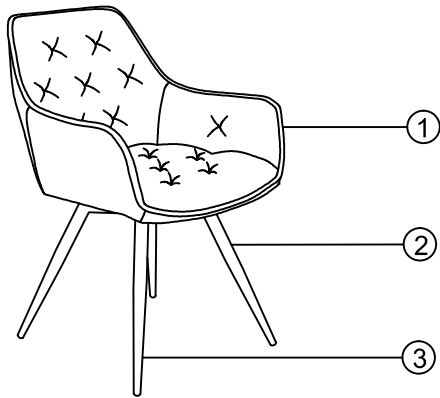


1

2

3

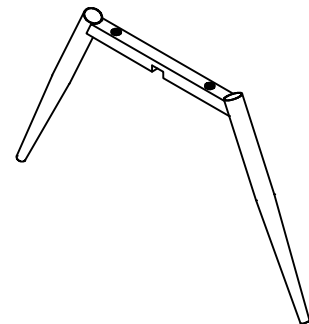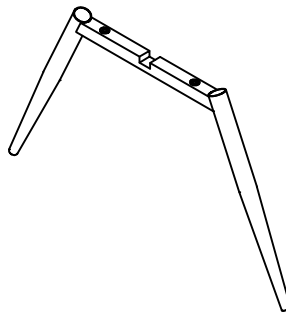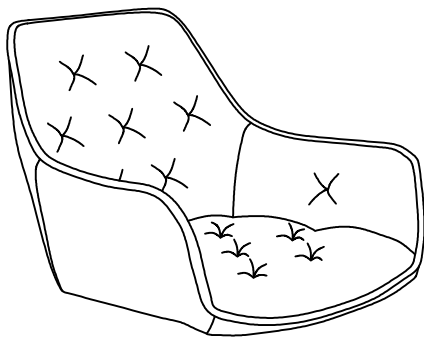


4

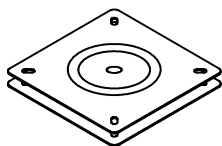


DT408 200x200mm

1	1 x
2	1 x
3	1 x
4	1 x







1/1

A	M6X20	B	M6x13	C	M6x30	D	Ø18xØ6x1.5	E	Ø18xØ8x10	F	4MM
	6x		4x		2x		8x		2x		1x
G	T2.0x90x90										
	1x										


I.



1

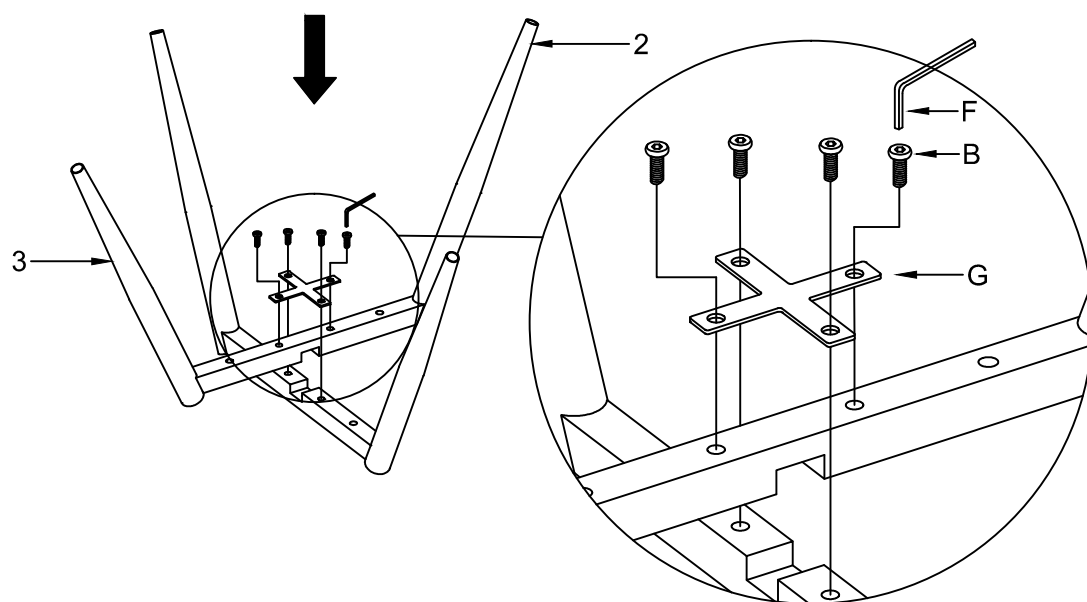

B	M6x13
	 4x
F	4MM
	 1x
G	T2.0x90x90
	 1x
	


2

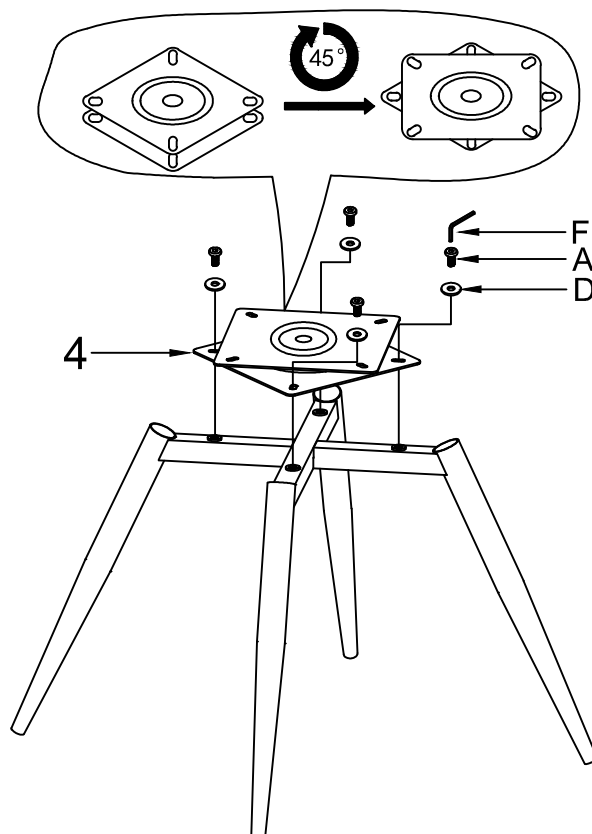

A	M6X20
	 4x
D	Ø18xØ6x1.5
	 4x
F	4MM
	 1x
	


II.

3

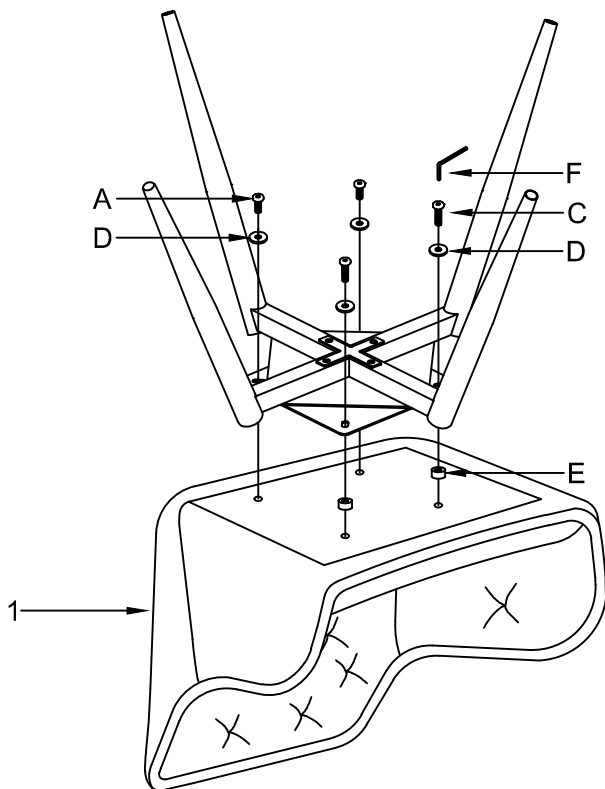

A	M6X20
	2x
C	M6X30
	2x
D	Ø18xØ6x1.5
	4x
E	Ø18xØ8x10
	2x
F	4MM
	1x

4

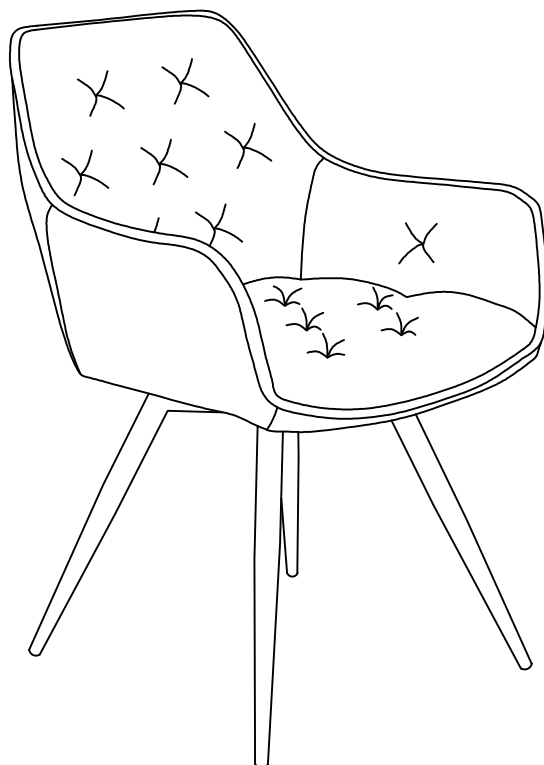

F	4MM
	1x



LE TRI
+ FACILE



Séparez les éléments avant de trier