
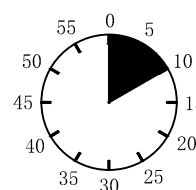
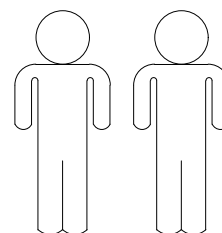





Linz

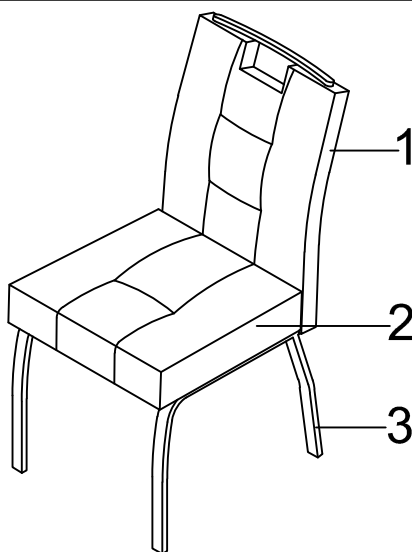

1

2

3

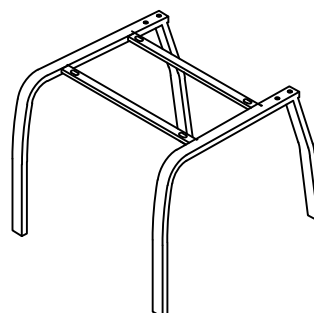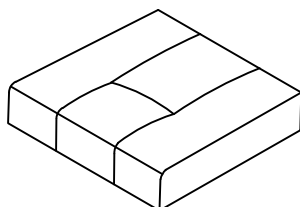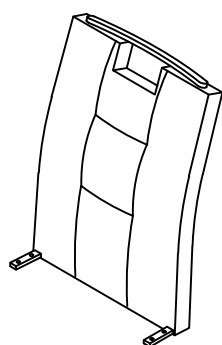

1	1X
2	1X
3	1X



1/1

A

M6*12

B


M6*32

C


Ø20*Ø6.5*1.5

D

4mm




4X



4X




4X




1X

I.



1.

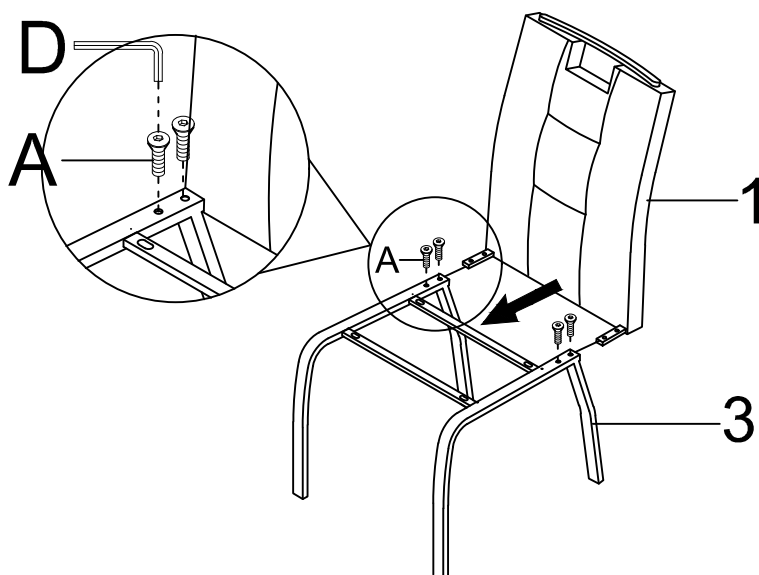


A




D

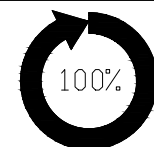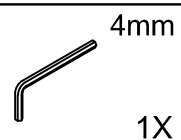


2.

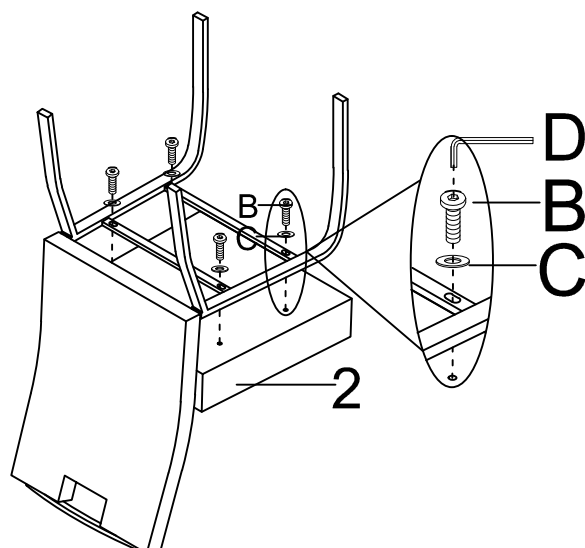



B

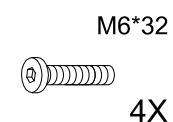


C

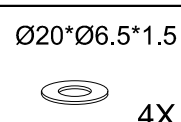



D

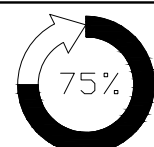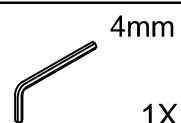

3.

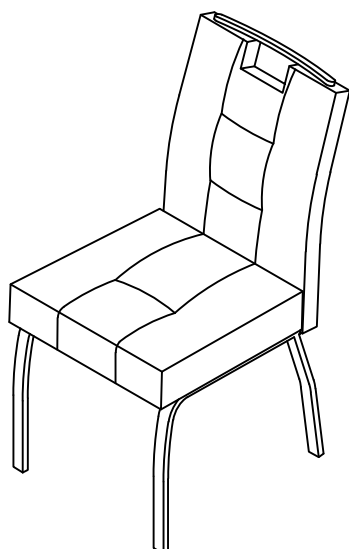

D

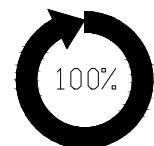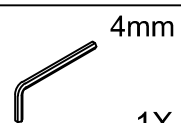

**LE TRI
+ FACILE**



Séparez les éléments avant de trier