


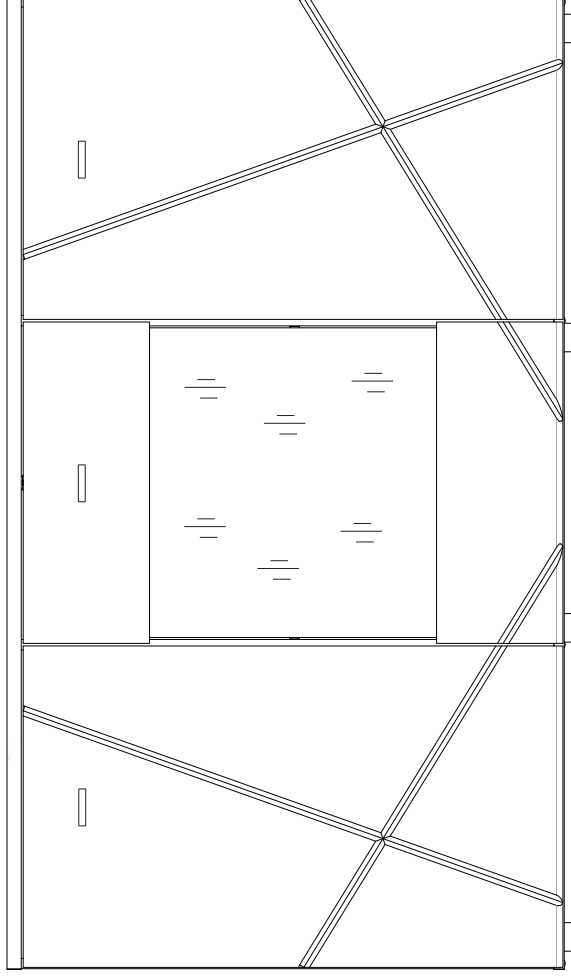
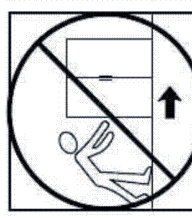
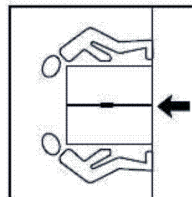
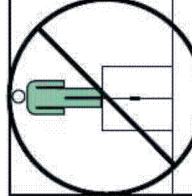
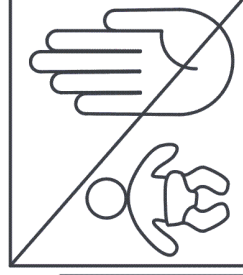
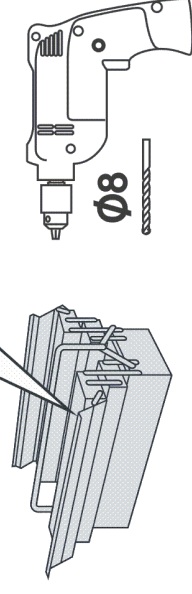
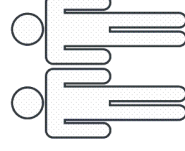
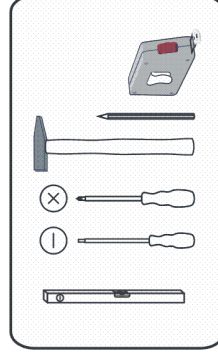
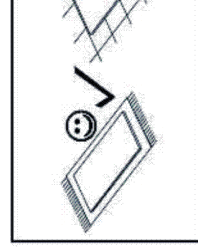
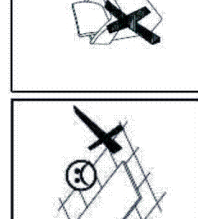
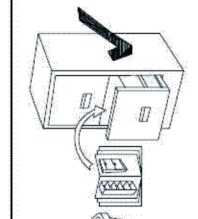
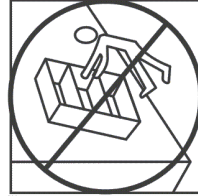
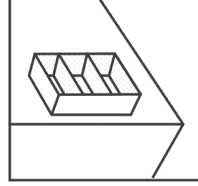
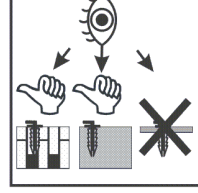
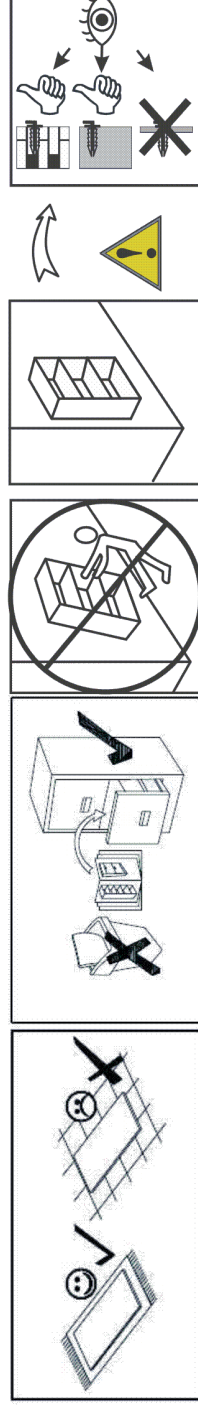
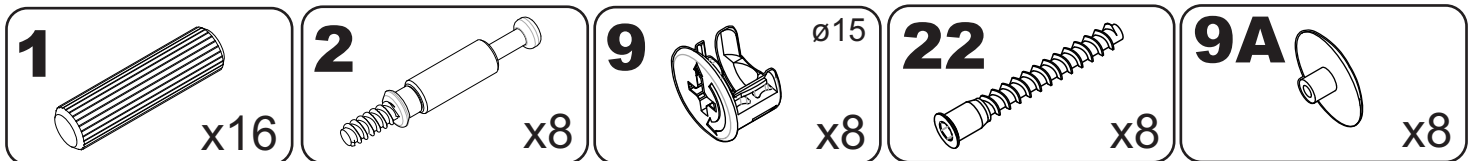
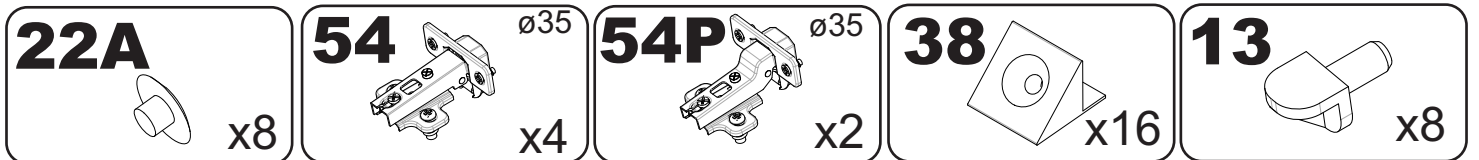
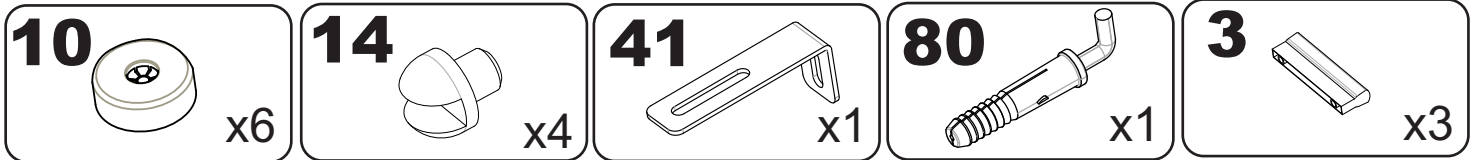
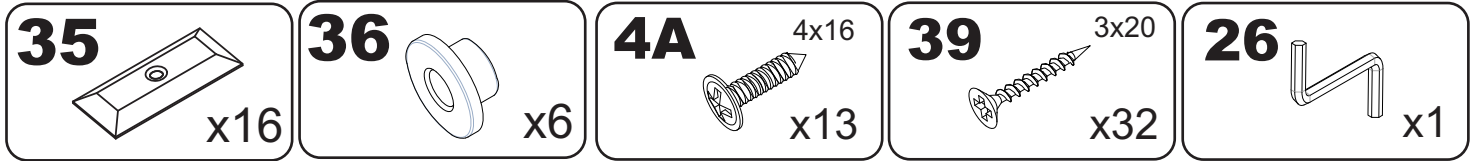


A

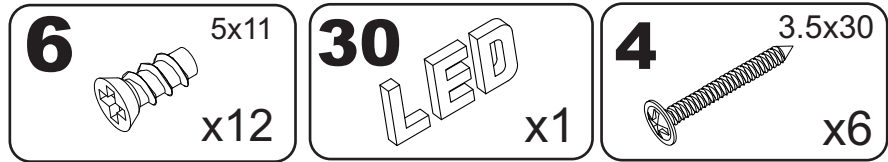



90 min

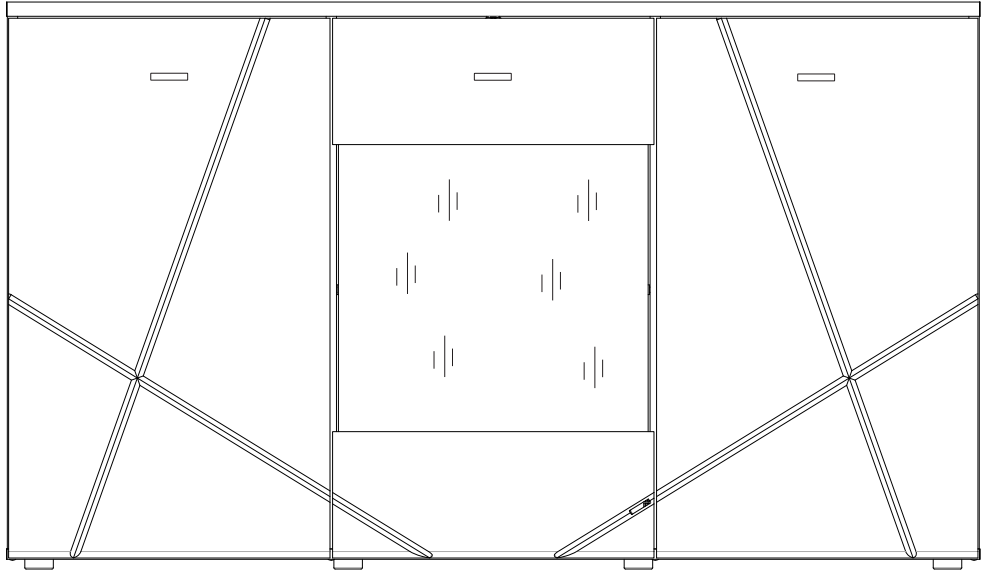



A


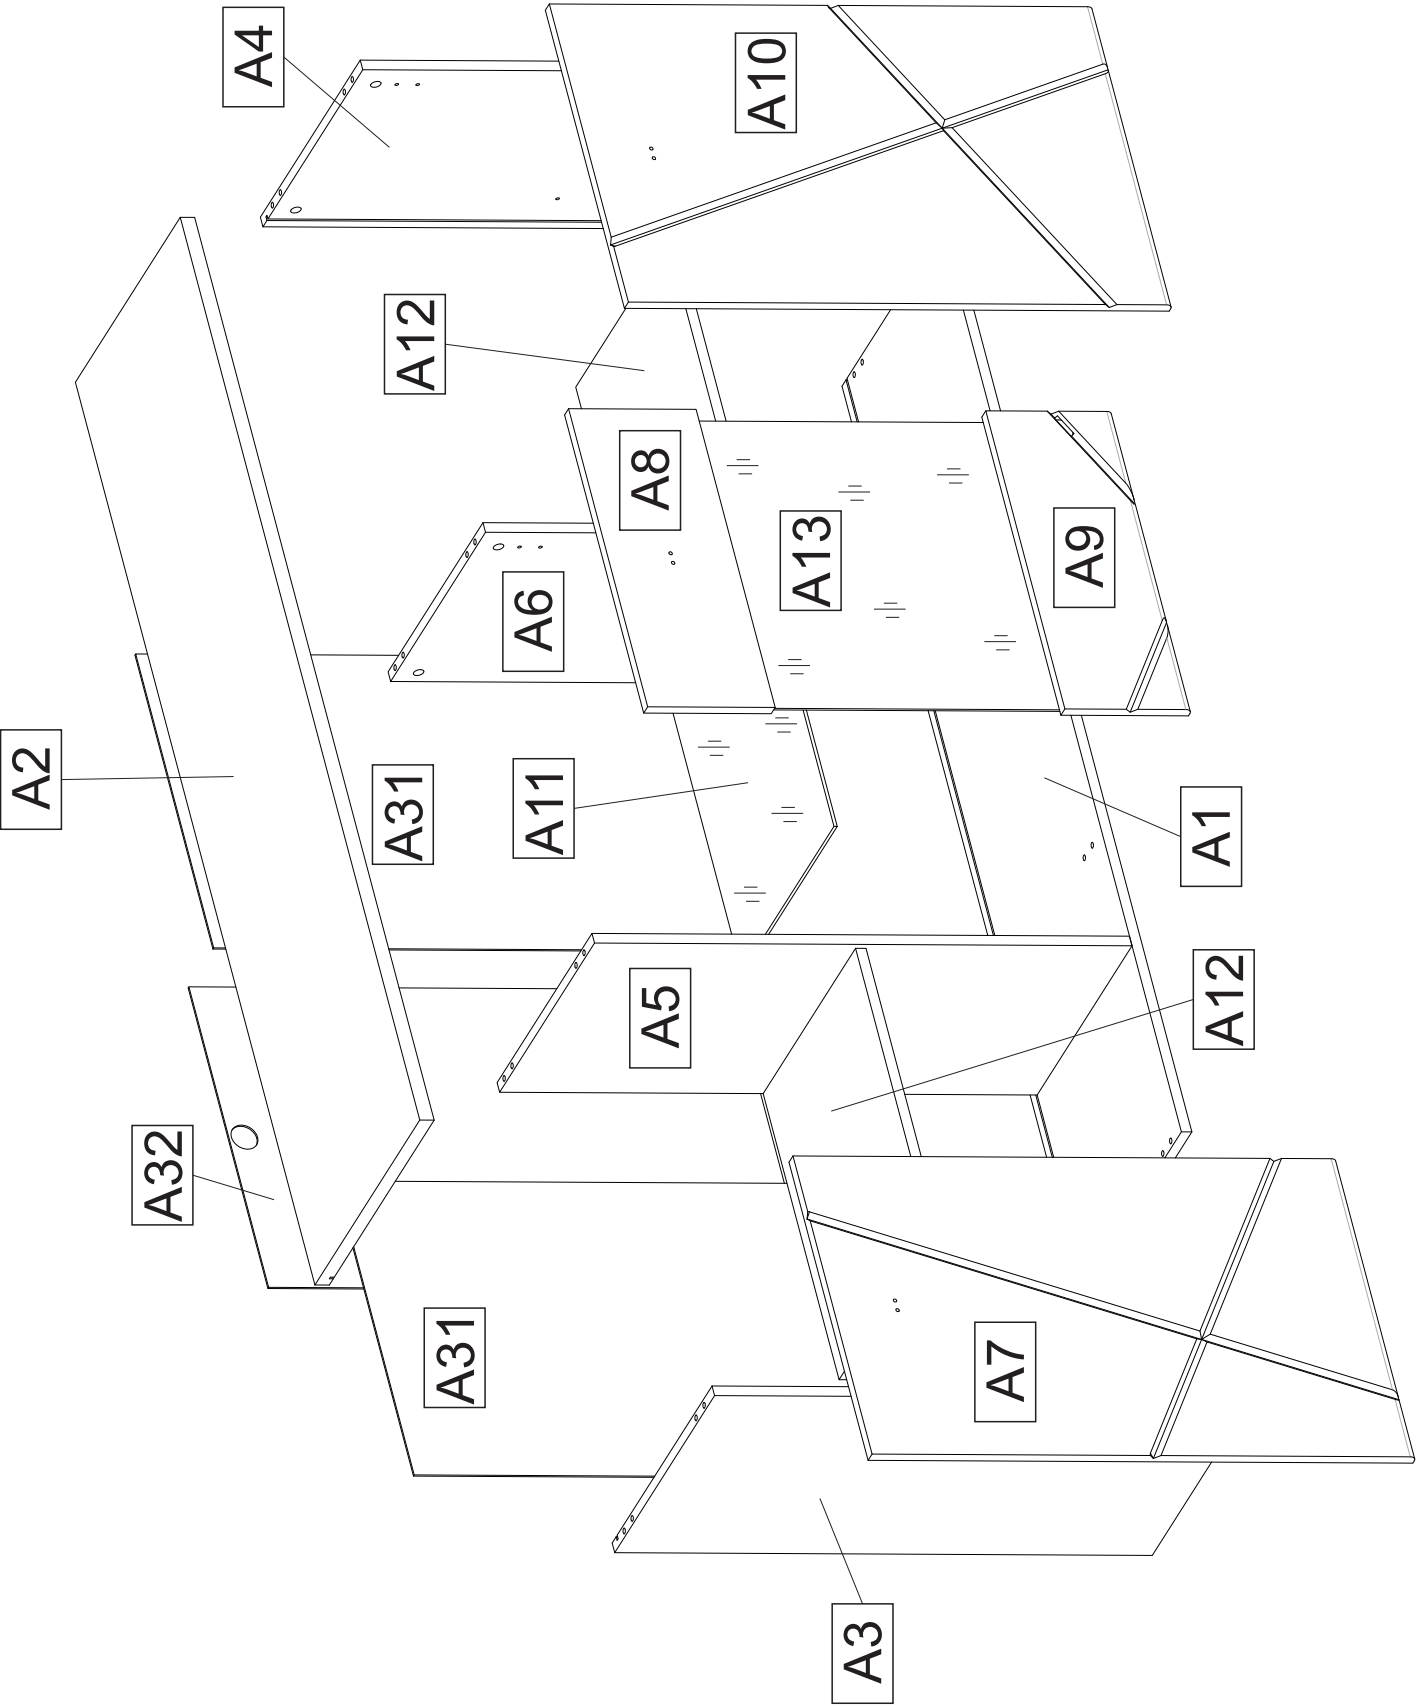


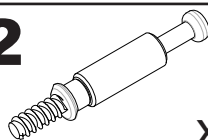1**2**

x8

A2**1502x420**

Colli nr 2

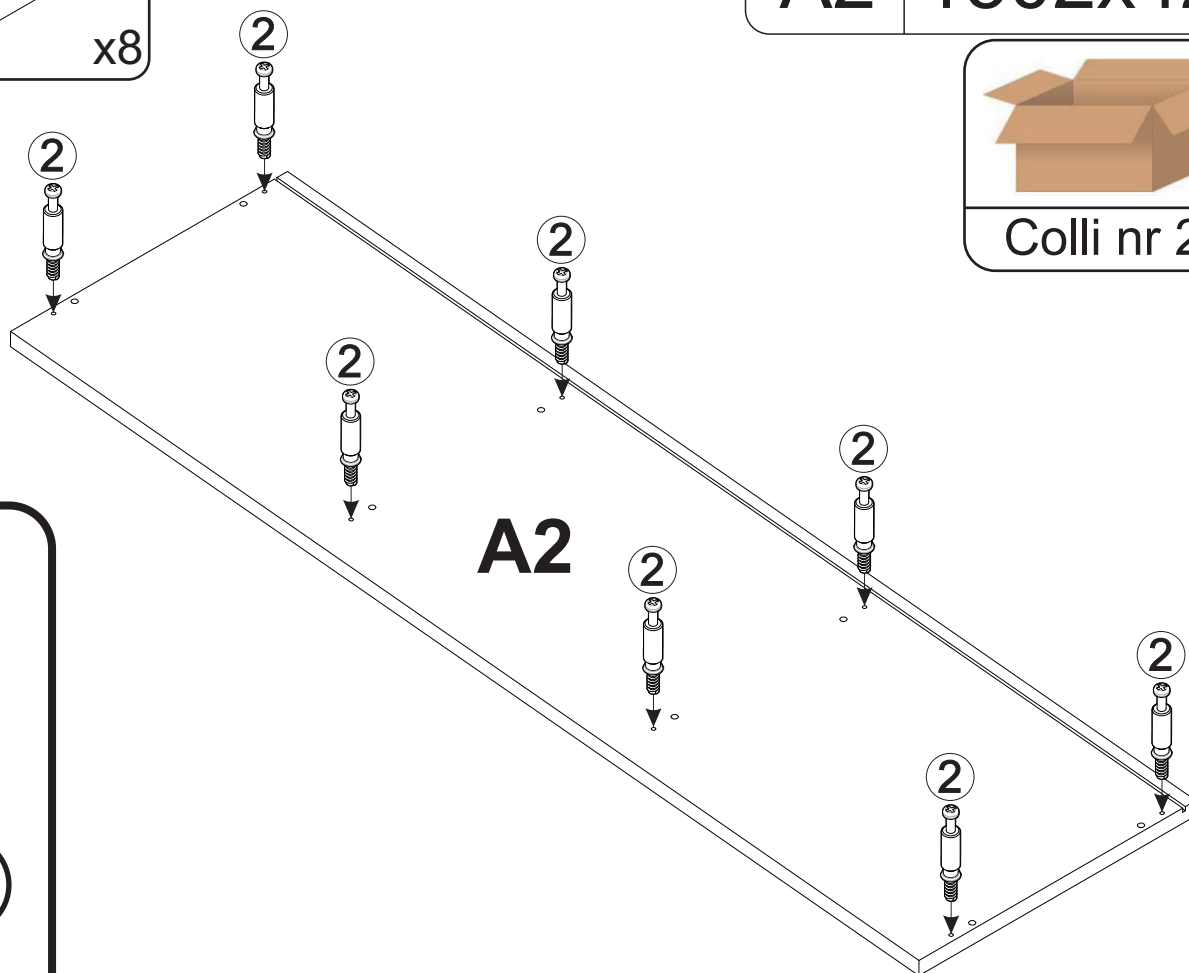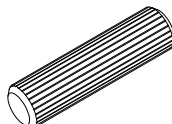**A2****2****1**

x4

9

ø15

x2





54


ø35

x2

A3**822x400**

Colli nr 2

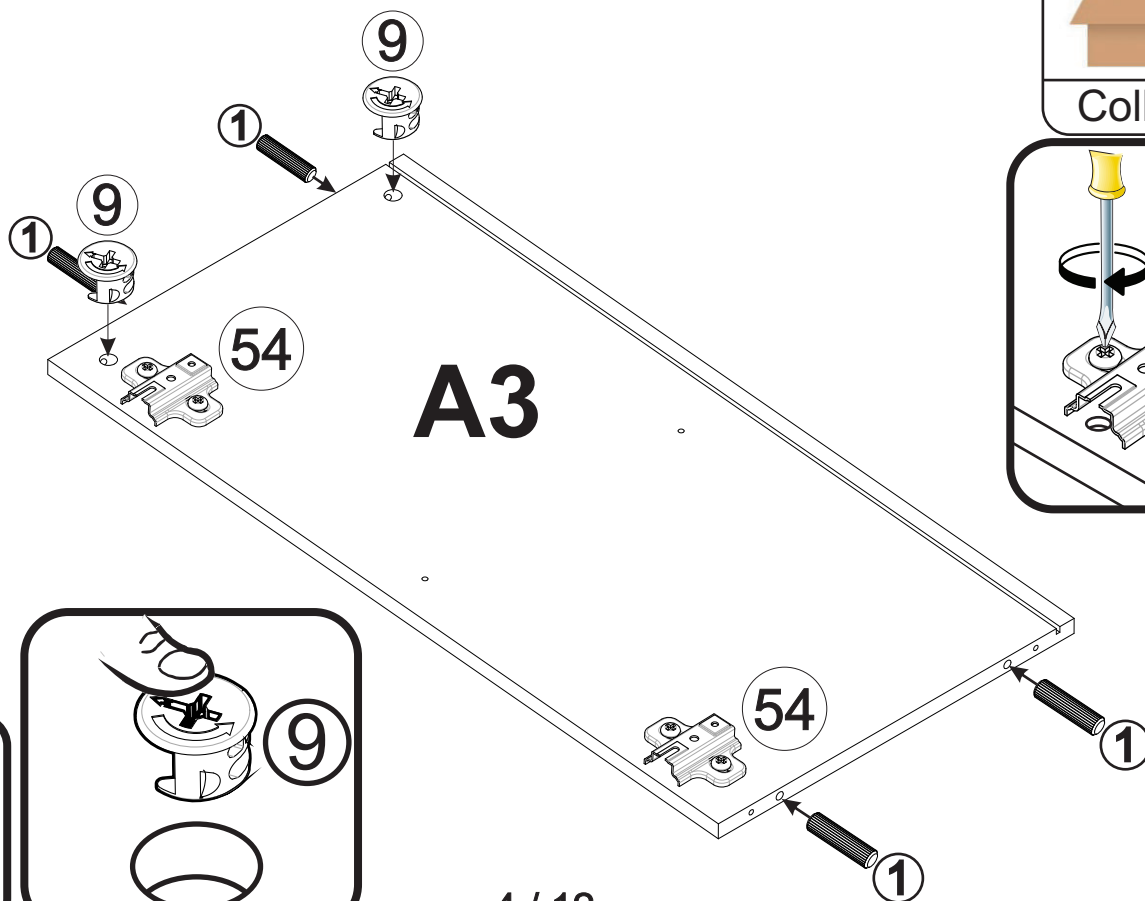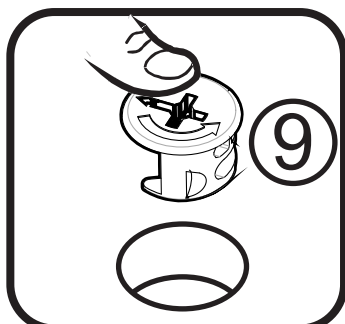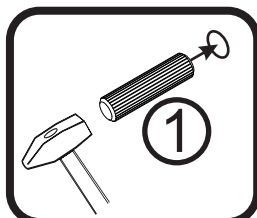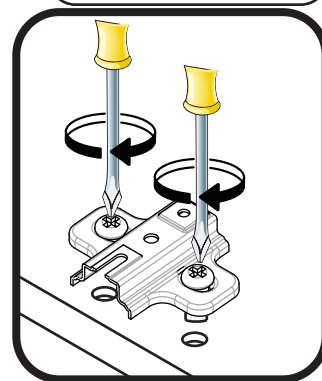**A3**

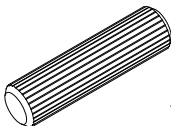
3**1**

x4

9

ø15

x2





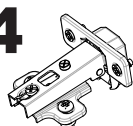
54

ø35

x2

A4**822x400**

Colli nr 2

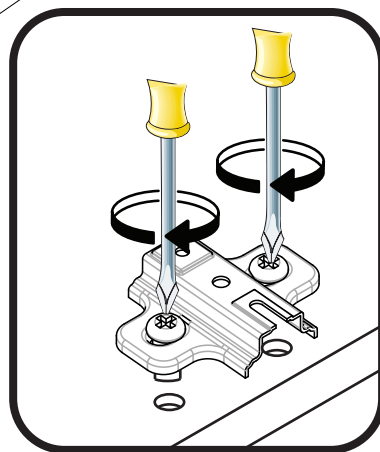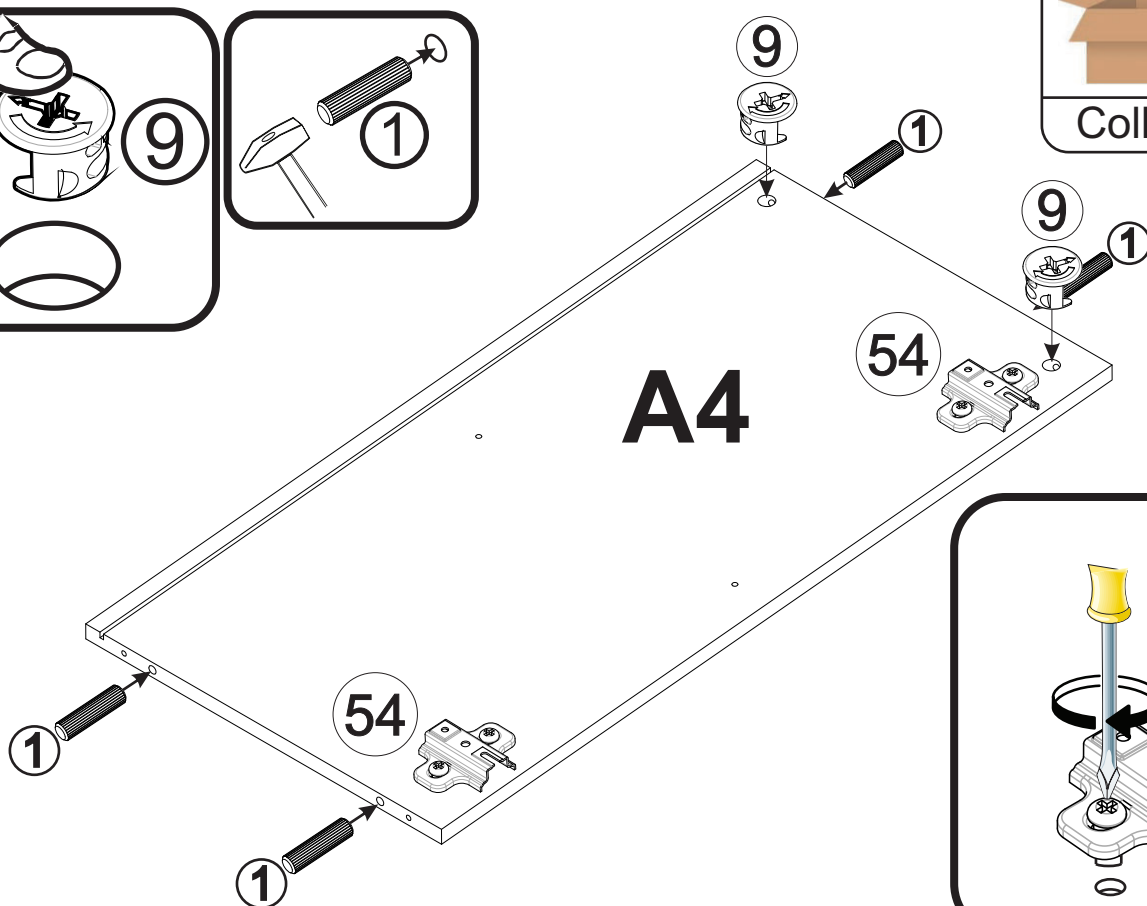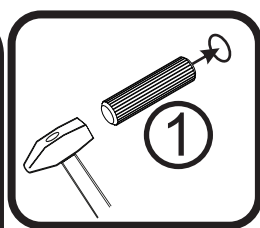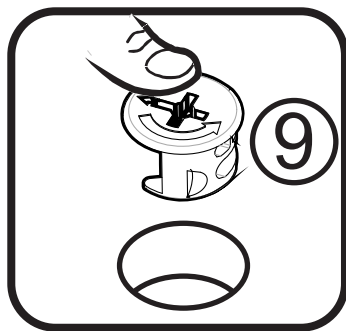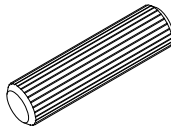
**4****1**

x4

9



ø15

x2



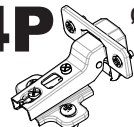
54P

ø35

x2

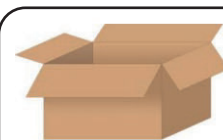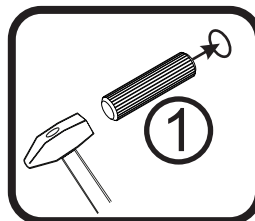
A4**822x380**

Colli nr 2

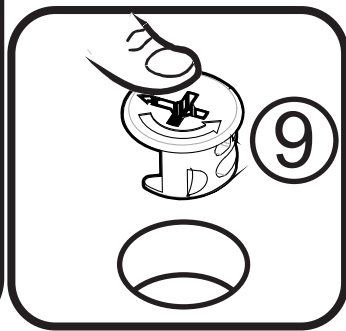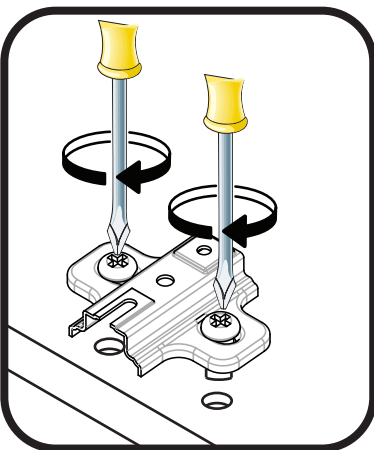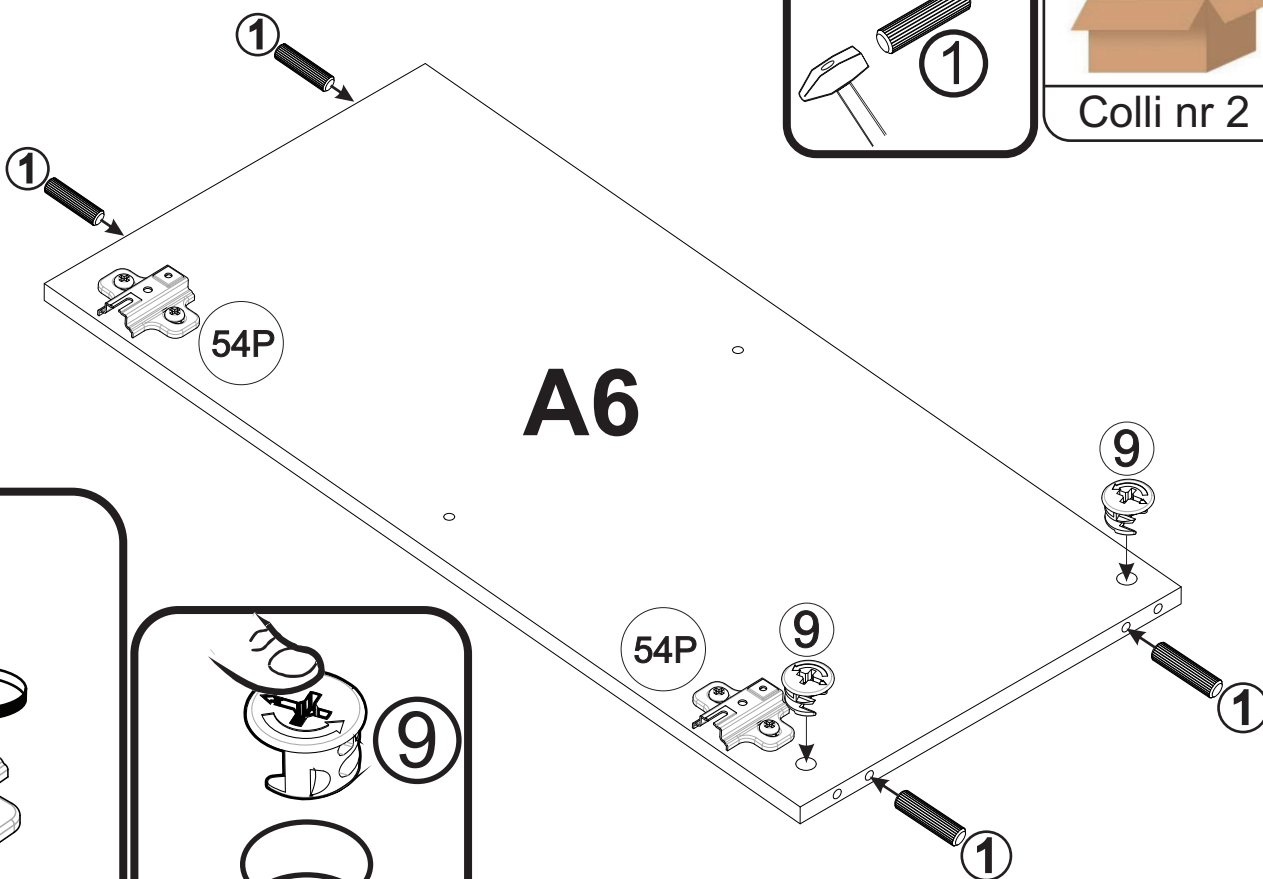

5

1

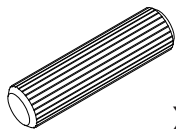

x4

9



ø15




x2

A4

822x380




Colli nr 2

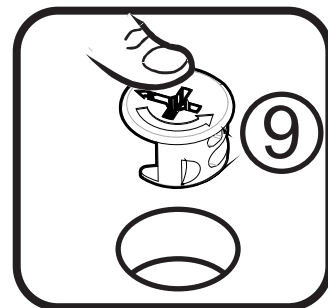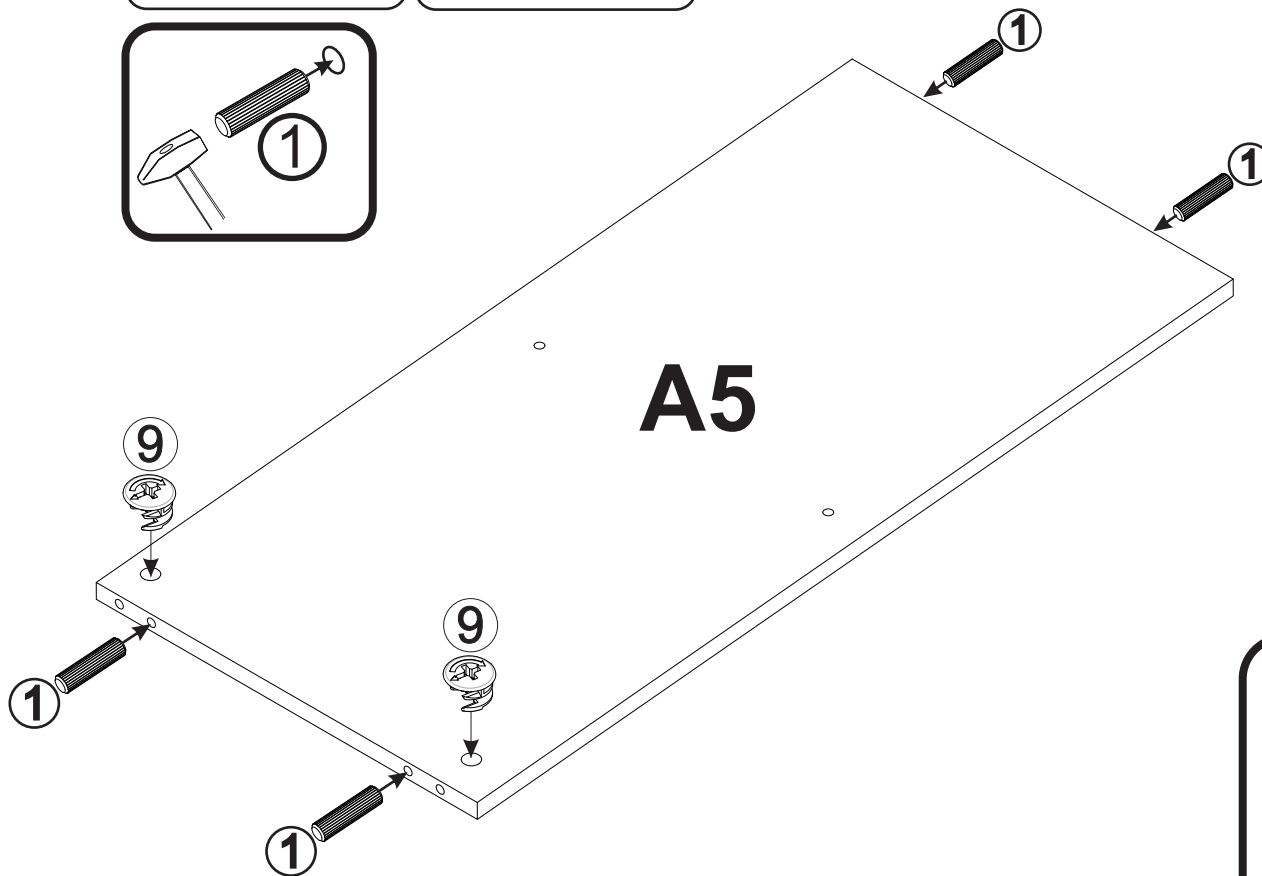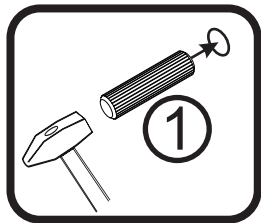


6

54

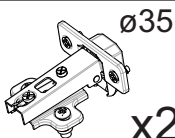

x2

6



5x11



x4

A7

833x496




Colli nr 1

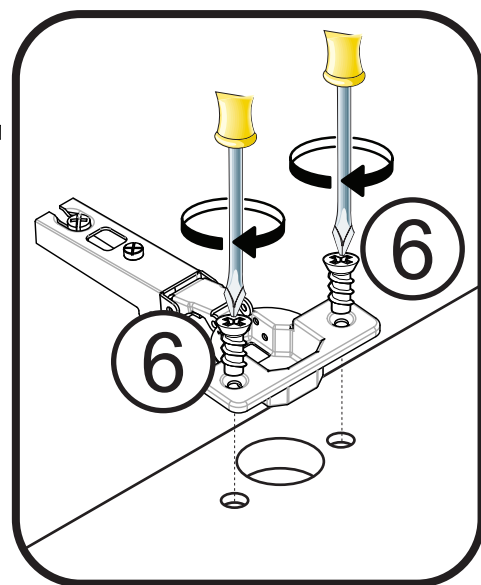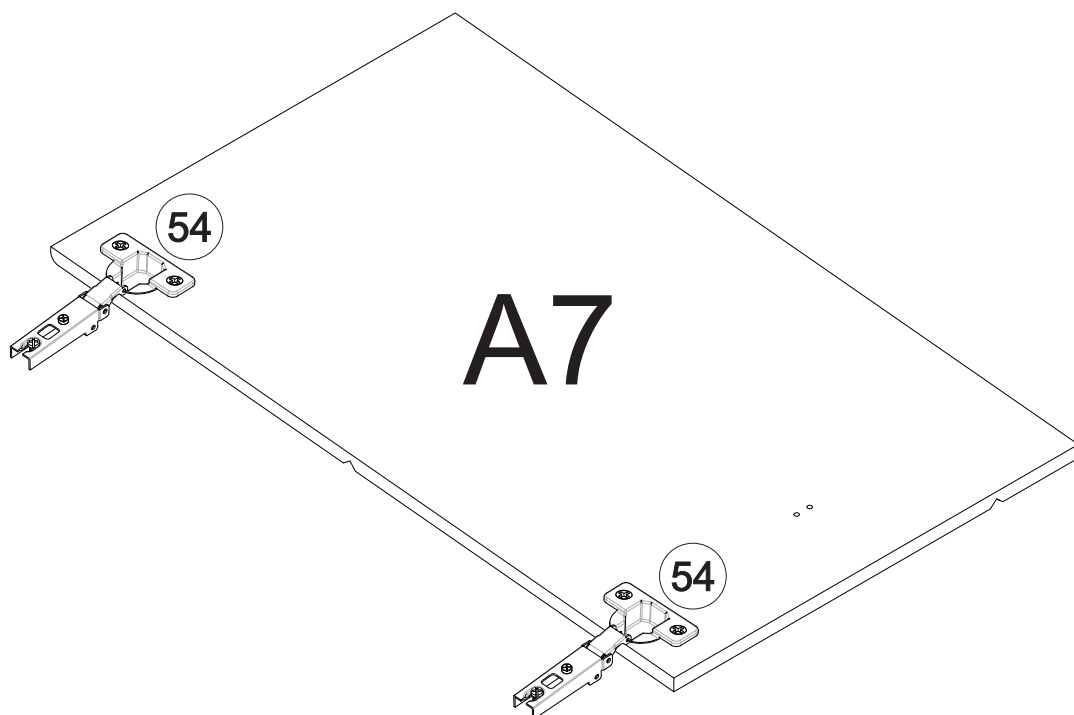


7

54

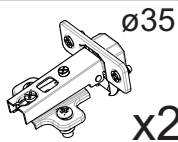

6

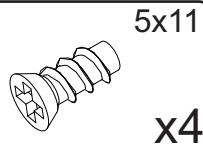

A7

833x496




Colli nr 1

A10

54

54

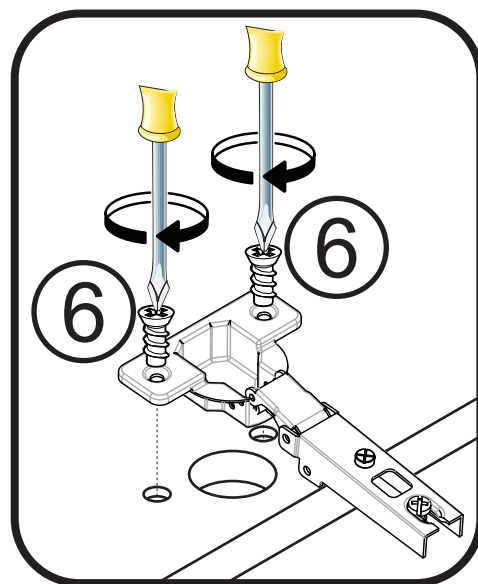


8

36



4A

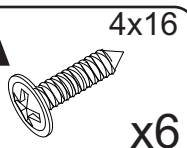

A8

496x195

A9

496x195

A13

503x478



Colli nr 1

A9

36

36

36


A13

36





36

36


A8

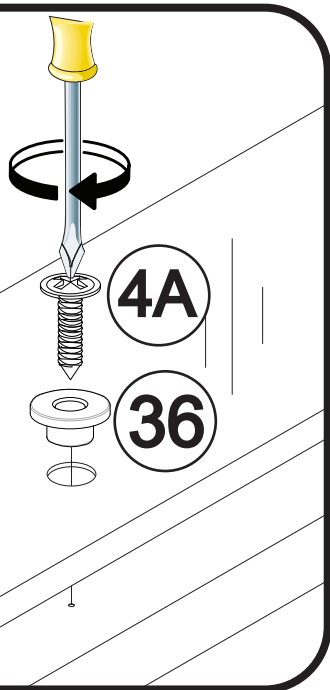





9

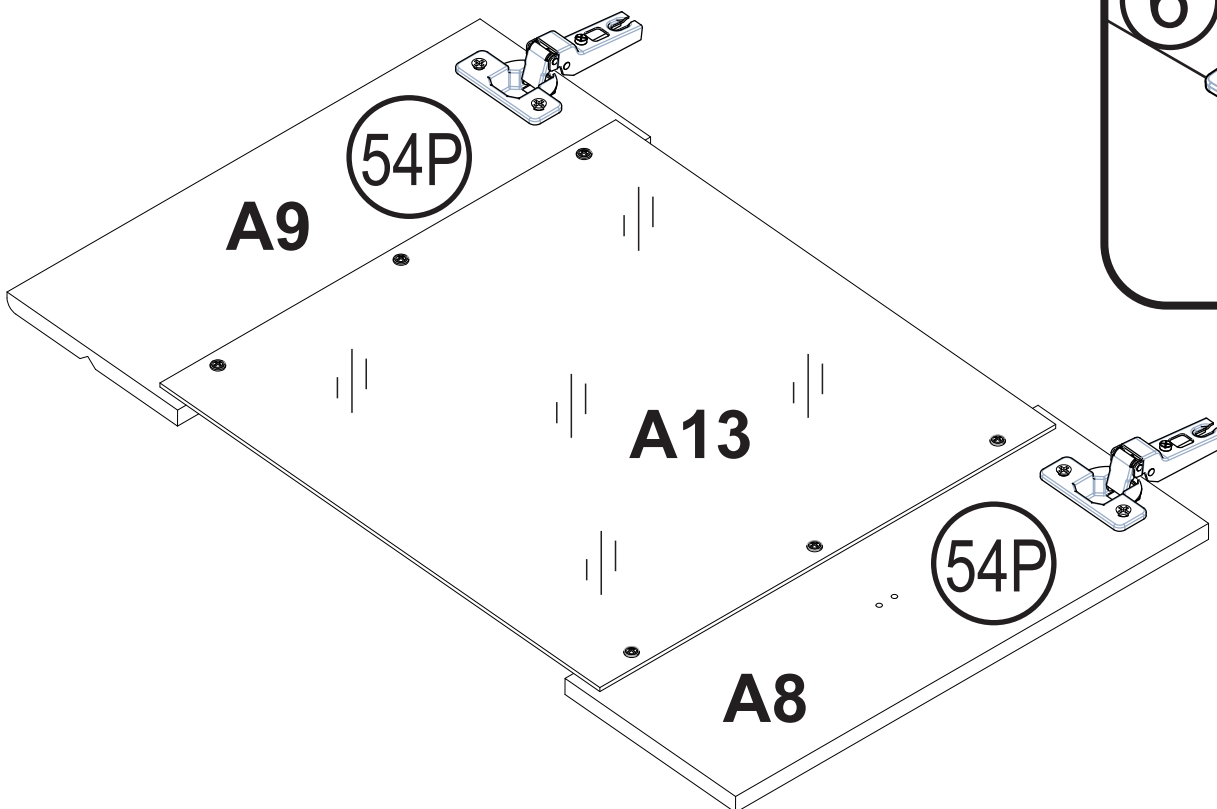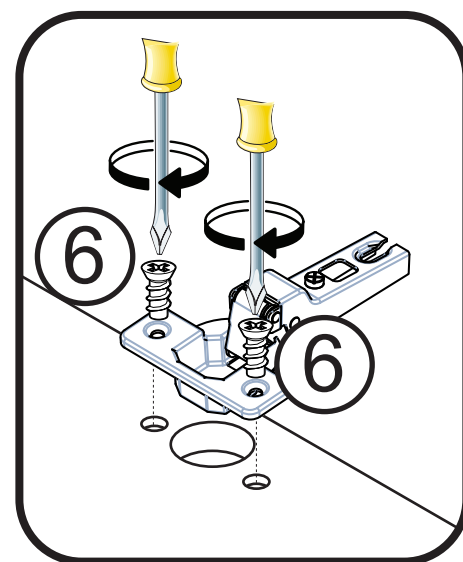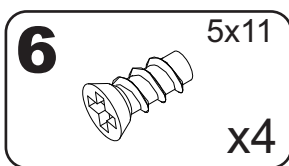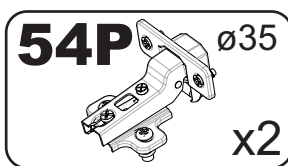



10

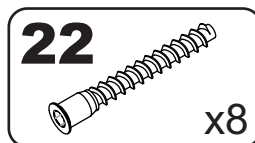





A1 1502x400

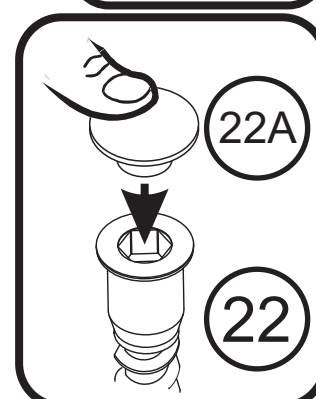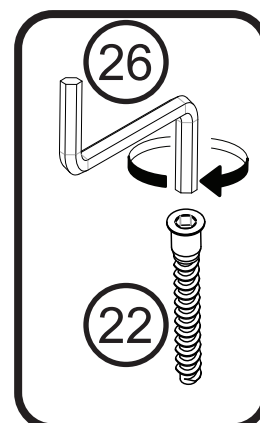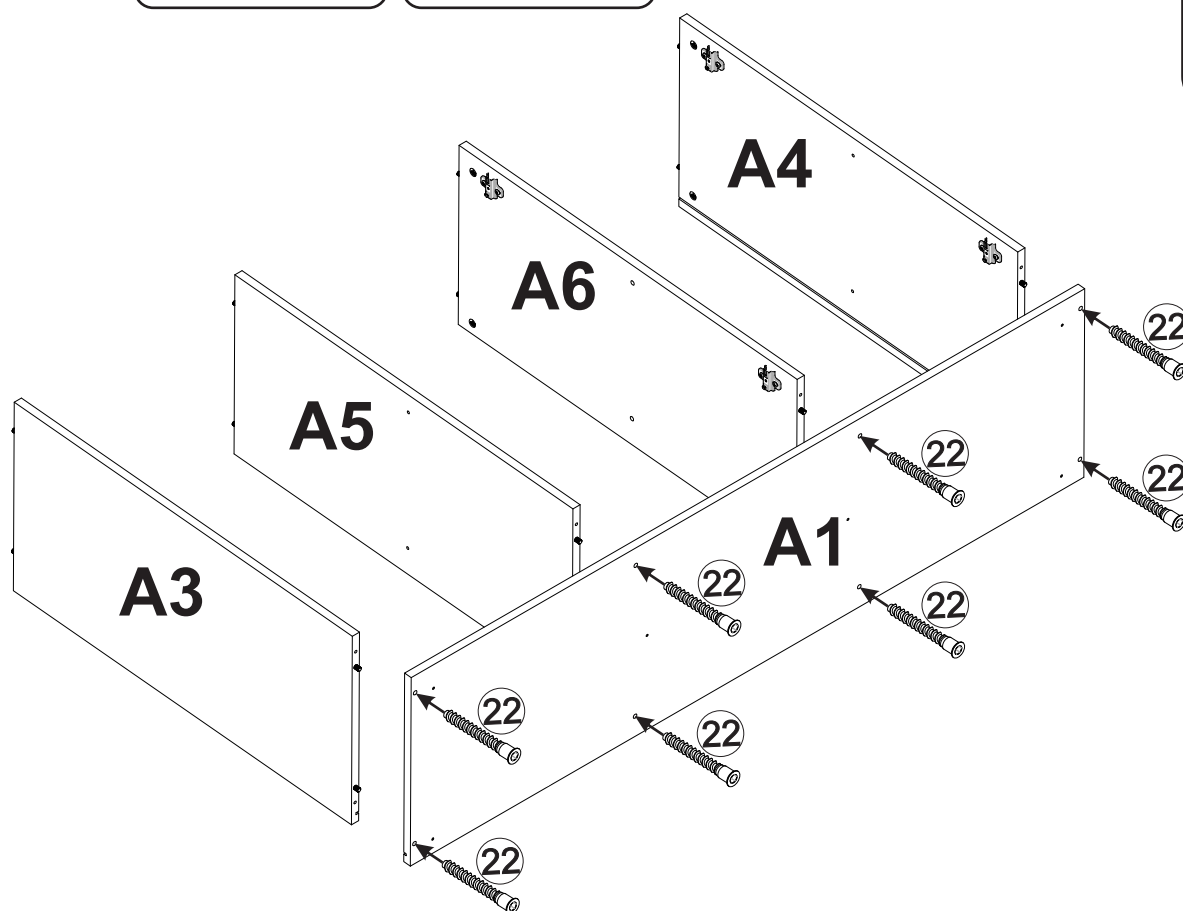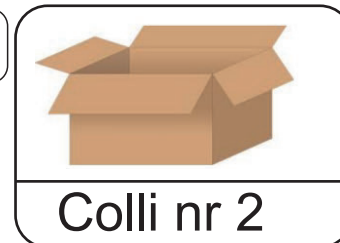

11

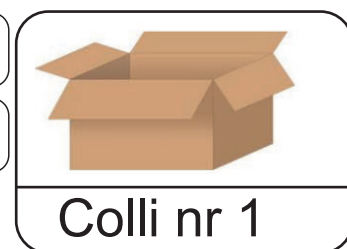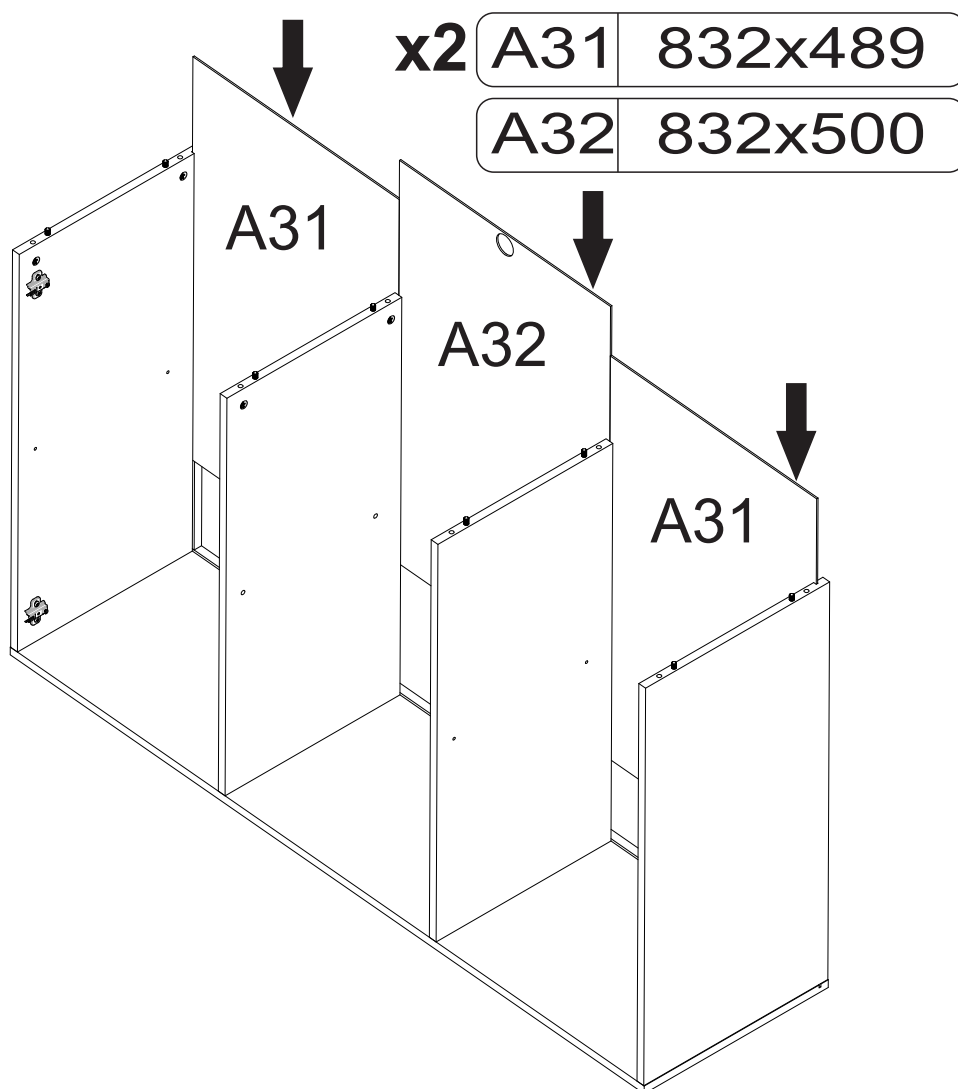


12

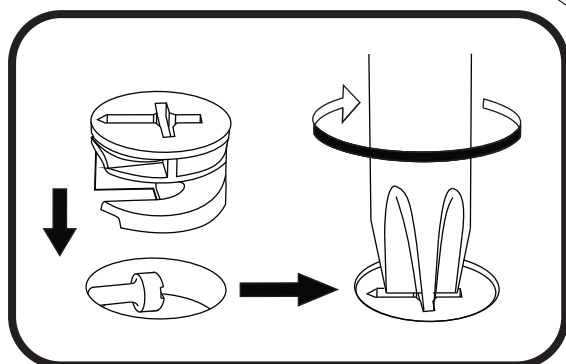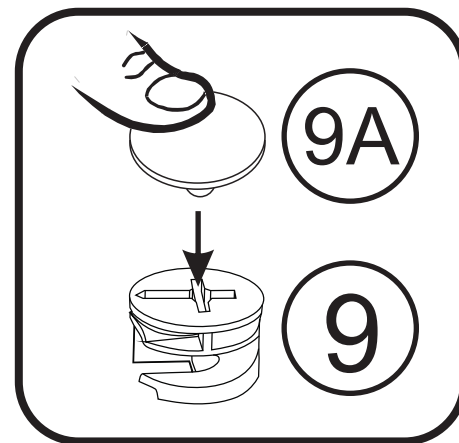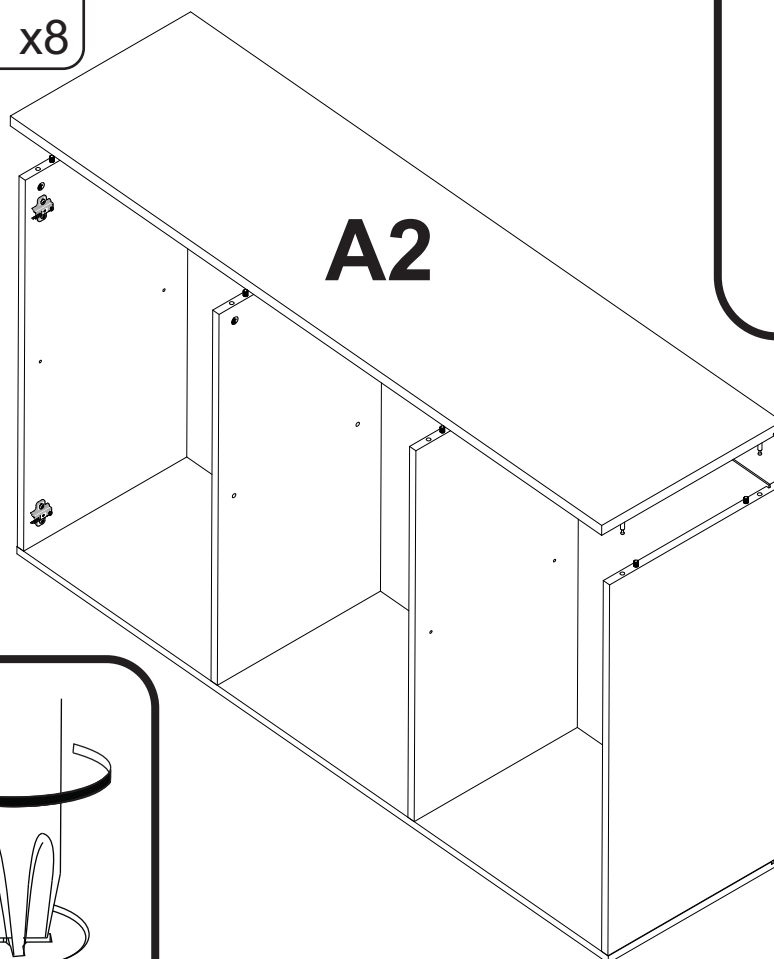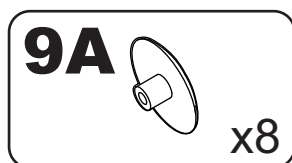

13

35



x16

38







x16

39



3x20

x32

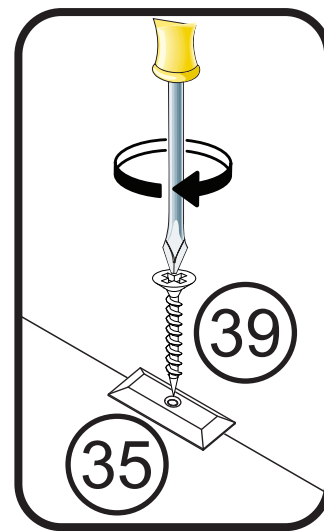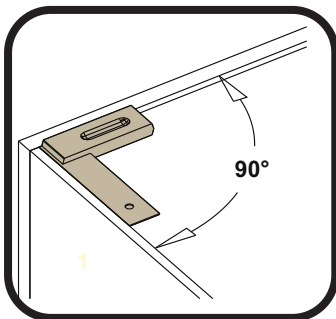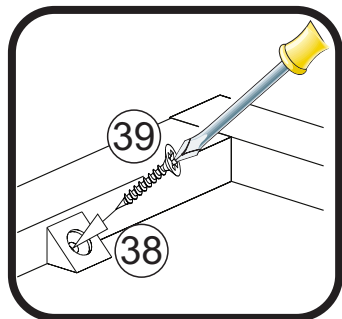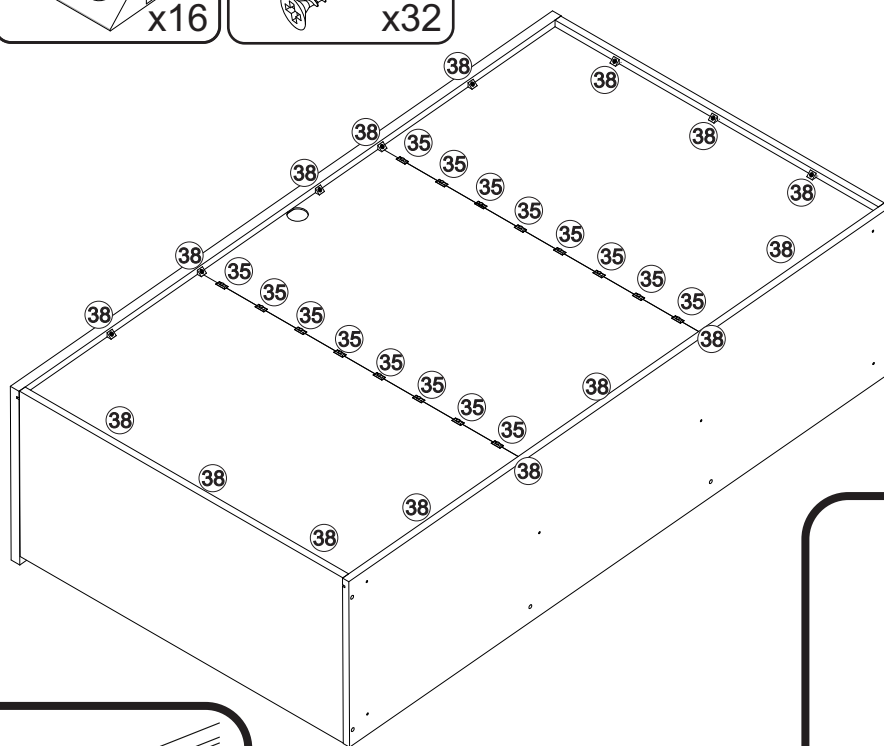

14


10






x6

4A


4x16





x6



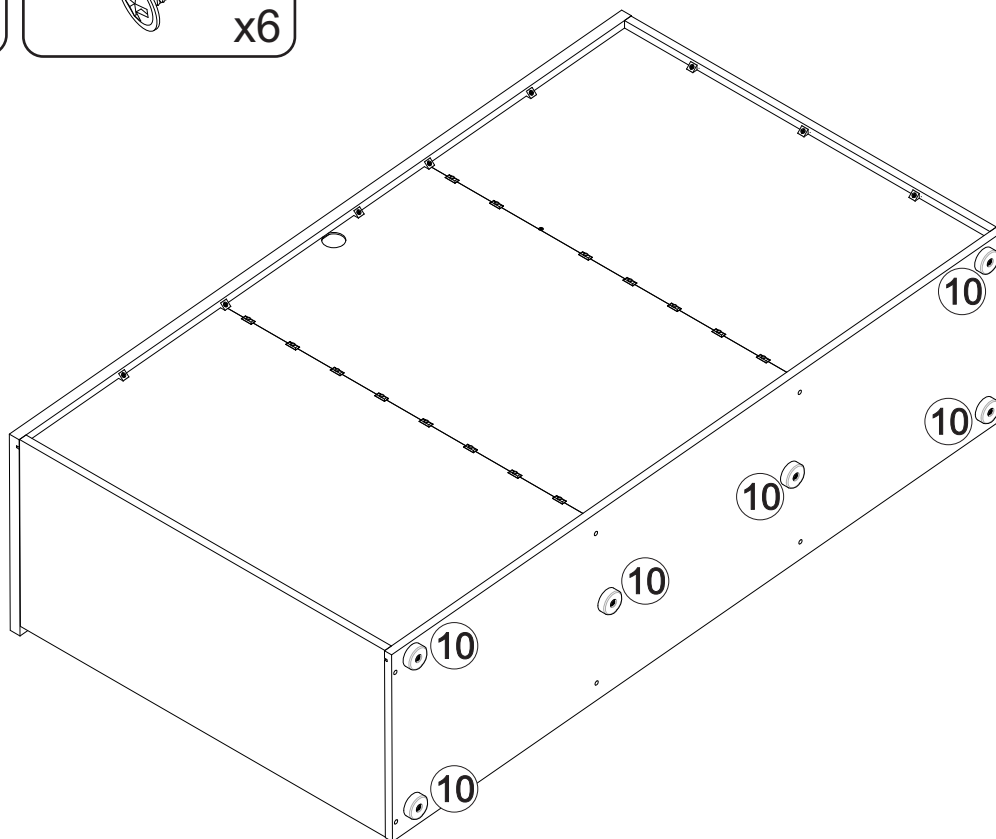
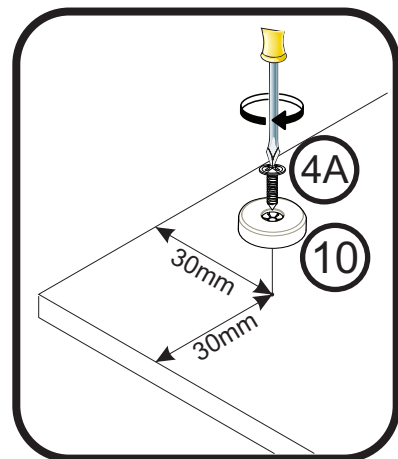
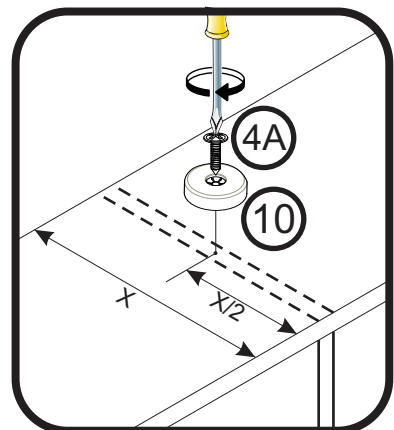


15

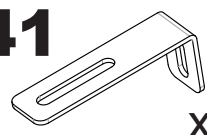
41  x1

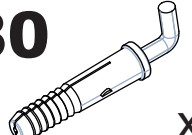
80  x1

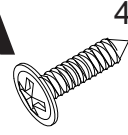4A ^{4x16}  x1

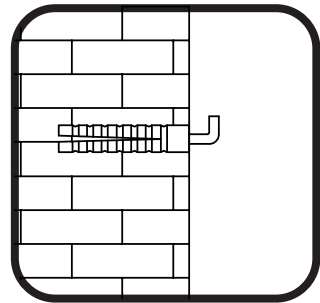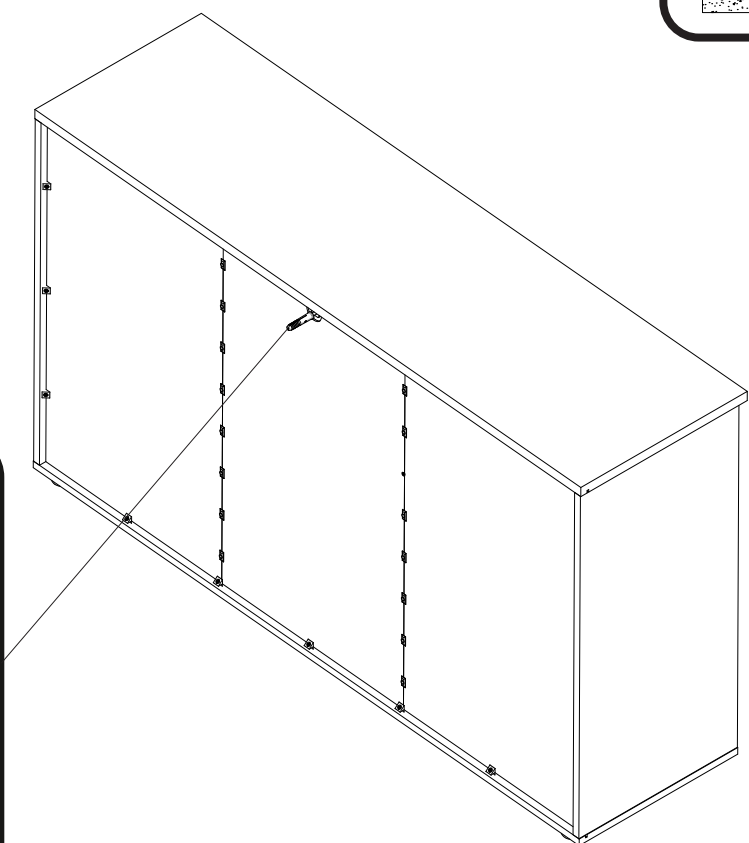
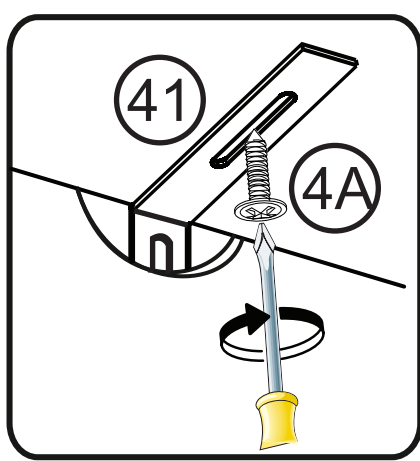
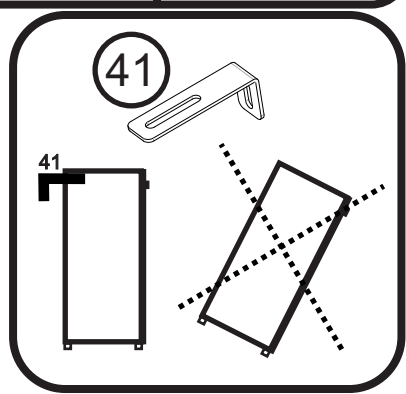
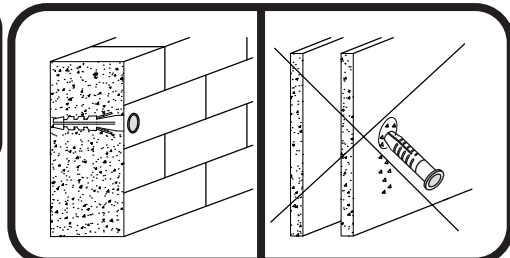


16






13  x8

14  x4

x1	A11	477x370
x2	A12	476x370

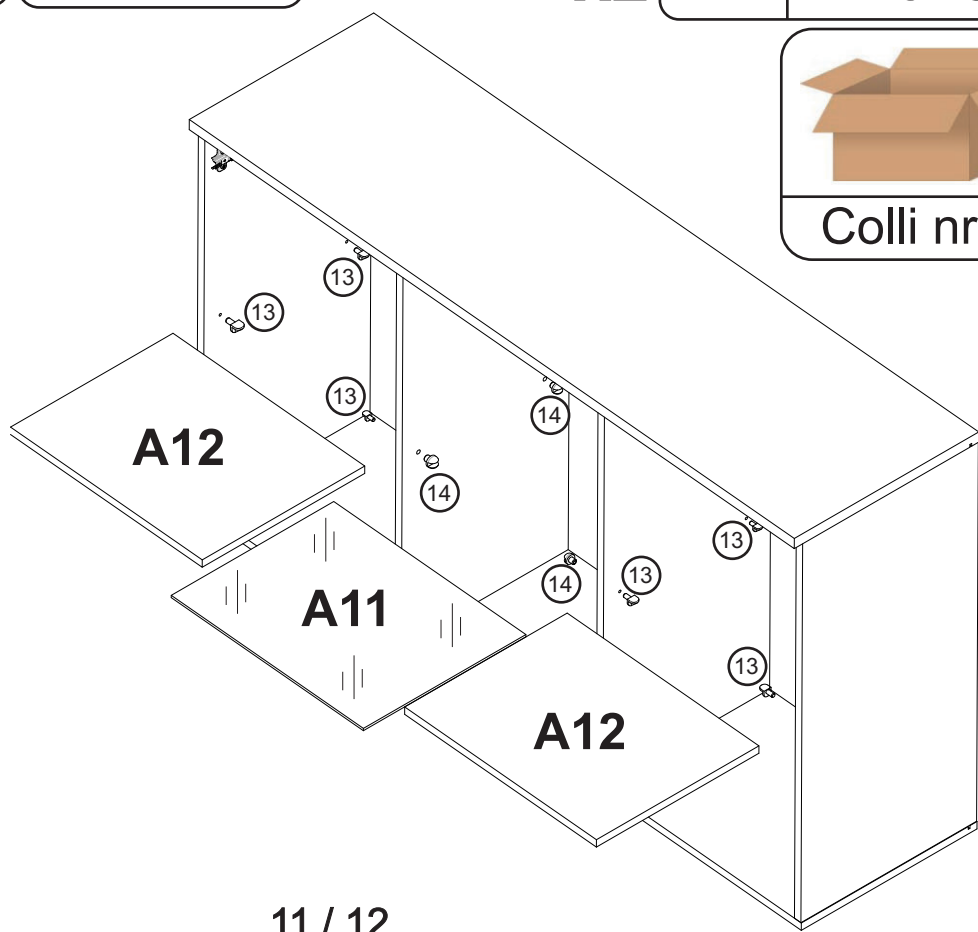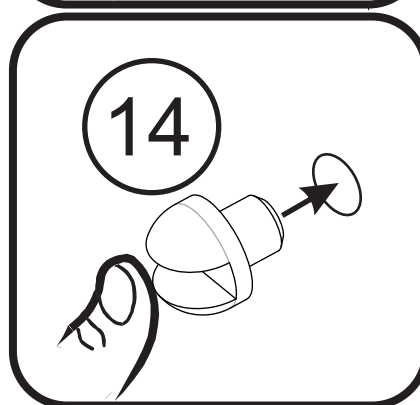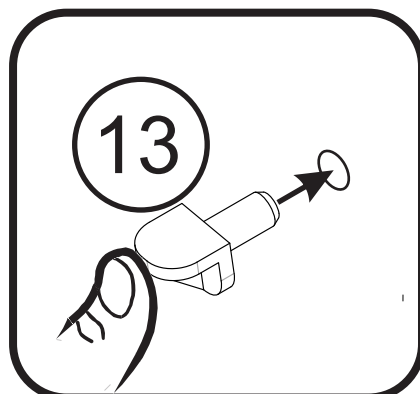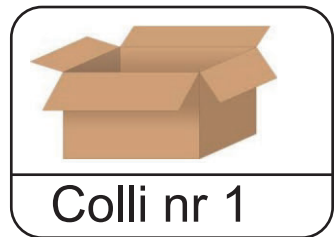

17

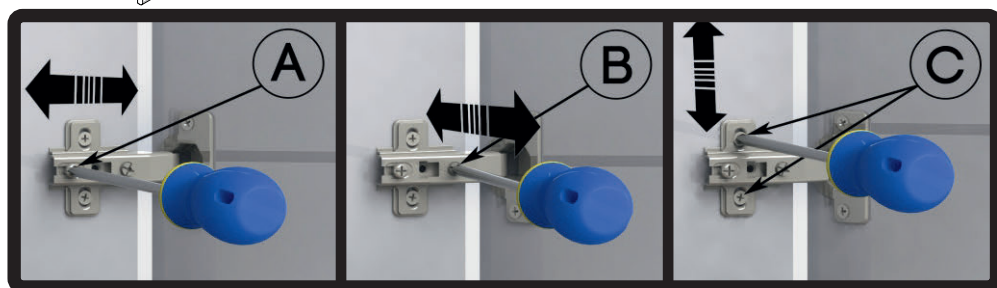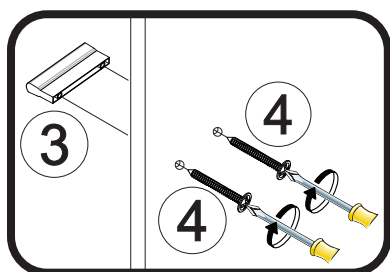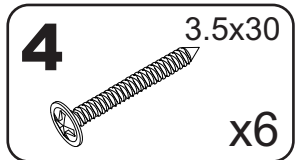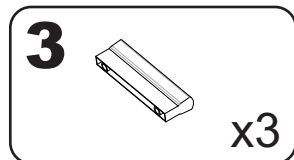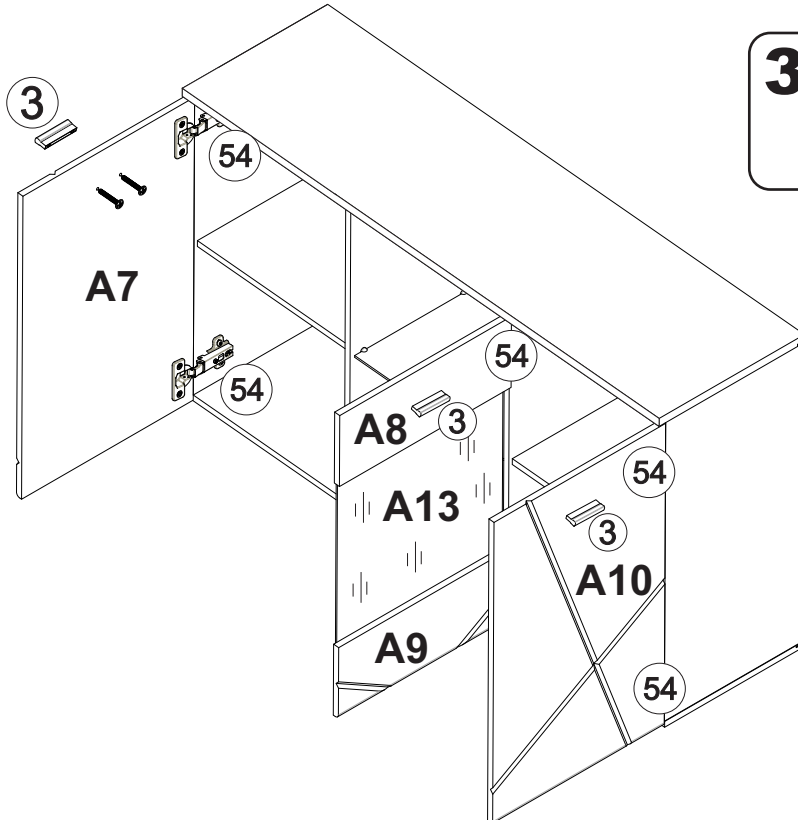

ATTENTION!!!

Do not clean doors for 7 days after removing protection foil.
Foiled parts needs 7 days without protection foil to become tough.

STEP 1	STEP 2
	7 DAYS

