








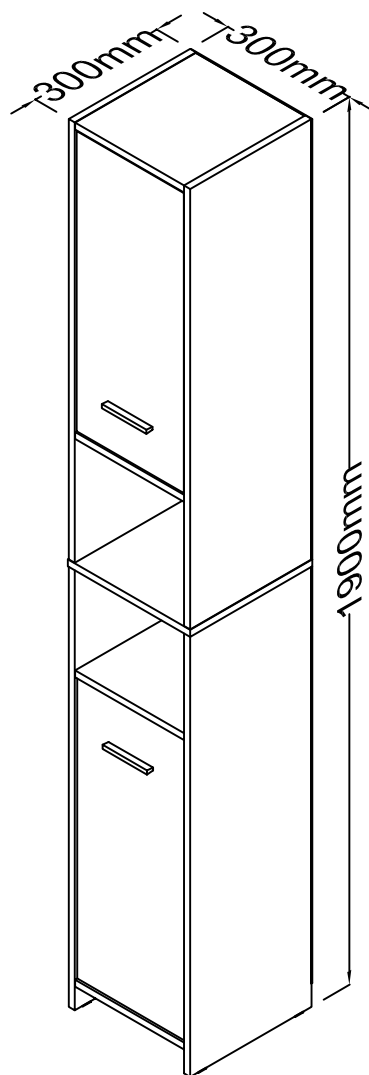


Hochschrank Zalo L
Montageanleitung
Instruction manual



VCM Morgenthaler GmbH
D-79346 Endingen am Kaiserstuhl
service@vcm-gruppe.de
www.vcm-gruppe.de

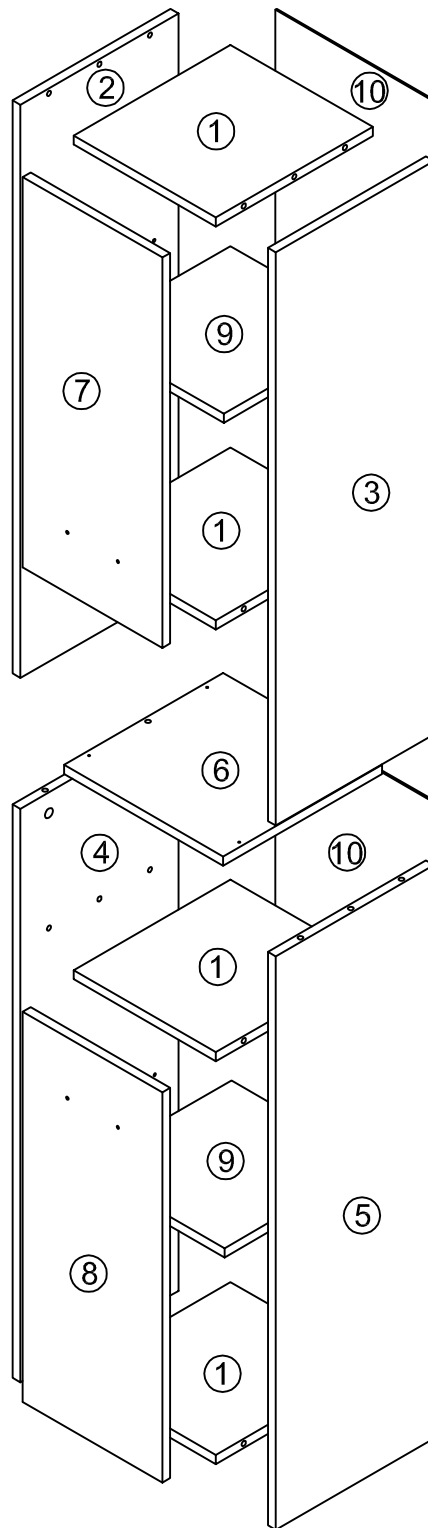

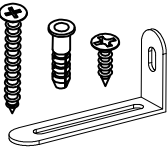A*20  40 mm	B*20  15*9 mm	C*12  8*40 mm	D*24  3.5*14 mm	E*4  3.5*35 mm	F*4 
G*8 	H*2 	I*4  3.5*18 mm	J*2 	K*4 	L*26 


1

A*8




40 mm

C*6



8*40 mm

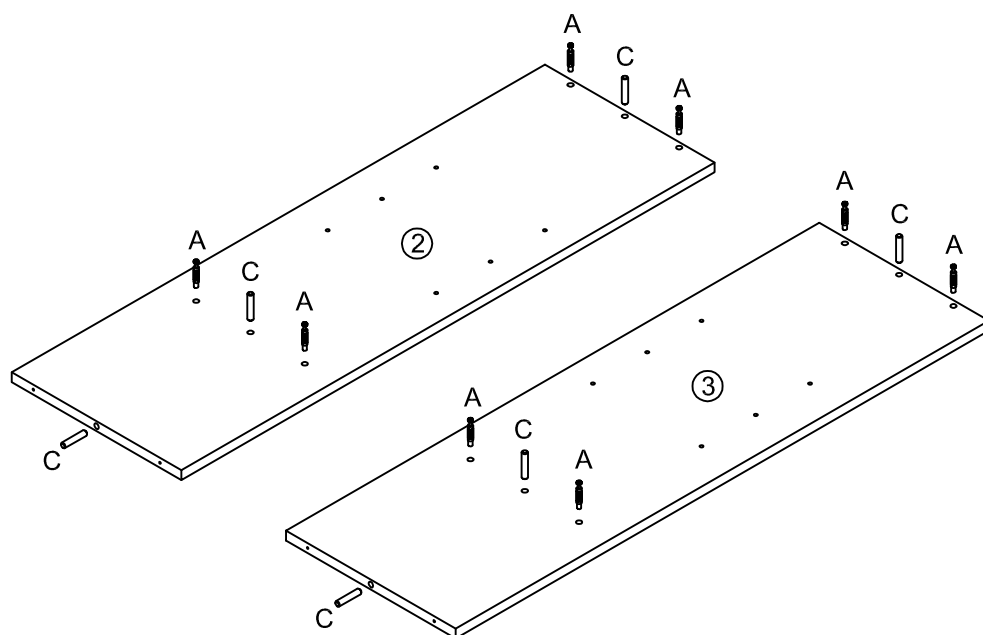


2

B*8



15*9 mm

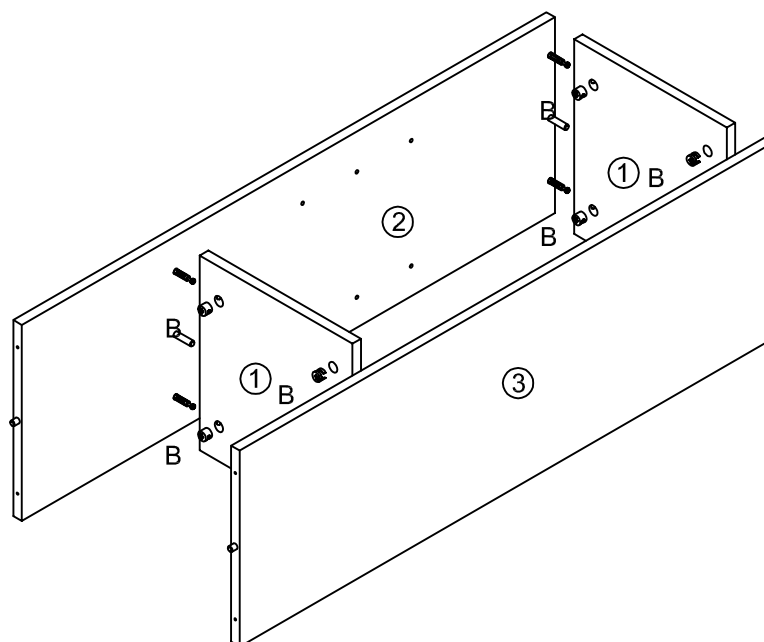


3

A*4




40 mm

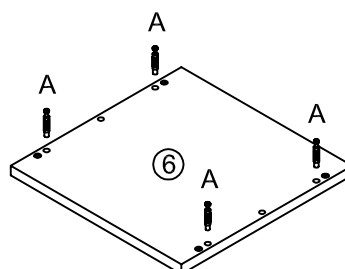


4

E*4



3.5*35 mm

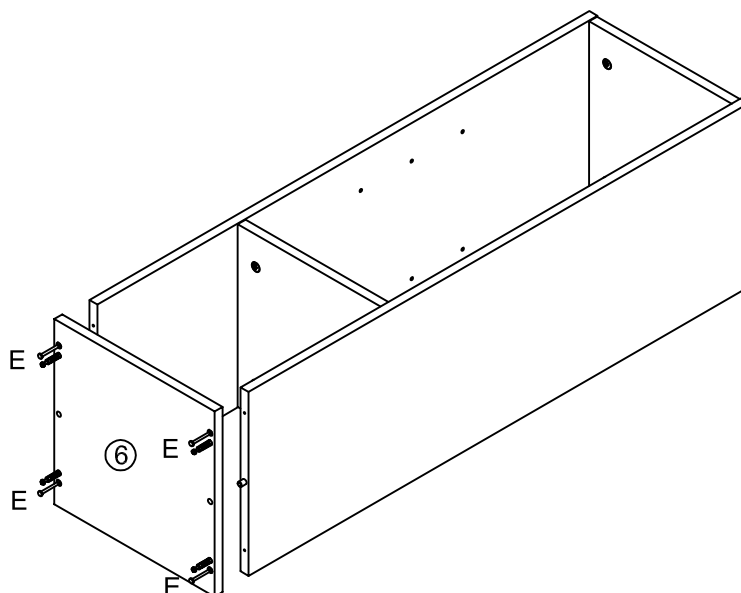


5

A*8




40 mm

C*6



8*40 mm

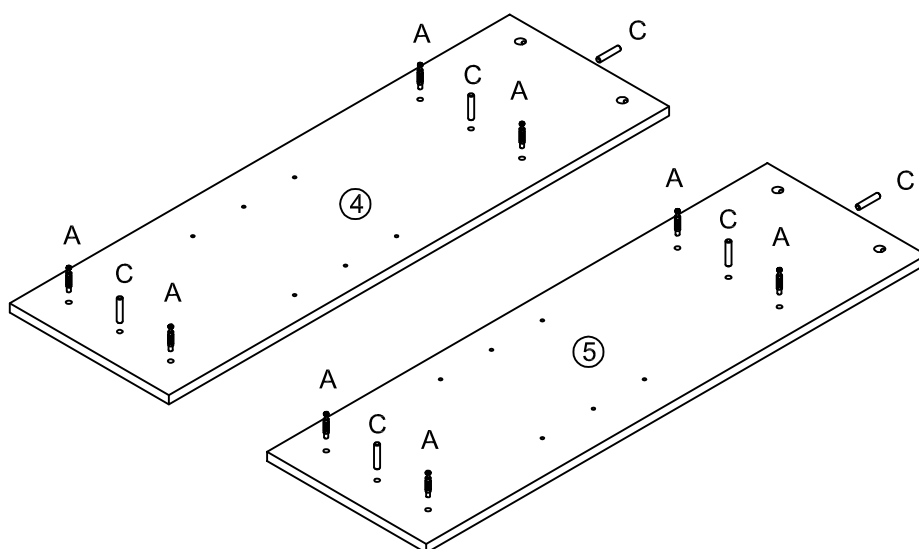


6

B*8



15*9 mm

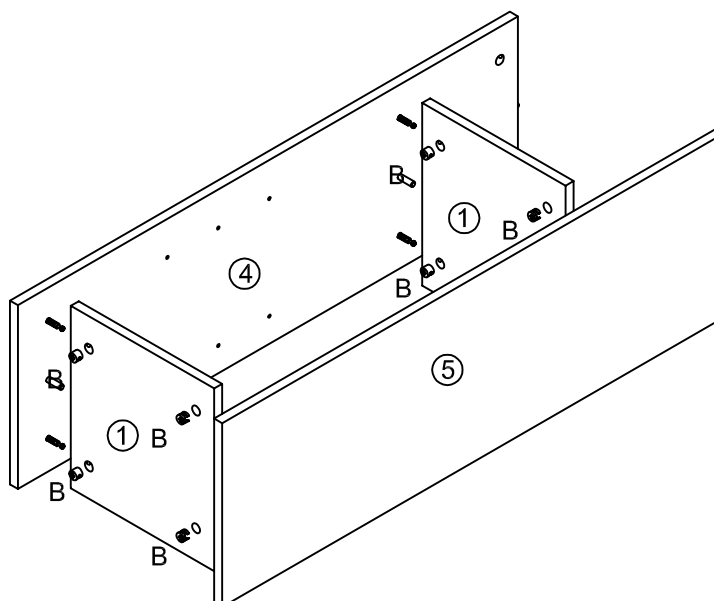


7

B*4




15*9 mm

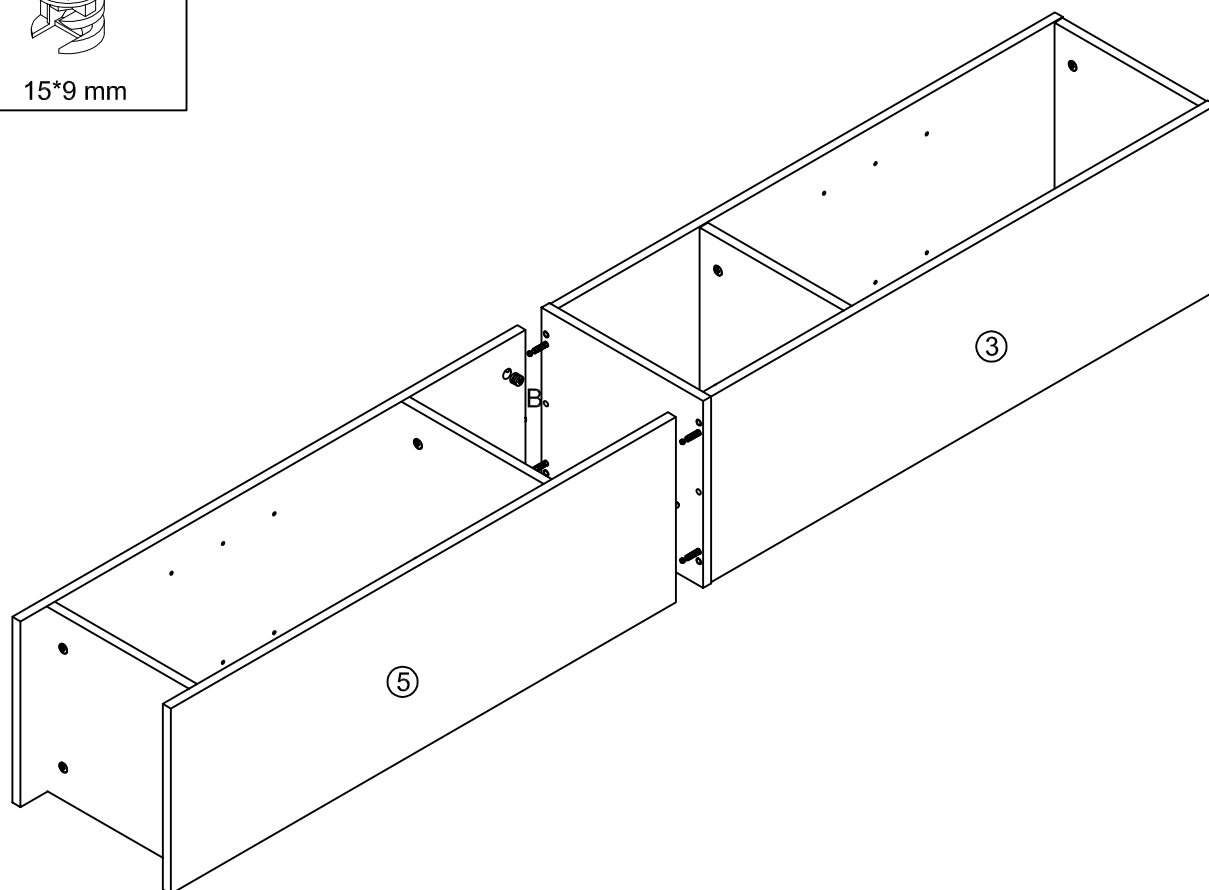


8

K*4



L*26

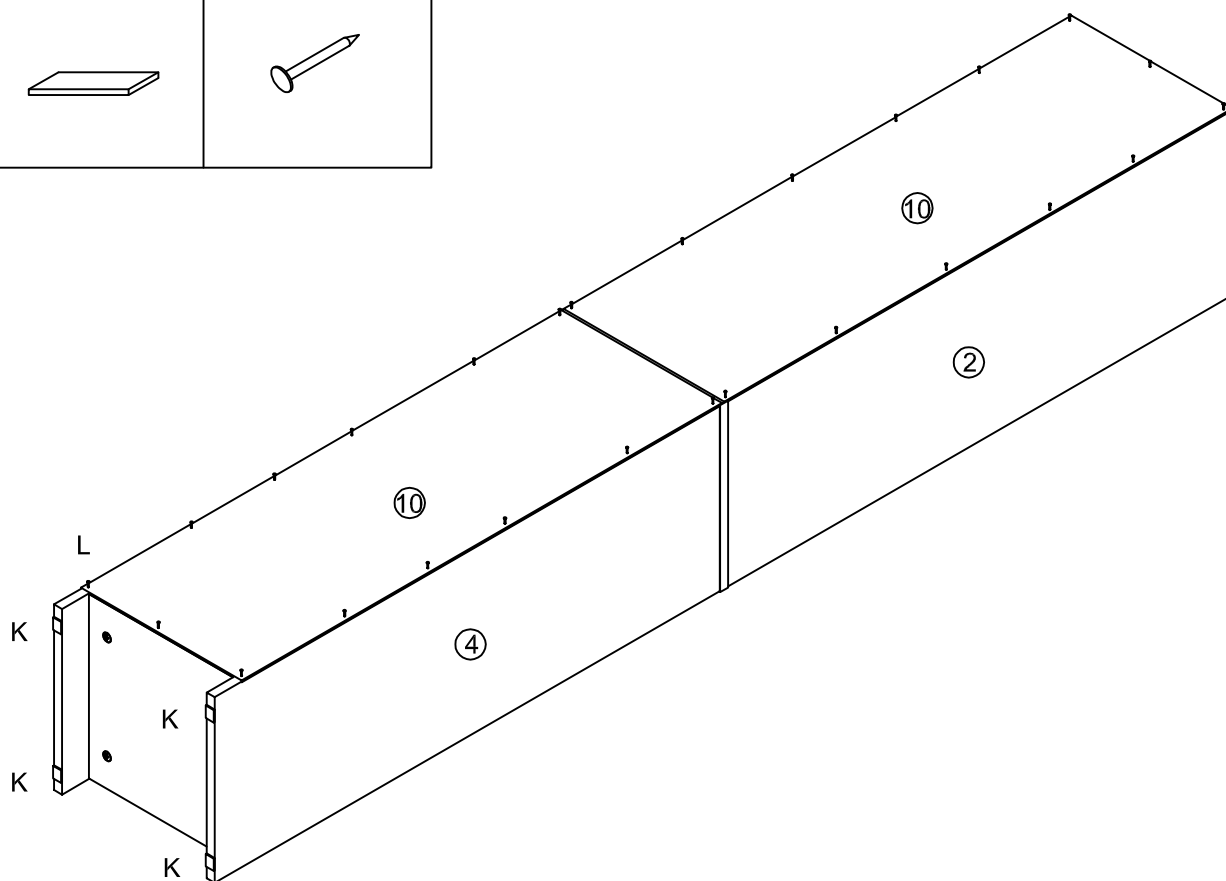

9

D*8




3.5*14 mm


F*4




H*2



I*4



3.5*18 mm


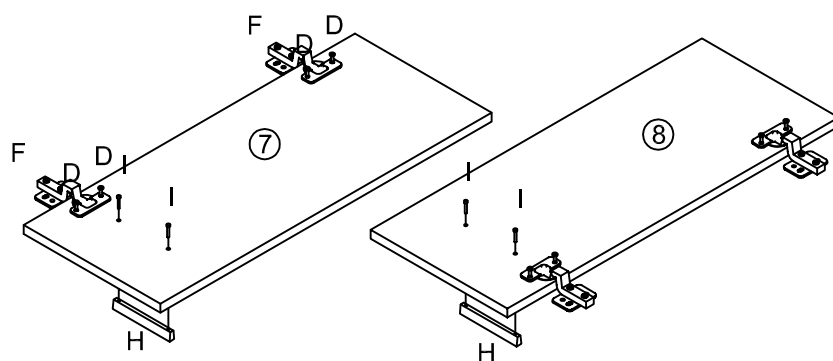


10

D*16




3.5*14 mm

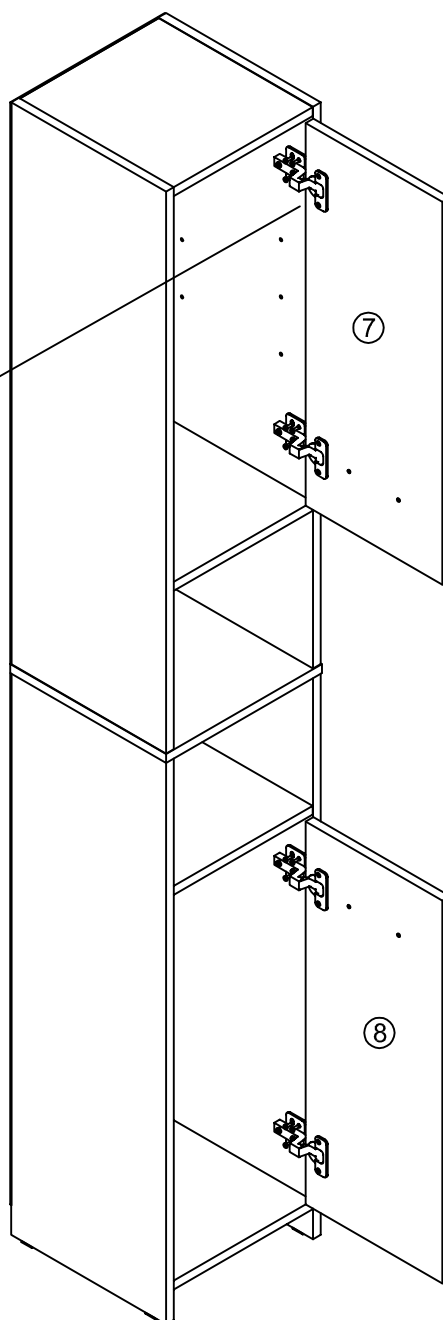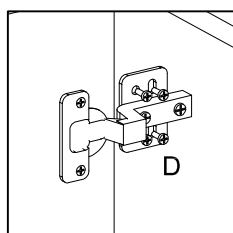

11

G*8

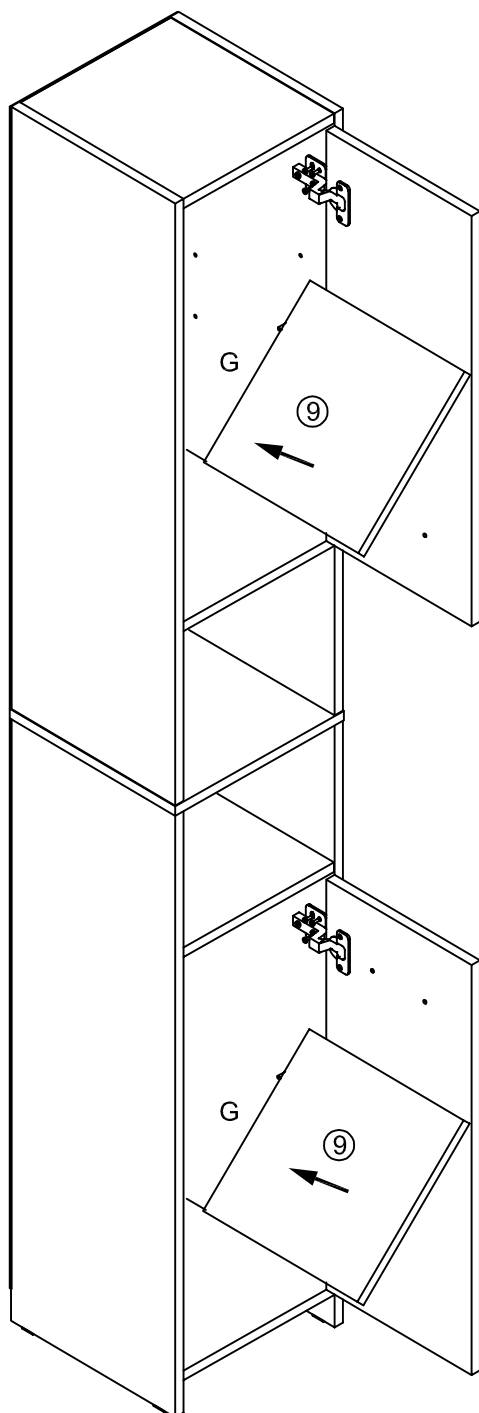

12

J*2

