

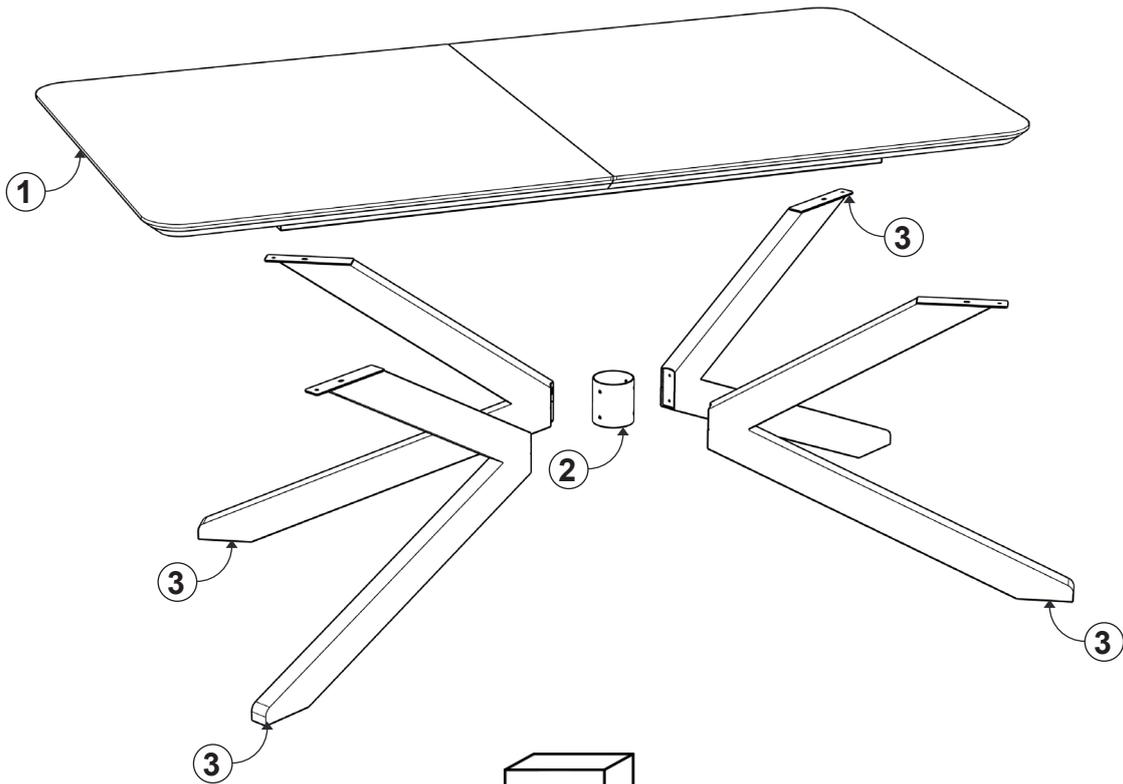
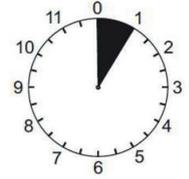
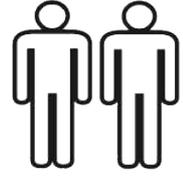
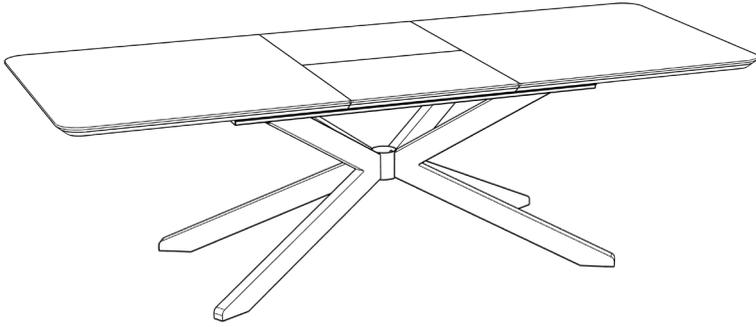





Ancona T

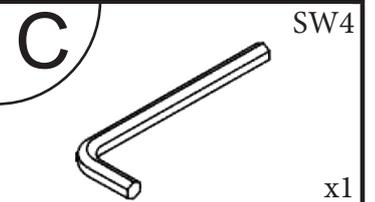






1 / 2	1	x1	1900x1030x100
1 / 2	2	x1	Ø89x100
2 / 2	3	x4	669x792x40

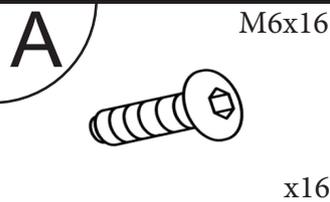








I.


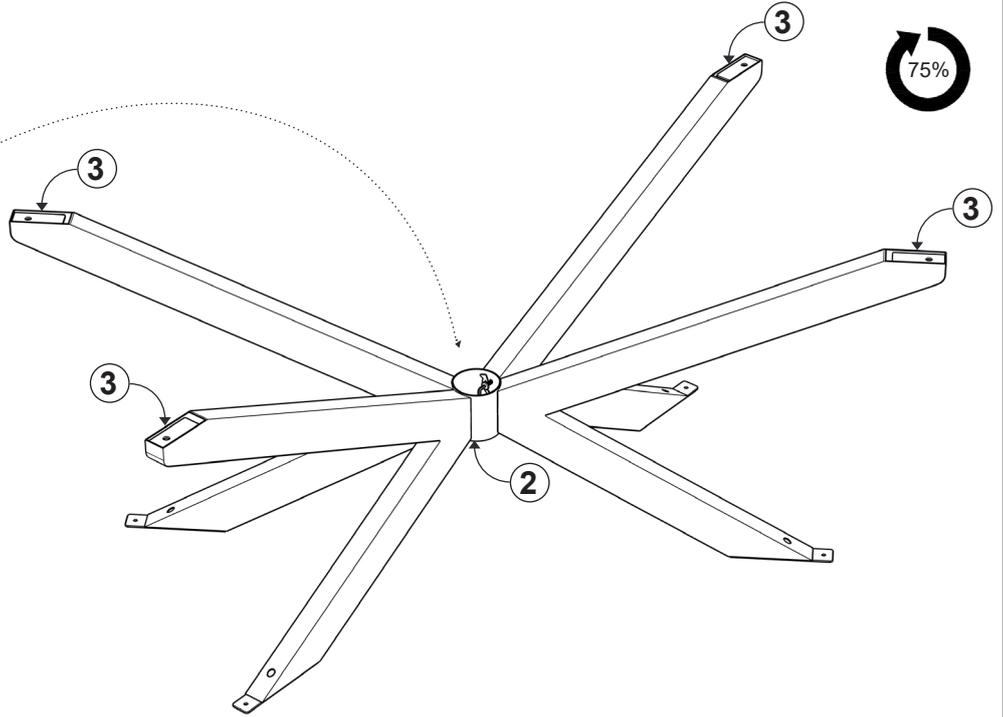
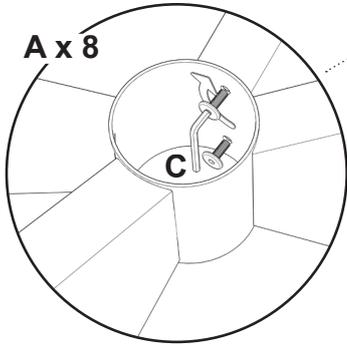
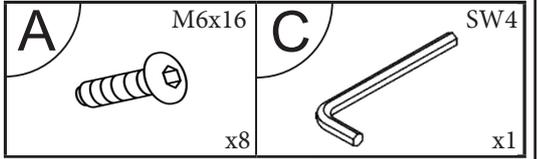


II.

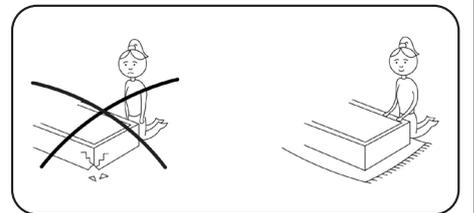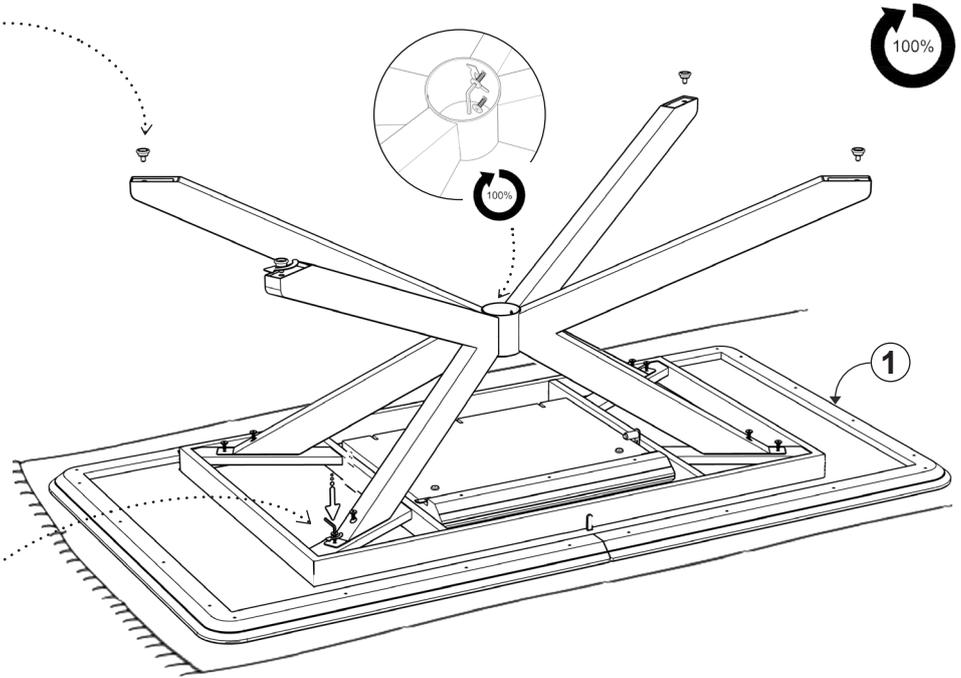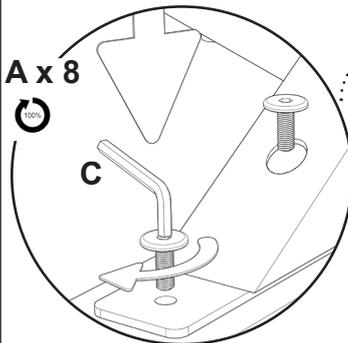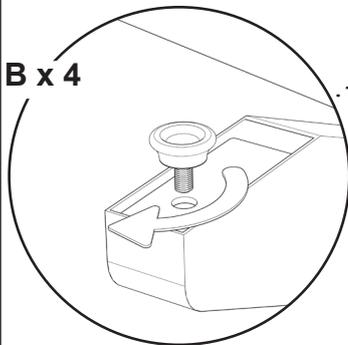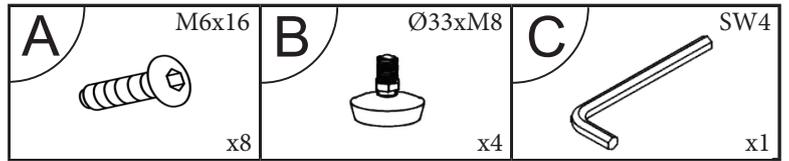

III.

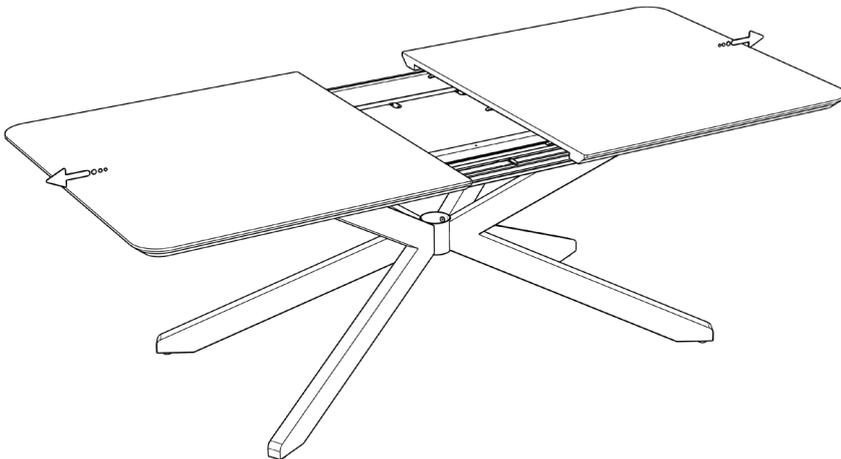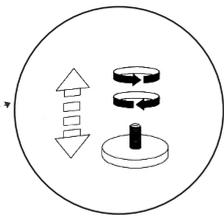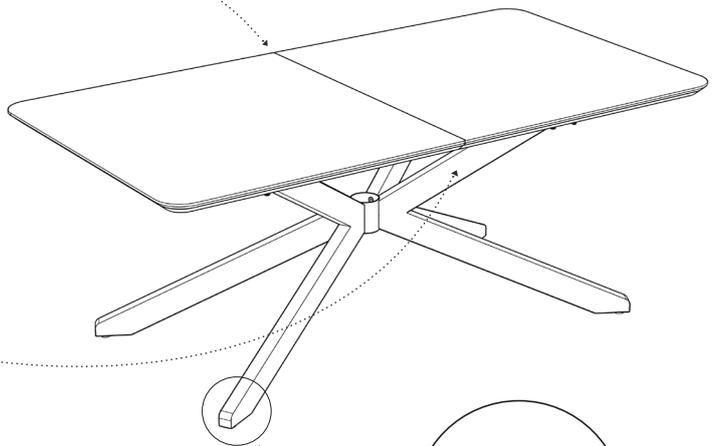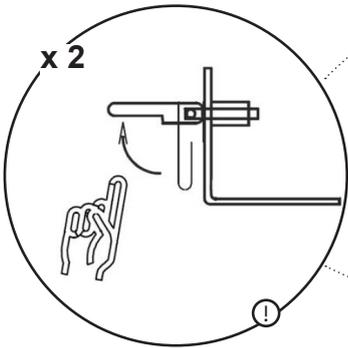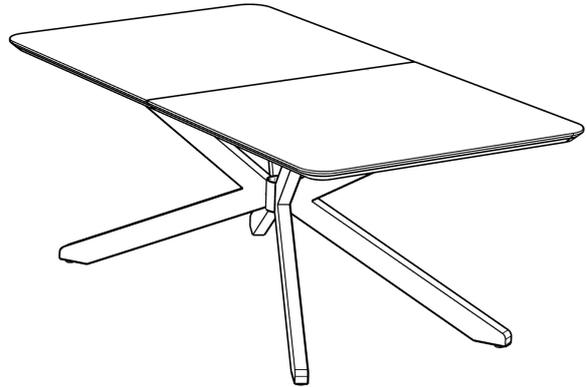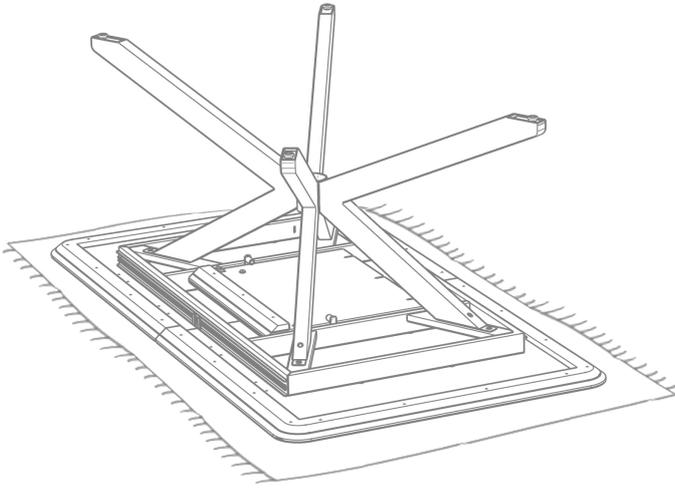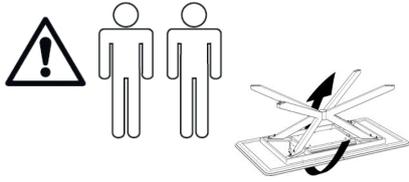

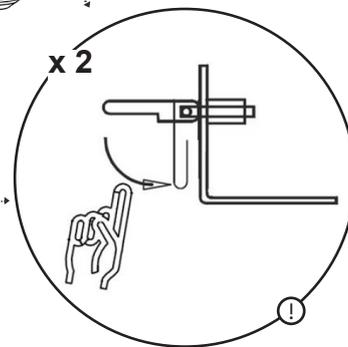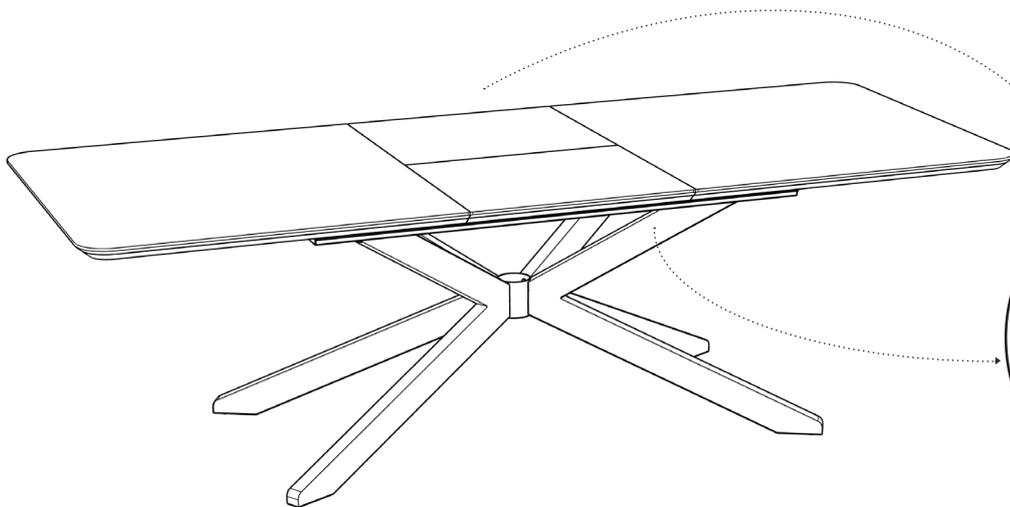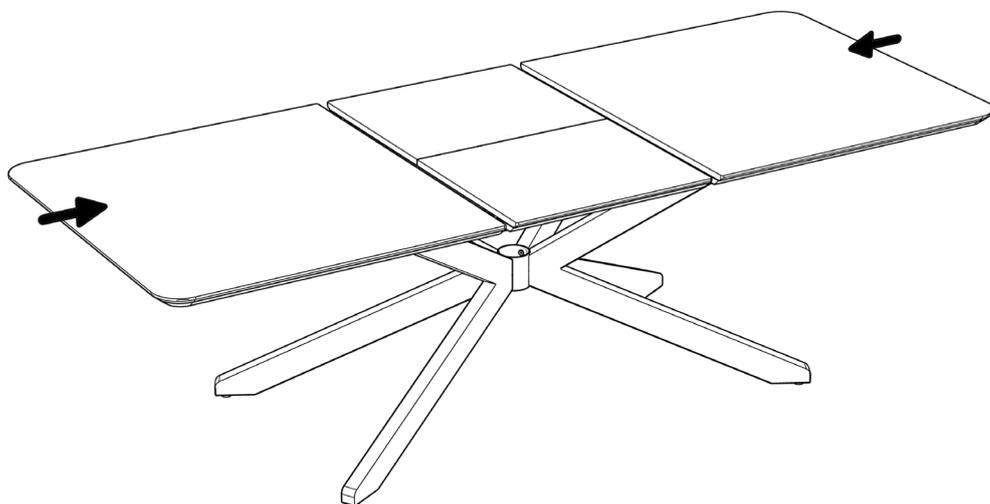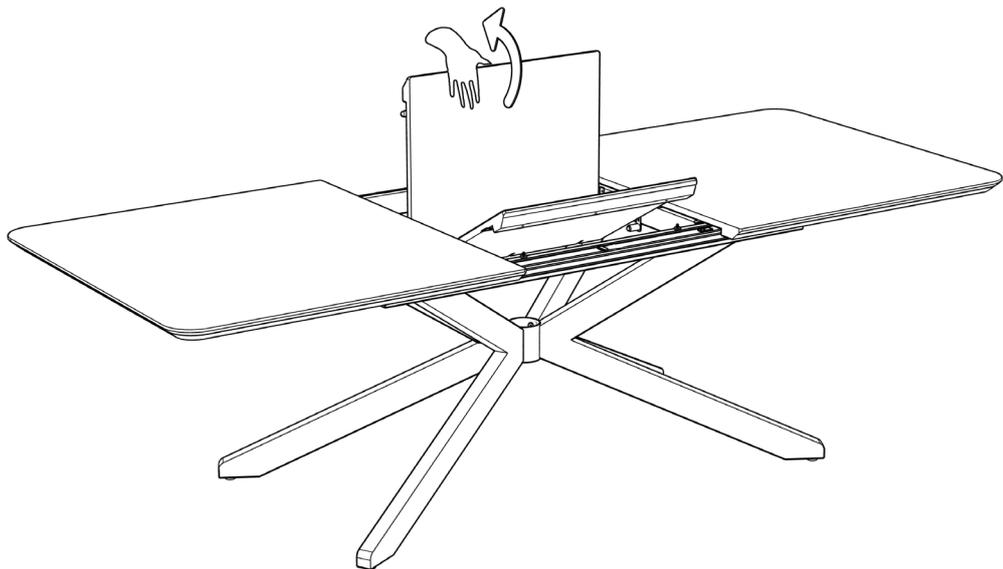

LE TRI + FACILE



Séparez les éléments avant de trier