
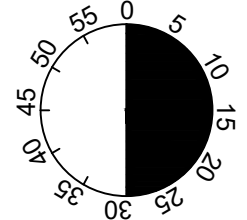
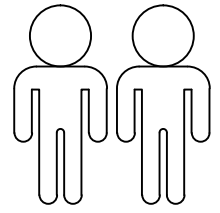





Inge 1

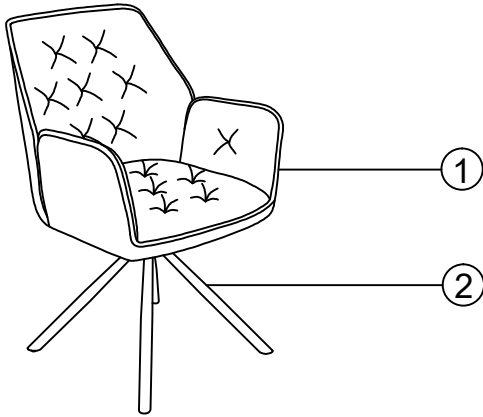


1

2


3

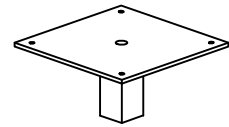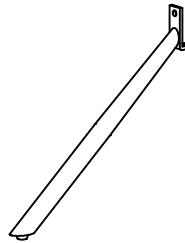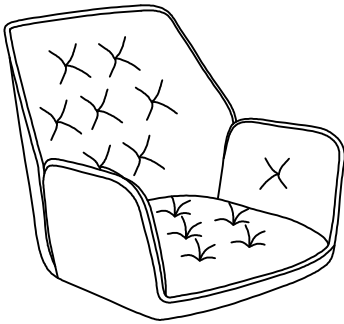

4

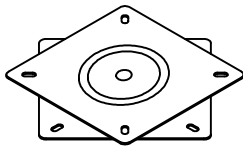

1	1x
2	4x
3	1x
4	1x




1/1

A	M6X10	B	M6X20	C	M8X16	D	M6	E	Ø18xØ6x1.5	F	4MM
	4x		8x		4x		4x		12x		1x
G	5MM	H	Ø17xØ6.5x4								
	1x		2x								


I.

1

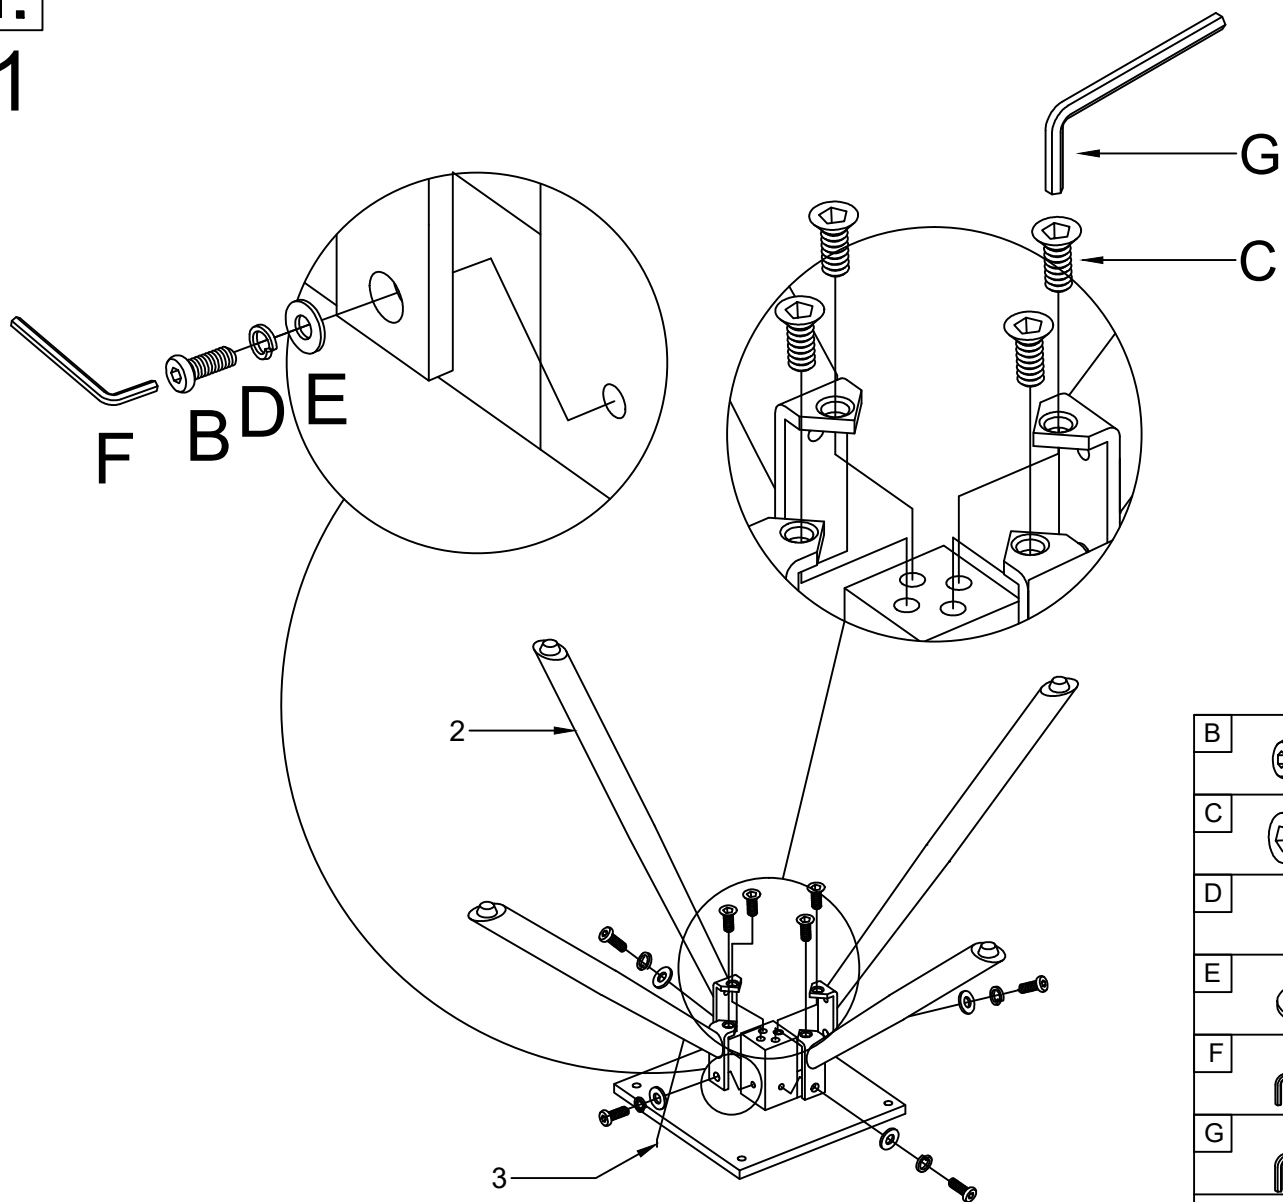

B		M6x20
		4x
C		M8x16
		4x
D		M6
		4x
E		Ø18xØ6x1.5
		4x
F		4MM
		1x
G		5MM
		1x
		


2

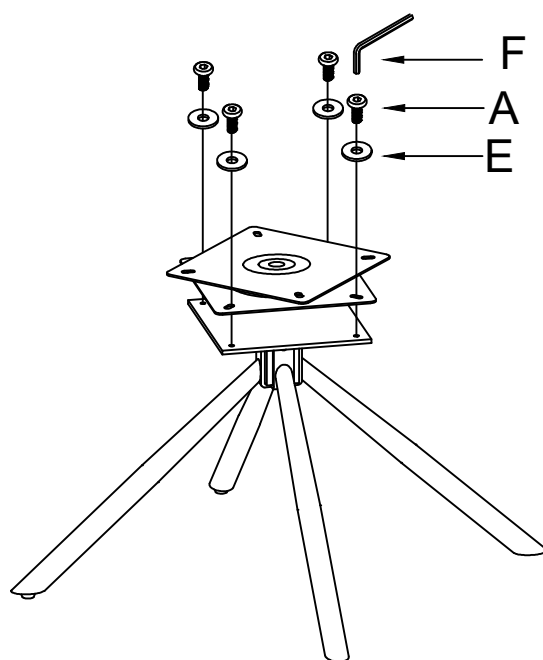

A		M6x10
		4x
E		Ø18xØ6x1.5
		4x
F		4MM
		1x
		


II.

3

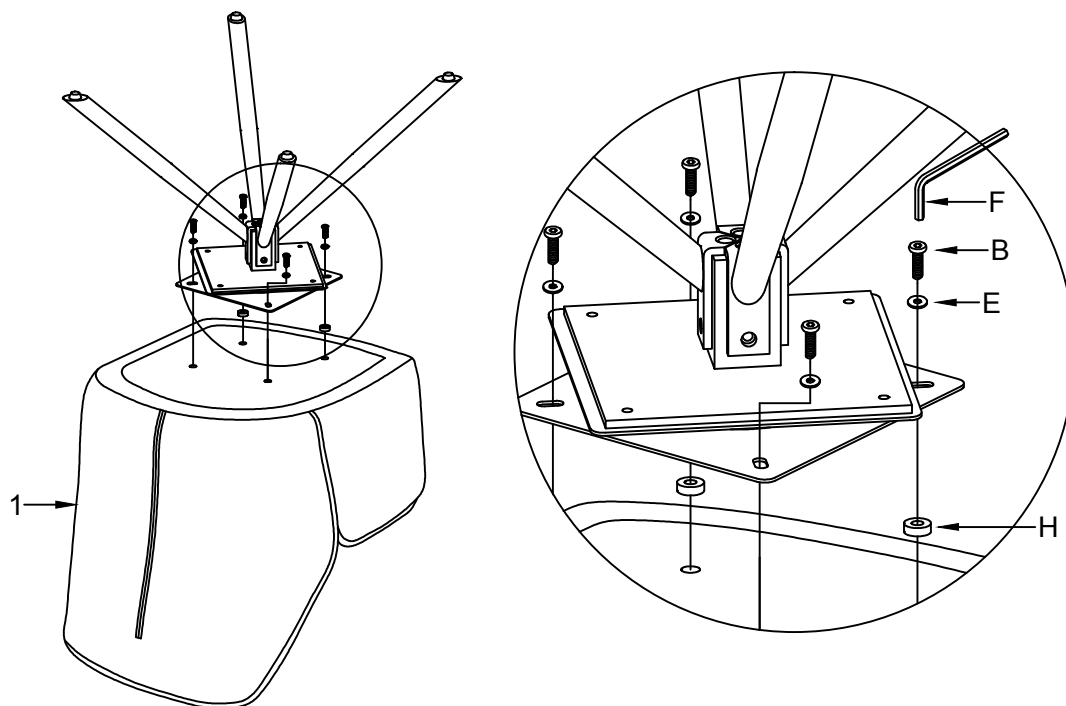

B	M6X20
	4x
E	Ø18xØ6x1.5
	4x
F	4MM
	1x
H	Ø17xØ6.5x4
	2x
75%	

4

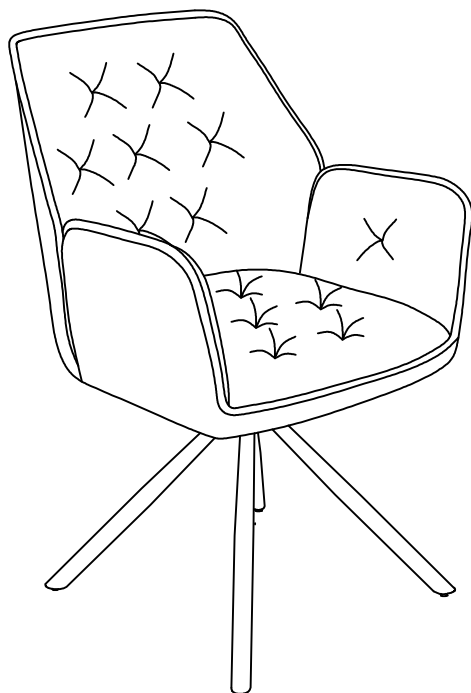

F	4MM
	1x
100%	



LE TRI
+ FACILE



Séparez les éléments avant de trier