


WESTPHALEN SK4

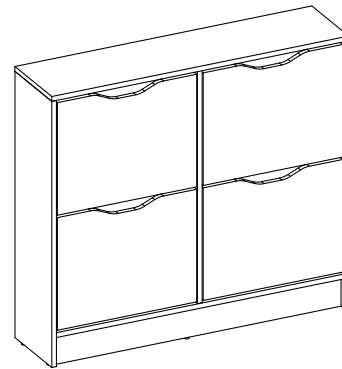

Montageanleitung / Notice de Montage / Assembling Instruction

ART. NR: 19 040 020
EAN: 40 10 340 19 04 28

ORDER : -----

DE: Wichtige Montage – Tipps hier zum herunterladen:

EN: Important assembling suggestions download:

FR: Conseils de montage importants à télécharger ici :

BG: Важни съвети за сглобяване, които да изтеглите от тук:

CZ: Důležité montážní typy ke stažení zde:

EE: Olulised kokkupanemisetpanekute allalaadimine:

DK: Viktige montage tips til at downloade:

ES: Descarga de sugerencias de montaje importantes:

FI: Tärkeät kokoamisedotukset ladataan:

GR: Λήψη σημαντικών προτάσεων συναρμολόγησης:

HR: Preuzimanje važnih prijedloga za sastavljanje:

HU: Fontos összeszerelési javaslatok letöltése:

IT: Download importanti suggerimenti di montaggio:

LT: Svarbūs surinkimo pasiūlymai atsisiųsti:

LU: Wichtig Versammlungsvorschläge herunterladen:

LV: Svarīgu montāžas ieteikumu lejupielāde:

NL: Belangrijke montagesuggesties downloaden:

NO: Viktige nedlastingsforslag:

PL: Pobieranie ważnych sugestii montażowych:

PT: Download de sugestões importantes de montagem:

RO: Descărcare de sugestii importante de asamblare:

RS: Преузимање важних предлога за састављање:

RU: Важные предложения по сборке скачать:

SL: Prenos pomembnih predlogov za sestavljanje:

SE: Viktiga hämtningsförslag:

SK: Stiahnutie dôležitých návrhov na zostavenie:

TR: Önemli montaj önerileri indir:

ARB: المهمة التجميع اقتراحات تنزيل:








Z. A. du Niederwald
F-67470 Seltz
www.interlink-sas.com



WESTPHALEN SK4

1	Ø 8x35	16x
2		10x
3		10x
4		12x
5	3,5x16 	26x
6		1x
7		4x
8		2x
9	3,5x13 	24x
10		5x
11	6,3x20 	8x
12		4x
13		8x
14		8x
15		8x

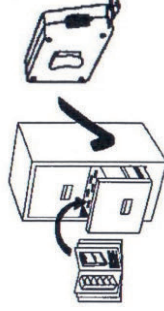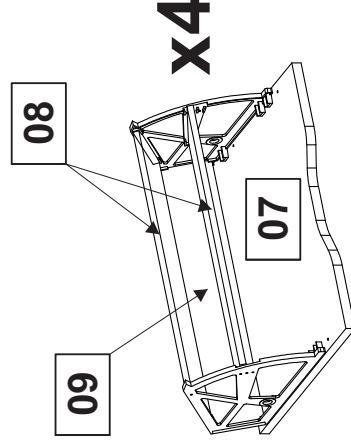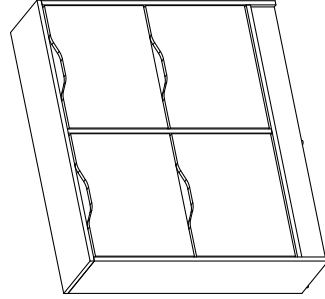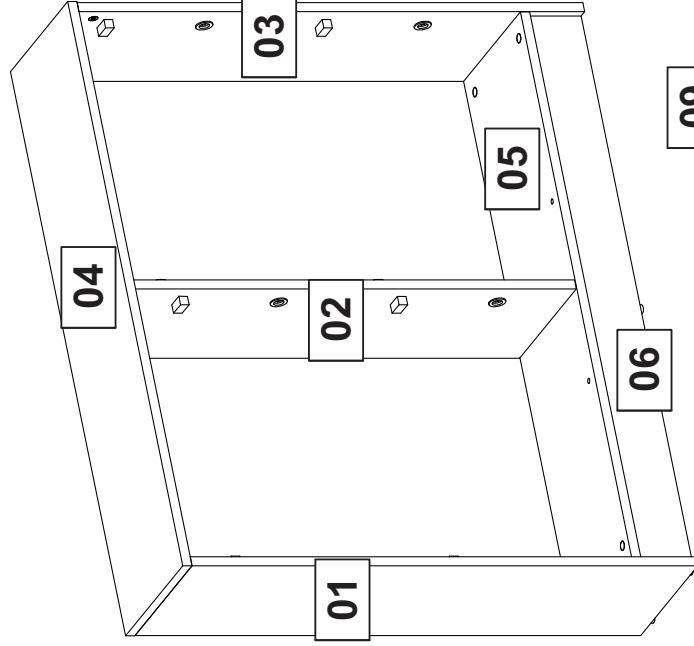

60 min.

2-16



Inter Link SAS

Z. A. du Niederwald
F-67470 Seltz
Frankreich/France

International:

Téléfon: (0033) 3 88 05 55 50
Téléfax: (0033) 3 88 05 55 68

National:


Téléphone 03 88 05 55 59
Télécopie 03 88 05 55 79

e-mail:

service@interlink-sa.com


www.interlink-sa.com

WESTPHALEN SK4

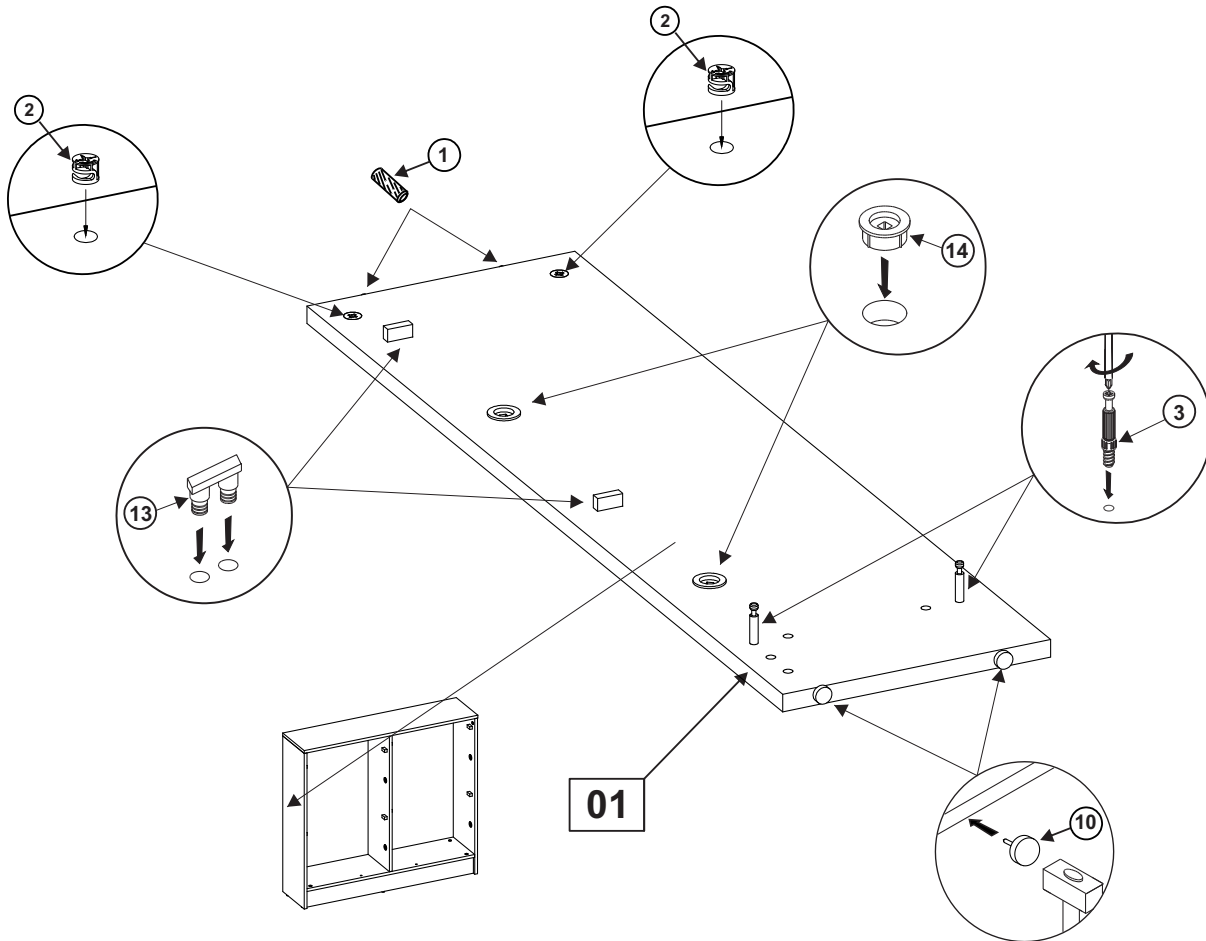


3-16

WESTPHALEN SK4

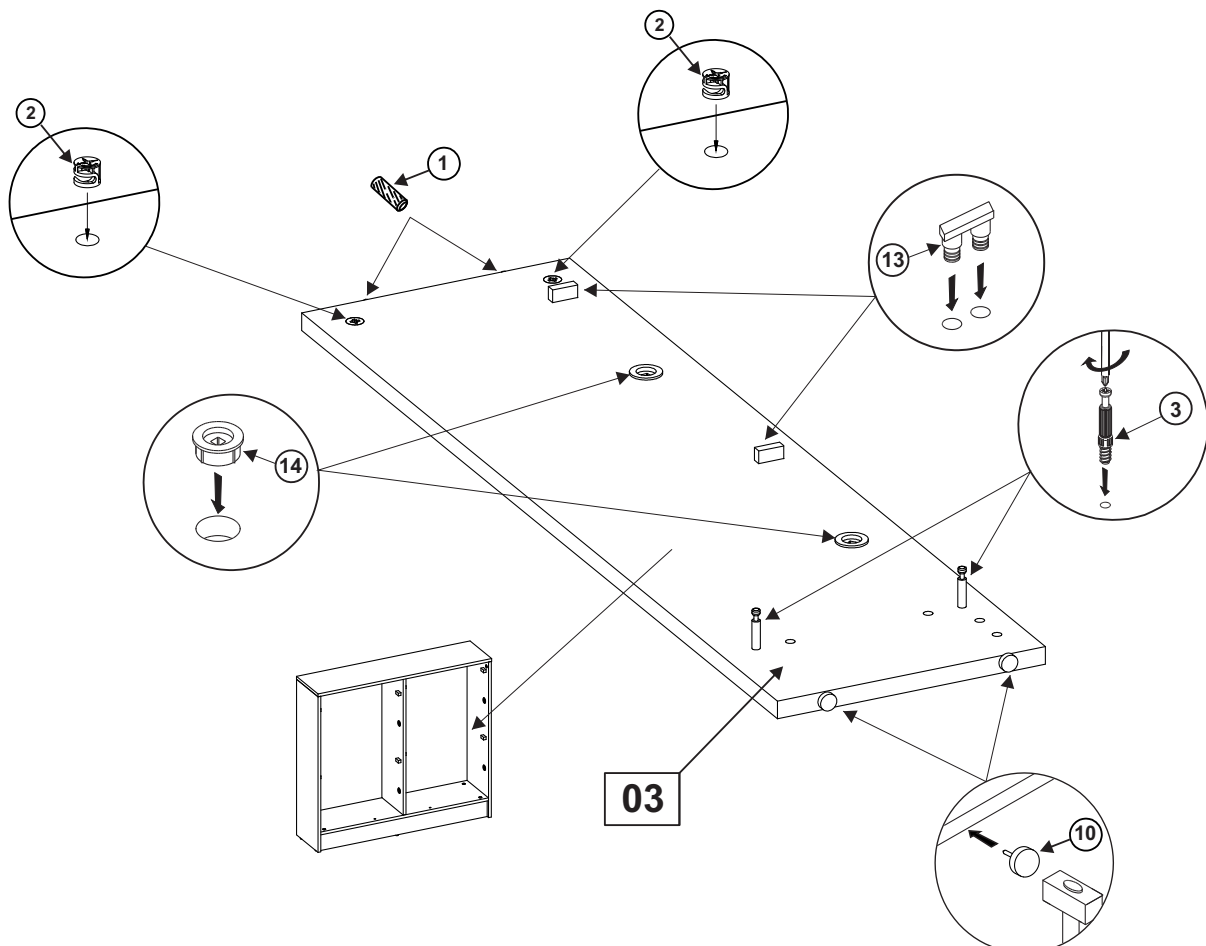


4-16

WESTPHALEN SK4

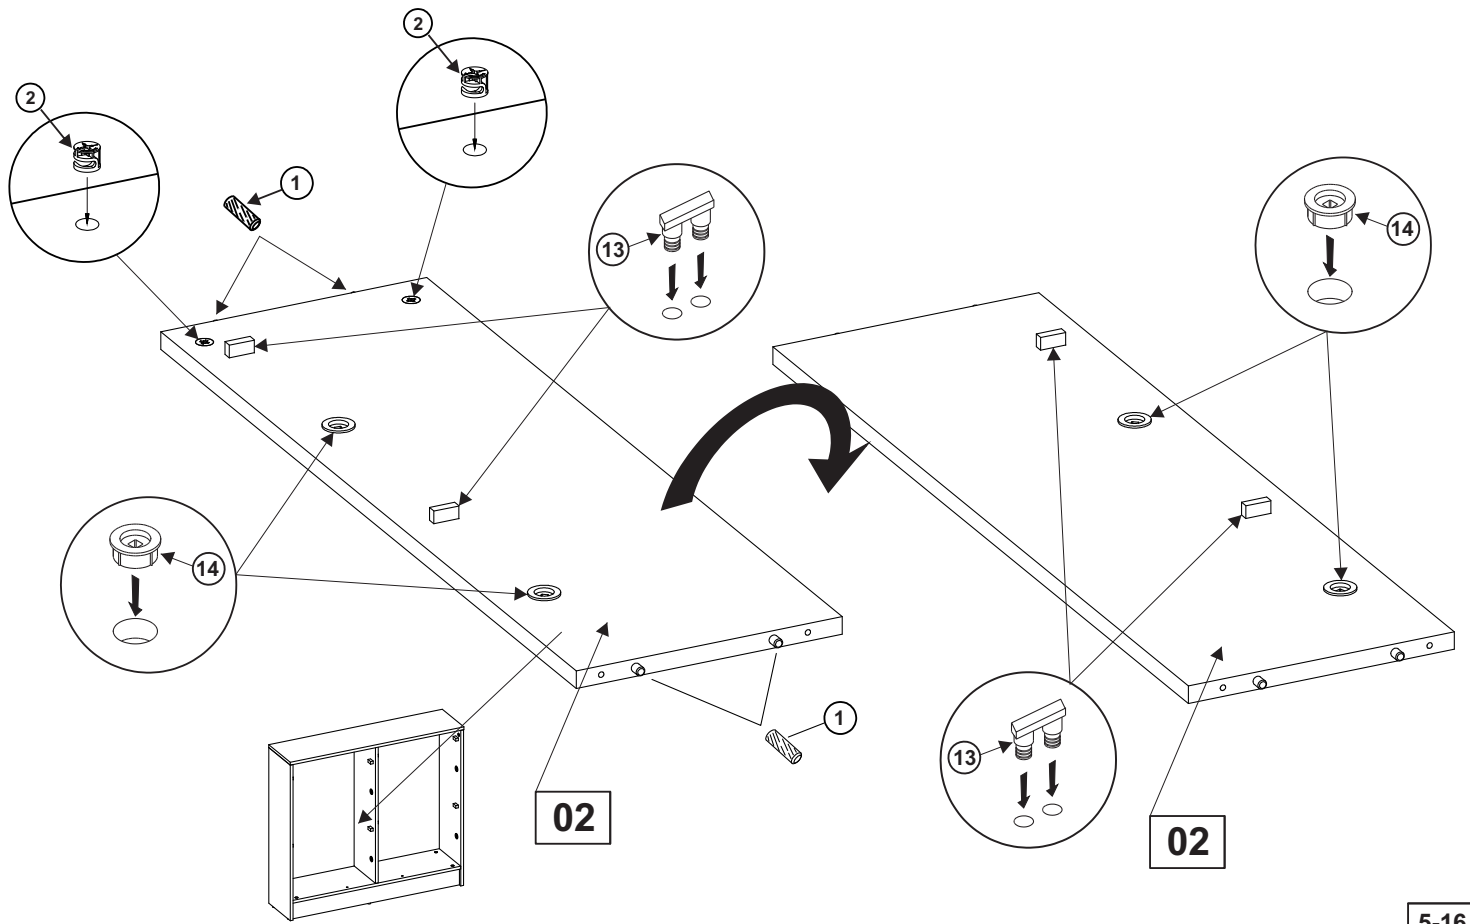


5-16

WESTPHALEN SK4

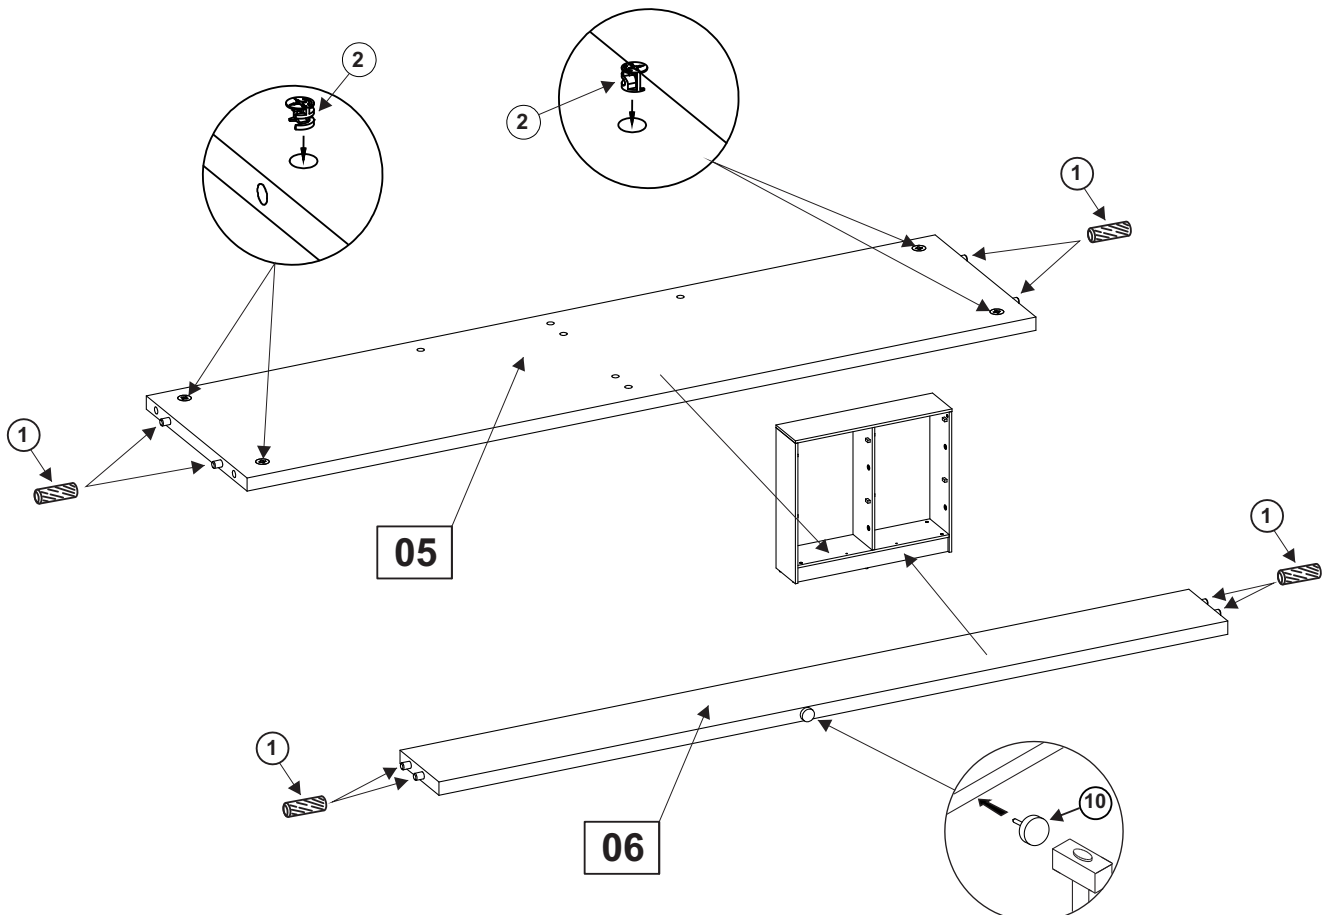


6-16

WESTPHALEN SK4

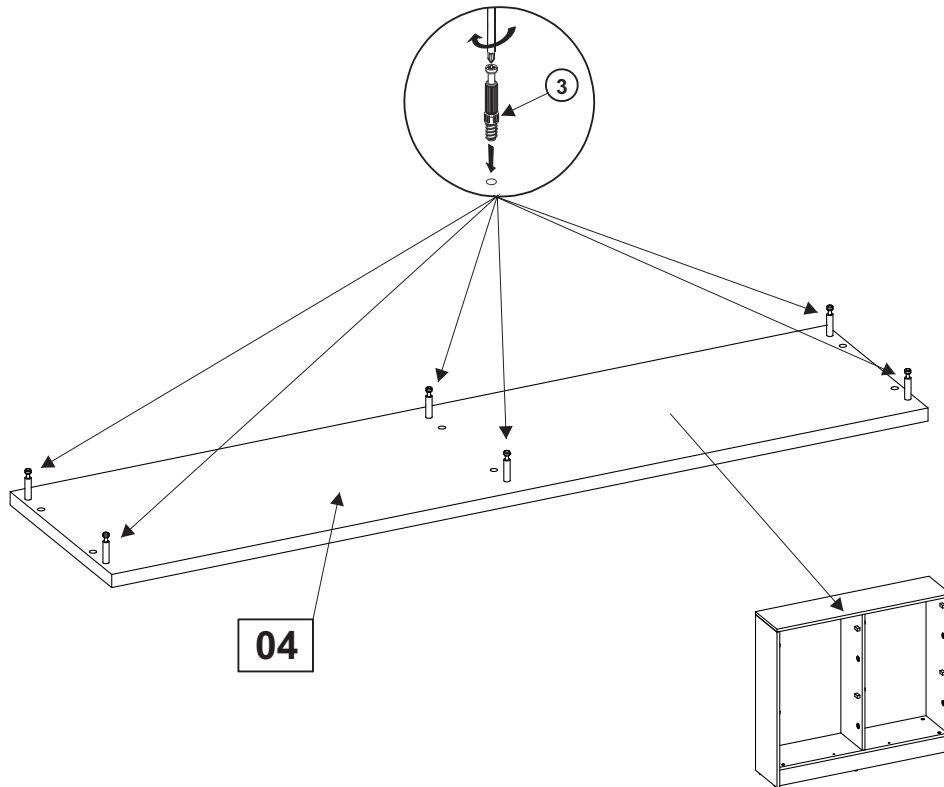


7-16

WESTPHALEN SK4

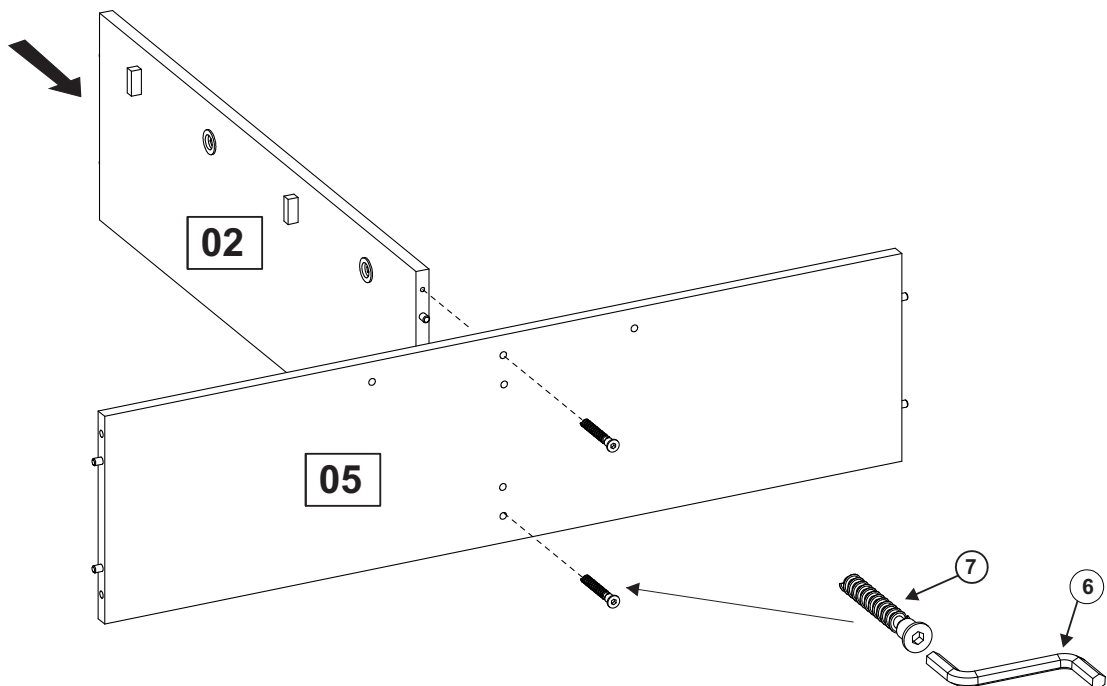


8-16

WESTPHALEN SK4

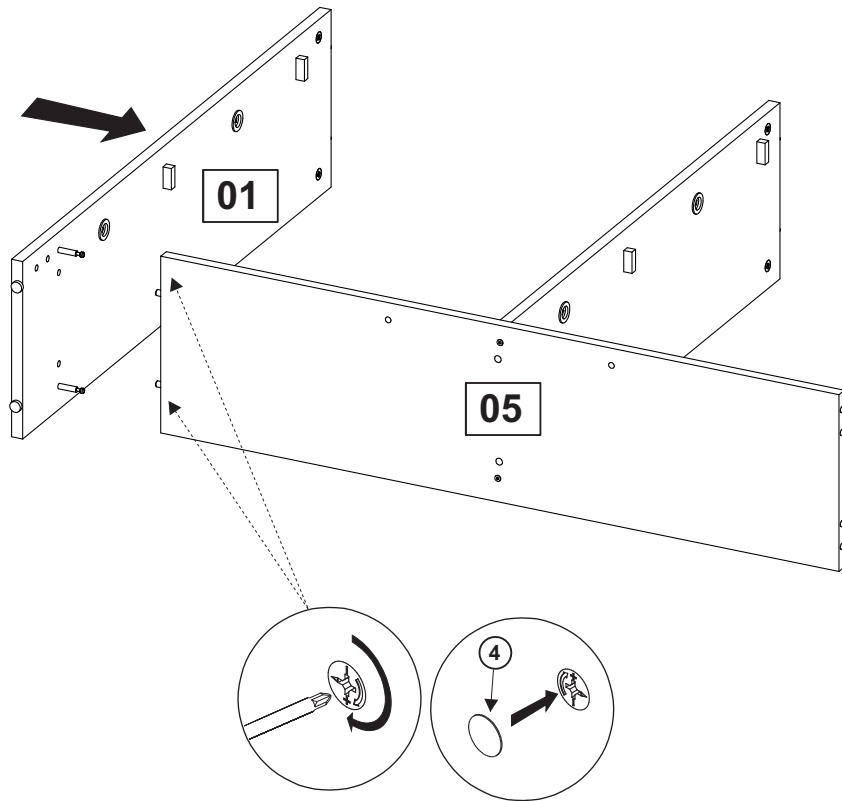


9-16

WESTPHALEN SK4

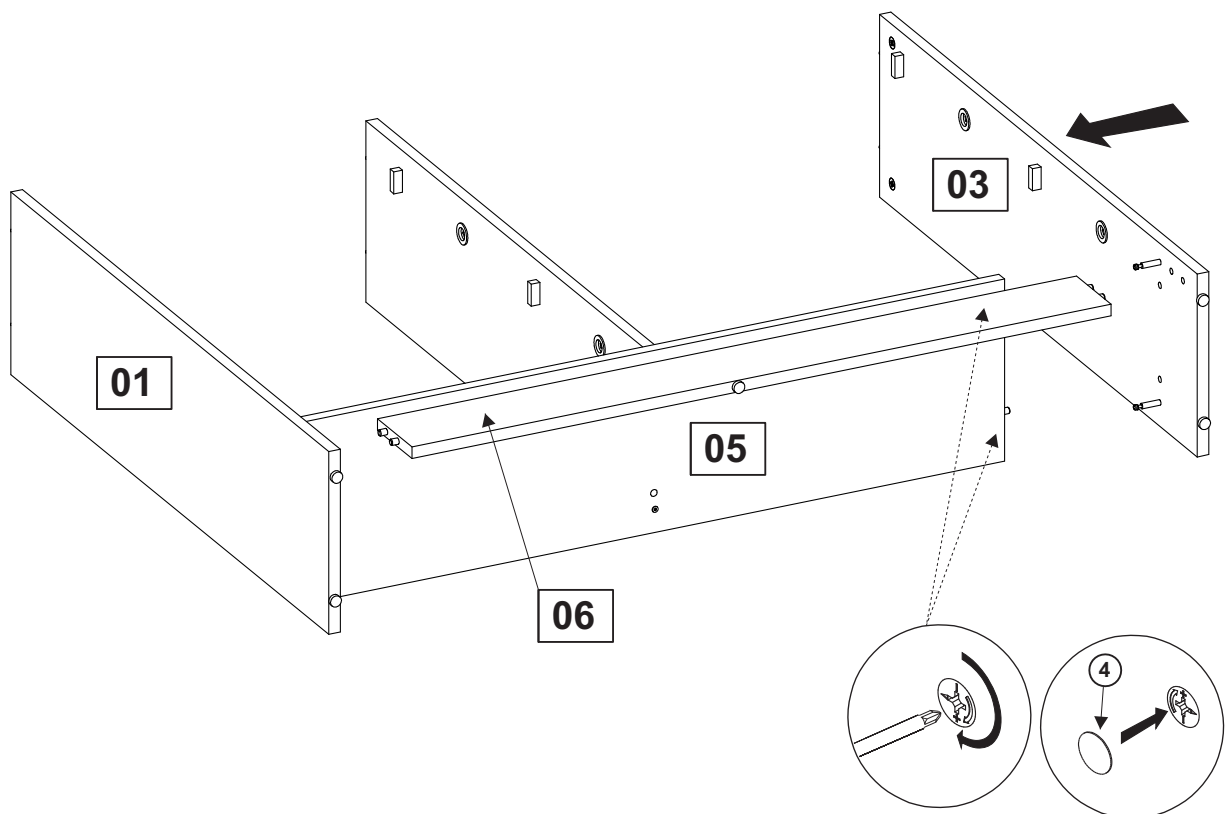


10-16

WESTPHALEN SK4

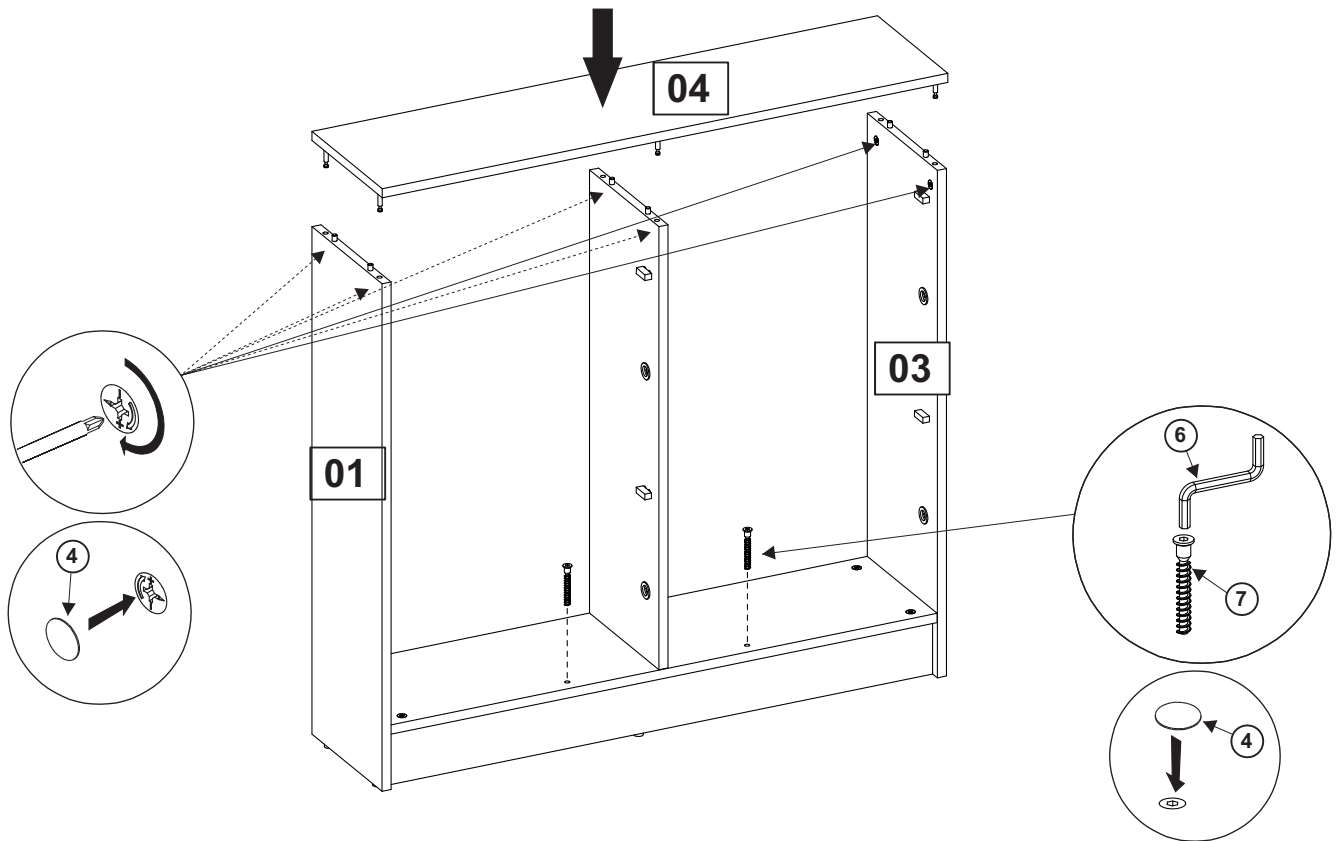

11-16


WESTPHALEN SK4

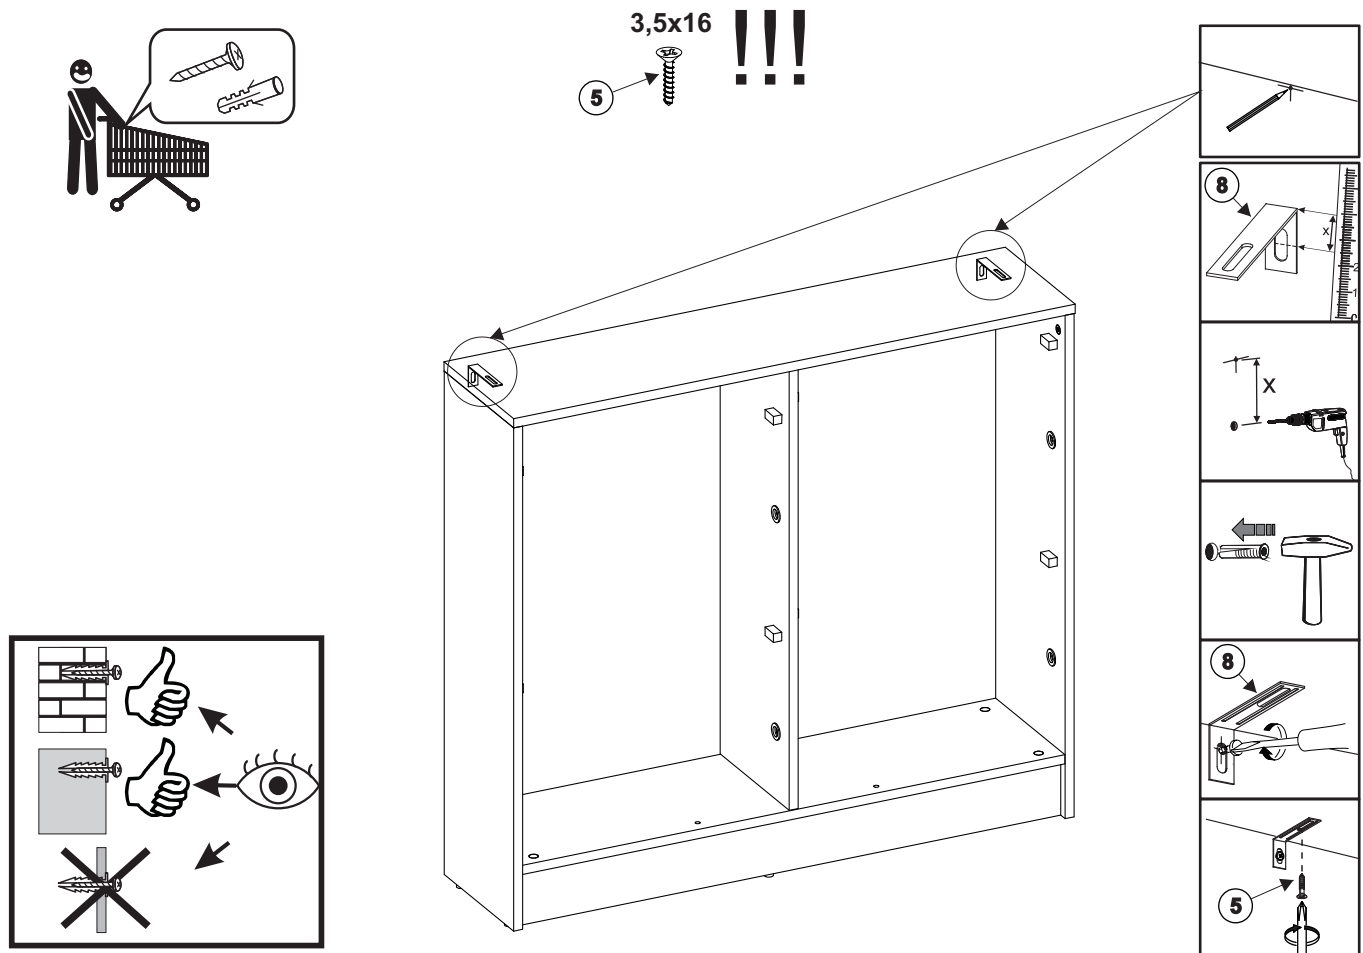

12-16

WESTPHALEN SK4


3,5x16 !!!
5

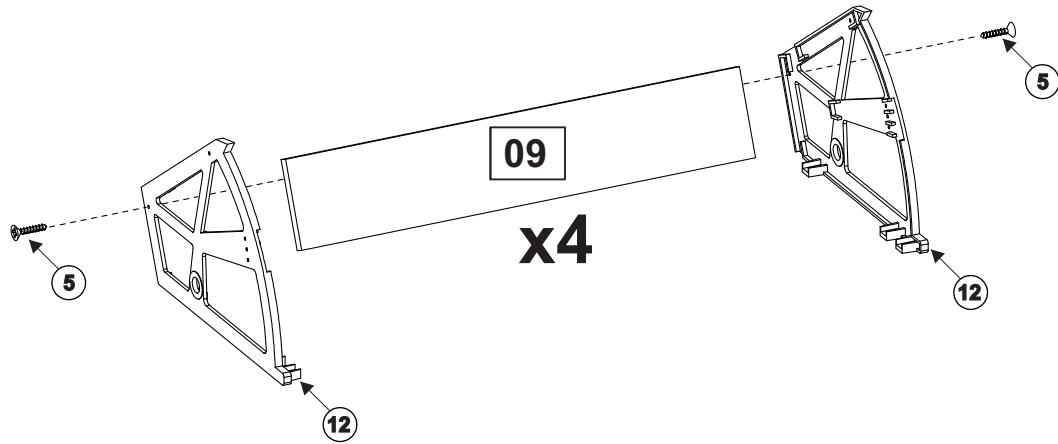

13-16


WESTPHALEN SK4

3,5x13 !!!
9

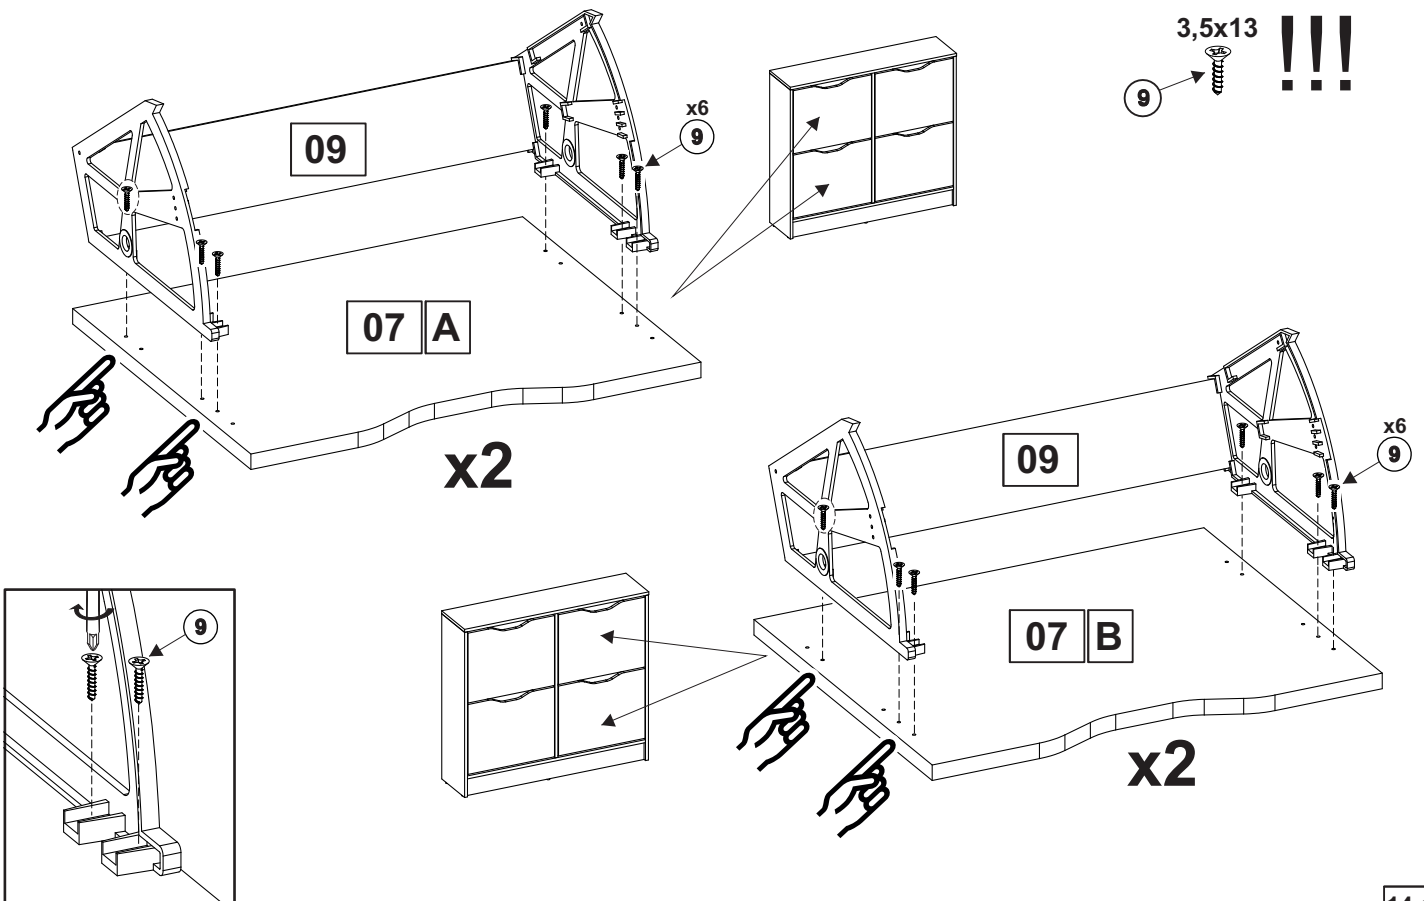


14-16

WESTPHALEN SK4

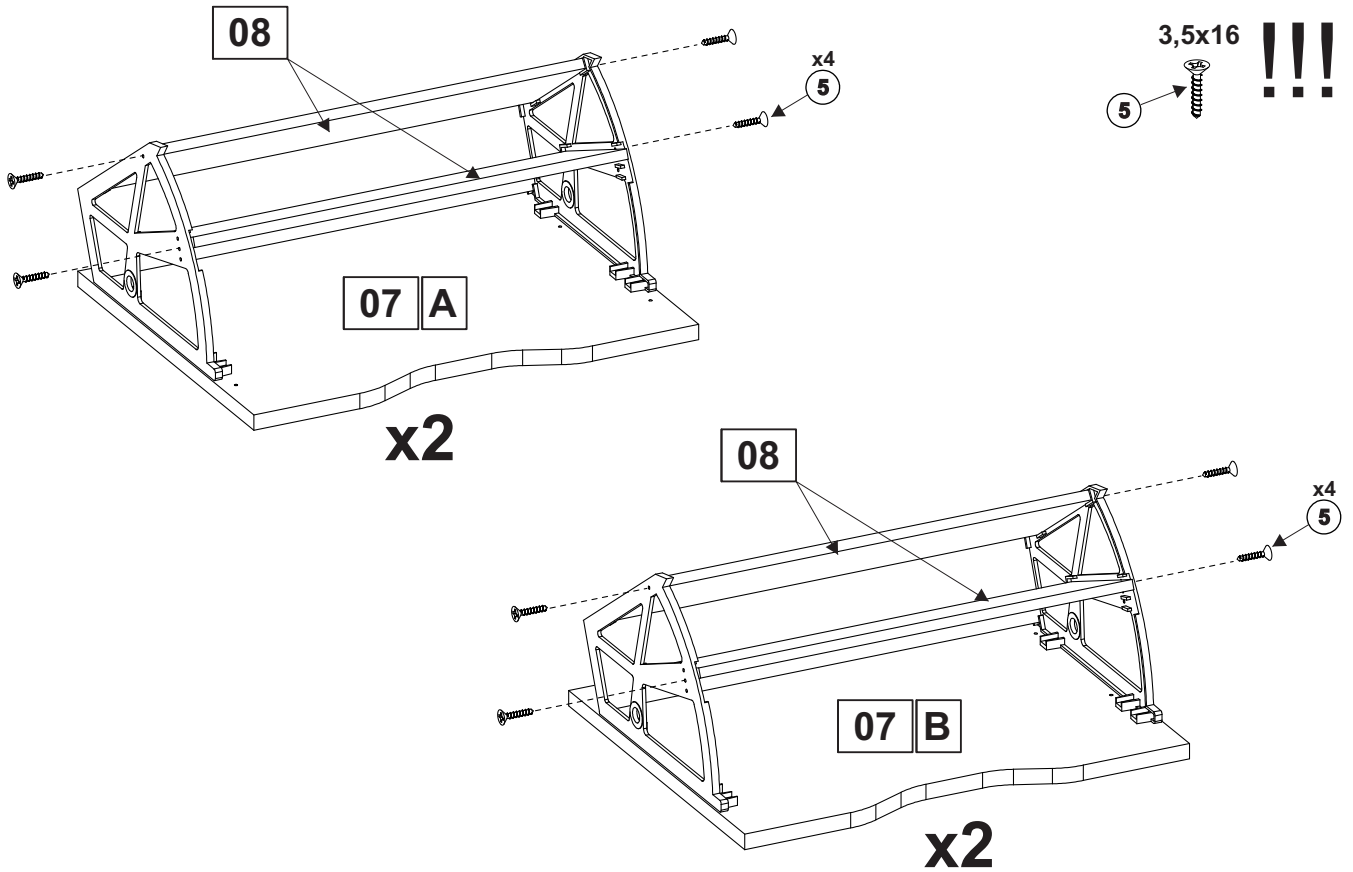

15-16

WESTPHALEN SK4

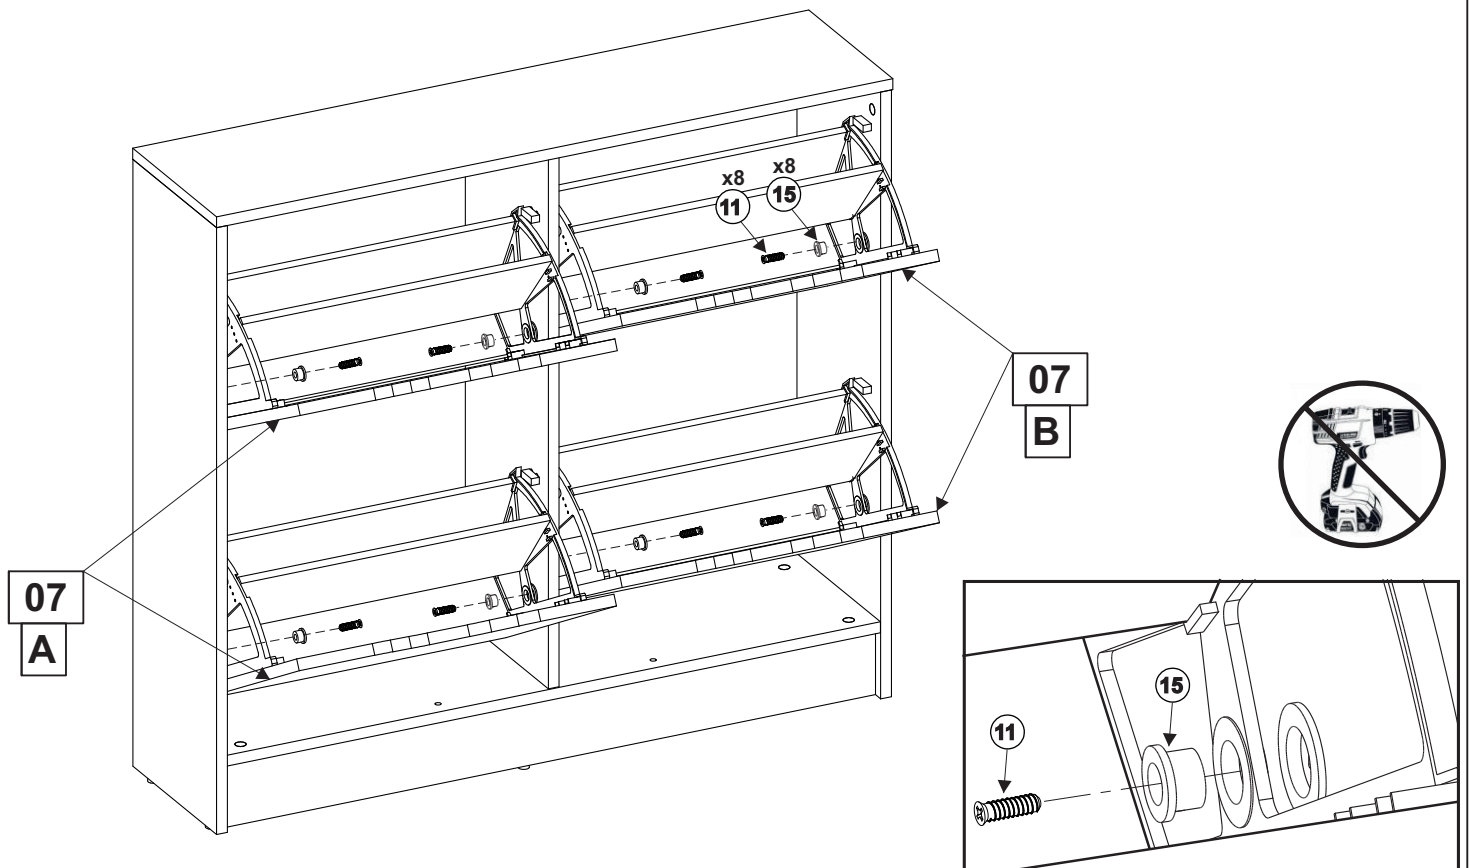

16-16