



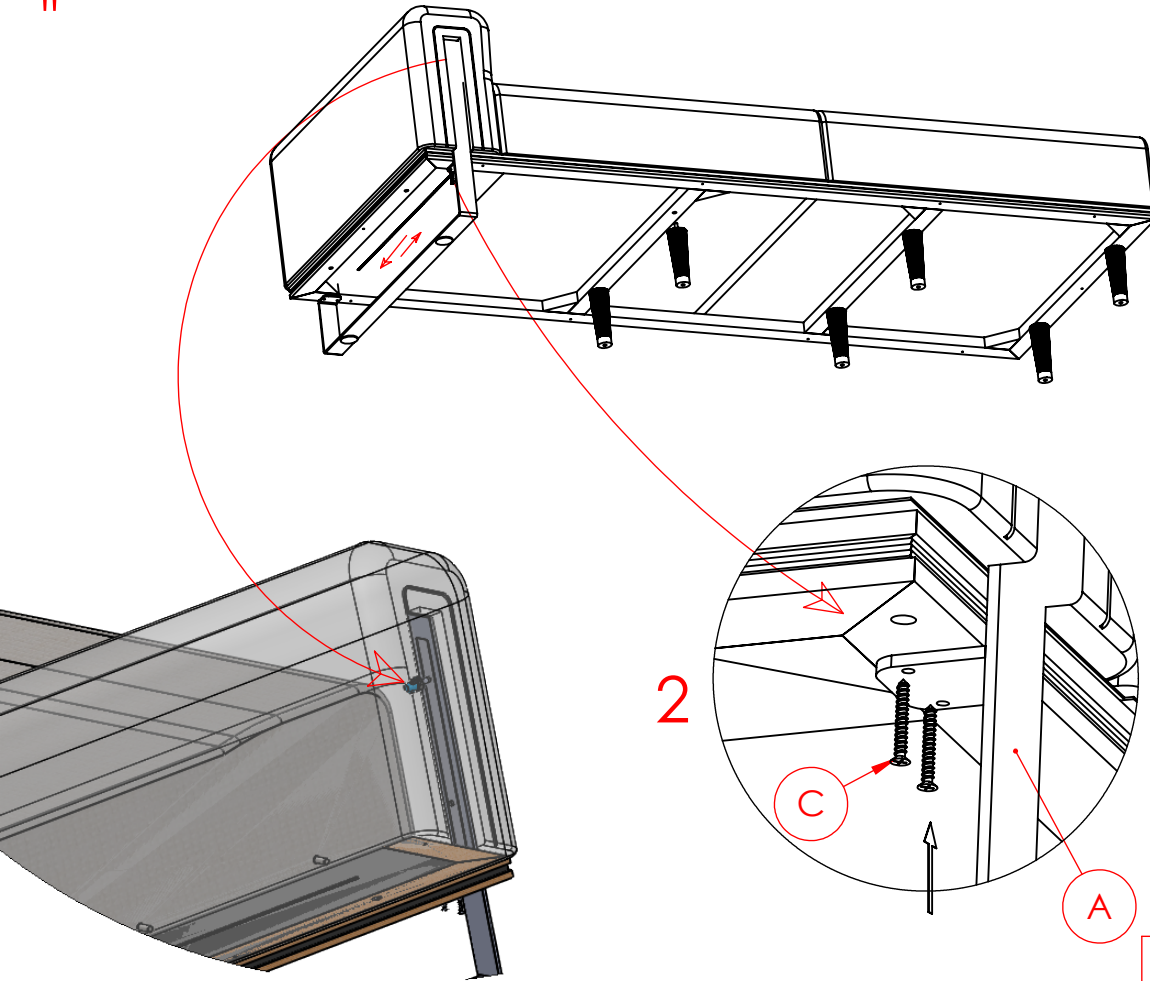

2

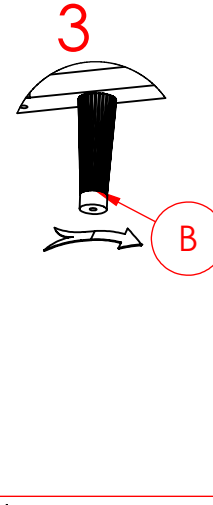


A*1


B*6

C*4


Eckteil-Köşe parçası-Corner piece

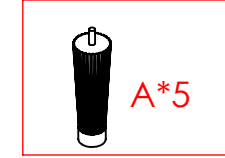


A*5

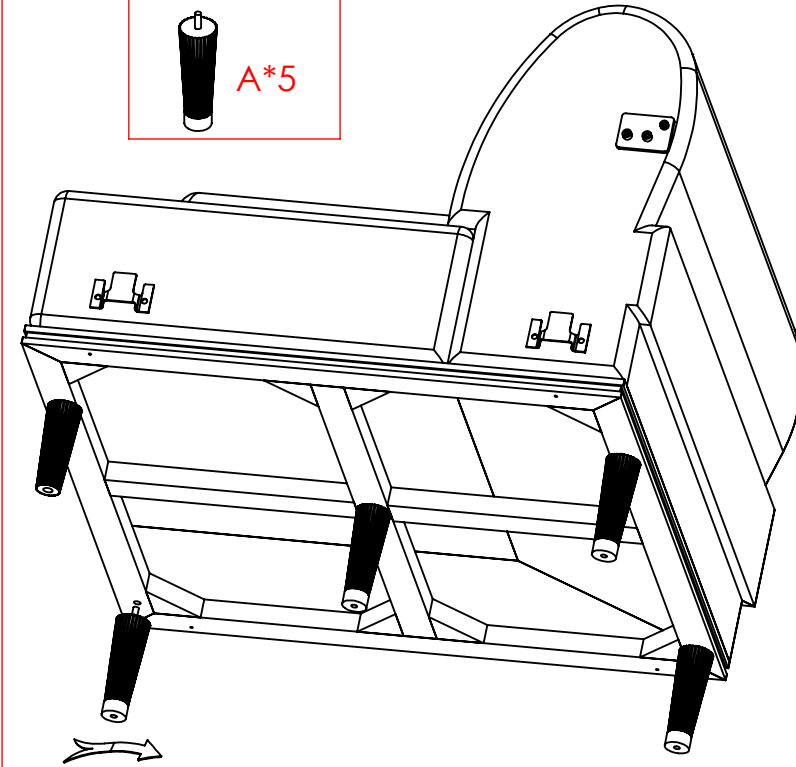

2 Sitzler

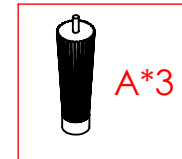

A*3

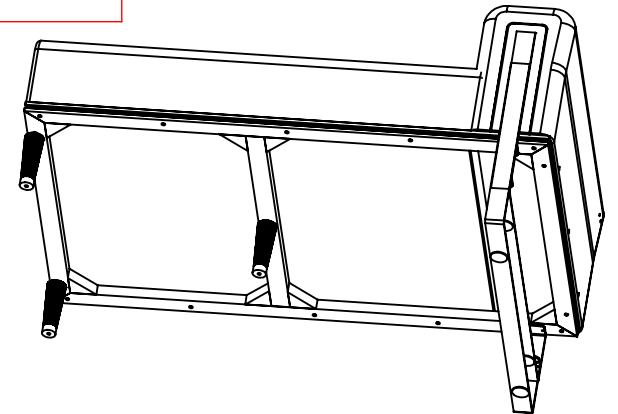

Achtung!

Es ist drauf zu achten, dass bei der Montage der Armlehnen Schutzhandschuhe verwendet werden.

Dikkat!

Koltuk kolu içindeki yapılacak montaj işlemlerinde koruyucu eldiven kullanınız.

Attention!

Care will be taken to use protective gloves during assembly operations inside the seat arm.

MONTAGEANLEITUNG-MONTAJ-MOUNTING- 5106595/00

