




WESTMANN

MONTAGEANLEITUNG

Hochbeetabdeckung

WMG3002-6







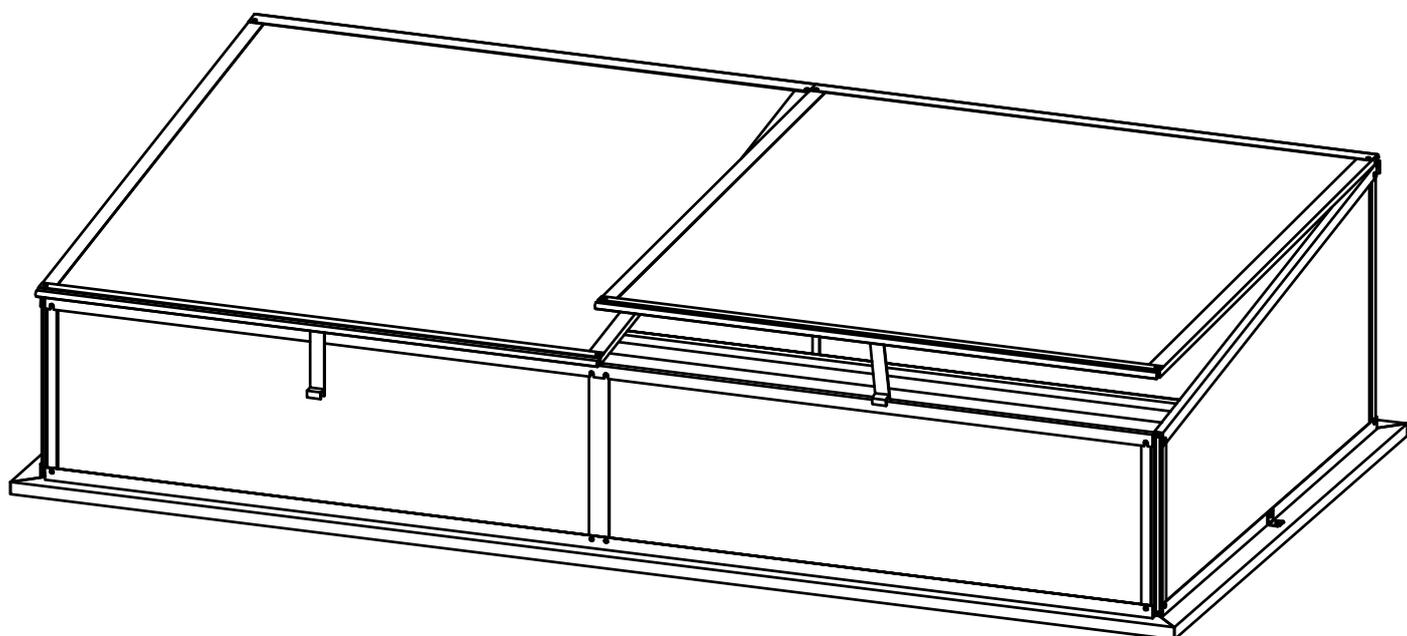


**BEI FRAGEN, KONTAKTIEREN SIE
UNSEREN KUNDENSERVICE:**

50NRTH GmbH
Straßburgstraße 14-16
D-54516 Wittlich


service@50NRTH.com
+49 (0) 6571 95117-0

BAUTEILE:


Nh-F1		1618mm	x2	Nh-D11		832mm	x4
Nh-F2		829mm	x2	Nh-A12		20mm	x2
Nh-F5		1618mm	x1	Nh-22		20mm	x2
Nh-A3		255mm	x2	B13		M5x6	x32
Nh-B18		375mm	x2	B13a		ST4x10	x2
Nh-A4		255mm	x1	B21		M3.5x6	x2
Nh-A14		375mm	x1	Nh-G15		808x264 mm	x2
Nh-K6		1638mm	x1	Nh-G15a		808x384 mm	x2
Nh-D7		839mm	x1	Nh-D16		828x386 mm	x1
Nh-D8		839mm	x1	Nh-D16a		828x386 mm	x1
Nh-F9		820mm	x2	Nh-F17		791x840 mm	x2
Nh-F10		820mm	x2				

MONTAGEANLEITUNG:


1

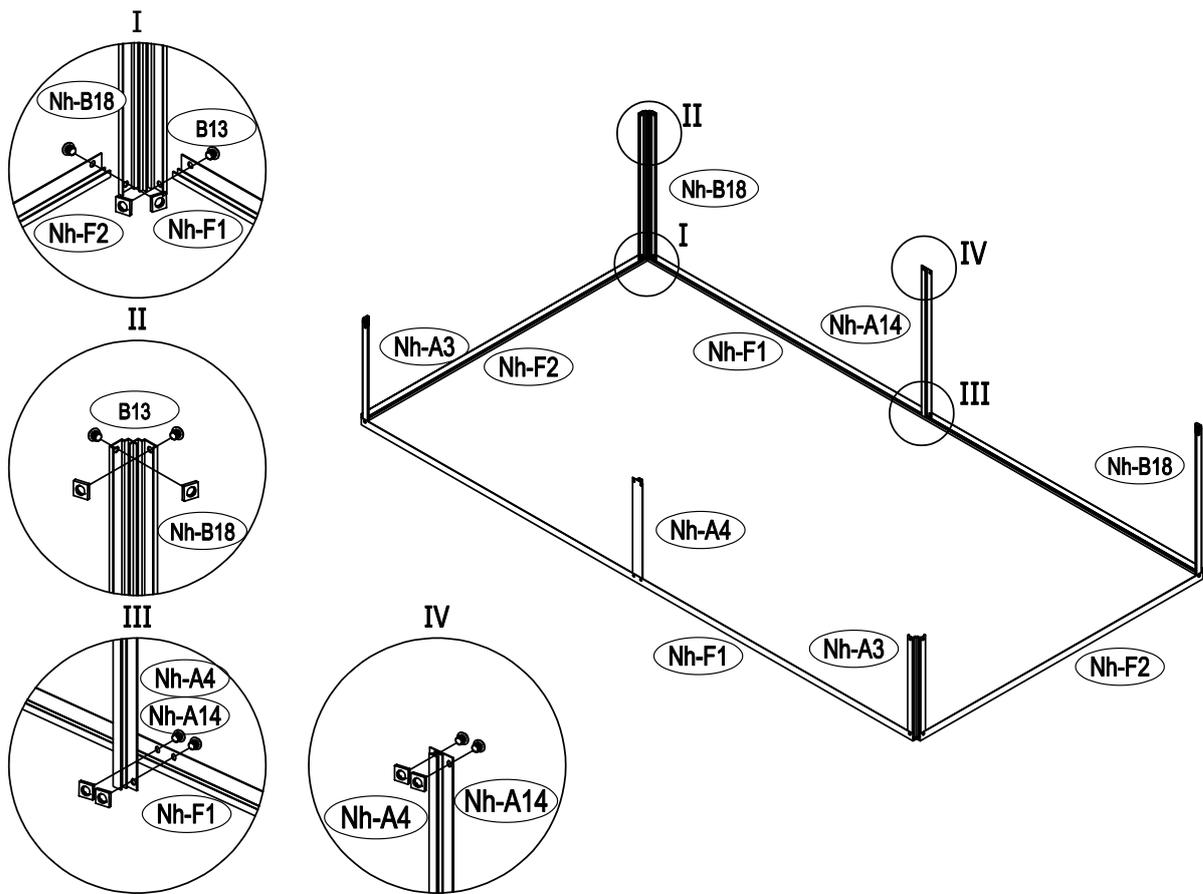


2

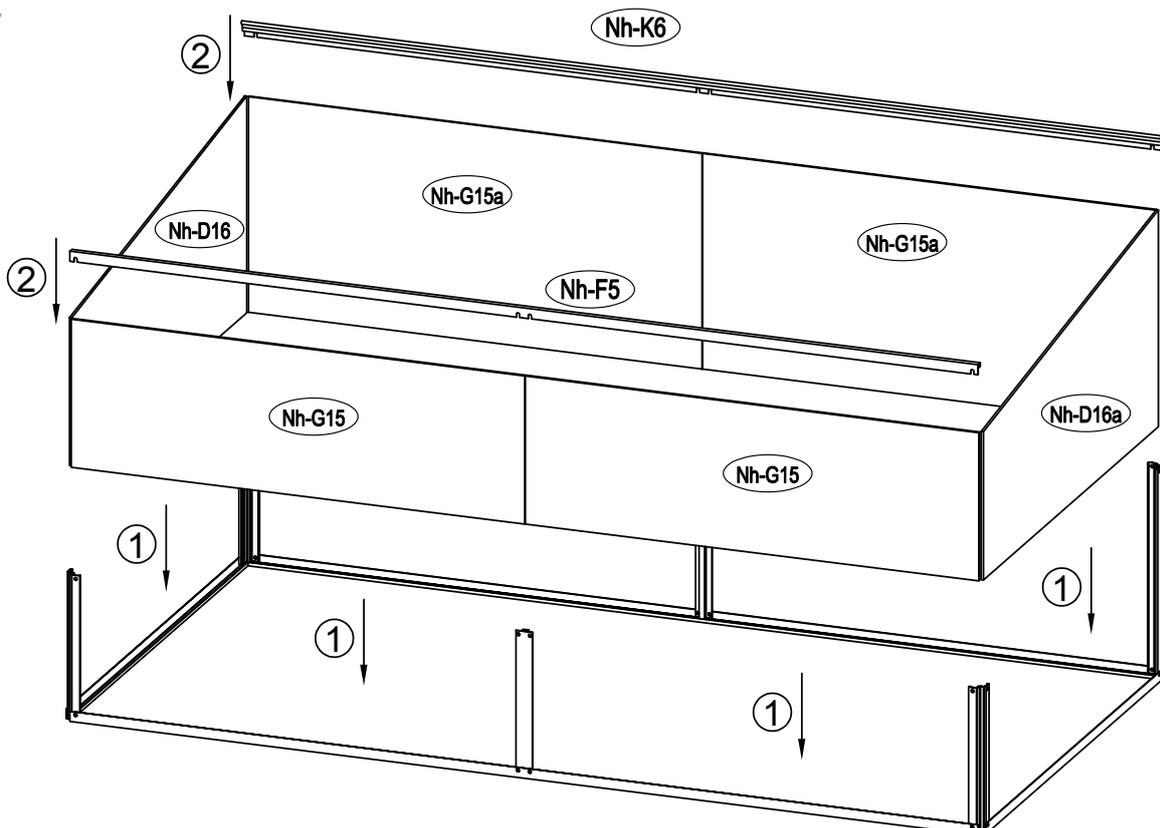


3

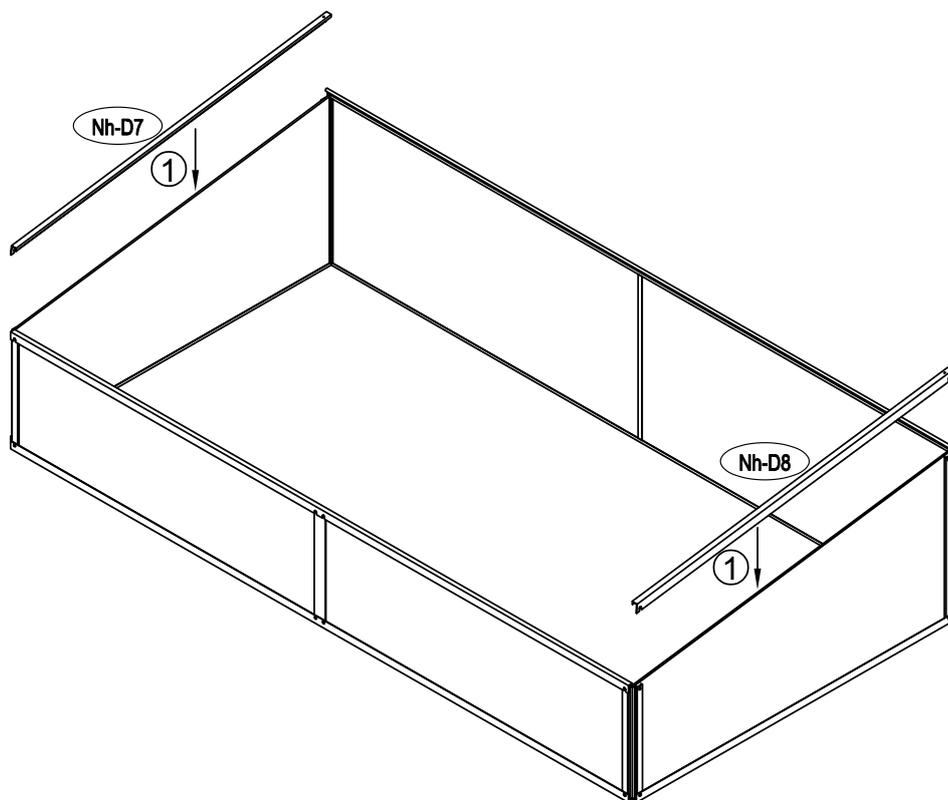


4

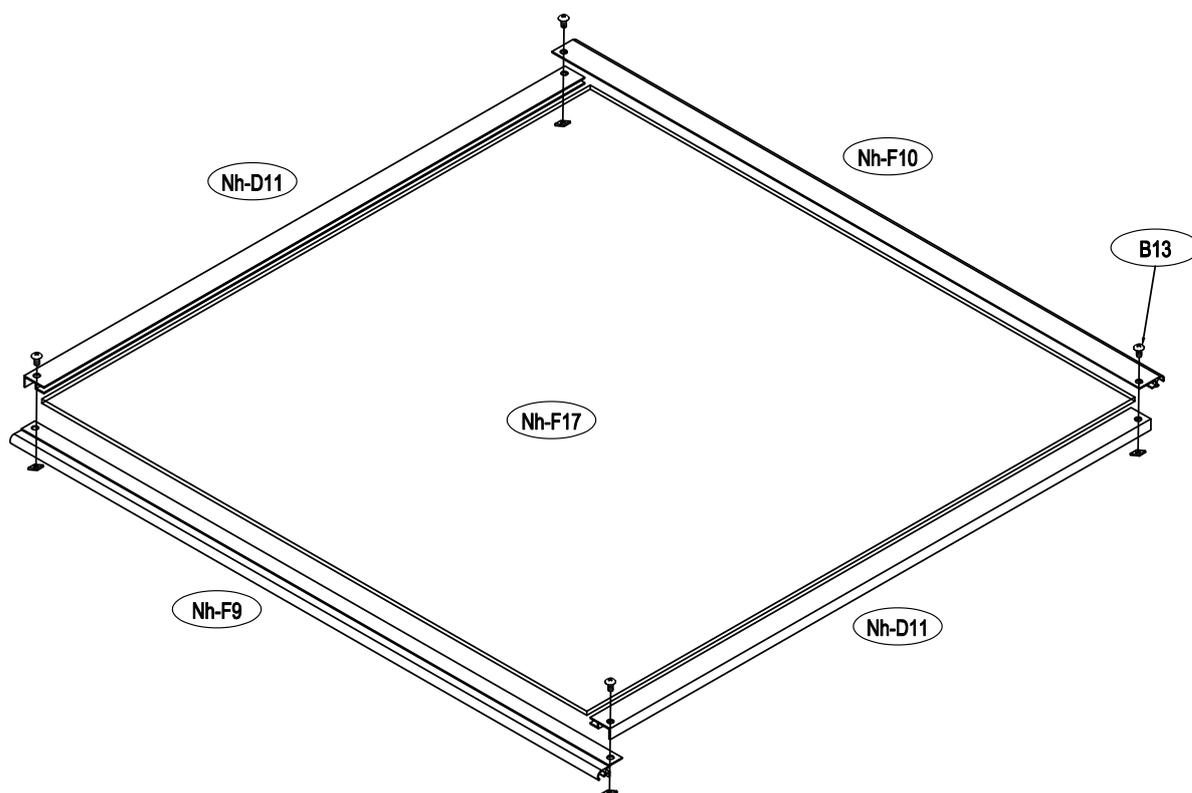

5

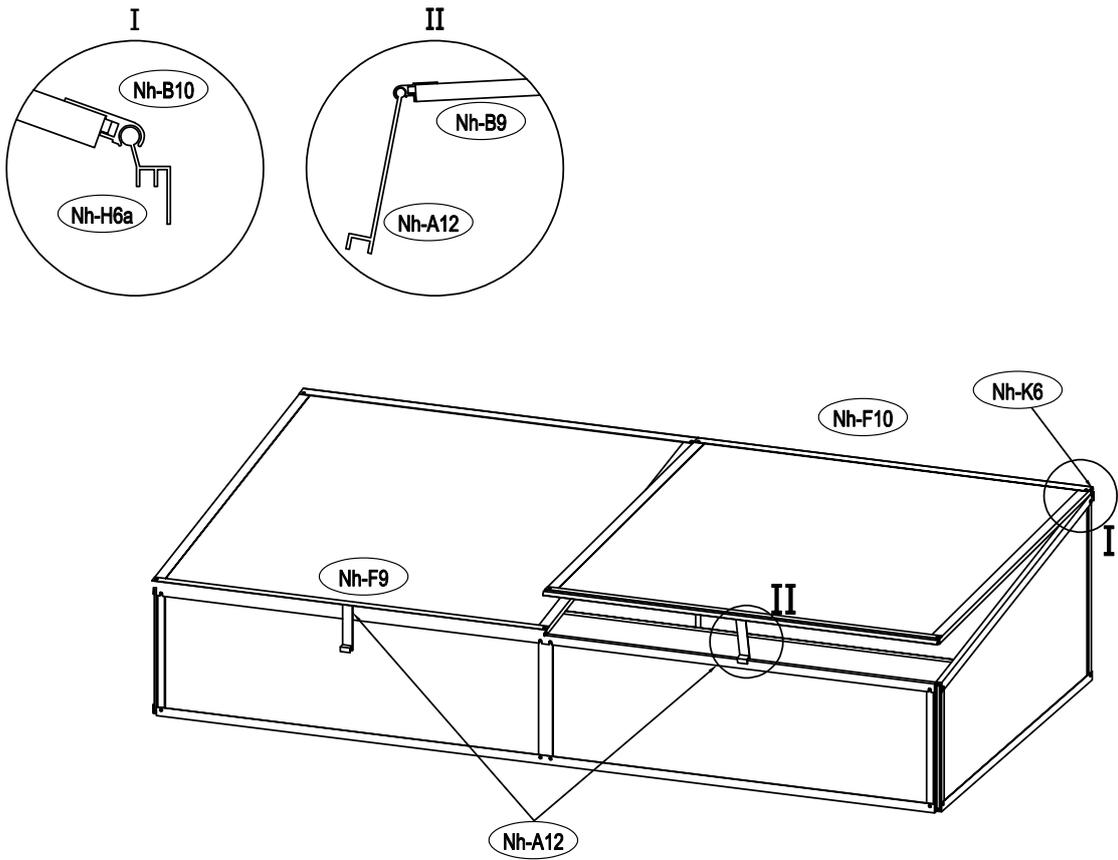

6

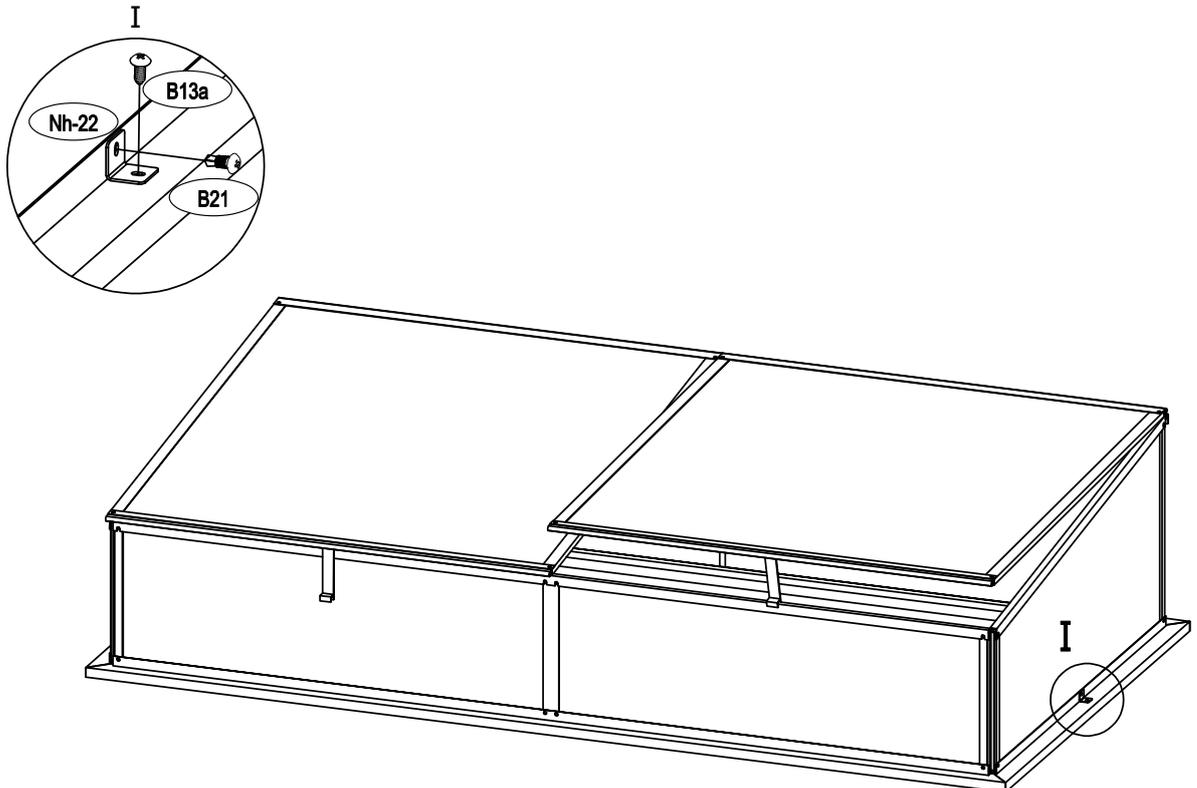

7

