

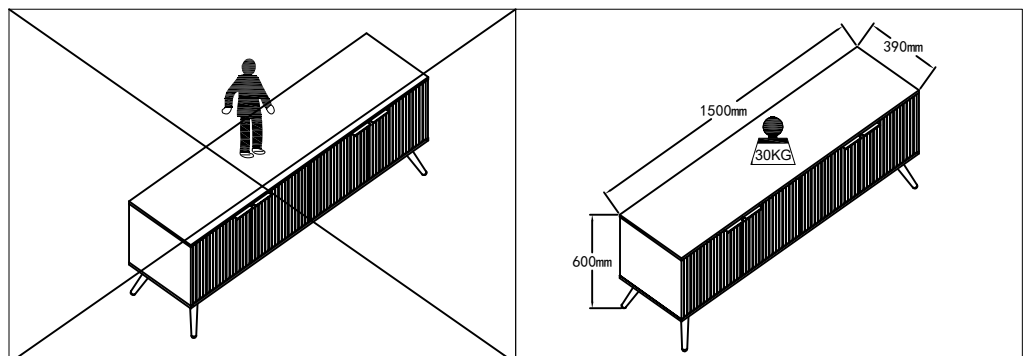
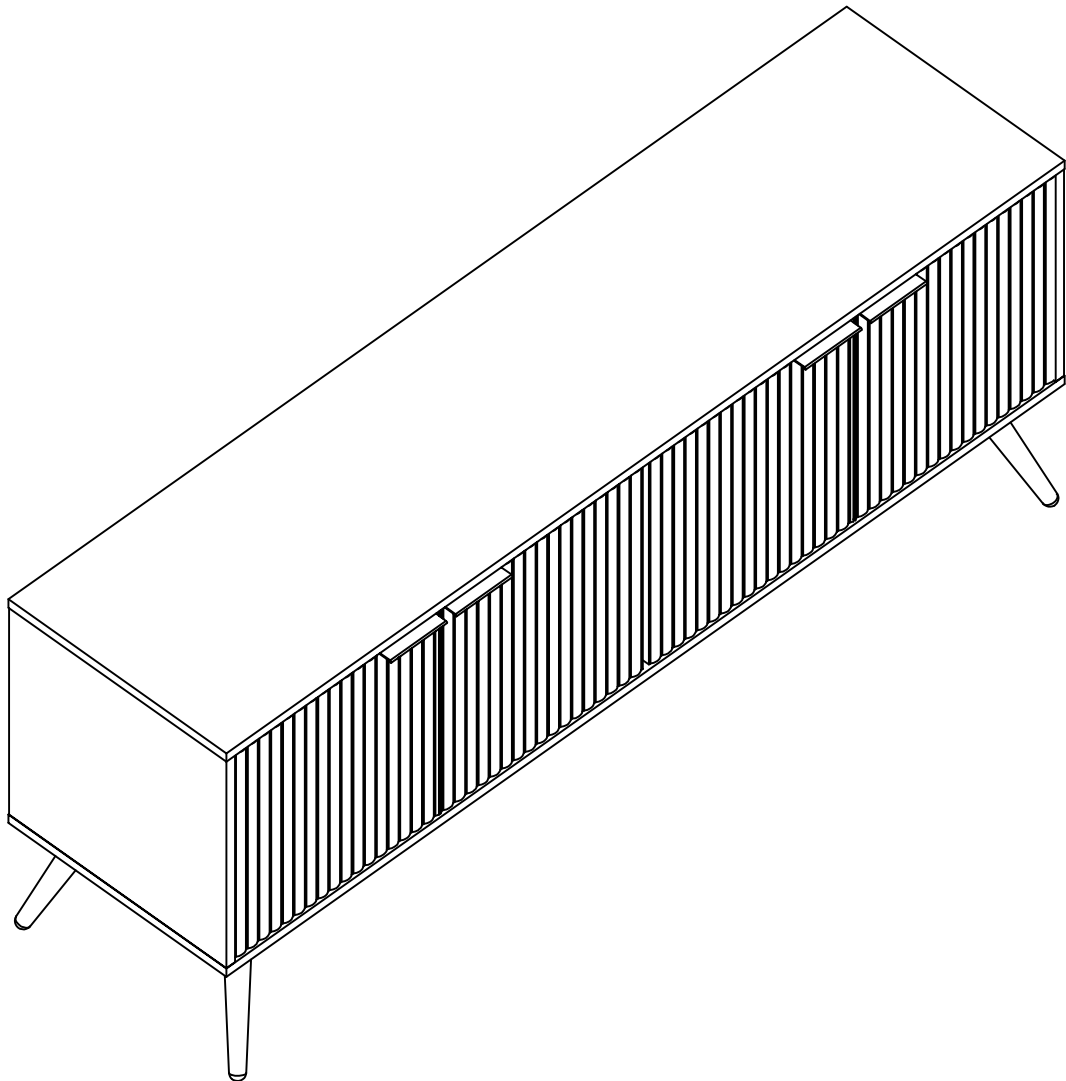
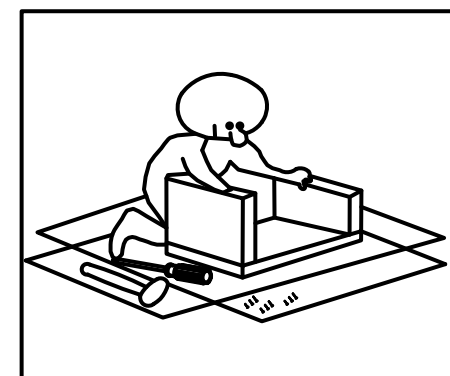
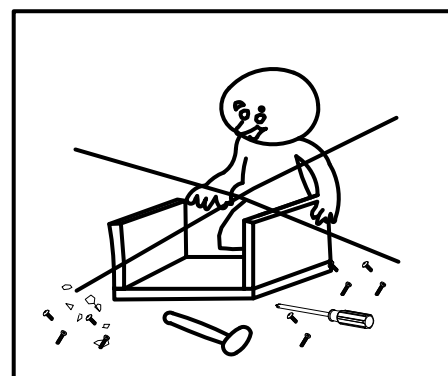
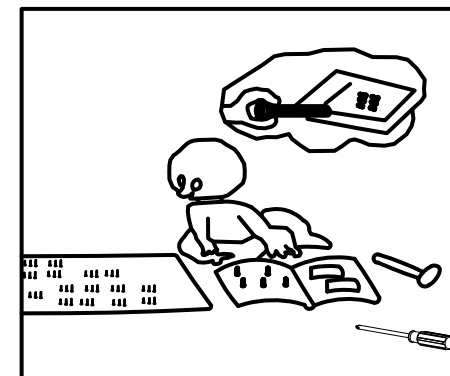
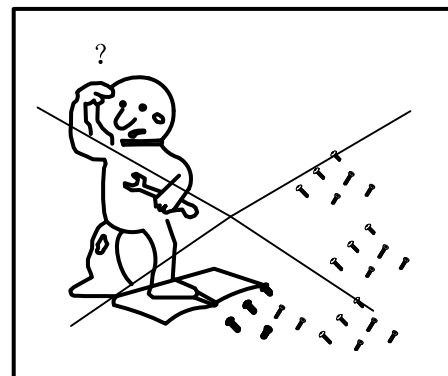
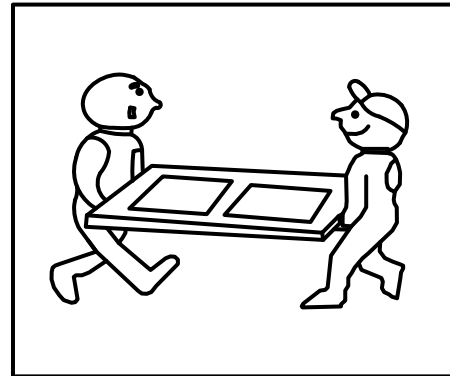
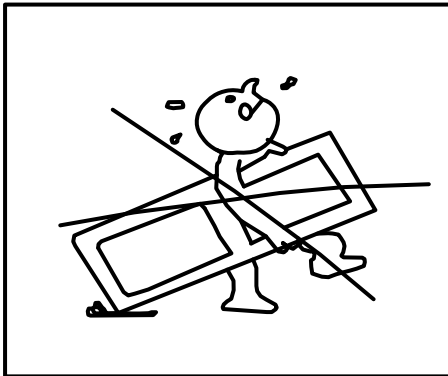
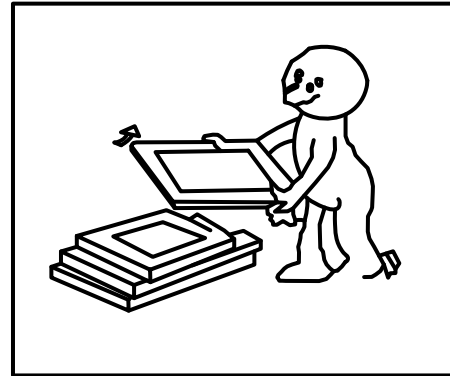
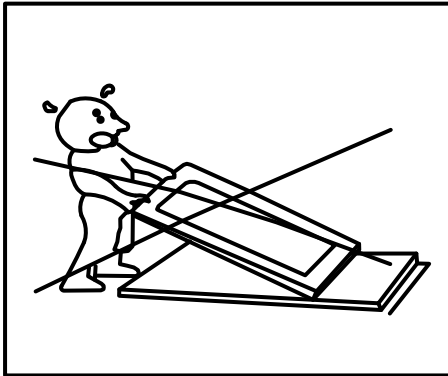



WOHNLING®

Möbel zum Wohlfühlen

WL6.886

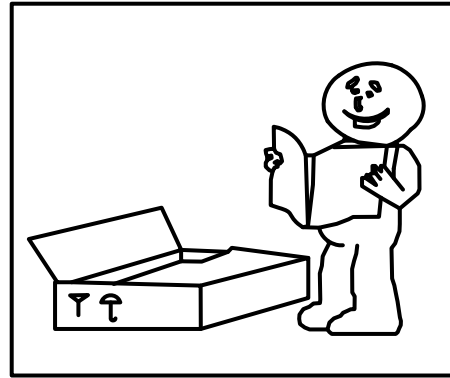

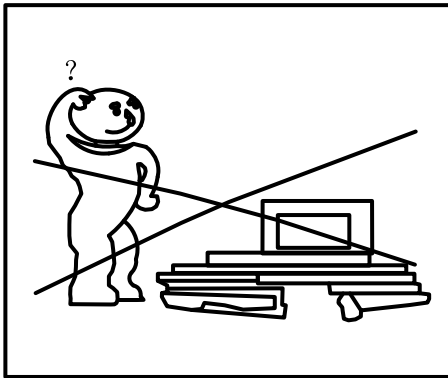


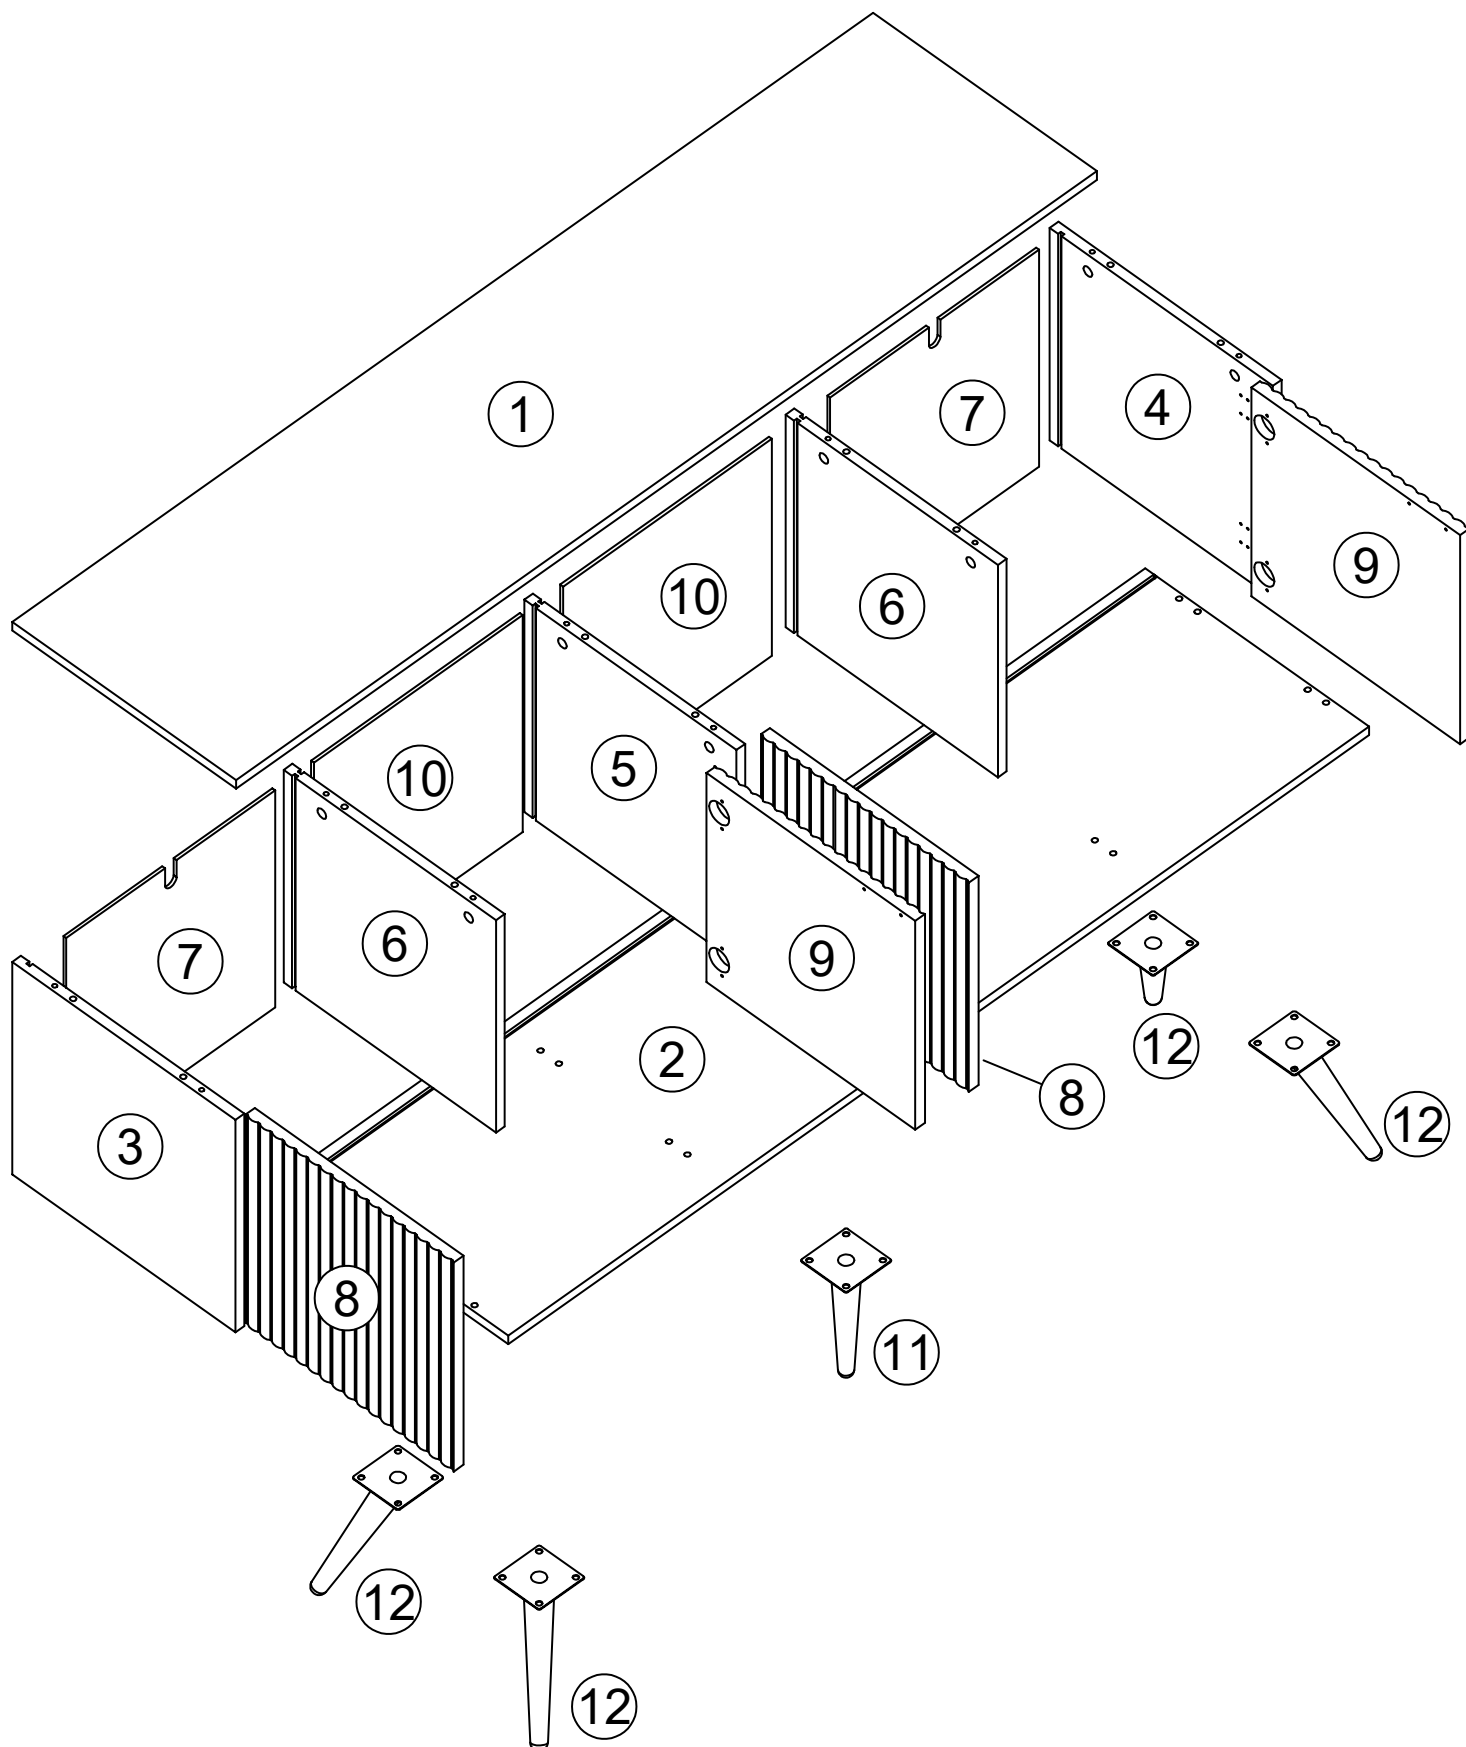


2 PERSONEN	50min		
-------------------	--------------	--	--

A	x10	B	x10	C	x20	D	x10	E	x72	F	x4	G	x4
													
M6x35mm		Φ15mm		Φ8x30mm		M7x40mm		M3.5x14mm					
H	x16	I	x1	J	x20	K	x4	L	x2	M	x10	N	x2
													
		4mm		M6x12mm						Φ20mm		M4x35mm	
O	x2	P	x2	Q	x2								
													
		M4x14mm											


1

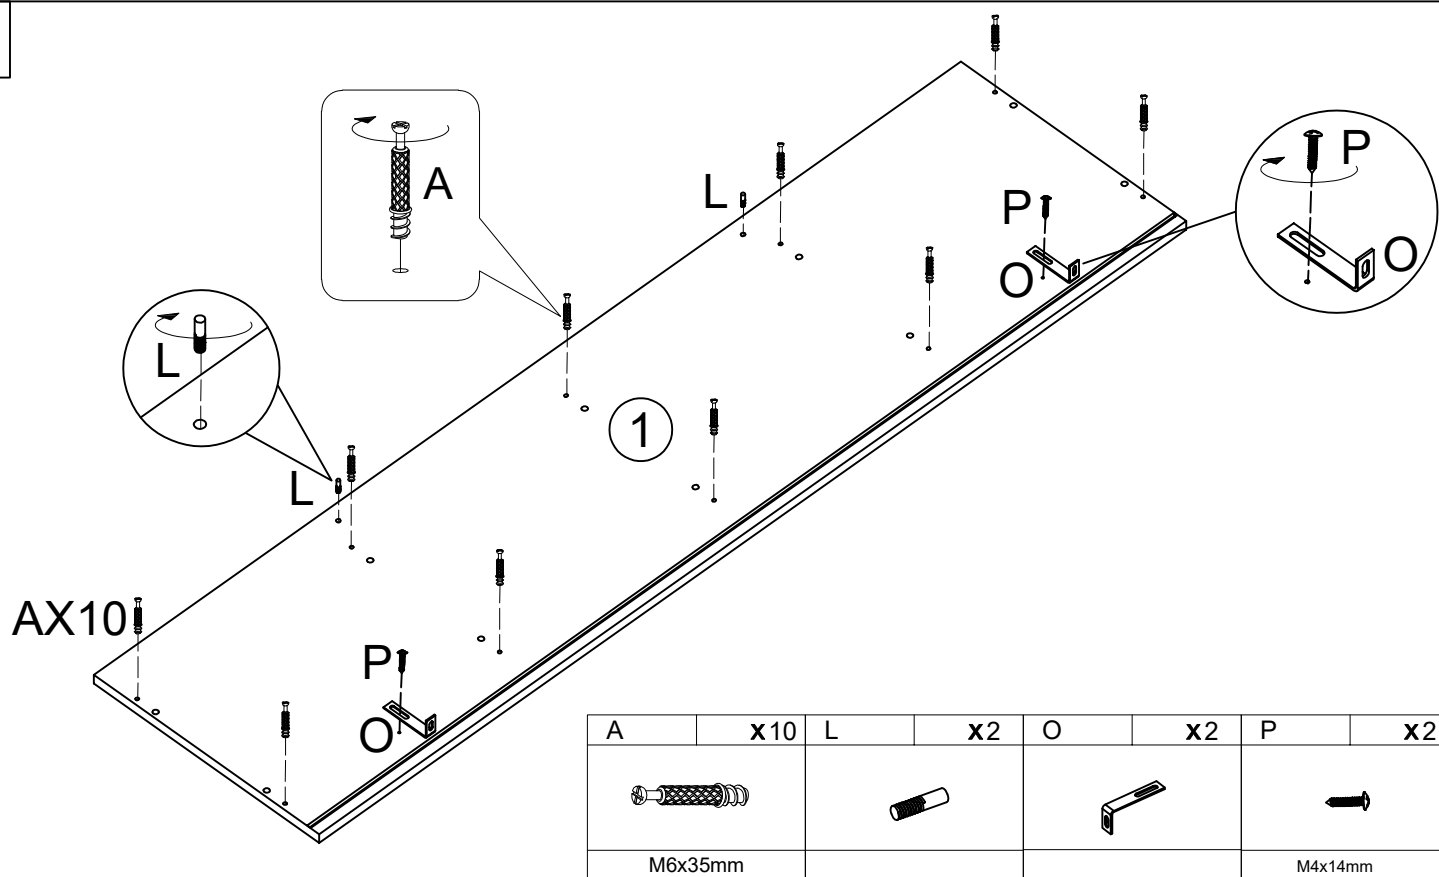


2

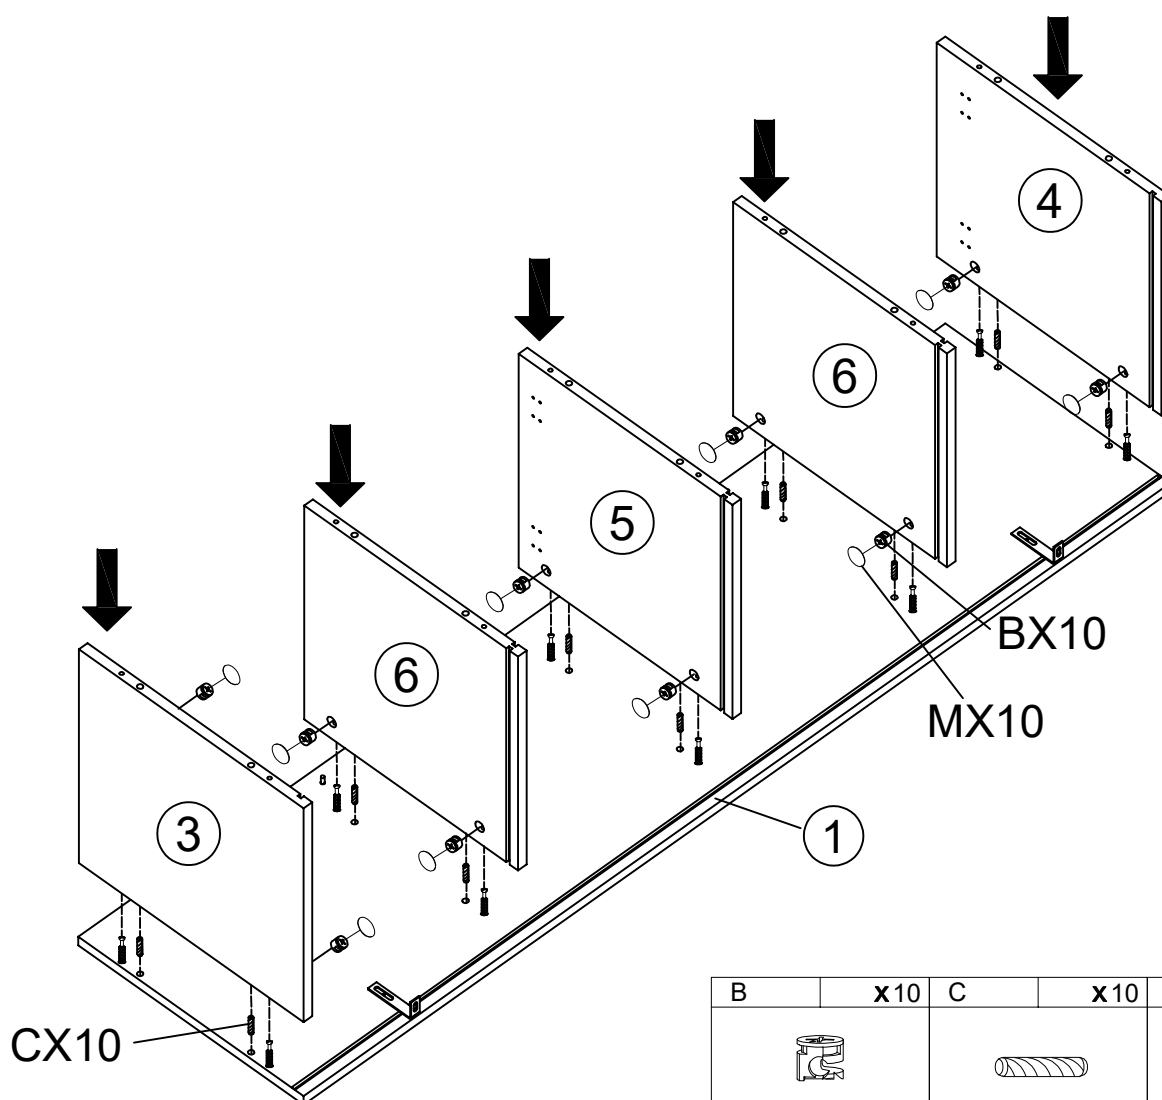

3

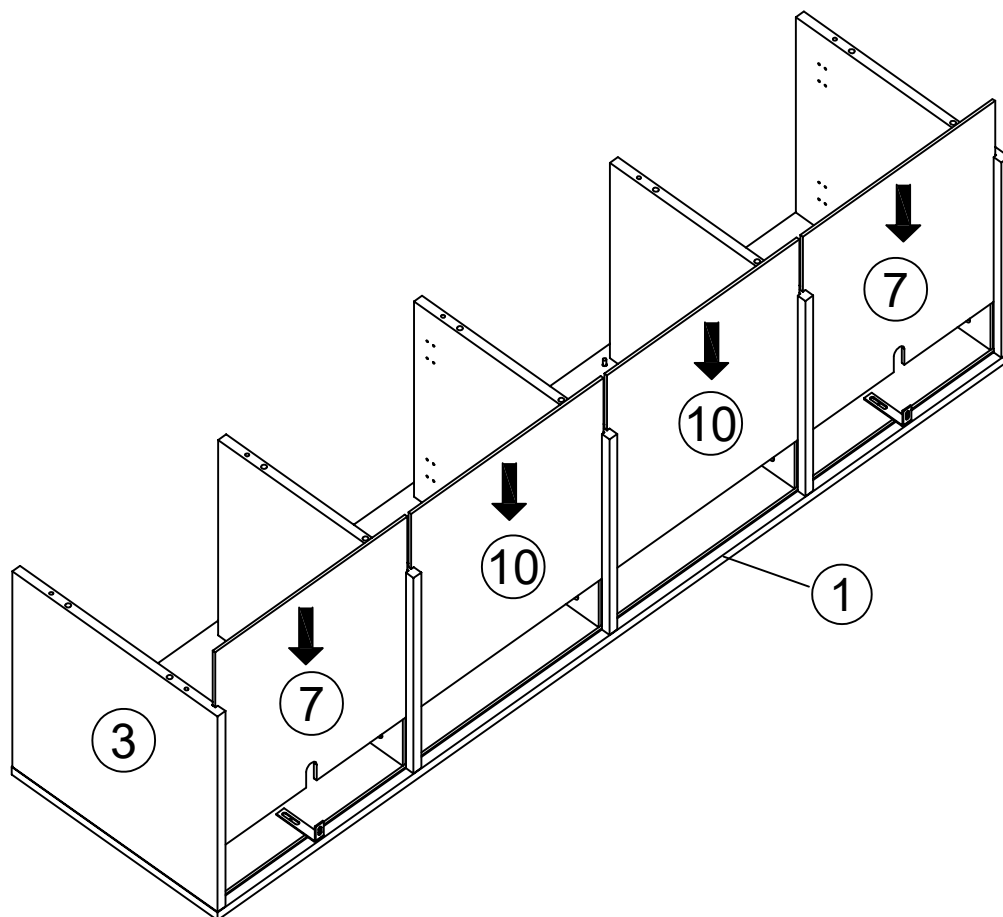

4

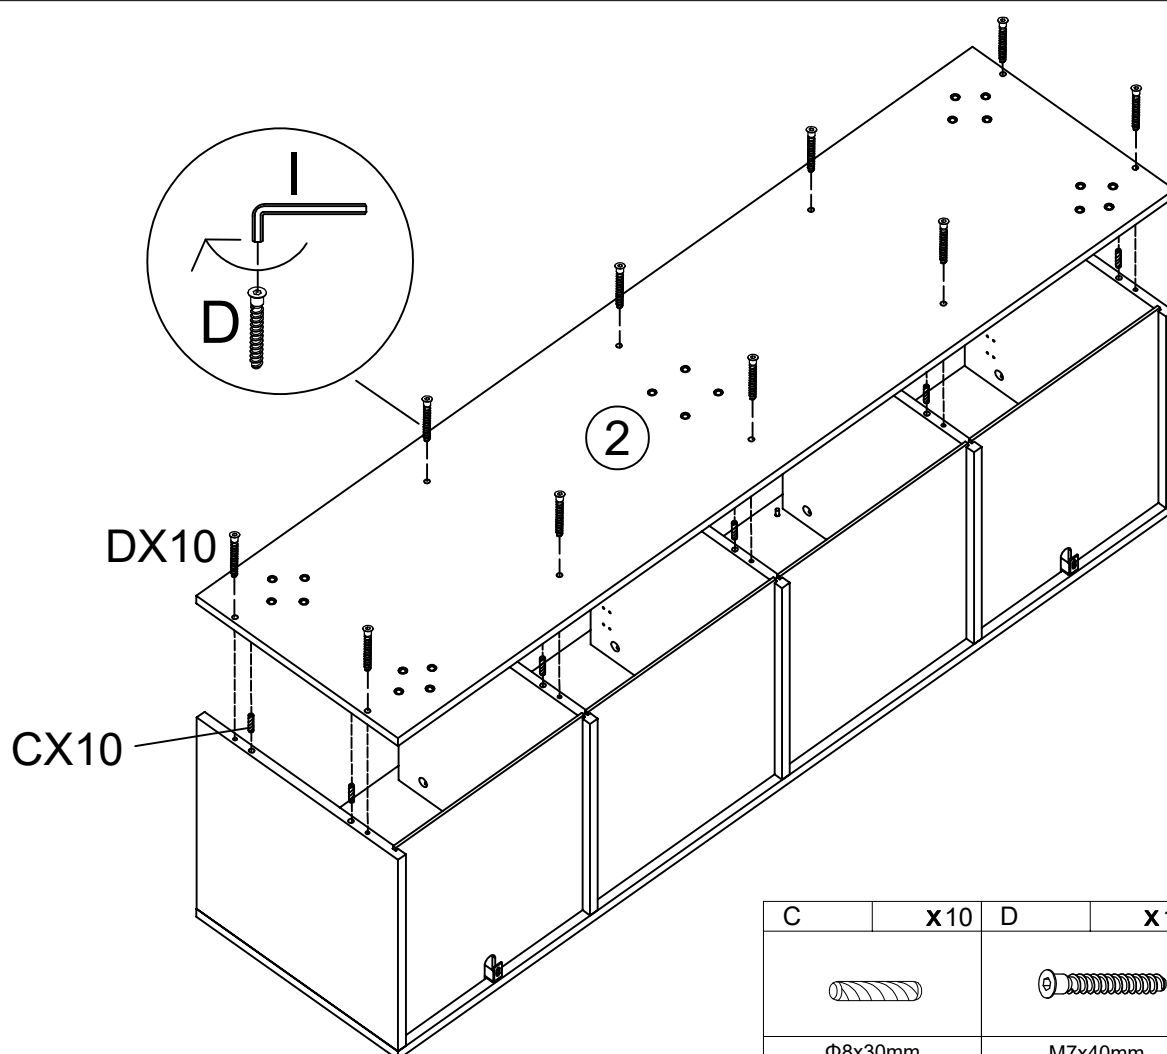

C	x10	D	x10	I	x1
					
Φ8x30mm		M7x40mm		4mm	

Diagram 1 illustrates the assembly of the base plate. The base plate (2) is shown being attached to the frame (3) using four corner brackets (11) and four screws (JX20). A circular inset provides a detailed view of a bracket (11) being secured with a screw (J) into the frame (3). A legend in the bottom right corner shows a bracket (I) with a quantity of x1.

1

7

10

H



E

X16

E	x16	H	x1



7/10

7

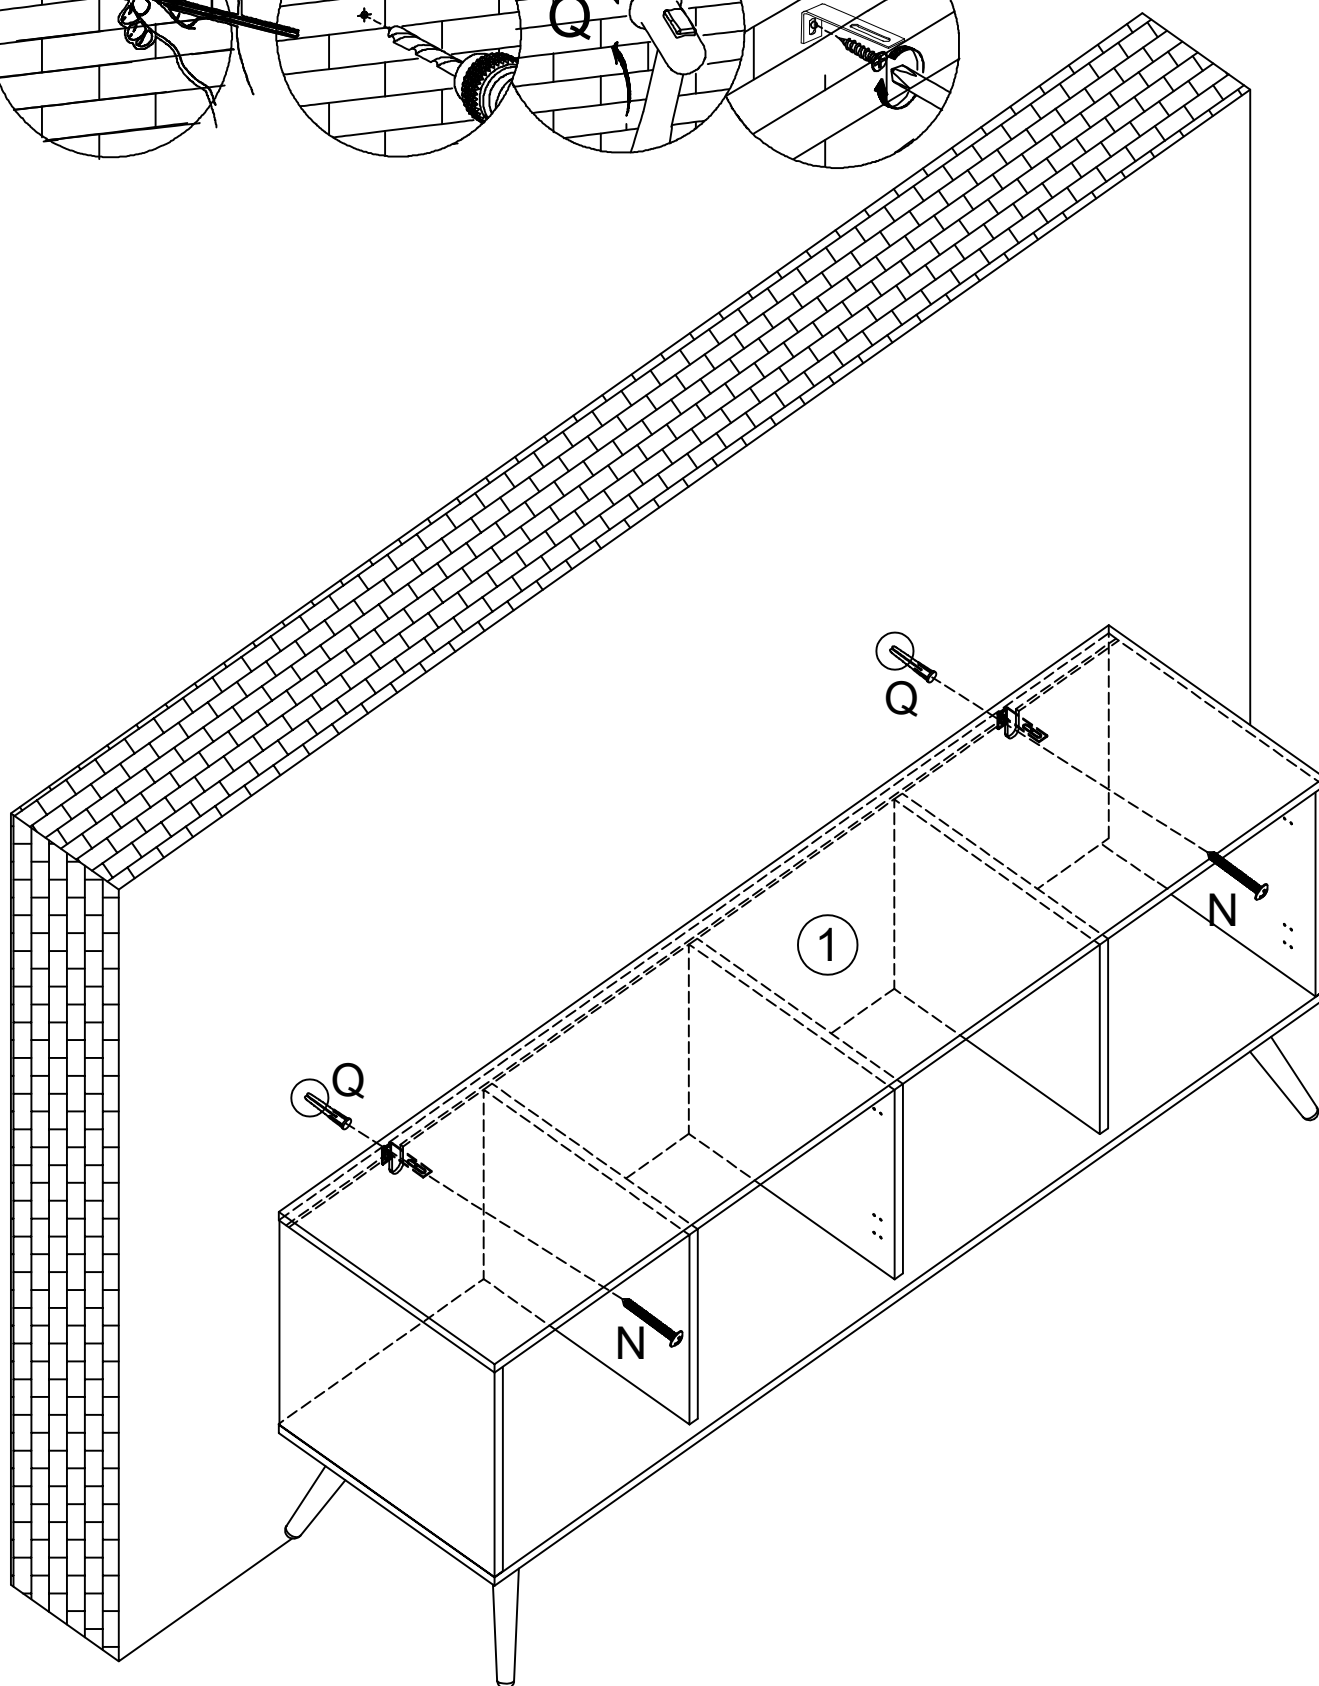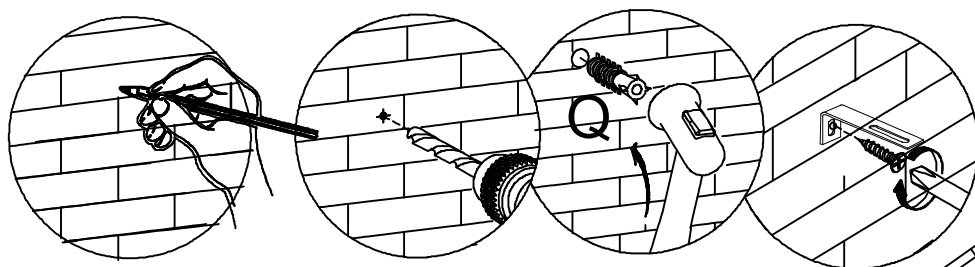



Q	x2	N	x2
			
		M4x35mm	

8

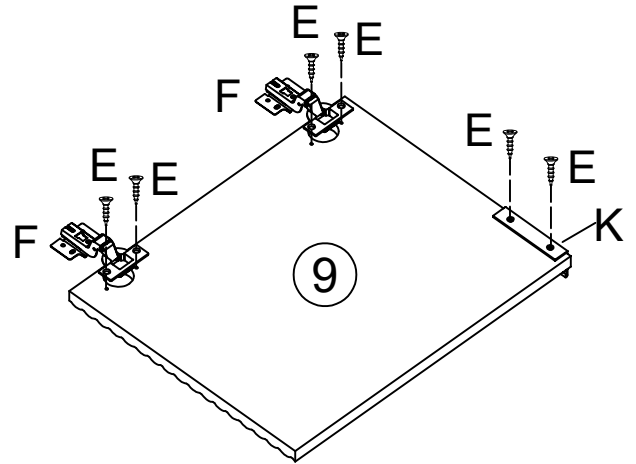
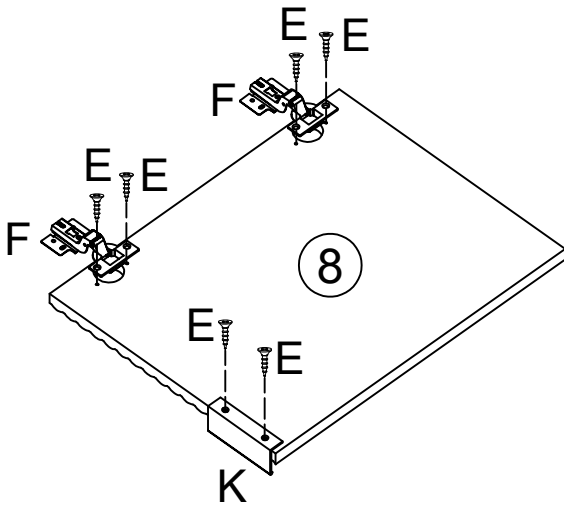


E	x12	F	x4	K	x4
					
M3.5x14mm					

9

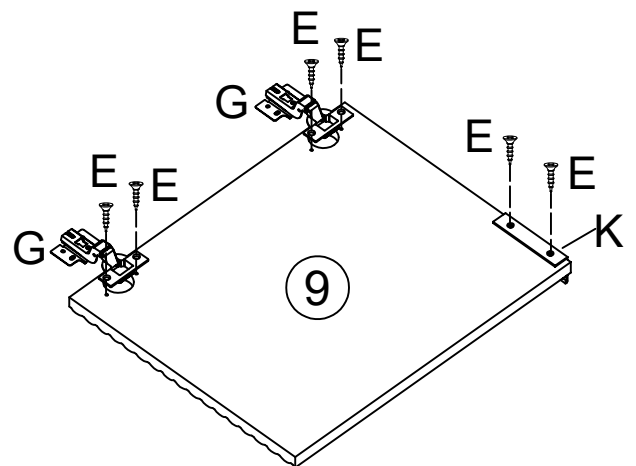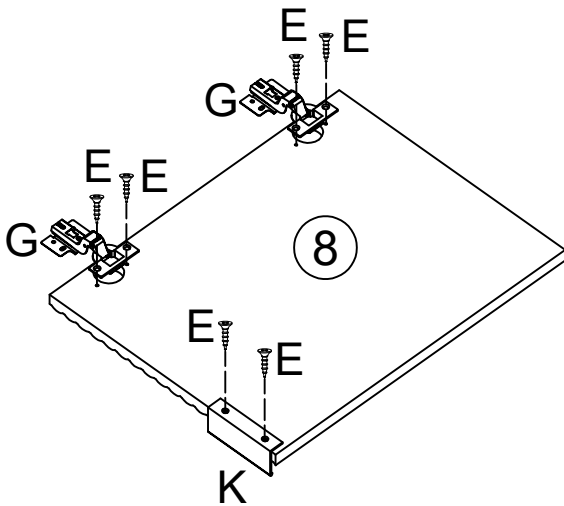

E	x12	G	x4	K	x4
					
M3.5x14mm					

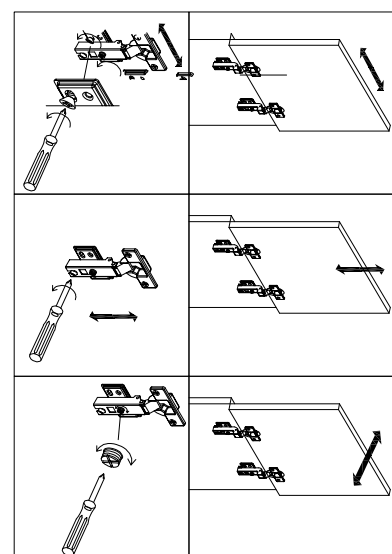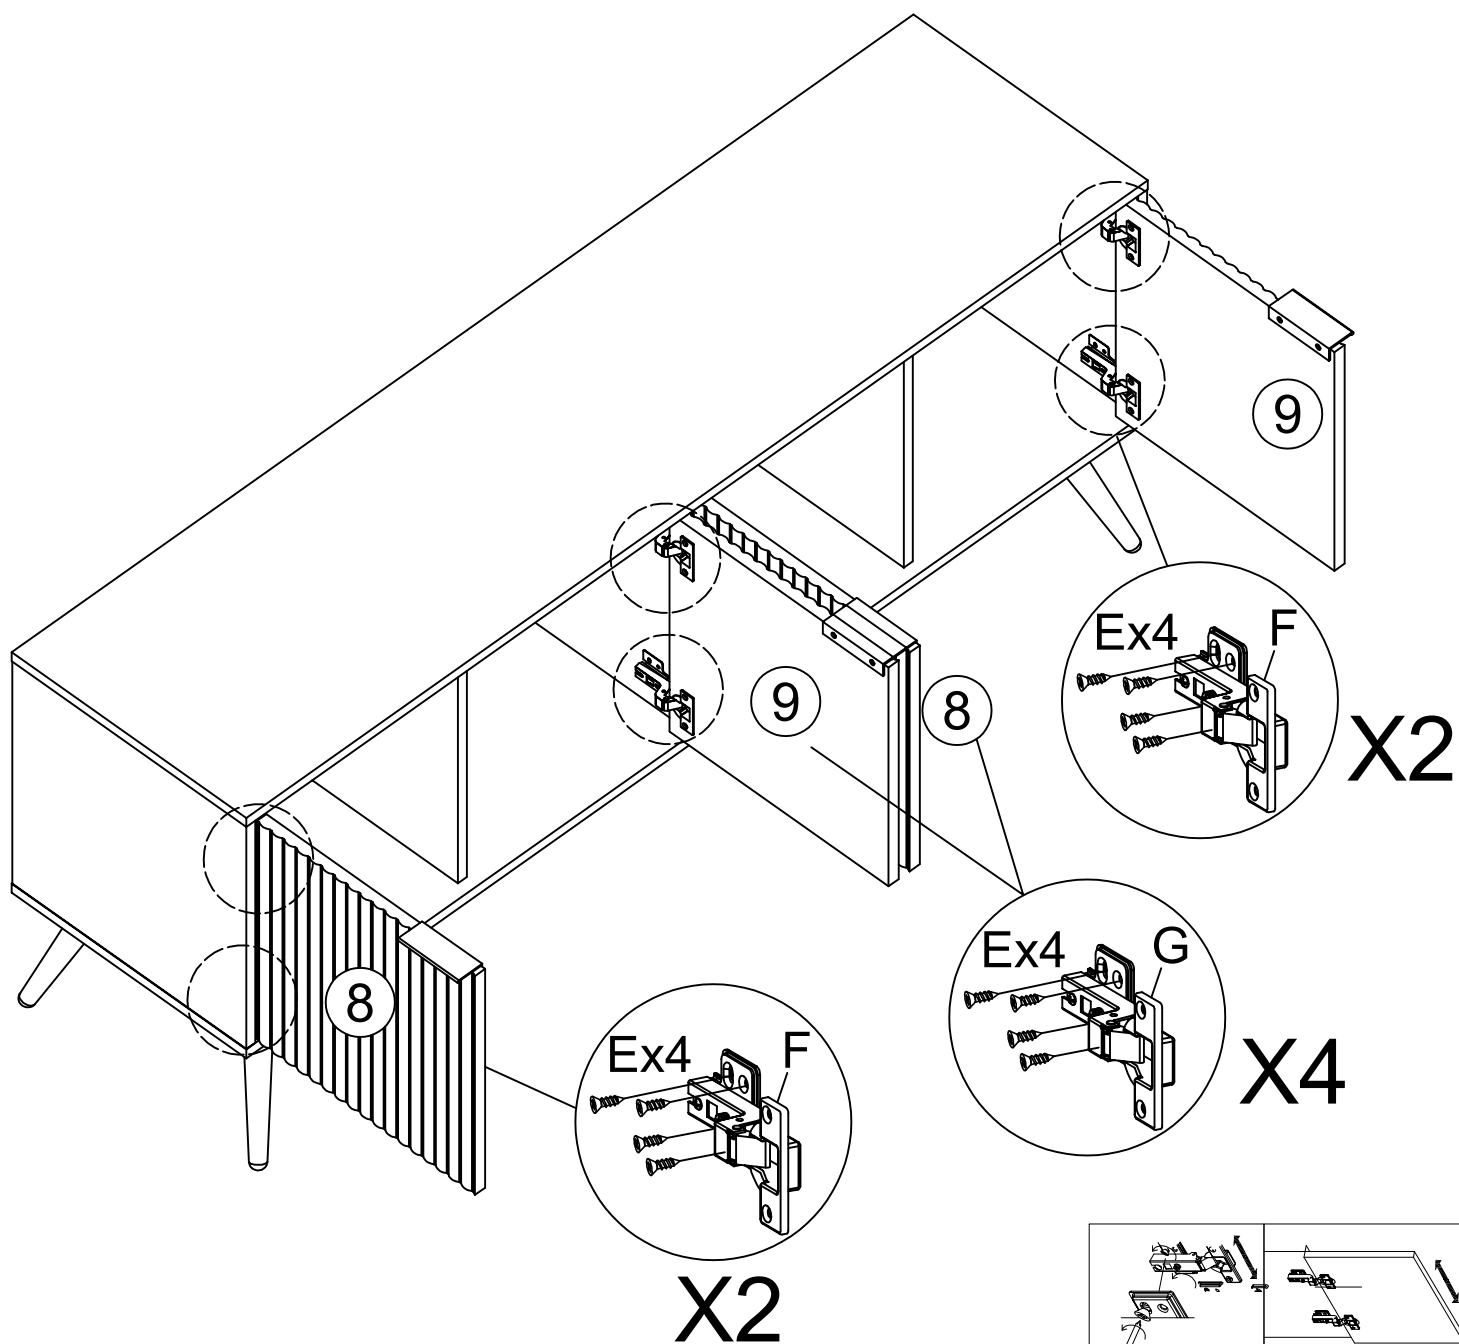

E	x32
M3.5x14mm	