


FIORA

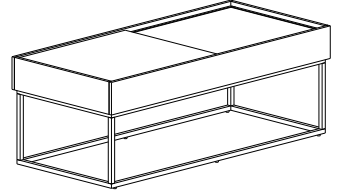

Montage Anleitung / Notice de Montage / Assembling Instruction

ART. NR: 20 011 035

EAN NO.: 40 10 340 11 03 58

ORDER

DE Wichtige Montage – Tipps hier zum herunterladen:

EN Important assembly tips to download here:

FR Conseils de montage importants - à télécharger ici :

IT Suggerimenti importanti per il montaggio da scaricare qui:

CZ Důležité montážní typy ke stažení zde:

PT Dicas importantes de montagem para baixar aqui:

ES Consejos de montaje importantes para descargar aquí:

PL Ważne wskazówki montażowe do pobrania tutaj:

NL Belangrijke montage tips om hier te downloaden:

SK Dôležité montážne typy na stiahnutie tu:

BG Важни съвети за съглобяване, които да изтеглите от тук:

RO Sfaturi importante de asamblare pentru descărcare aici:

HR Ovdje možete preuzeti važne savjete za montažu:

DK Vigtige monterings tips til download her:

SE Viktiga monterings tips att ladda ner här:

NO Viktige monterings tips å laste ned her:

FI Tärkeitä asennusvinkkejä ladattavaksi täältä:

HU Fontos szerelési tippek itt tölthetők le:

EE Siit allalaadimiseks vajalikud olulised näpunäited

SL Pomembne nasvete za montažo, ki jih lahko prenesete tukaj:

RS Важне савете за монтажу преузмите овде:

RU Важные советы по сборке, которые можно скачать здесь:

TR Buradan indirmek için önemli montaj ipuçları:

GR Σημαντικές συμβουλές συναρμολόγησης για λήψη εδώ:

LT Svarbūs surinkimo patarimai, kuriuos galite atsisiųsti čia:

LV Svarīgi montāžas padomi, ko lejupielādēt šeit:



LU Wichtig Assemblée Tipps fir hei erofzelueden:

ARB صائح مهمة حول التجميع للتنزيل من هنا:
















FILORA

Montage Anleitung / Notice de Montage / Assembling Instruction

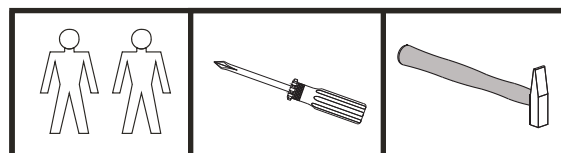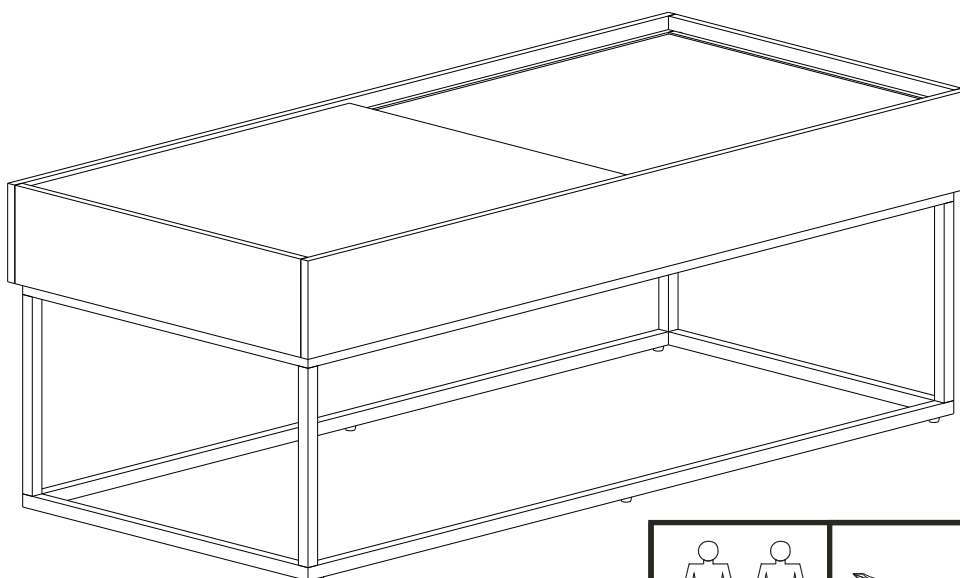


Für den Aufbau werden die hier abgebildeten Werkzeuge benötigt.
Avant le montage, se munir des outils nécessaires.
For the assembly you need the tools shown above.

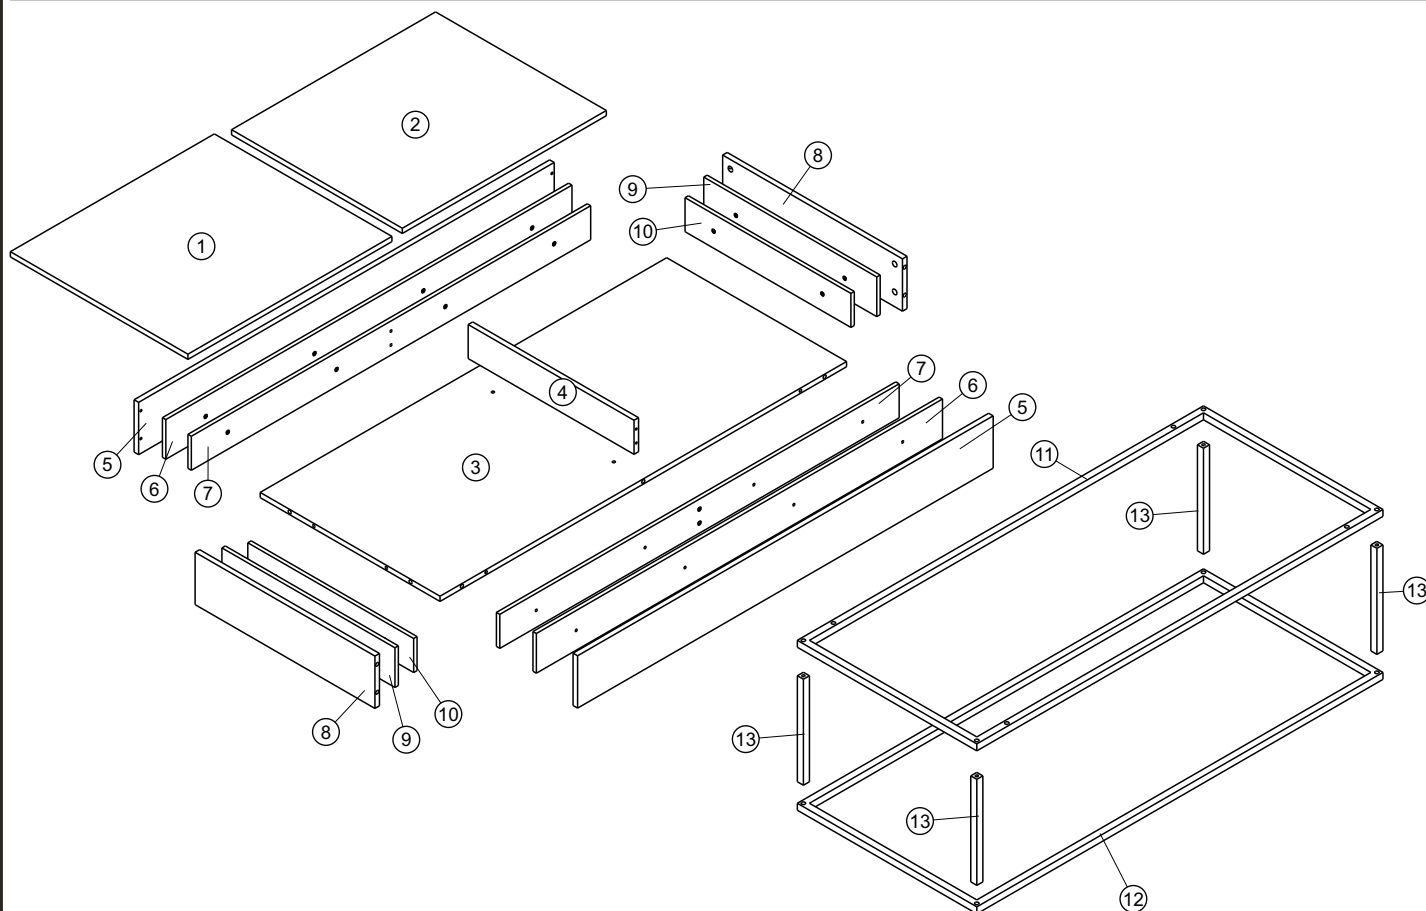

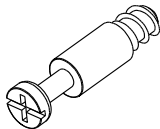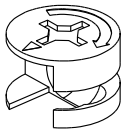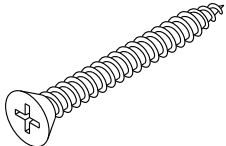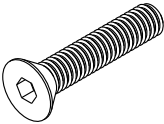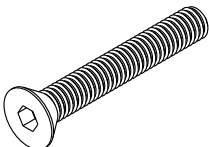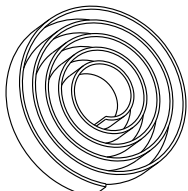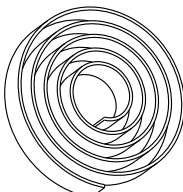A x 18  Ø6x27mm	B x 18  Ø12x10mm	C x 10  Ø6x30mm	D x 24  Ø4x16mm	E x 4  Ø4x35mm
F x 4  M6x25mm	G x 8  M6x35mm	H x 6  Ø13.5	I x 1  4mm	J x 2  549mm
K x 2  539mm	L x 12 			


1

A x 18




Ø6x27mm

C x 10



Ø6x30mm

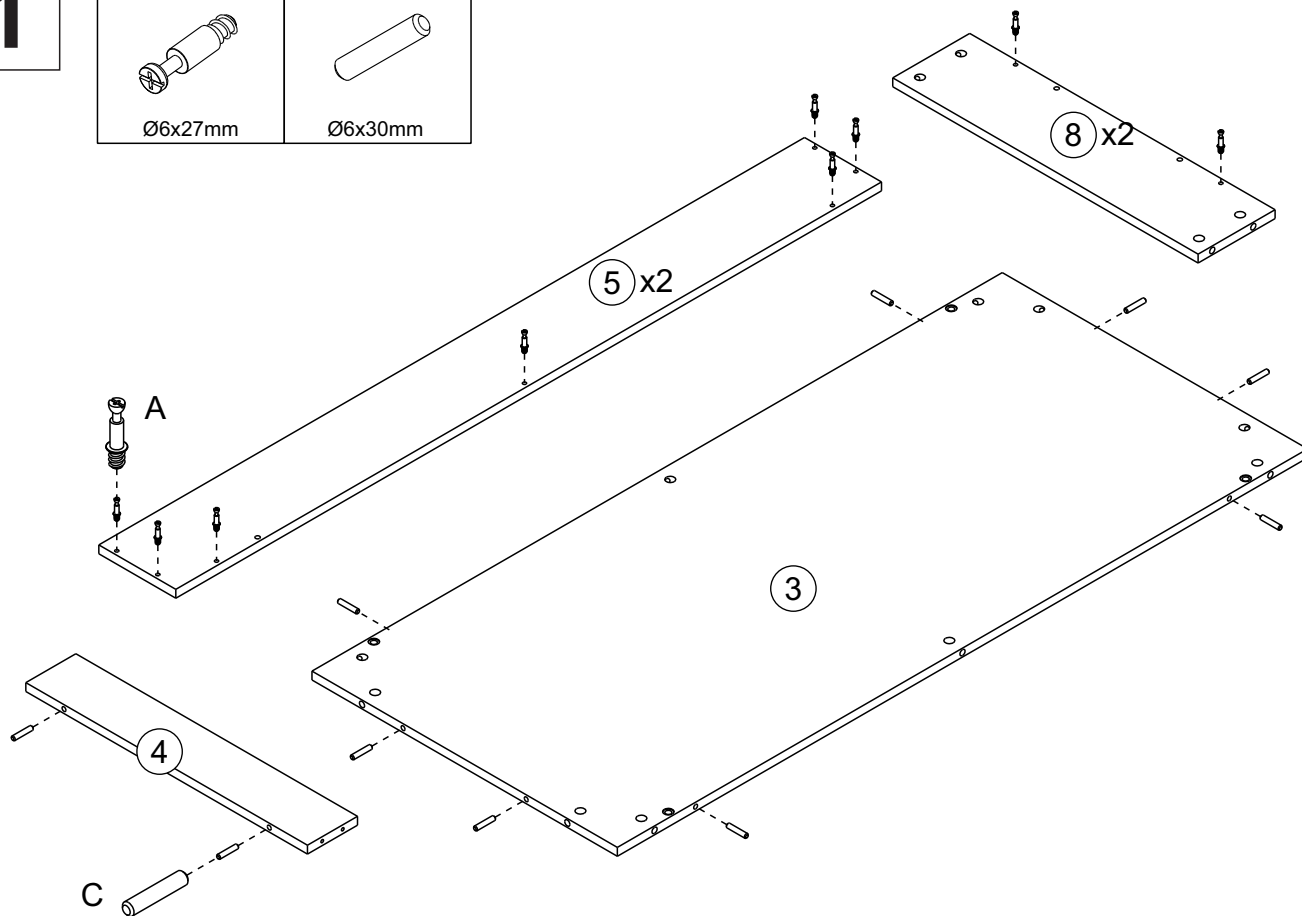


2

B x 4



Ø12x10mm

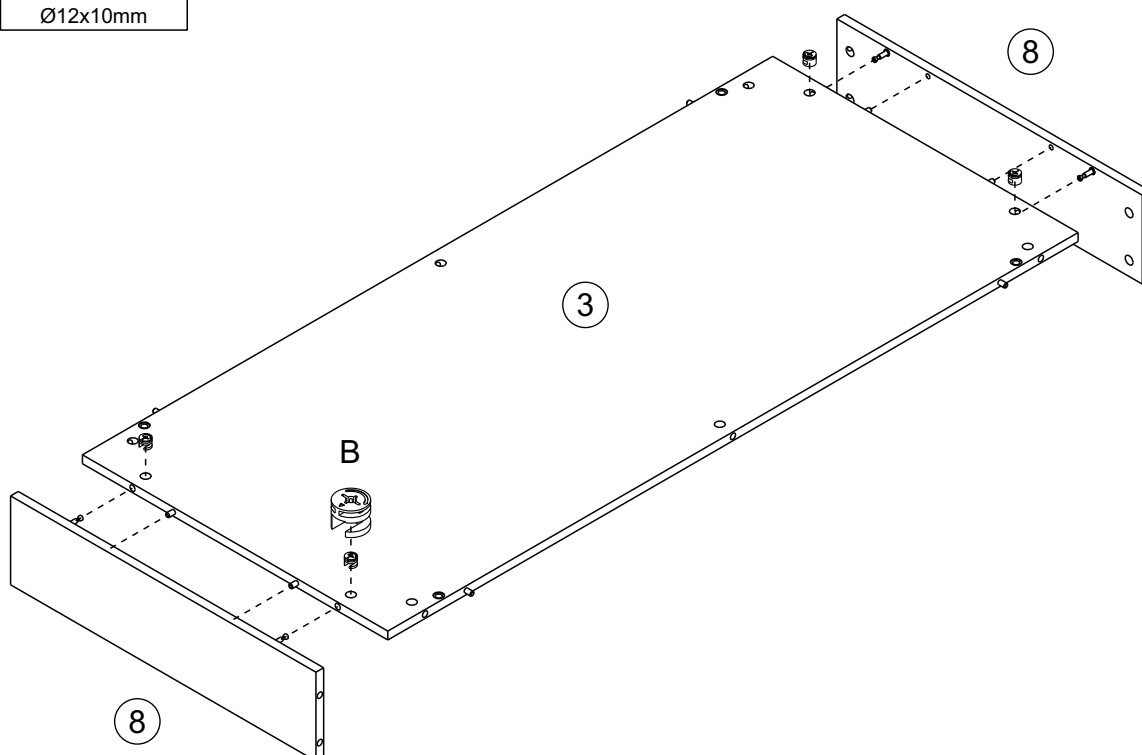


3

B x 6



Ø12x10mm

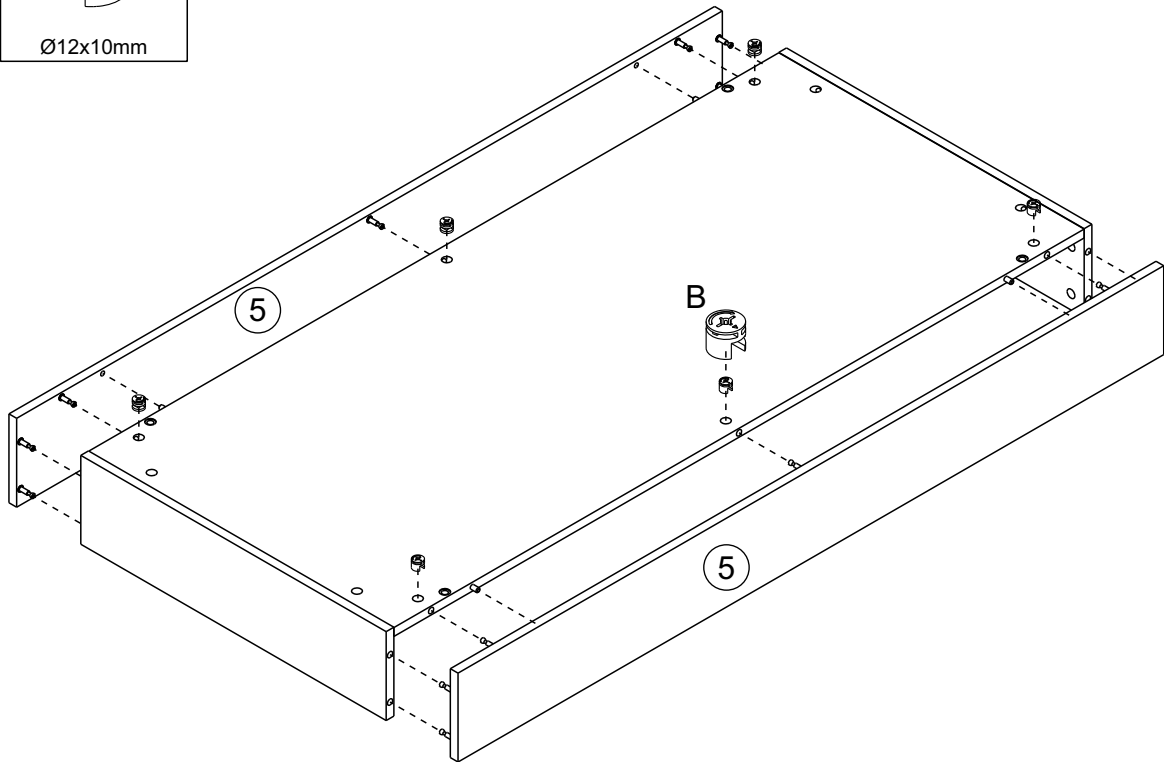


4

B x 8



Ø12x10mm

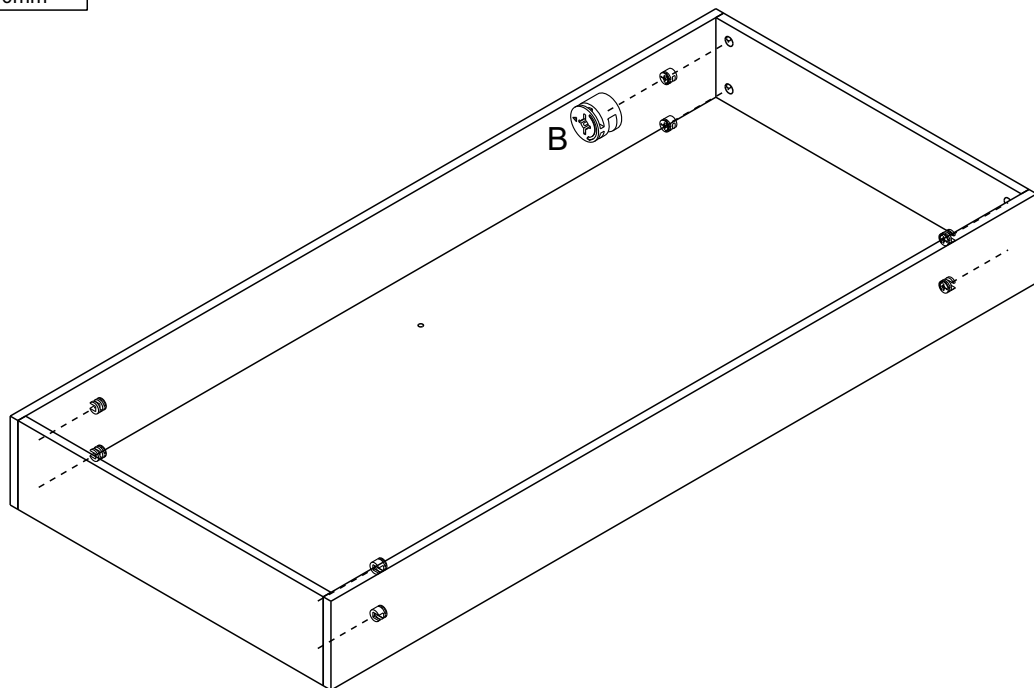


5

D x 8



Ø4x16mm

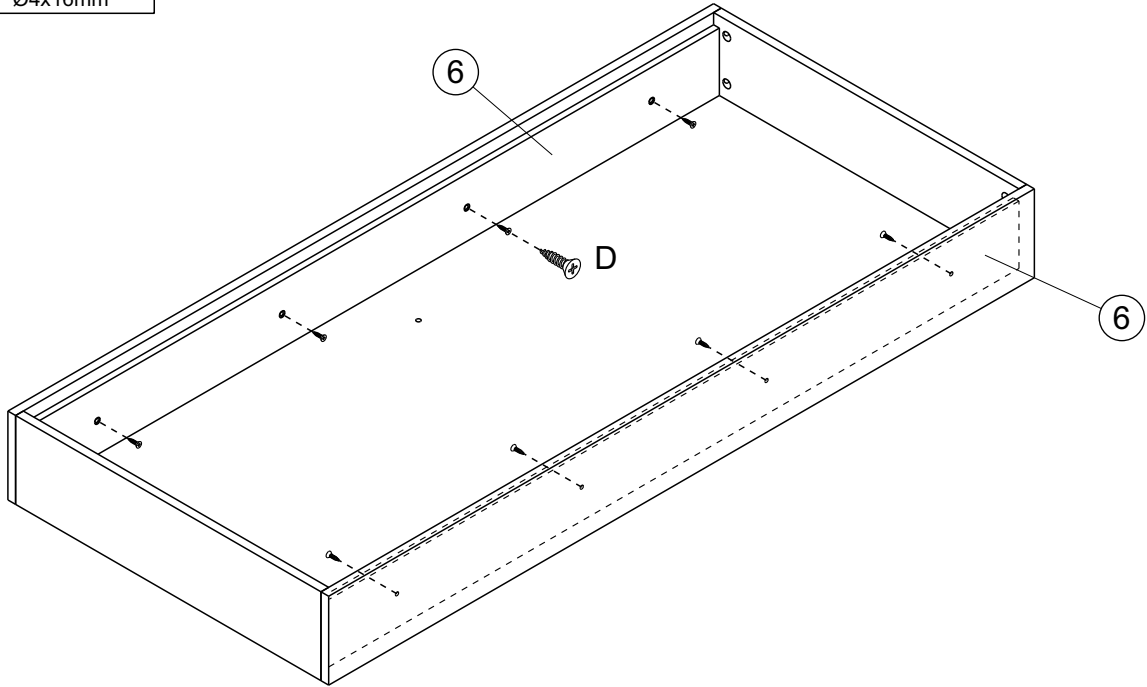


6

D x 4




Ø4x16mm

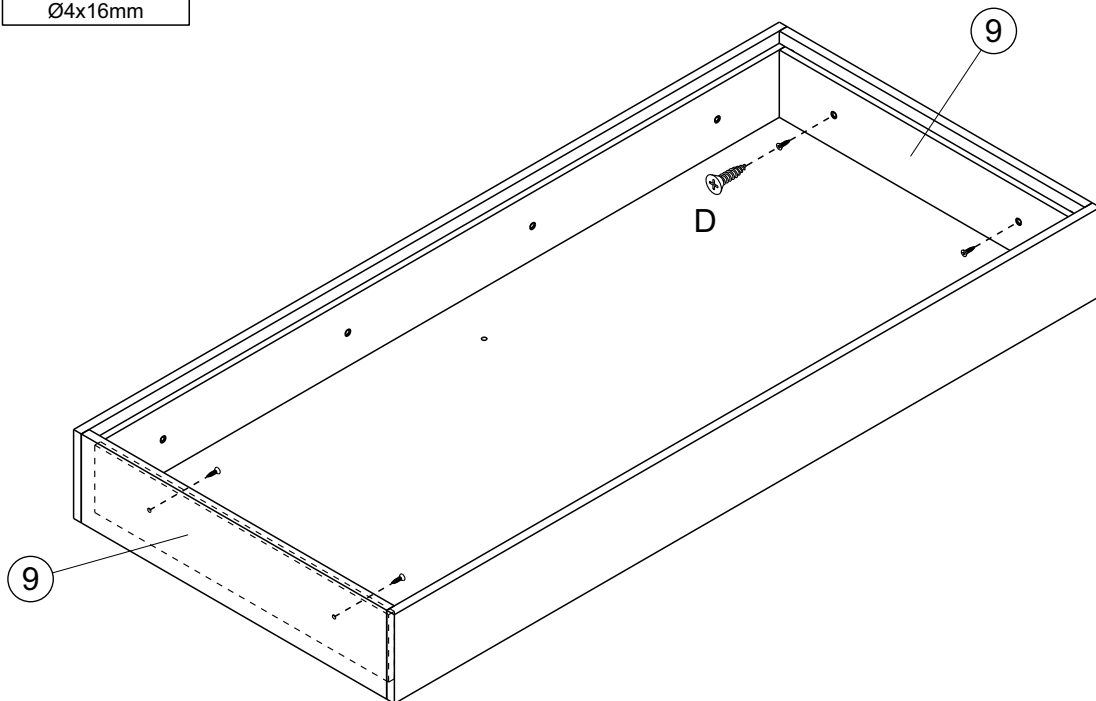


7

E x 4



Ø4x35mm

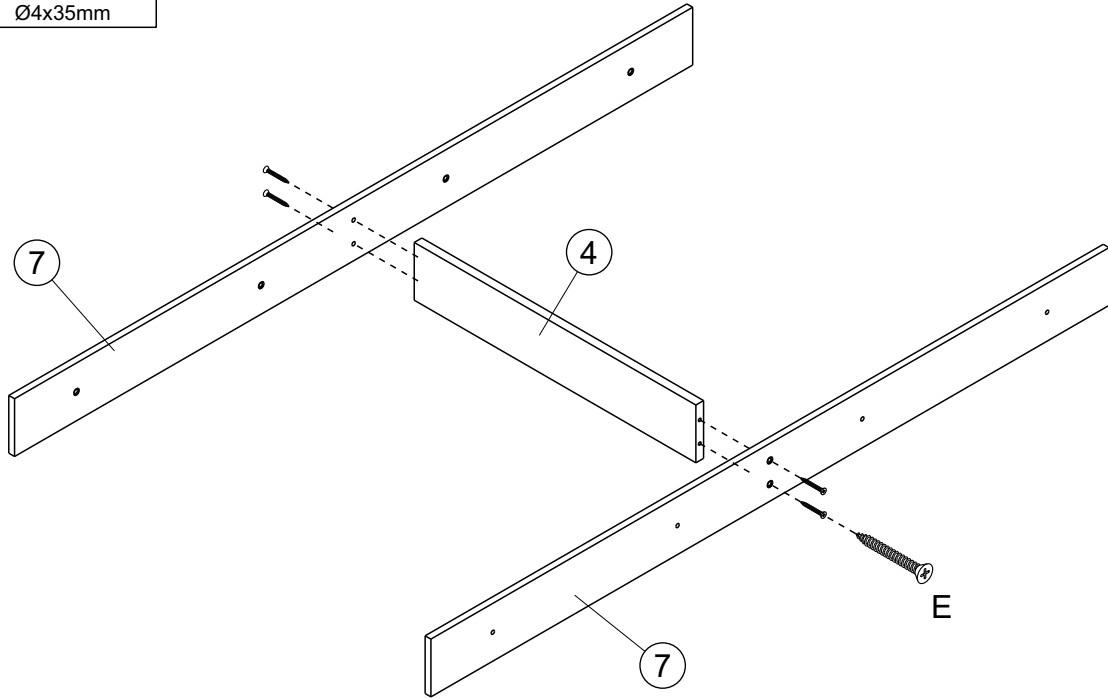


8

D x 8



Ø4x16mm

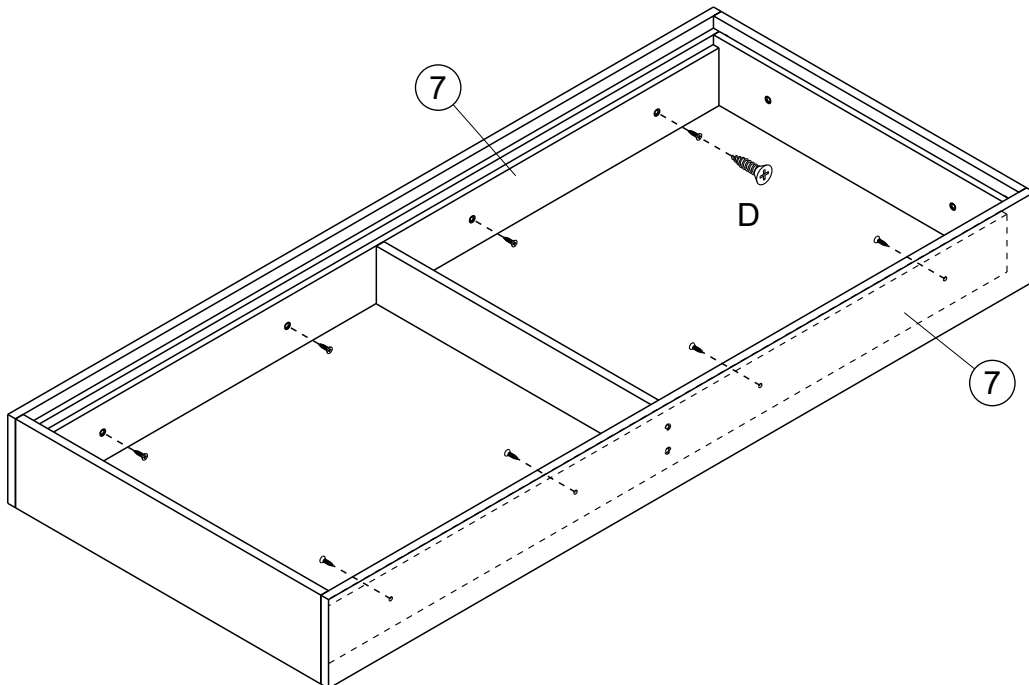


9

D x 4




Ø4x16mm

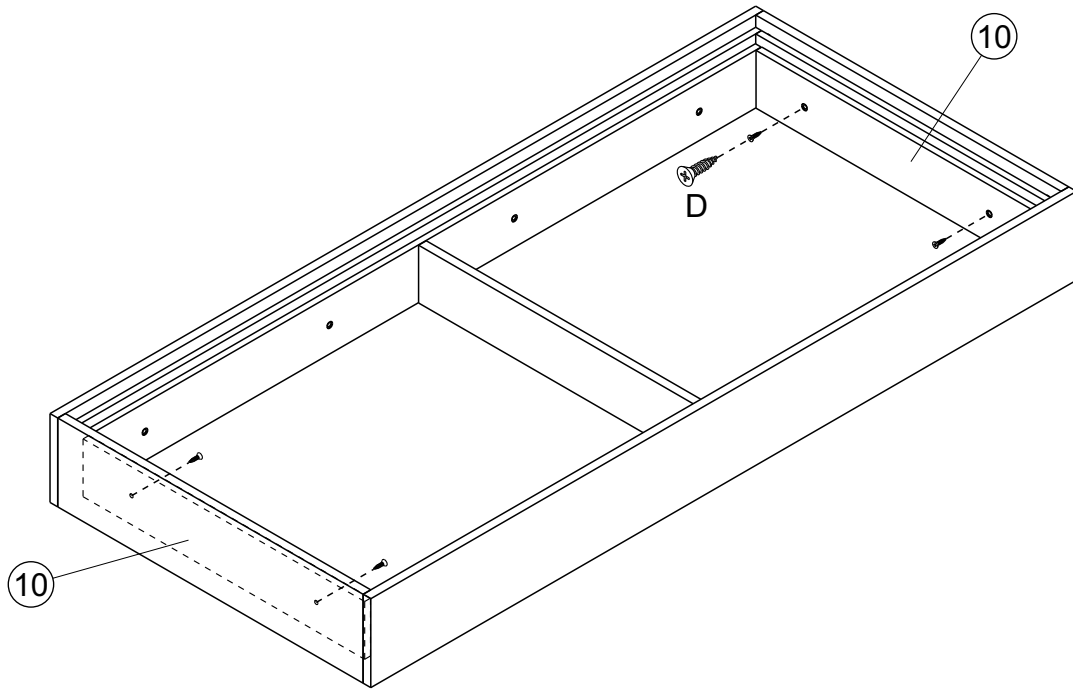

10

G x 4







M6x35mm


I x 1




4mm

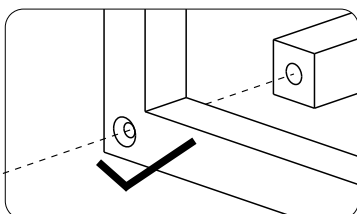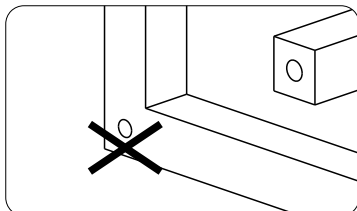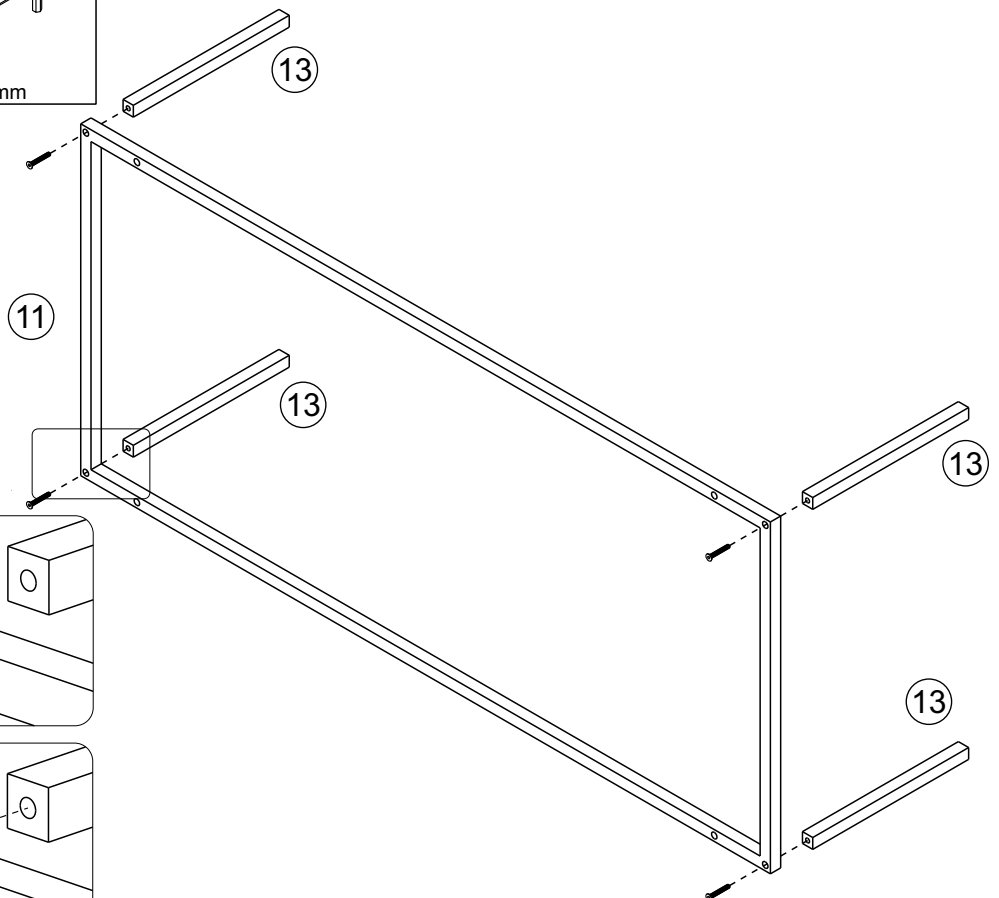



11

G x 4  M6x35mm	H x 6  Ø13.5	I x 1  4mm
---	---	---

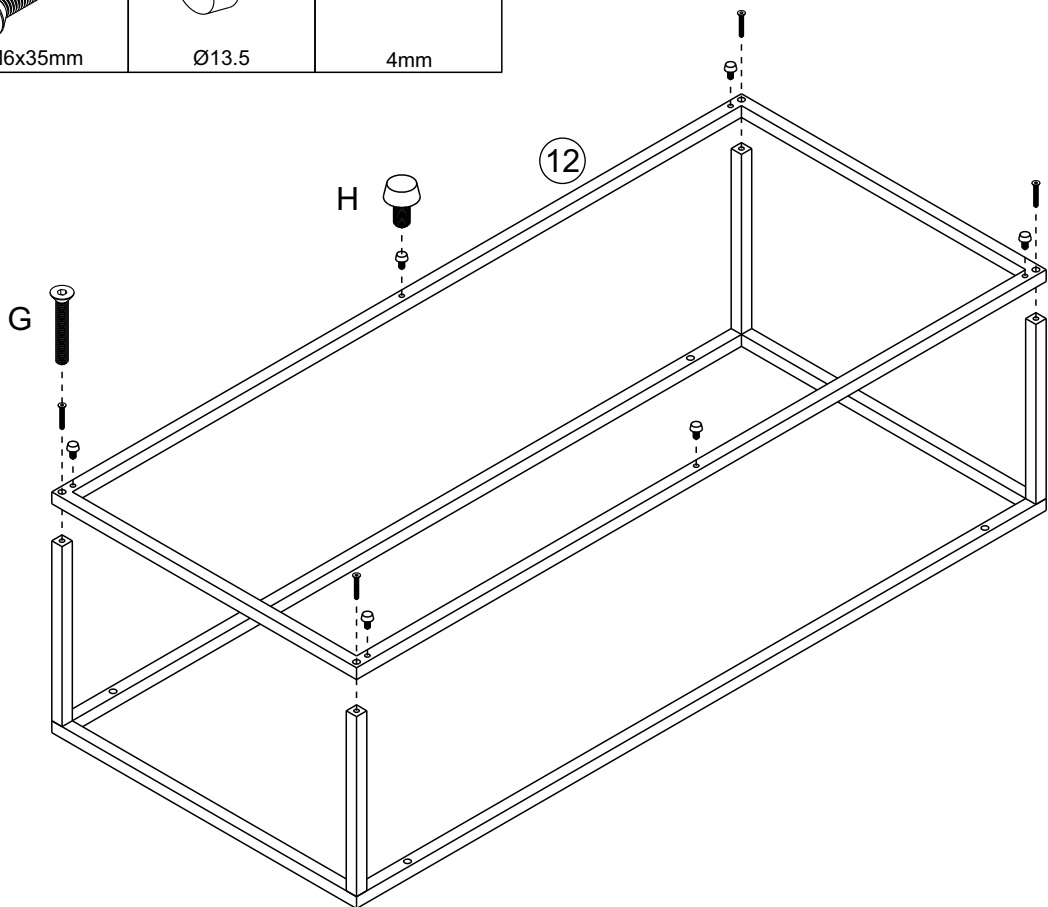



12

F x 4  M6x25mm	I x 1  4mm
---	---

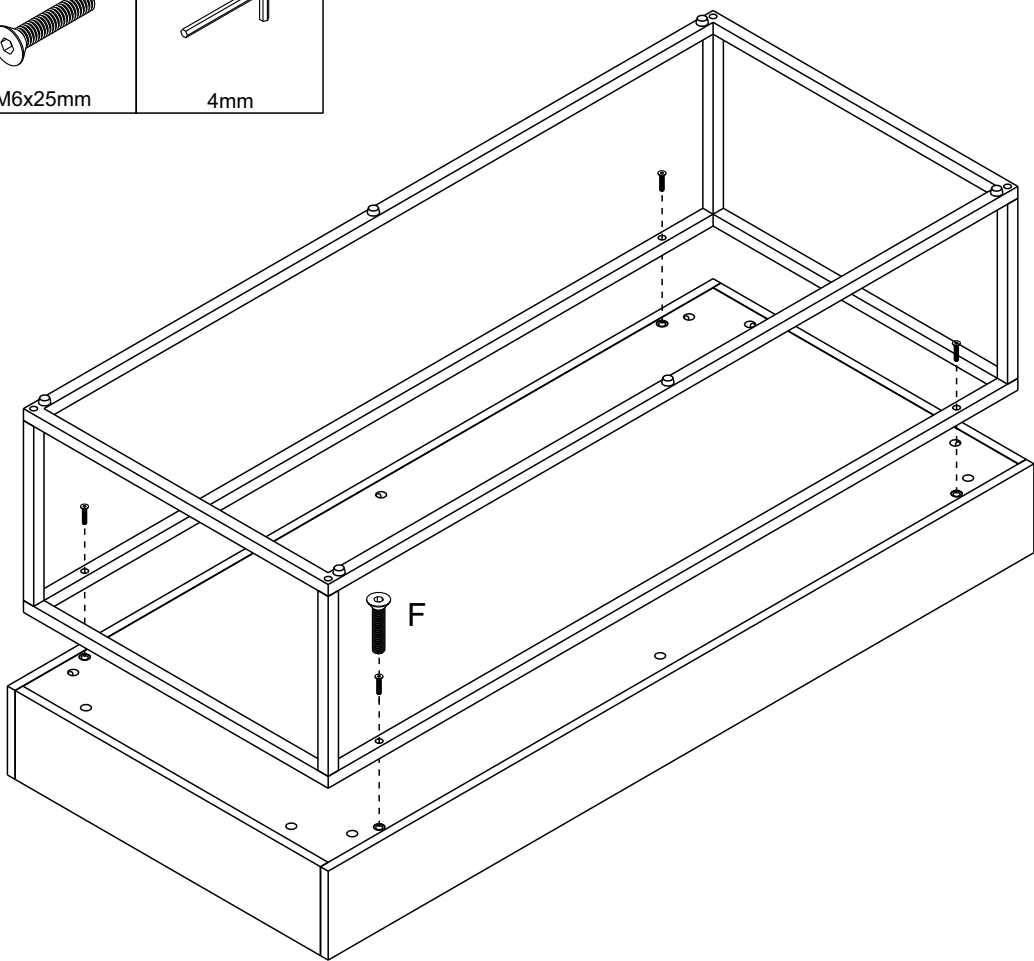


13

L x 12

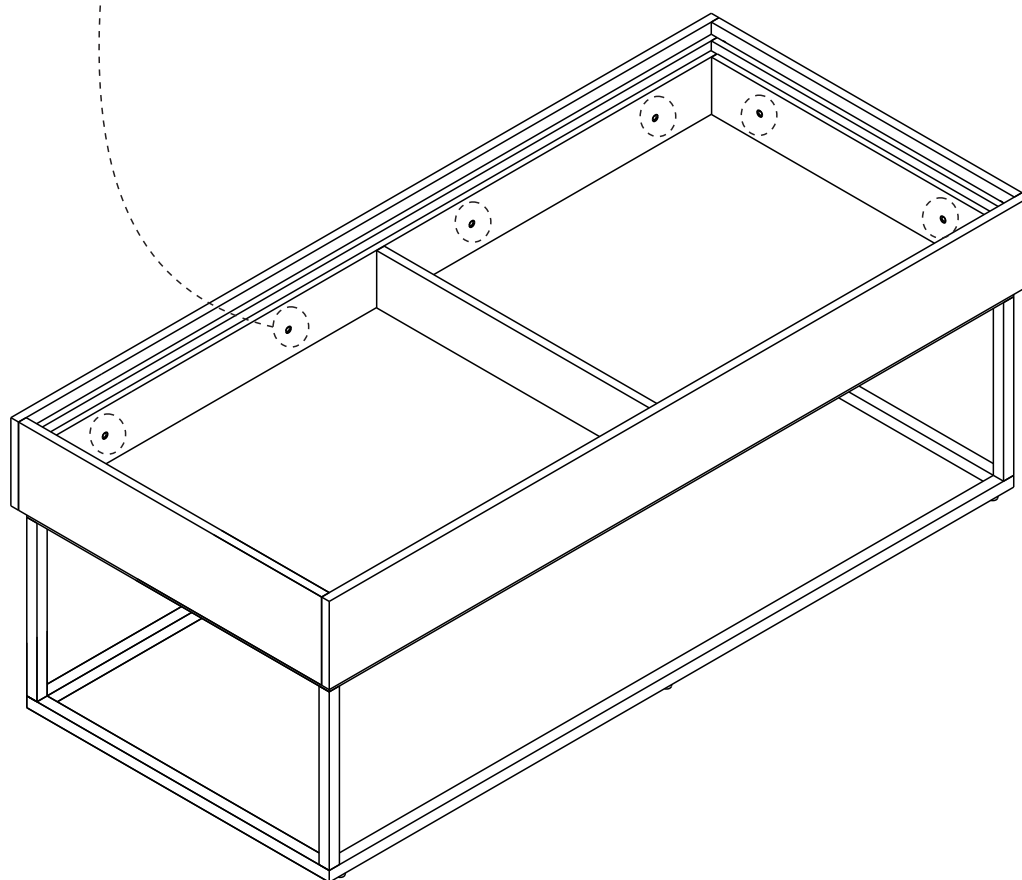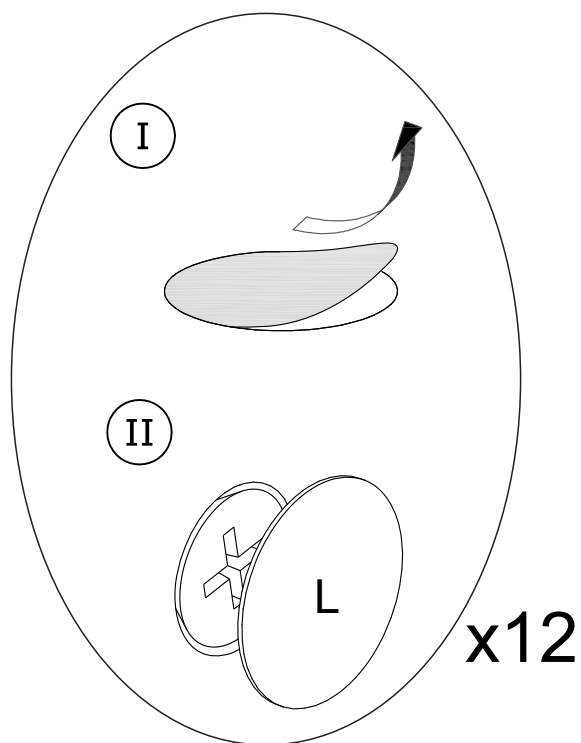

14

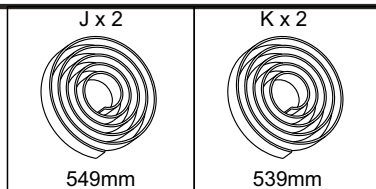

J



K

