

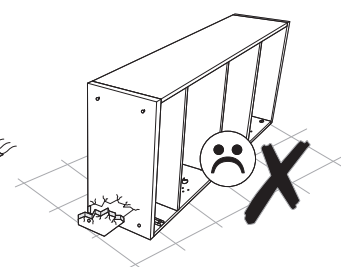
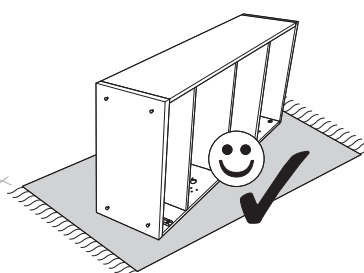
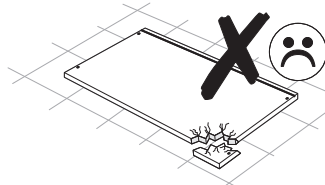
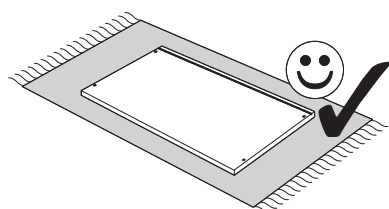
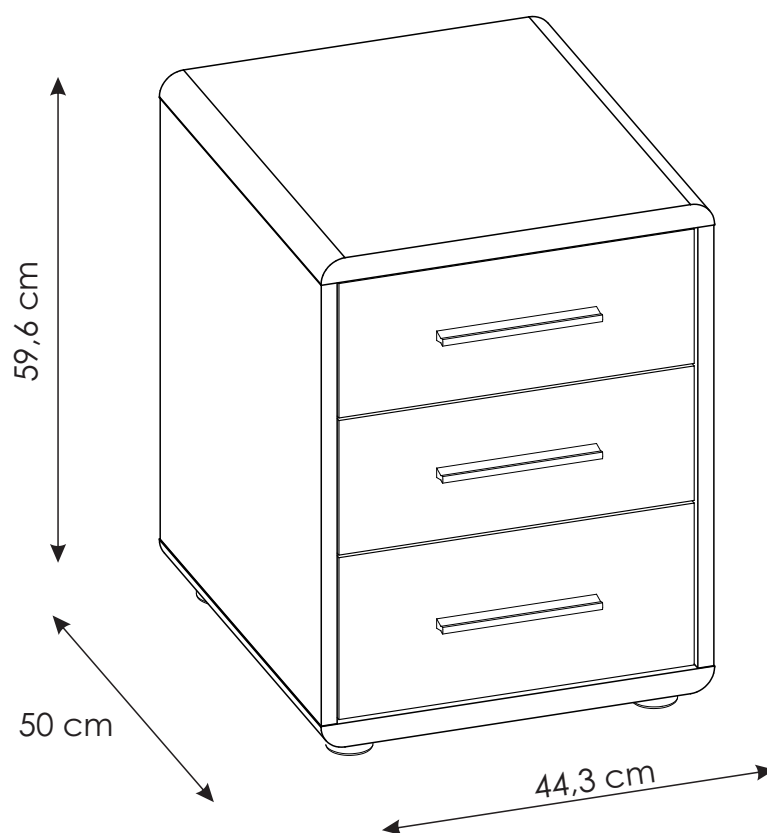
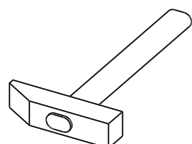
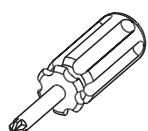
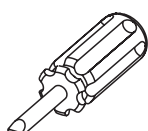
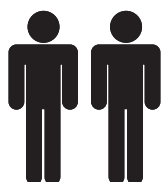
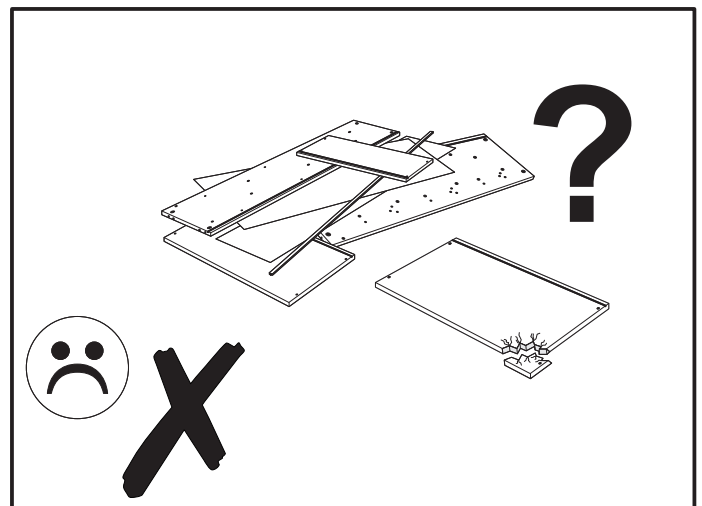
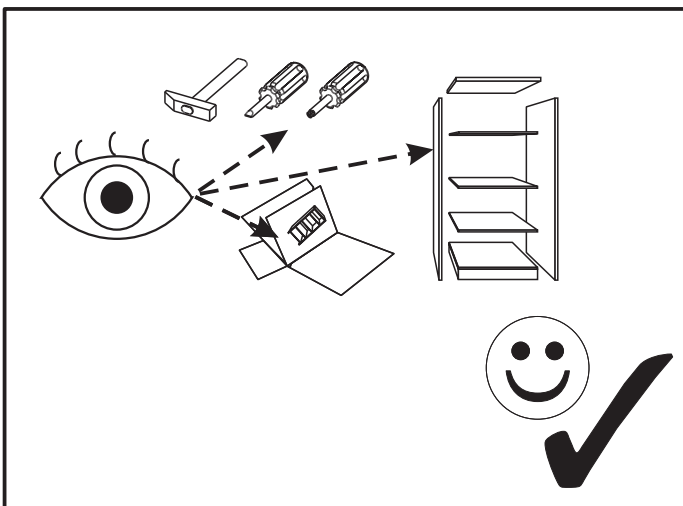
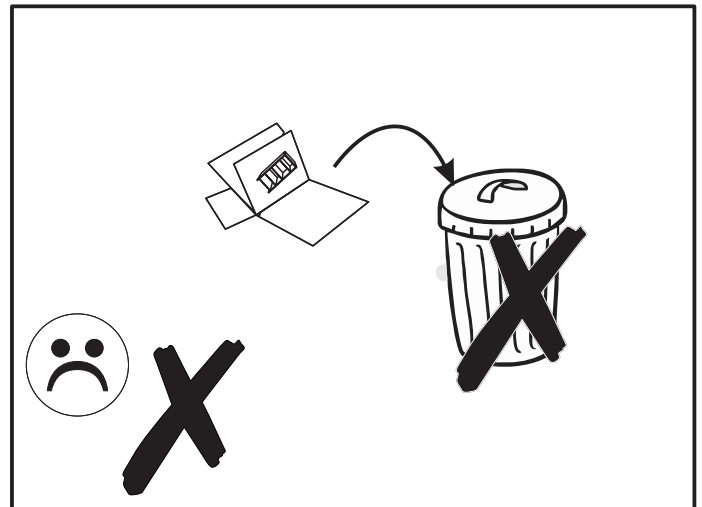
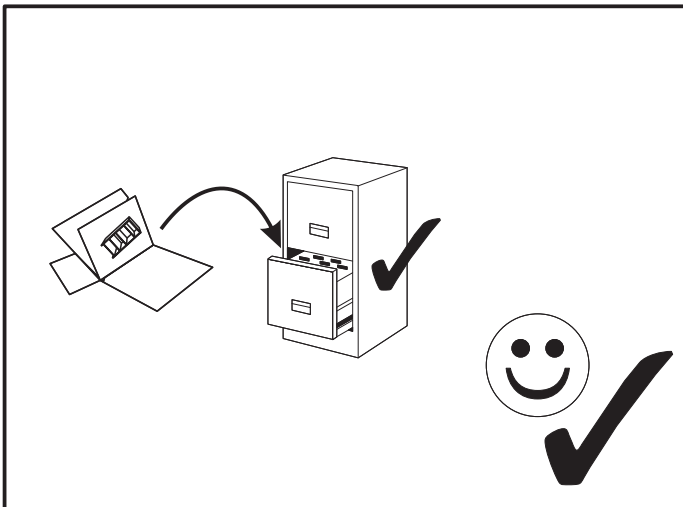
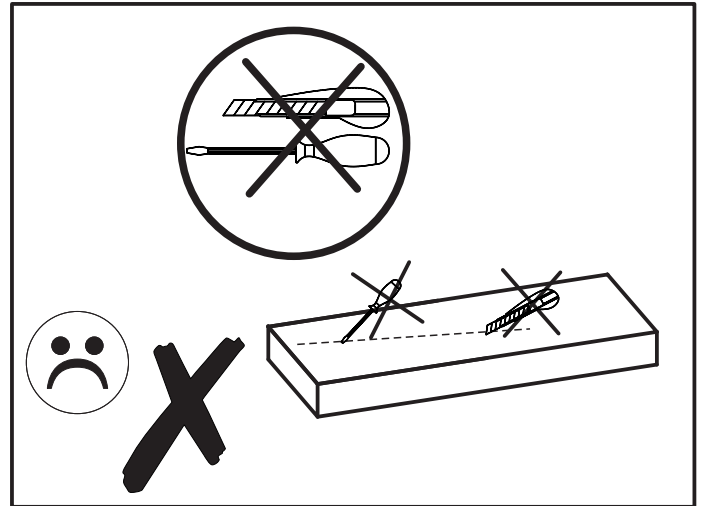
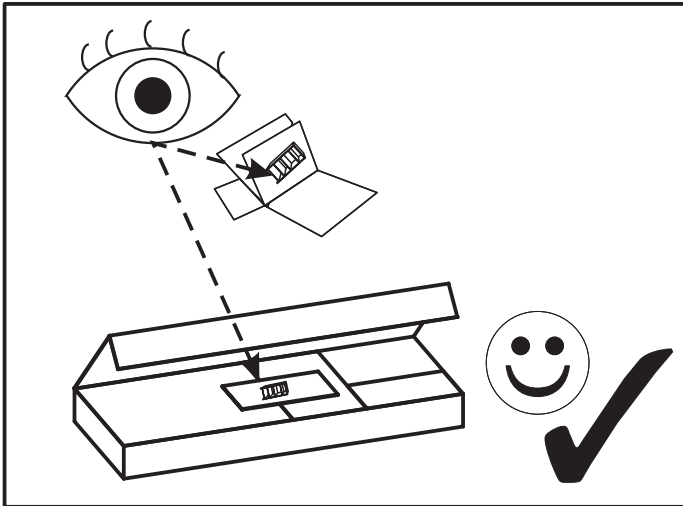






FONTANA FTK06

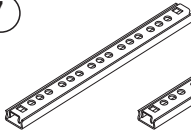




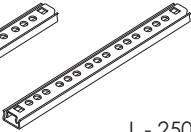


FONTANA FTK06


A1	ø8 x 35 mm	x20	C2	5 x 13 mm	x12	E0		x8
								
E1	ø15 x 12,5 mm	x8	E3	ø12 x 10 mm	x10	F1		x18
								
G0		x6	G1	7 x 50 mm	x6	H1	L - 180 mm	x3
								
I4	3,5 x 27 mm	x6	I10	3,5 x 22 mm	x4	K1	4 x 9 mm	x6
								
M		x1	N1	3 x 16 mm	x10	O15		x4
								
R4		x7	T7		x3			
				 				
				L - 250 mm				

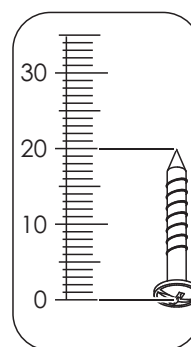


FONTANA FTK06

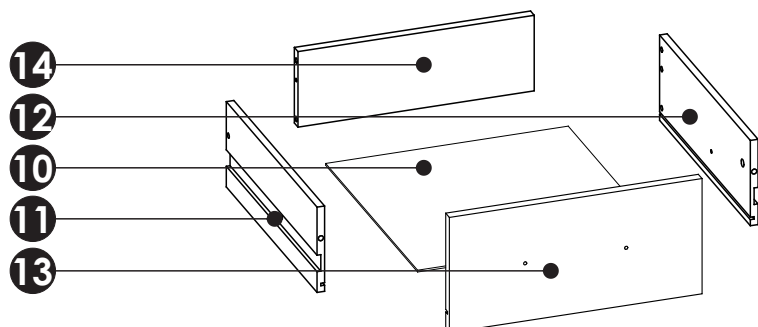
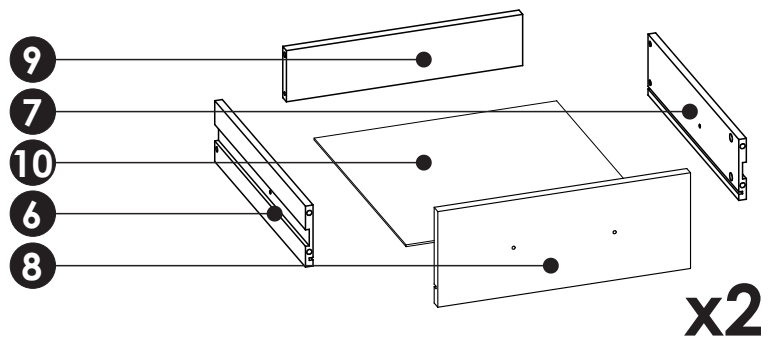
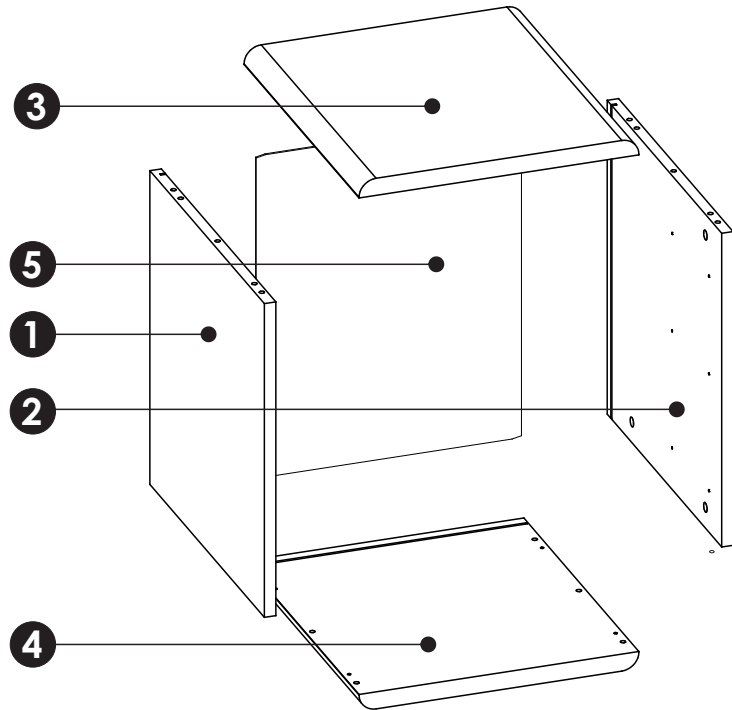
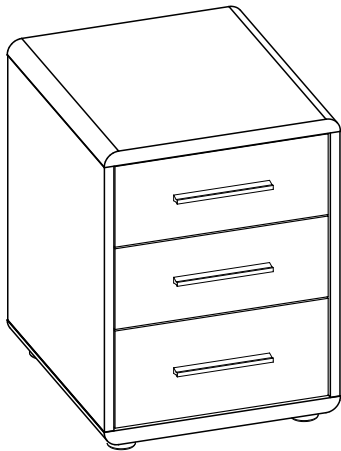


1	498	515	18	x1	1/1
2	498	515	18	x1	1/1
3	500	443	28	x1	1/1
4	500	443	28	x1	1/1
5	525	420	3	x1	1/1
6	395	100	12	x2	1/1
7	395	100	12	x2	1/1
8	400	157	16	x2	1/1
9	374	84	16	x2	1/1
10	384	400	3	x3	1/1
11	395	140	12	x1	1/1
12	395	140	12	x1	1/1
13	400	189	16	x1	1/1
14	374	124	16	x1	1/1

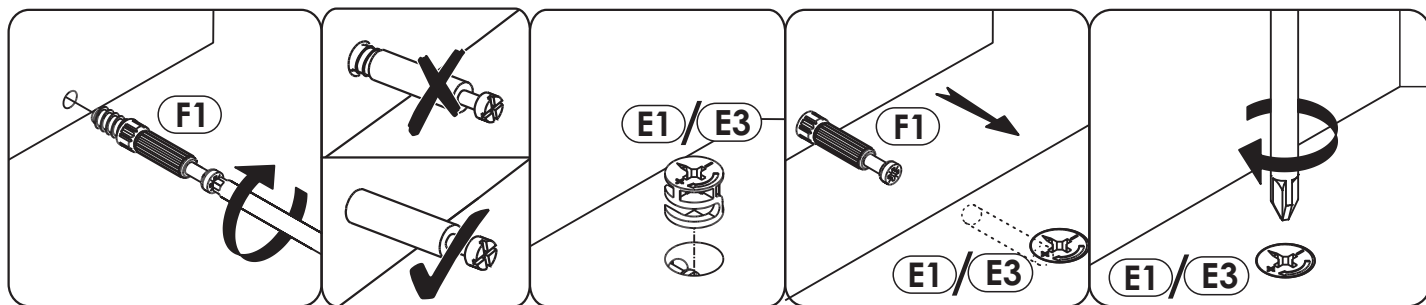


1 ►

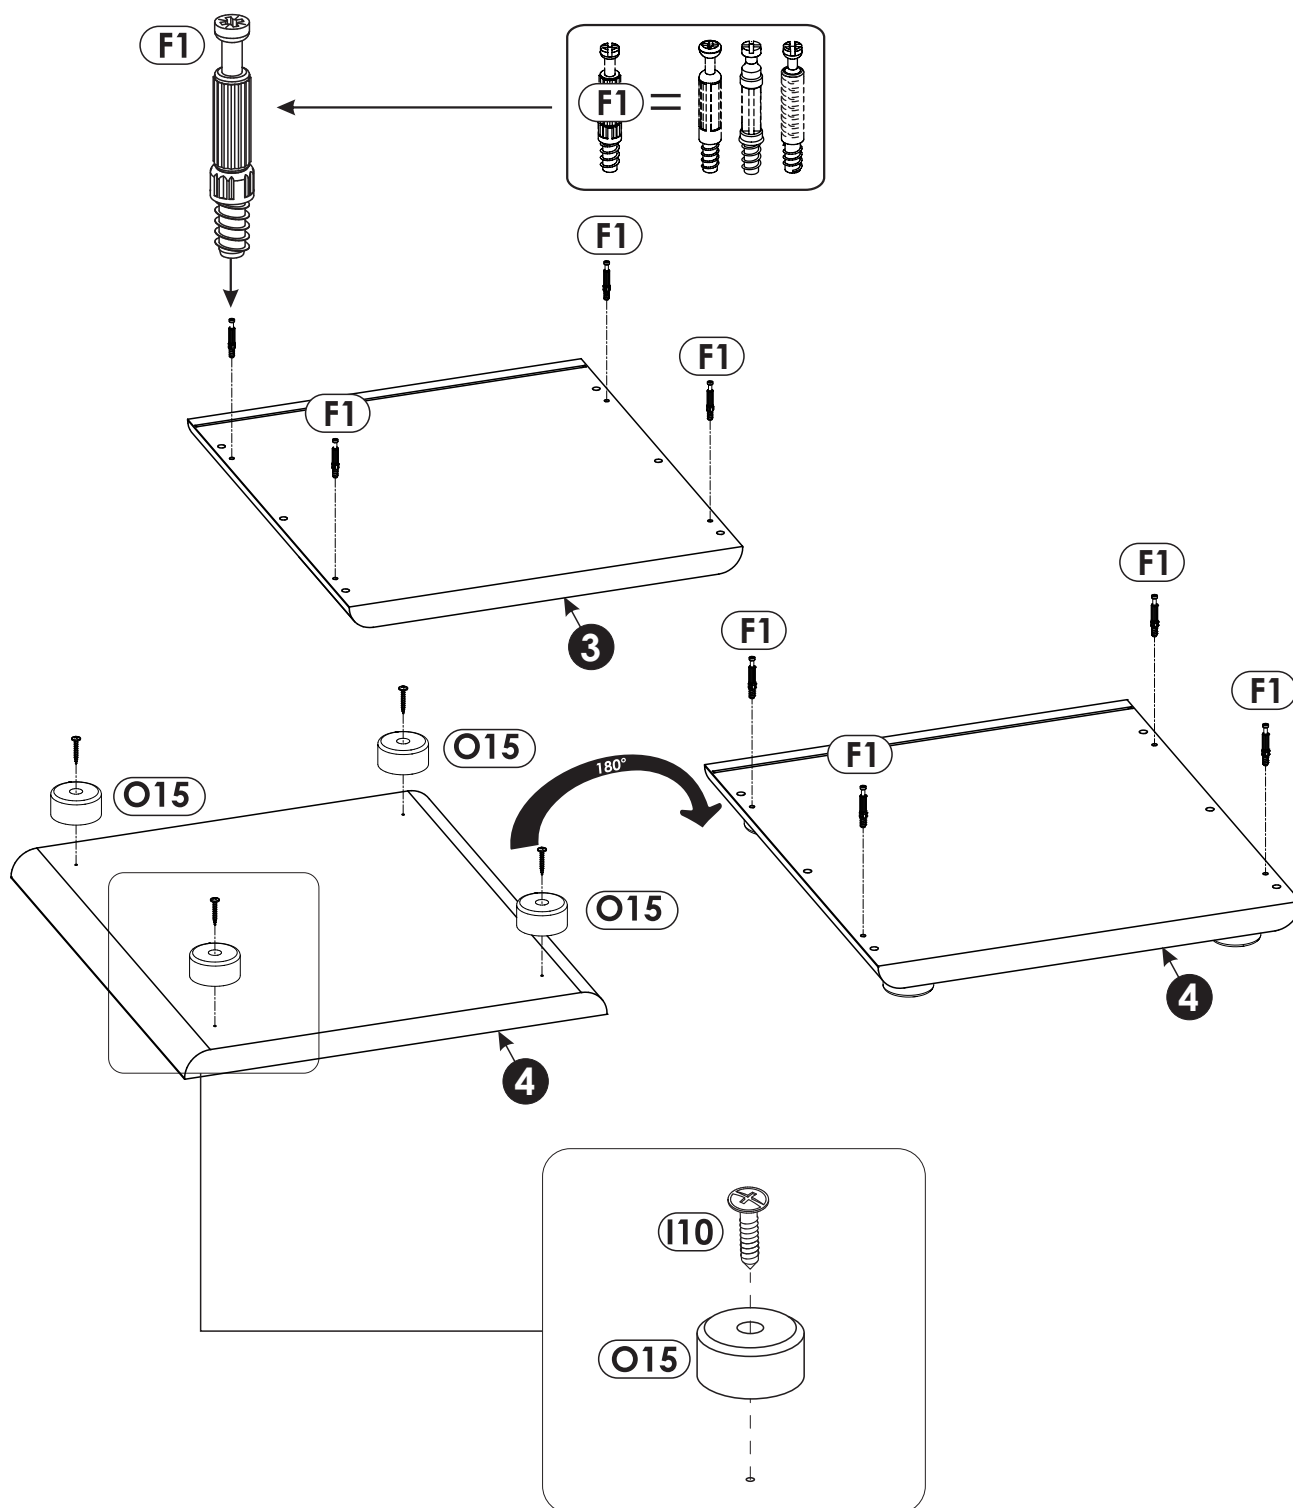


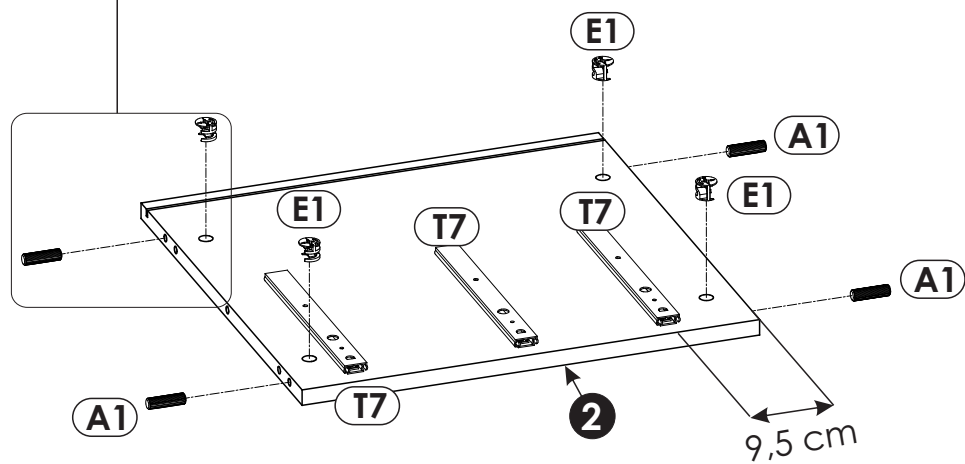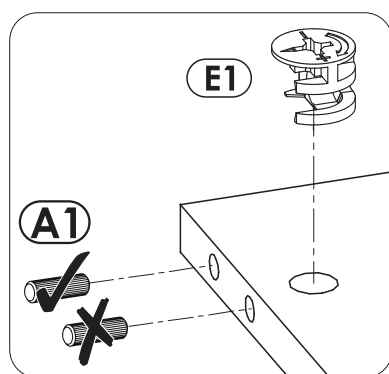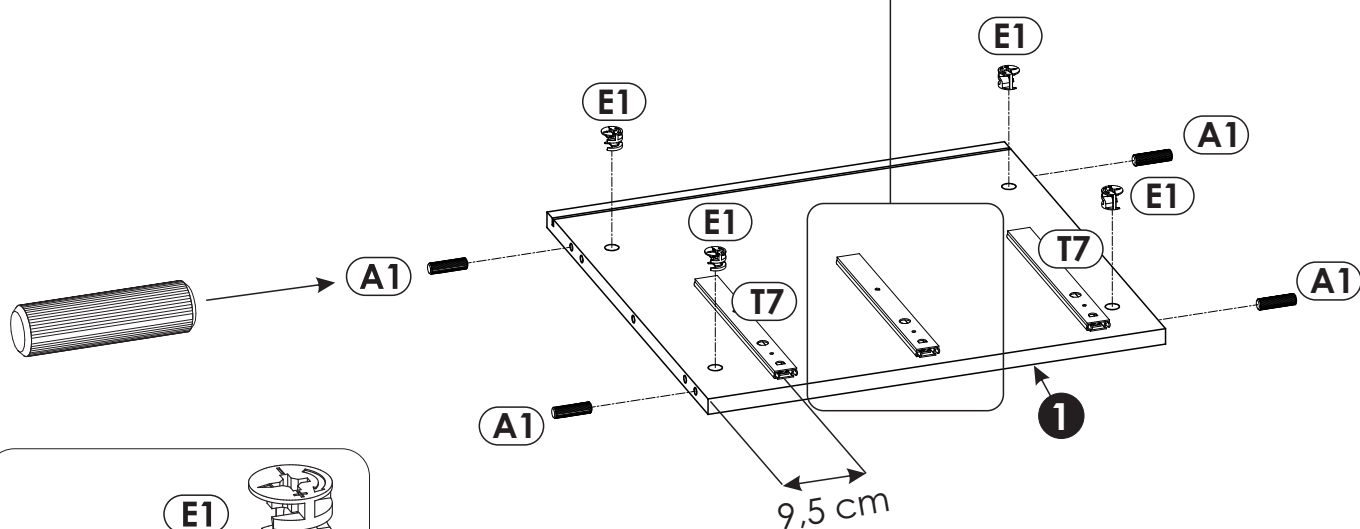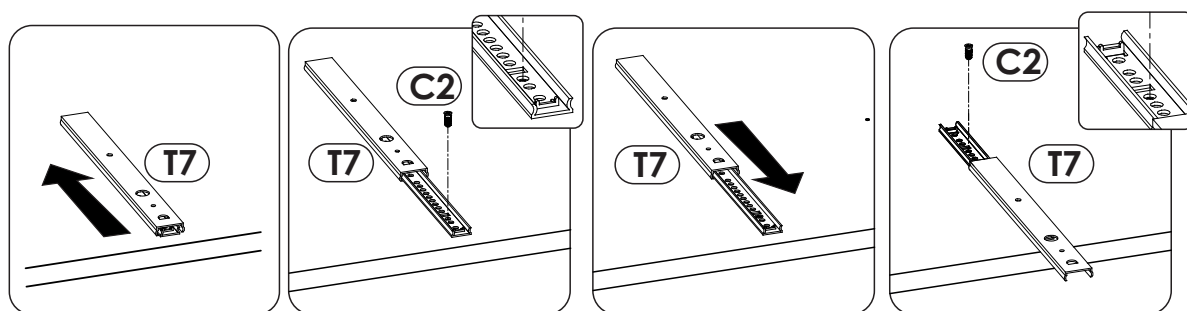




5▶

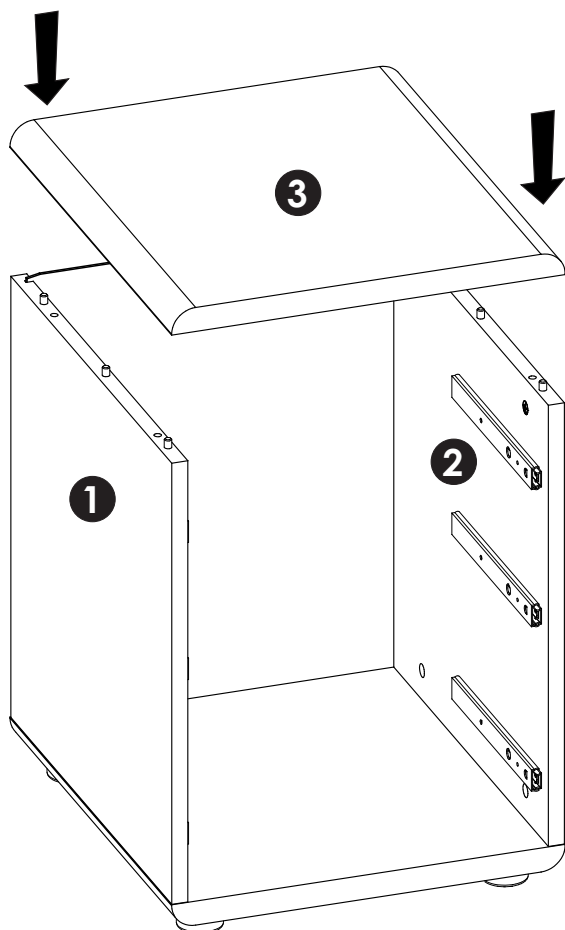

6▶

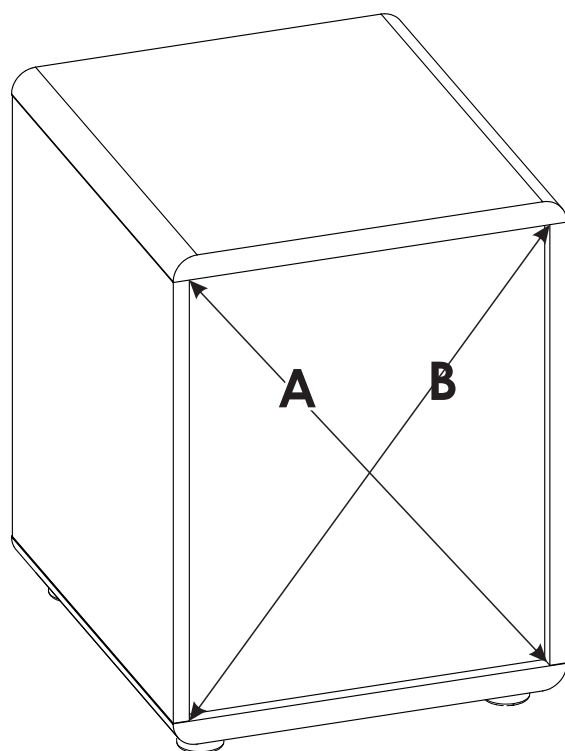


A=B

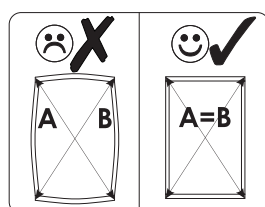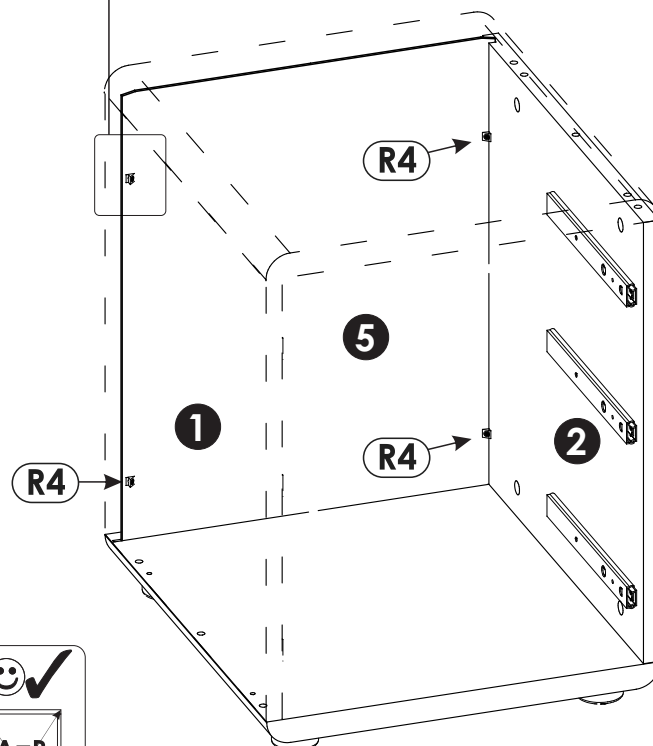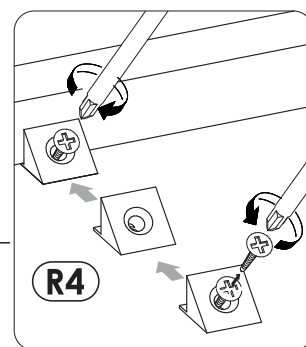

8

Diagram illustrating the correct and incorrect way to insert a screw into a panel. The left side shows a panel with a screw being inserted. The right side shows a panel with a screw being inserted. The diagram also shows a screw being inserted into a panel, with a callout showing the correct way to insert a screw (G1) and a callout showing the correct way to insert a screw (G0) into a panel.

9▶

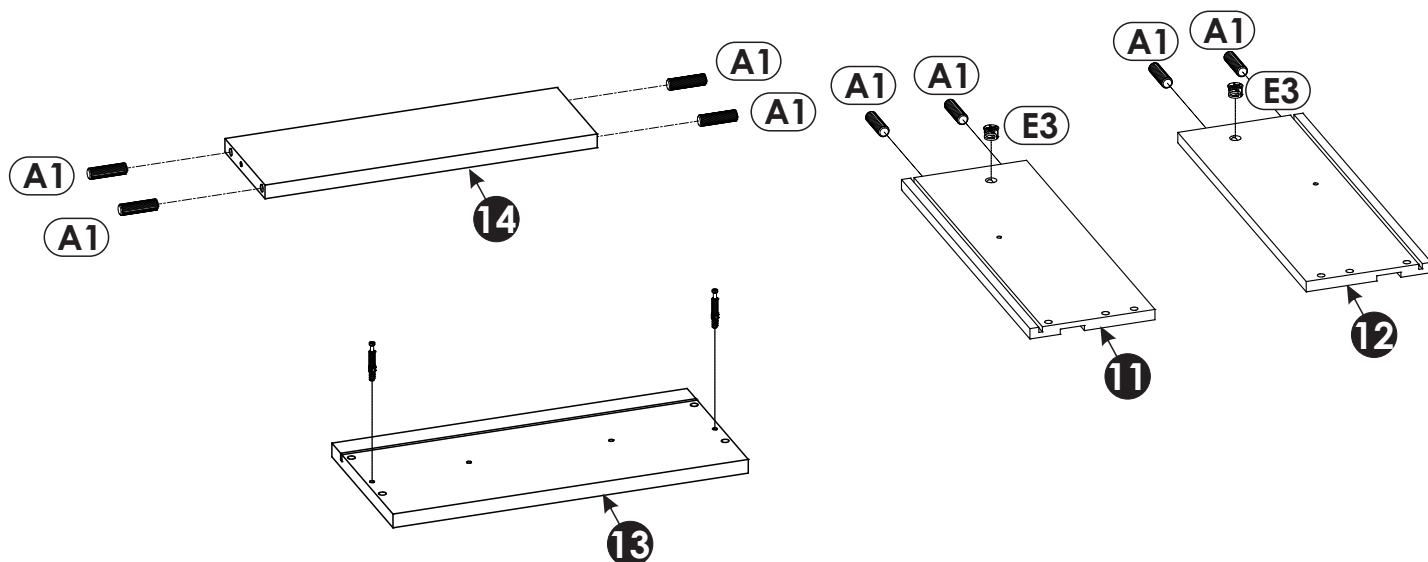

10▶

