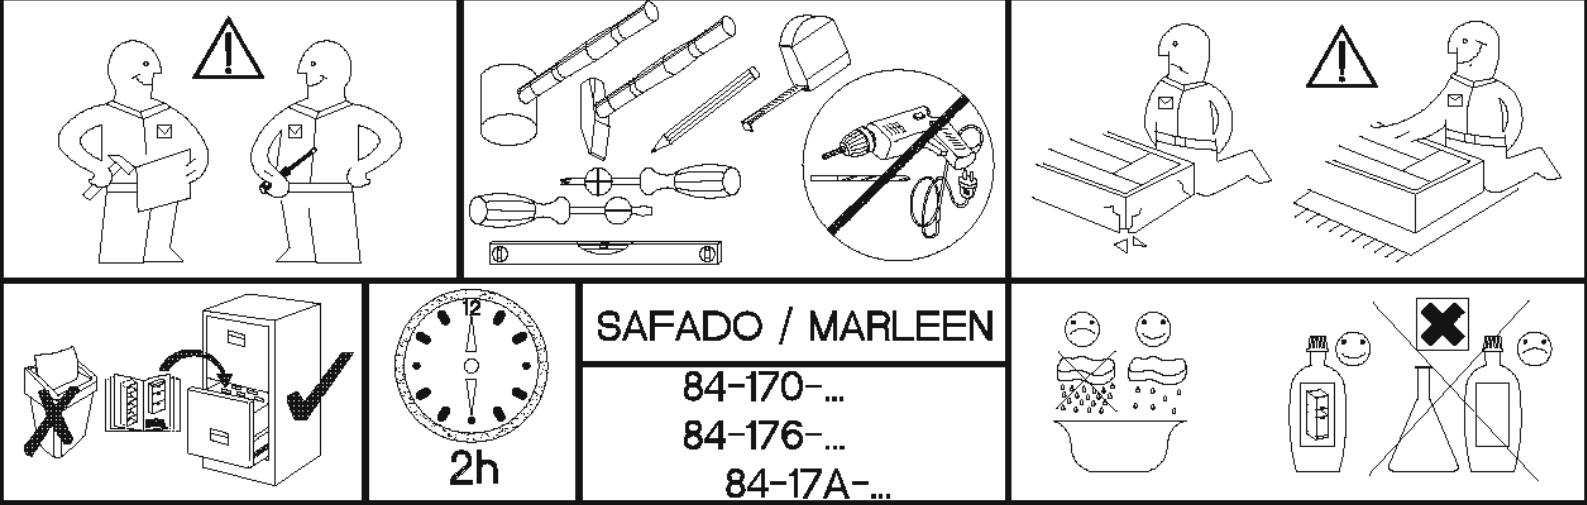
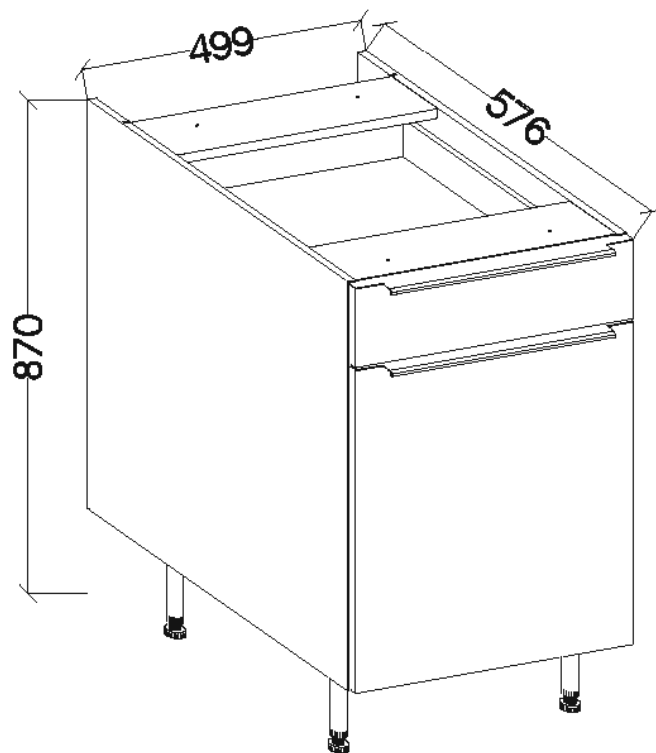






respekta®



 A 12	 B 8	 B2 2	 C5 2	 D2 2
 E1 8	 F15 4	 F16 6	 HG L=450mm 2	 I11 1
 J3 8	 L 1	 M2 8	 O1 1	 P5 32
 P7 8-10	 P11 6	 R3 4	 SL50 2	

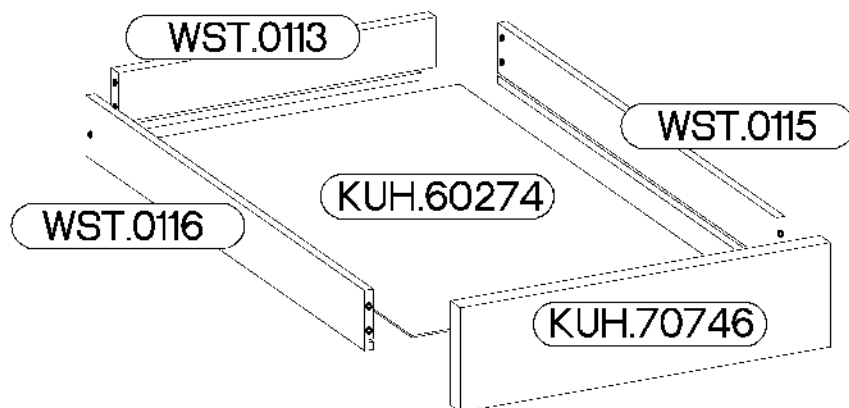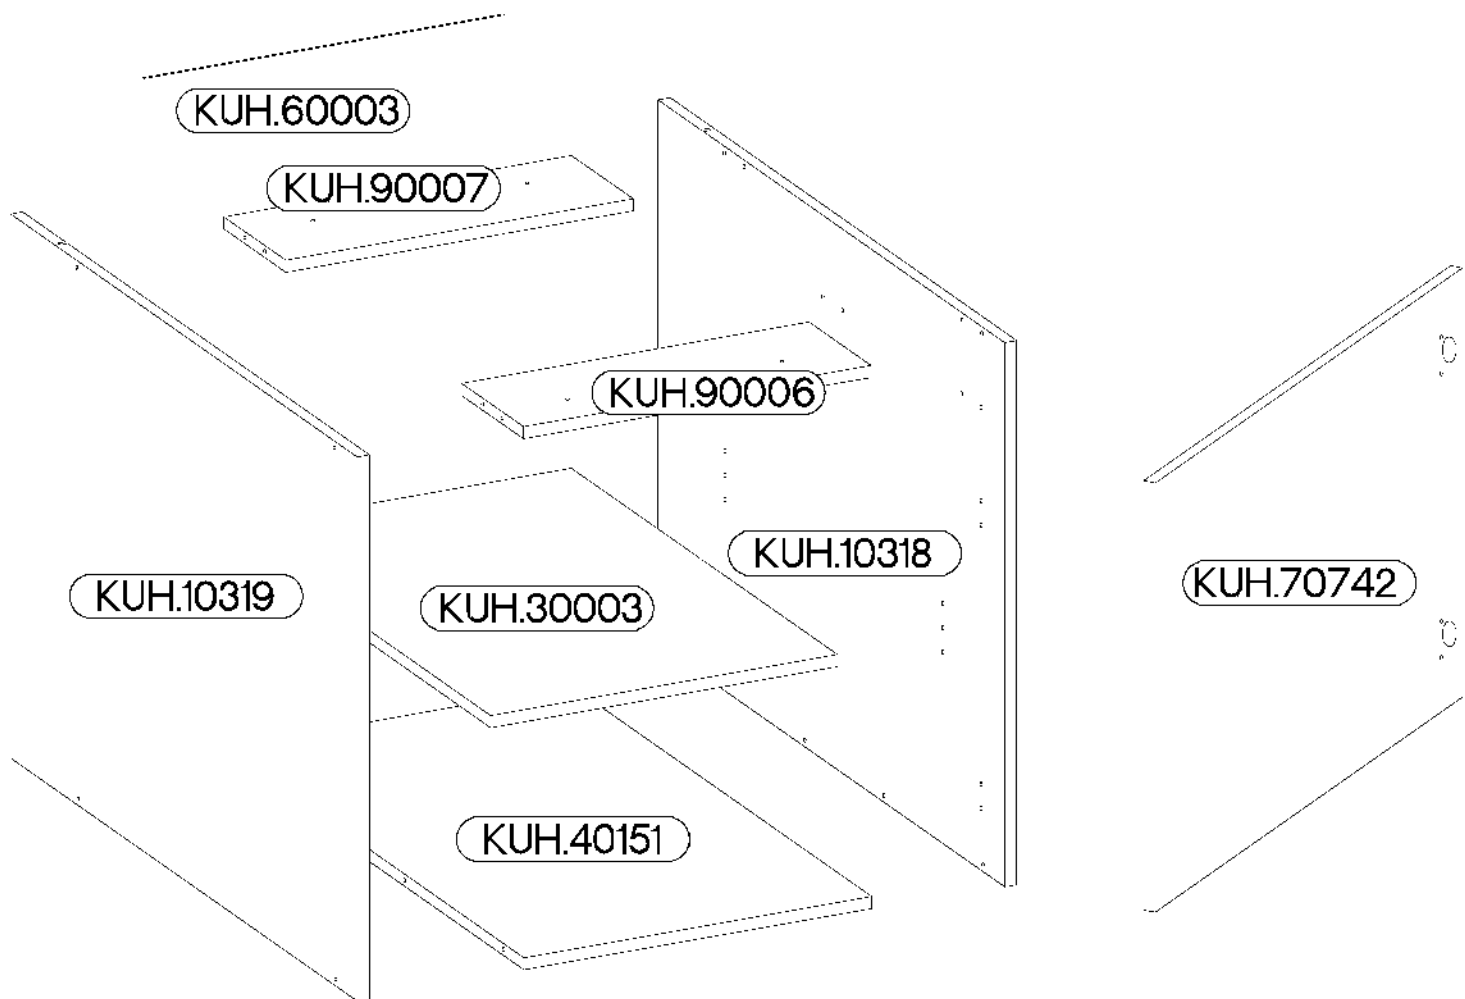ISM-KUH-01600






Colli	Spare Part	Dimension
Colli 1/6	KUH.10318	720x560x16
	KUH.10319	720x560x16
	KUH.30003	466x430x16
	KUH.40151	467x485x16
	KUH.60003	713x485x2,5
	KUH.60274	448x437x2,5
	KUH.70742	568x496x16
	KUH.70746	138x496x16
	KUH.90006	467x100x16
	KUH.90007	467x100x16
	WST.0113	427x80x12
	WST.0115	450x80x12
	WST.0116	450x80x12












KUH.30003


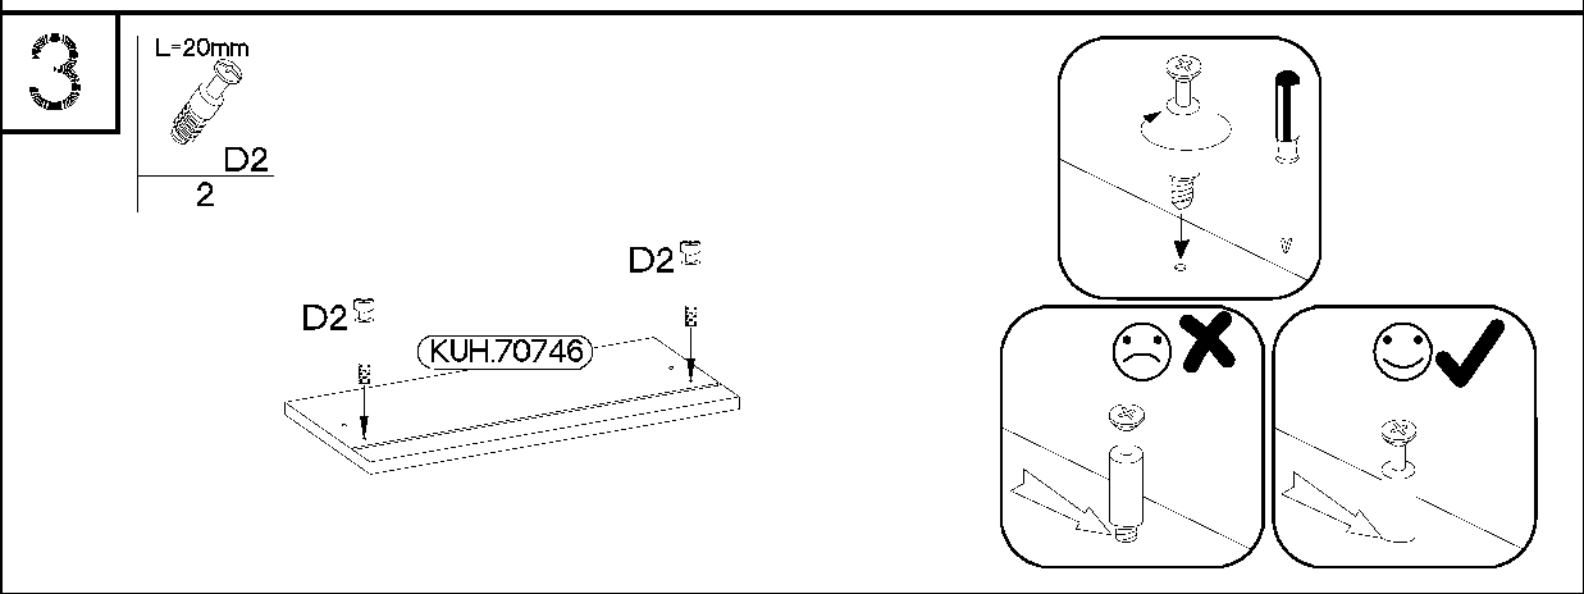
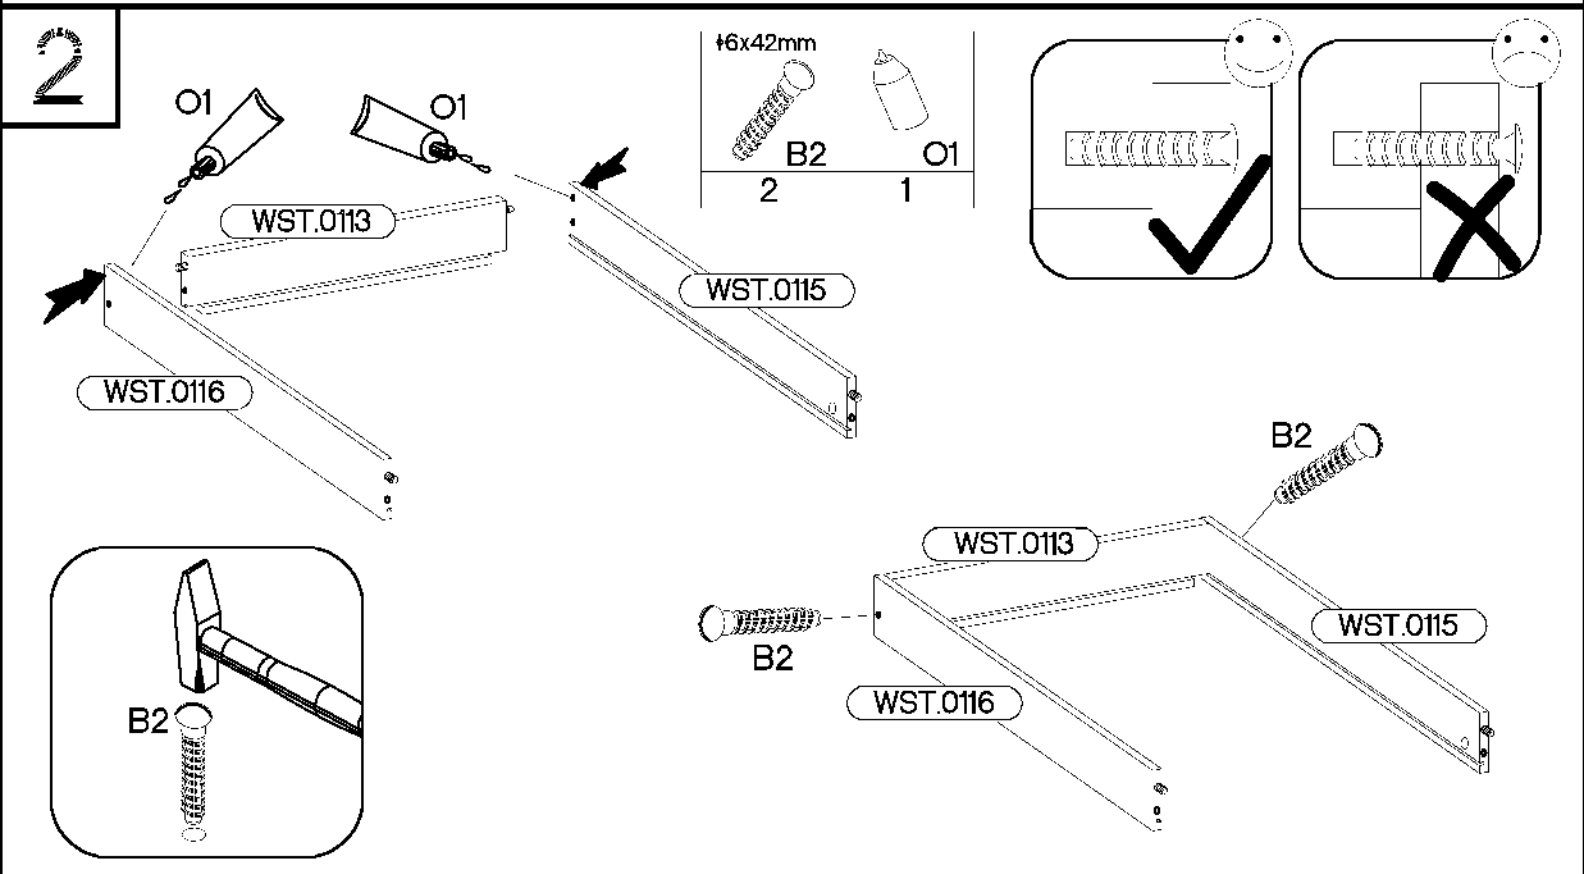
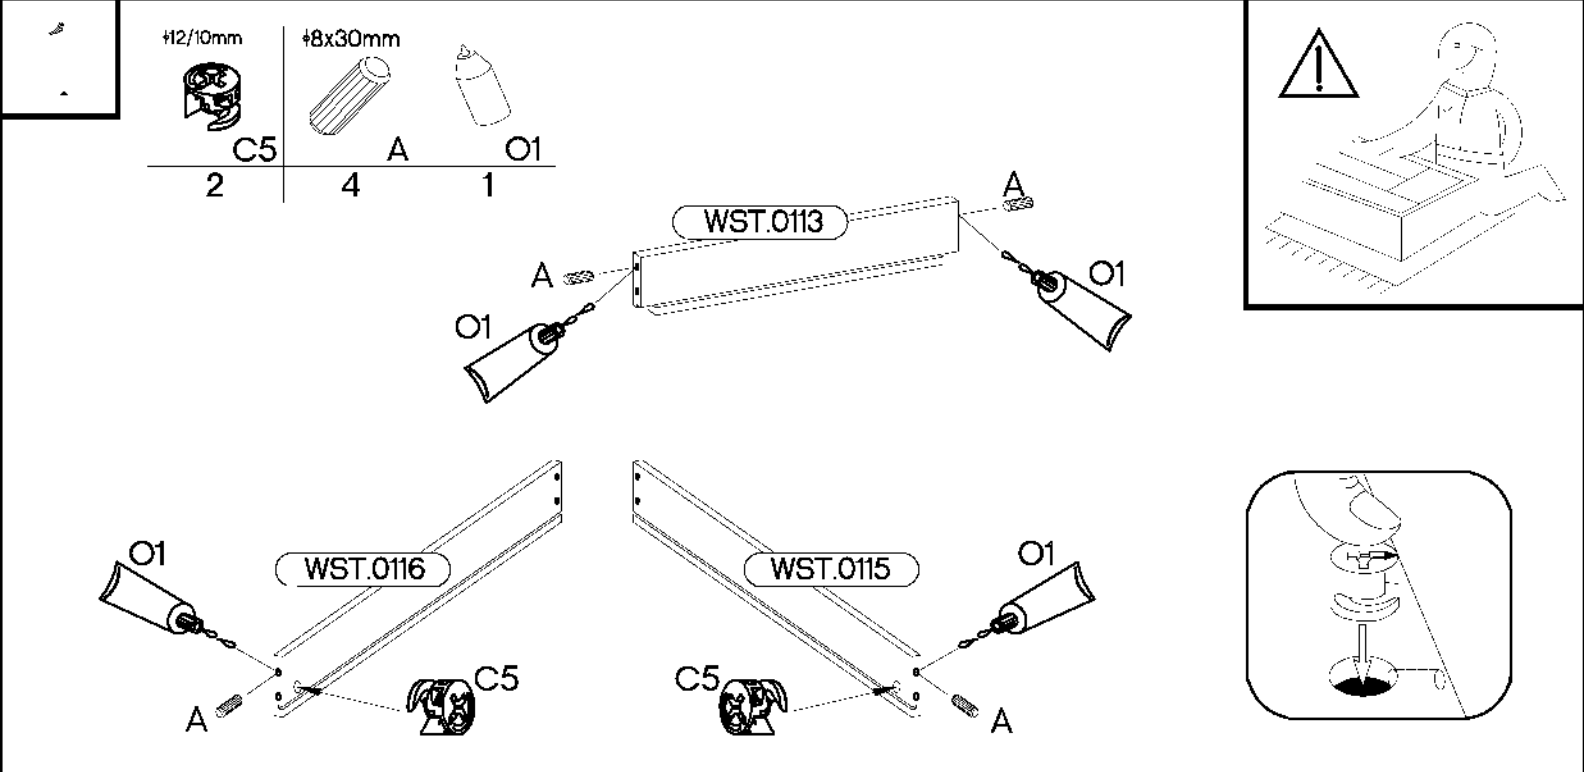
KUH.40151



4

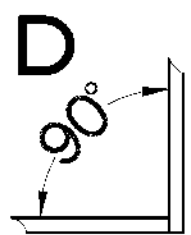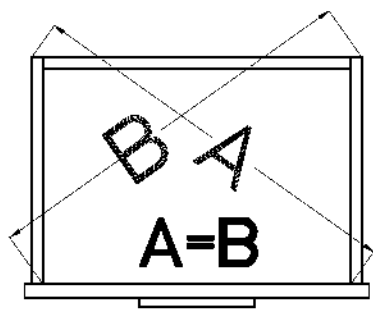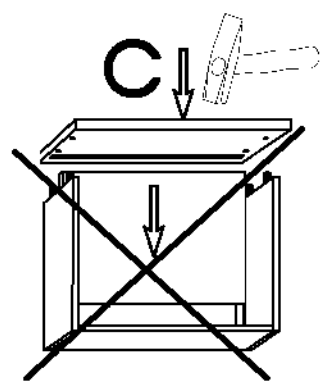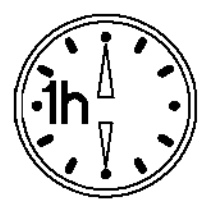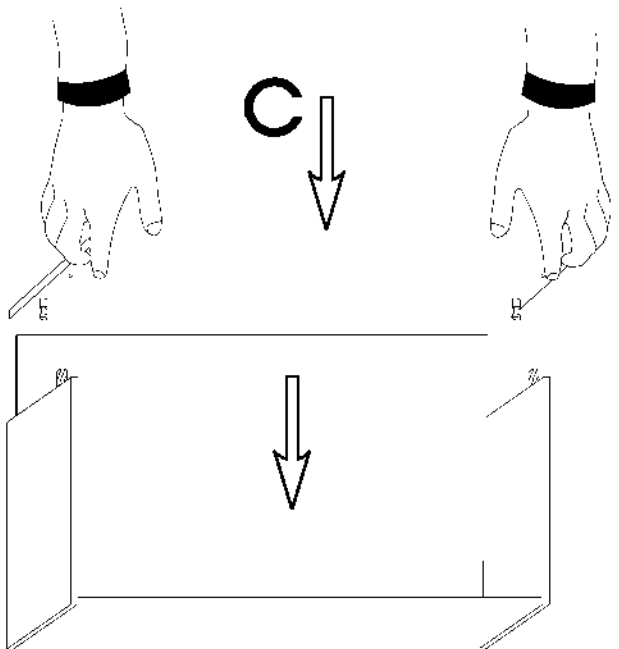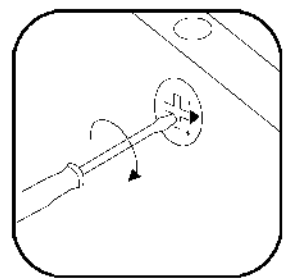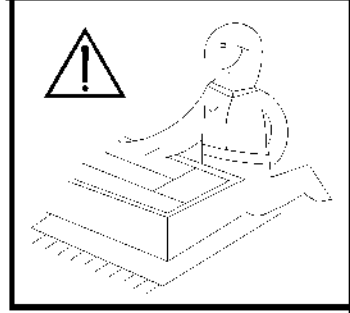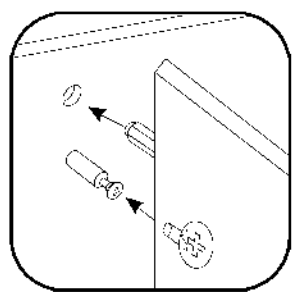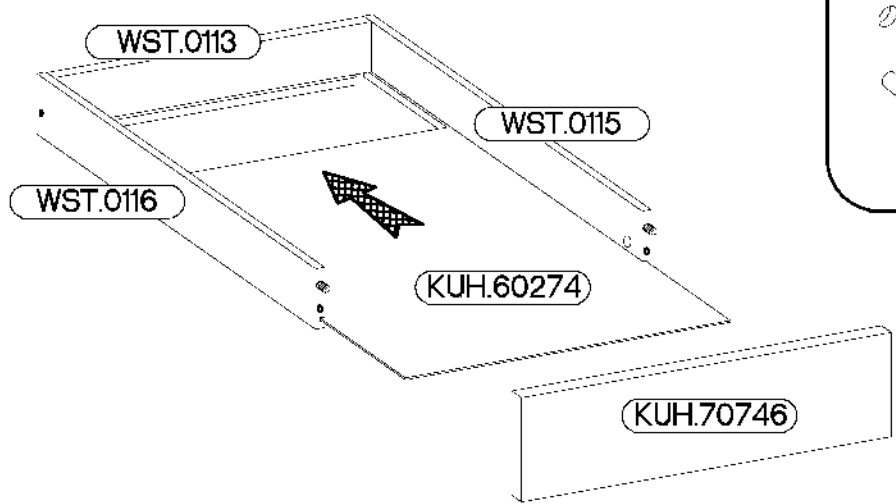

5

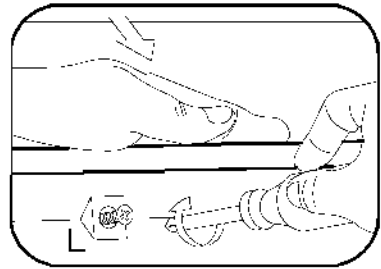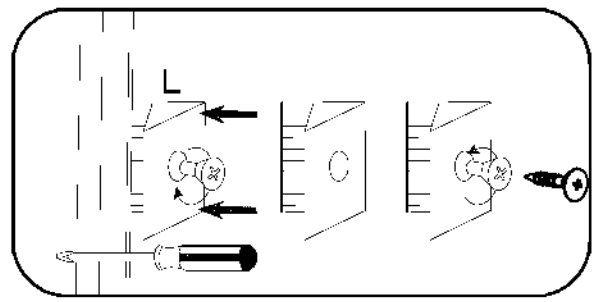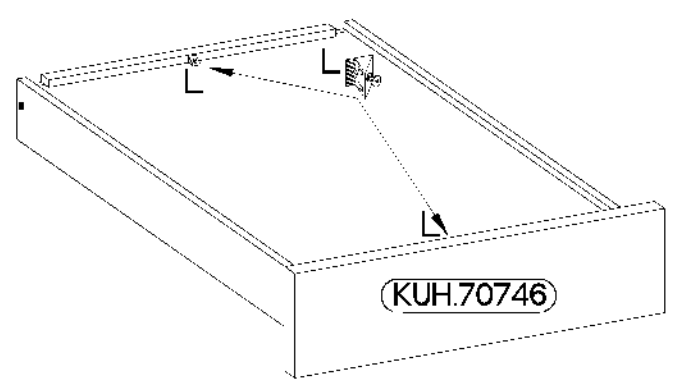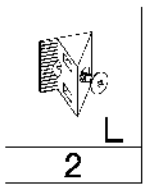

6

4x8x30mm



L



L=450mm

R



I11

4x6.3x13mm

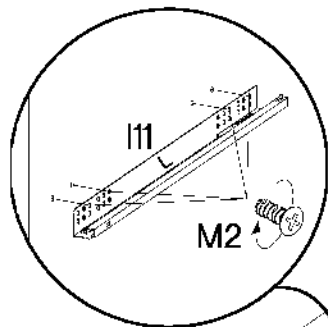
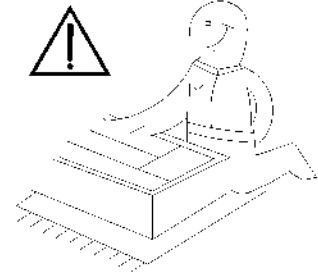
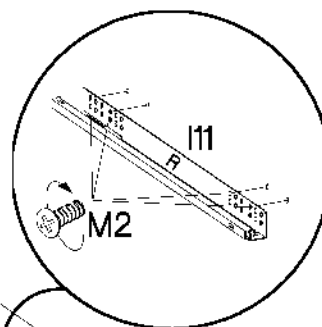


M2

4




1

8



KUH.10318

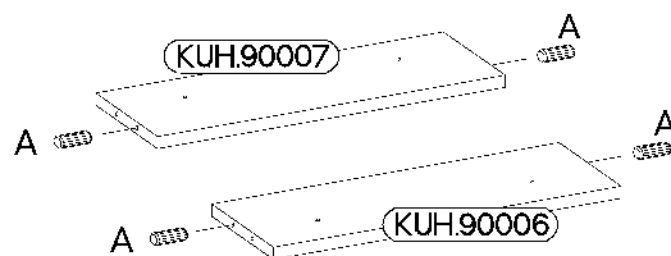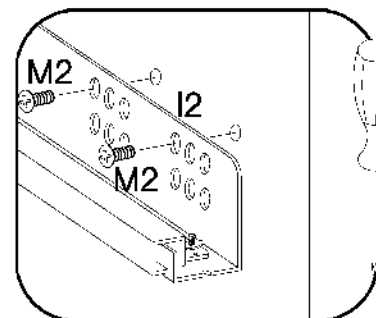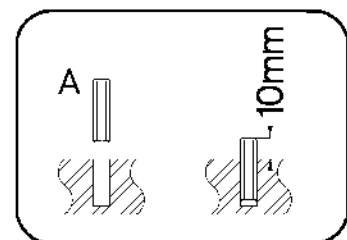KUH.10319



7

F15



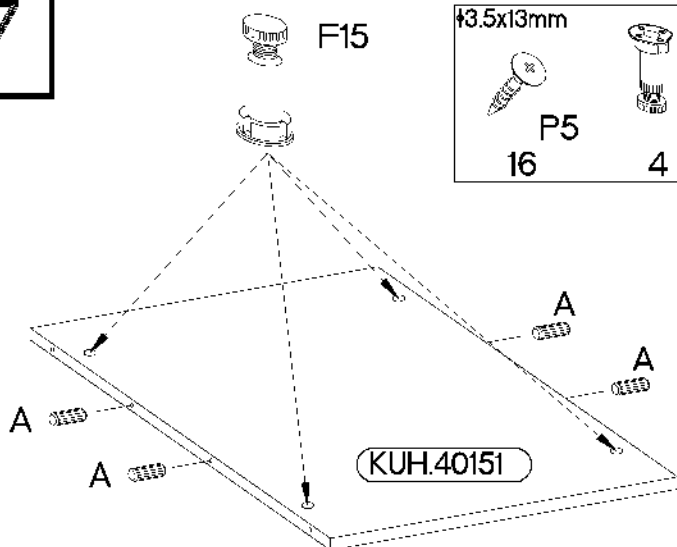
4x3.5x13mm

P5
16






F15

F15
4

4x8x30mm

A
4

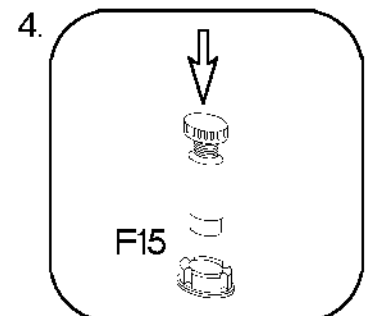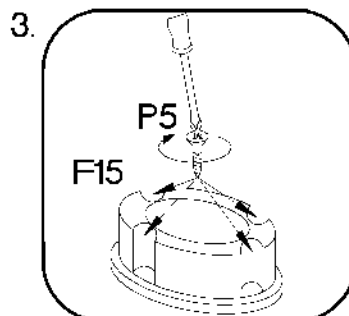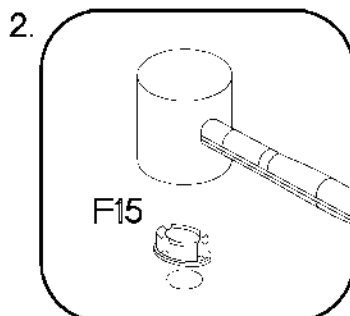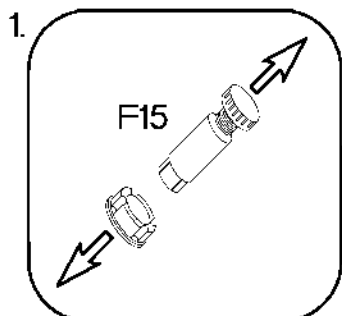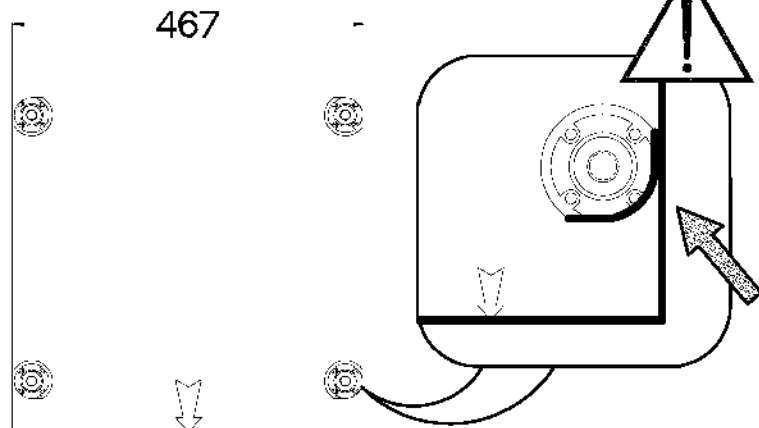KUH.40151





6,4 x 50mm



B

8



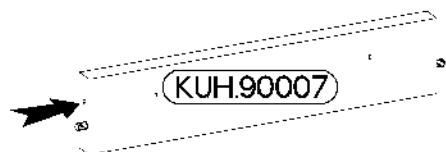
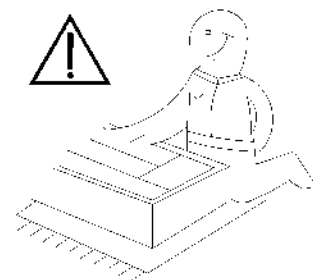
O

1




E1







8








KUH.90007

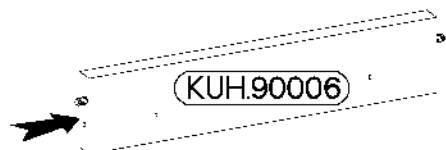

KUH.90006

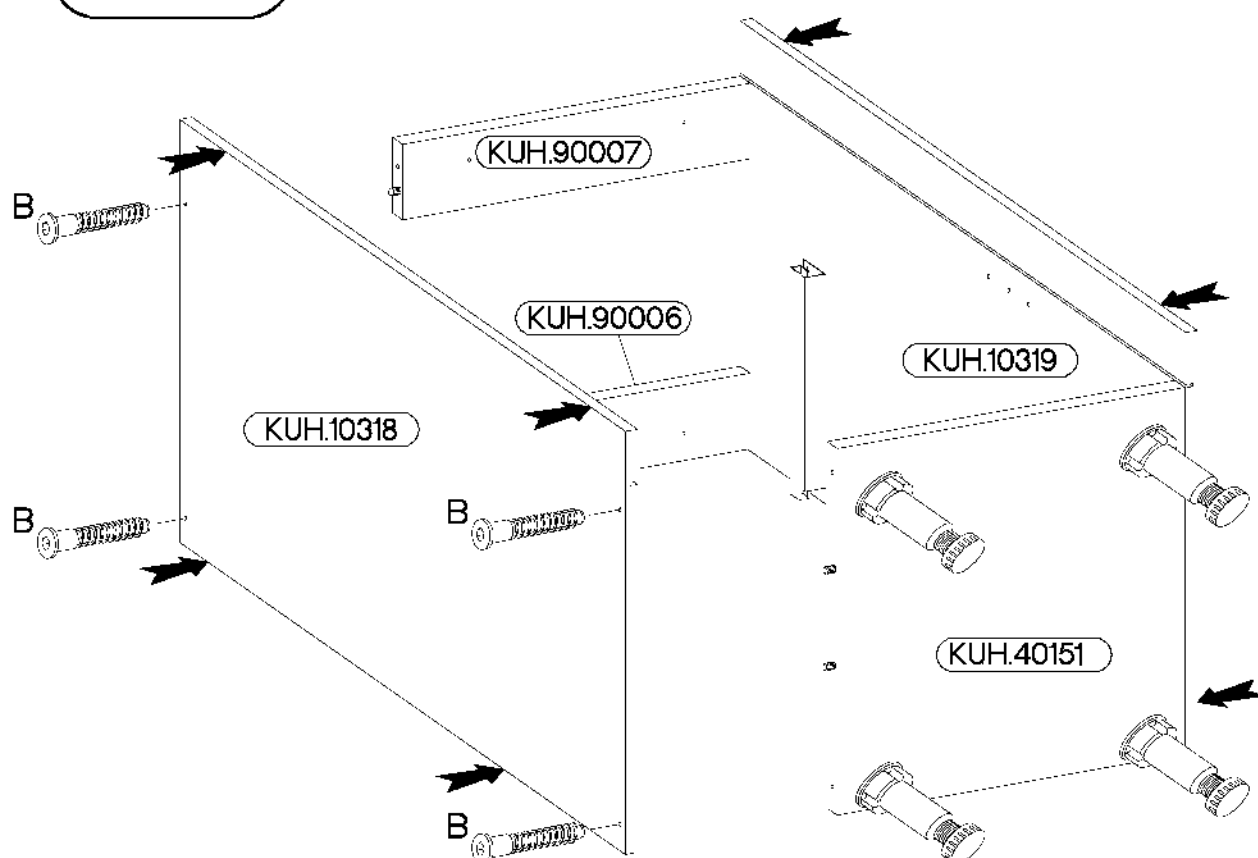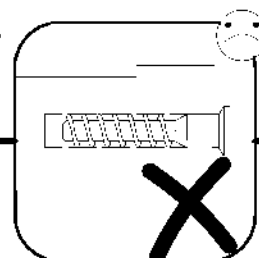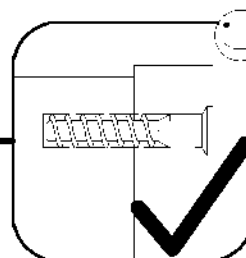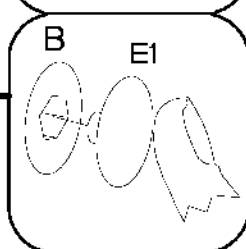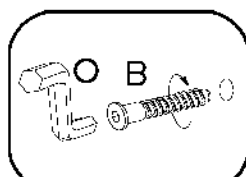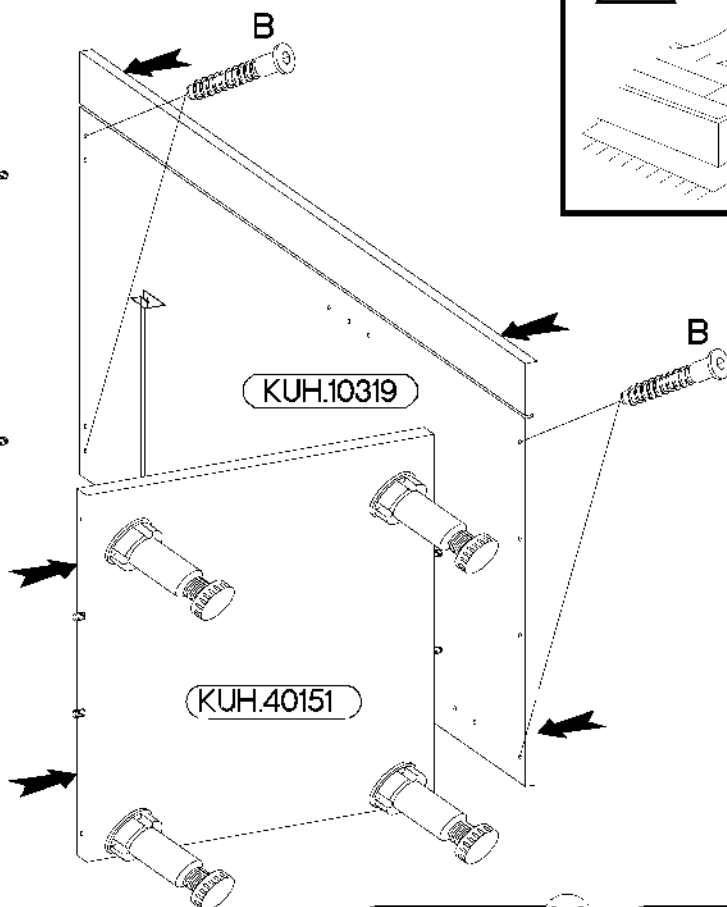

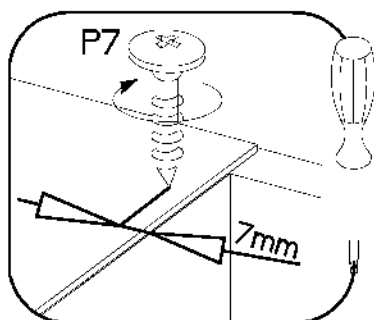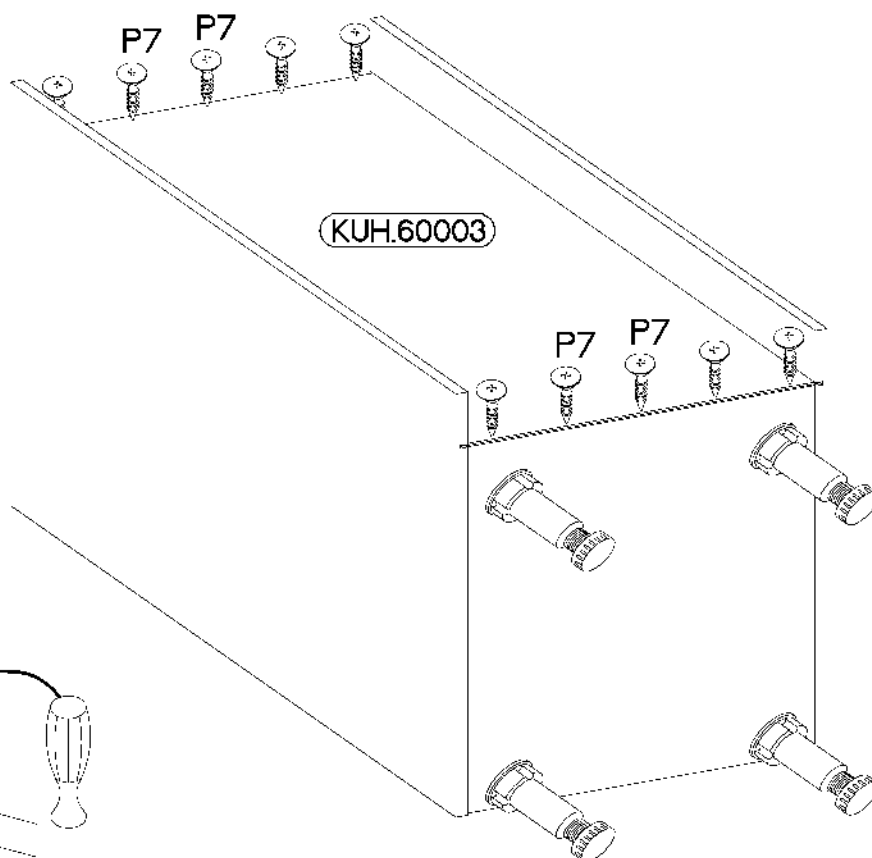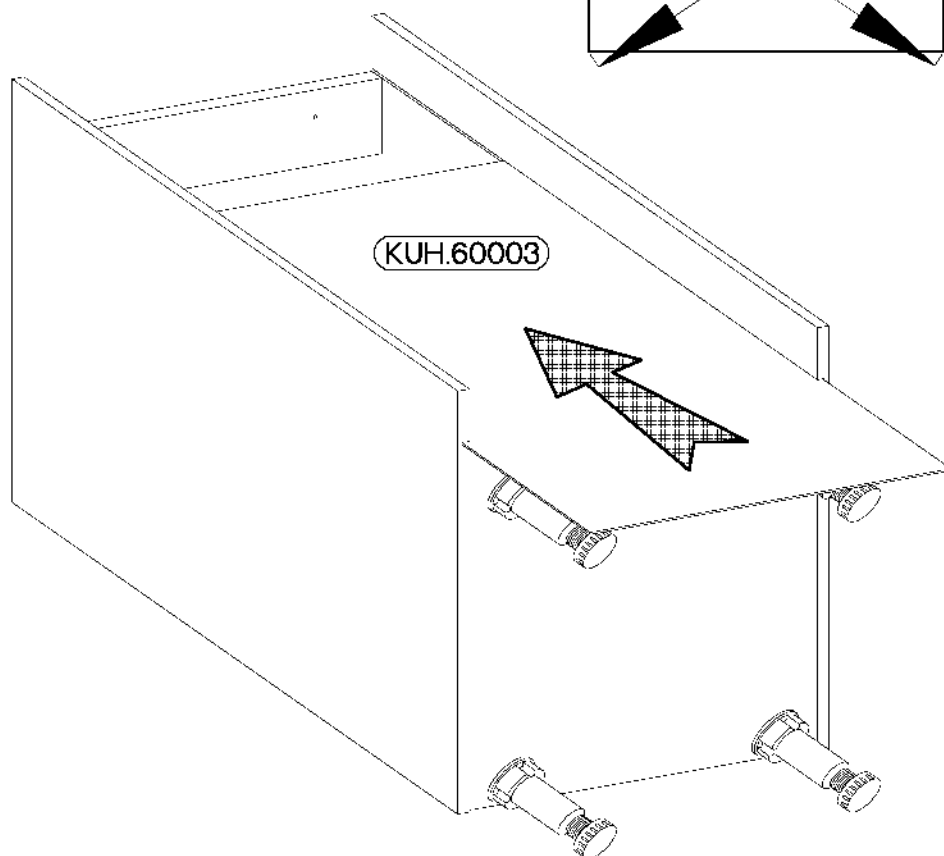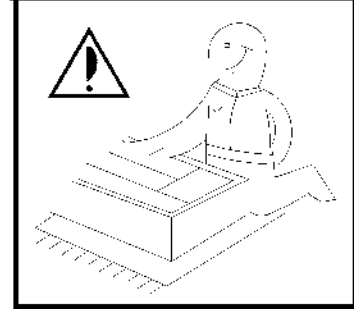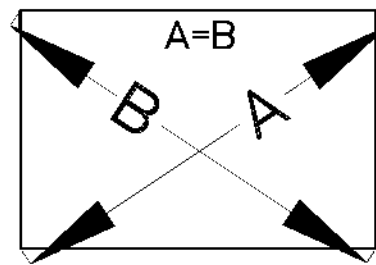3.0x20mm
P7
8-10



1

4.0x35mm +3.5x13mm



R3

4



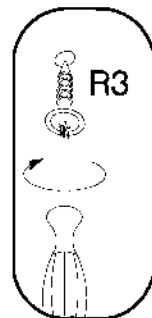
P5

4




F16

2




R3

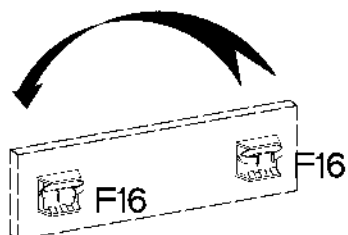

F16

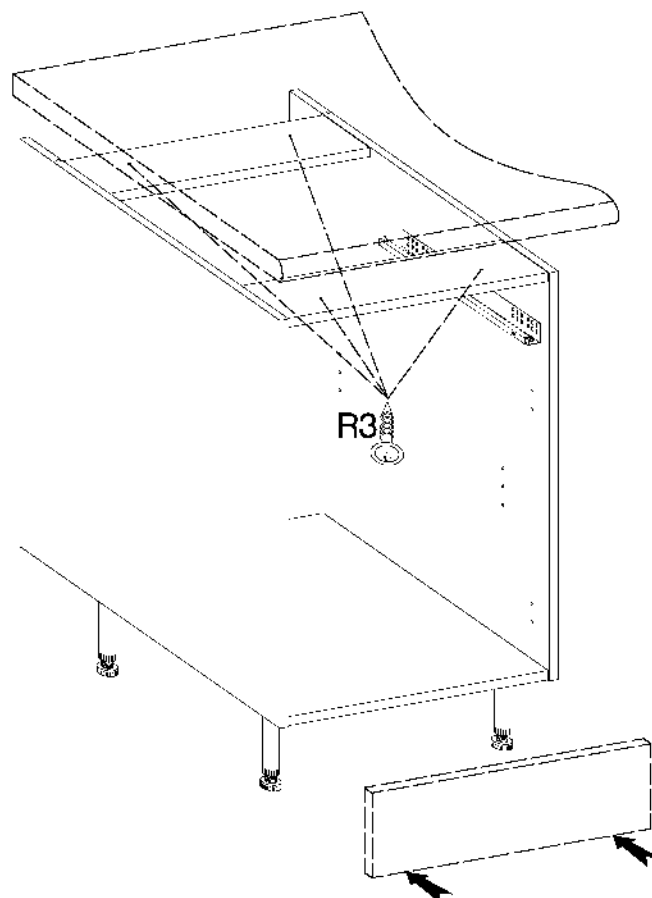F16



1.

F16

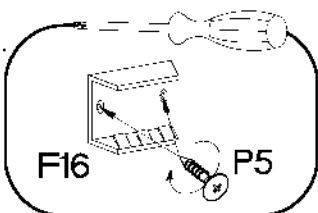


2.

F16




P5



3.

F16



4.

F16



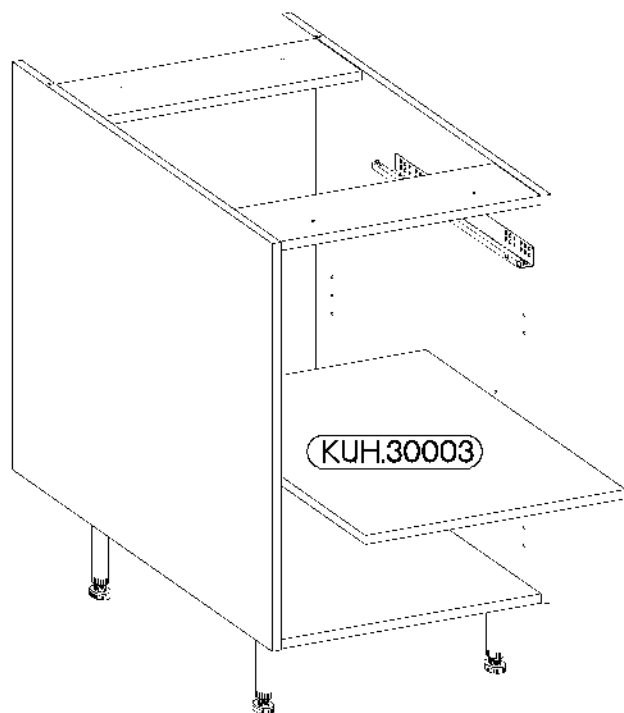
2

45/16mm




J3

4






KUH.30003

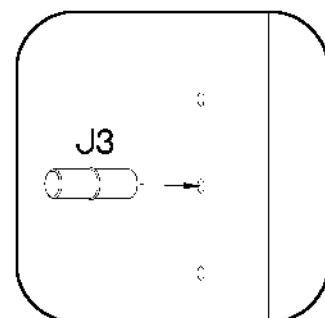

J3





13

$\varnothing 35/0\text{mm}$  HG 2	$\varnothing 3.5 \times 13\text{mm}$  P5 4
---	--

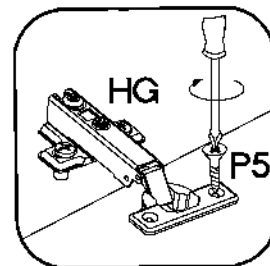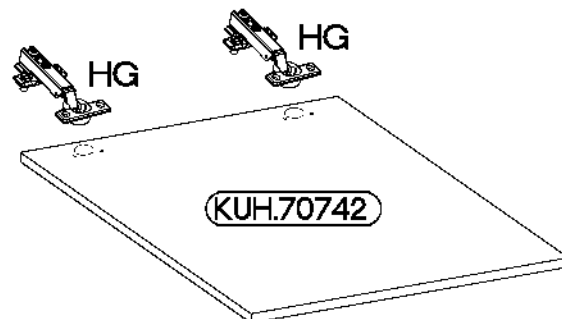


14



$\varnothing 3.0 \times 16\text{mm}$  P11 6	L=495mm  SL50 2
--	---

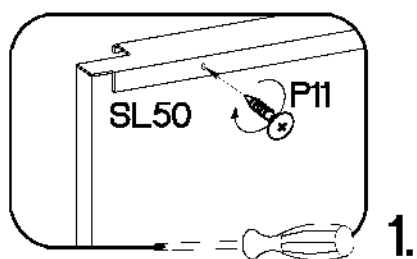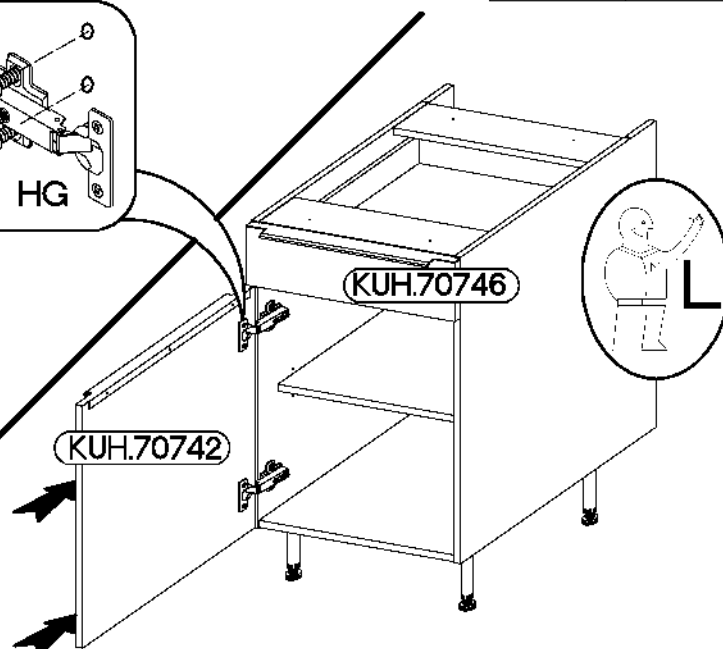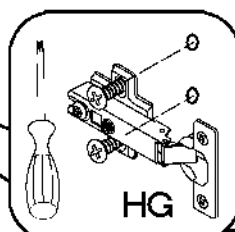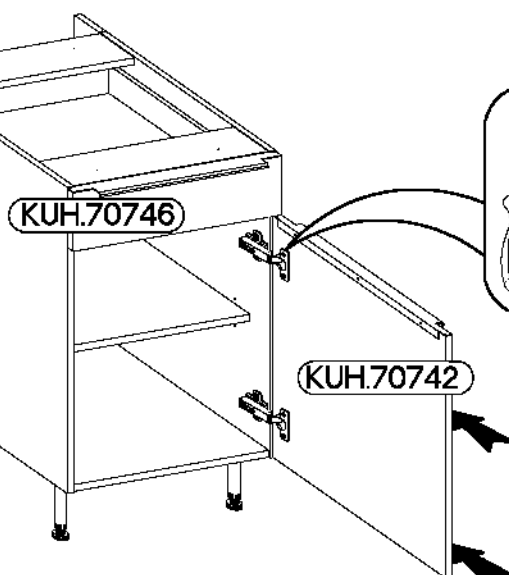

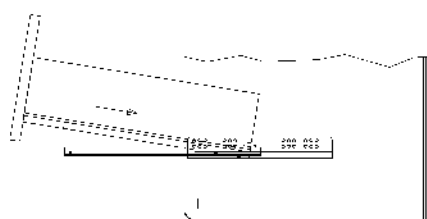1.




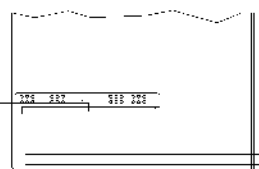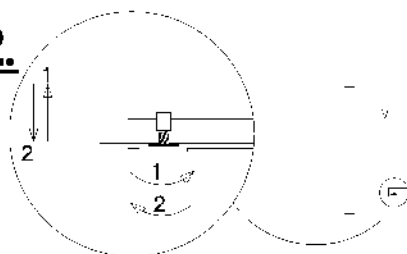2.




VARIANT HIGH GLOSS







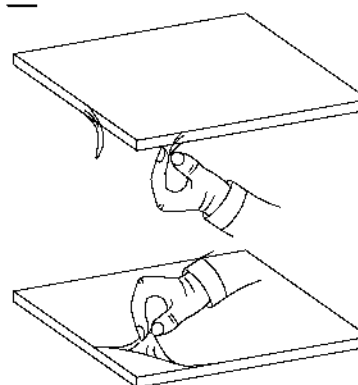
1.





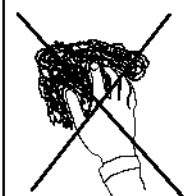2.



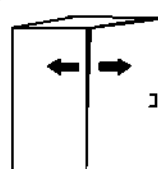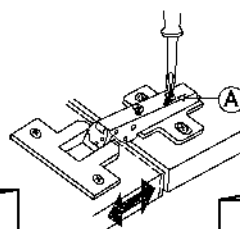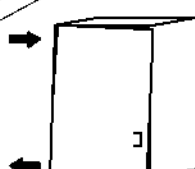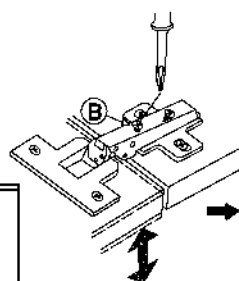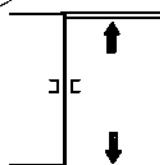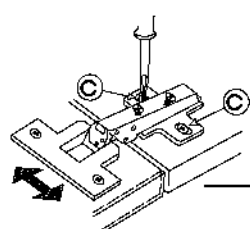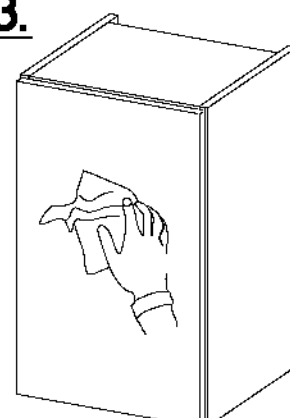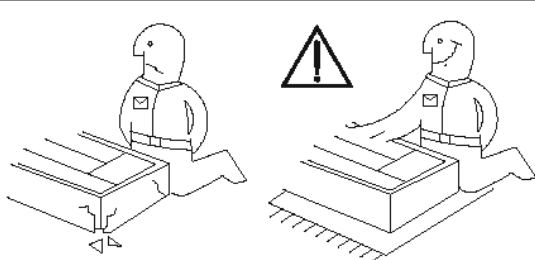3.











Colli	Spare Part	Dimension
Colli 2/6	KUH.10320	720x560x16
	KUH.10321	720x560x16
	KUH.40008	567x485x16
	KUH.40150	567x485x16
	KUH.60007	585x115x2,5
	KUH.70030	596x110x16

ISM-KUH-01601


1

$\varnothing 8 \times 30 \text{ mm}$  A	 L28	$\varnothing 3.5 \times 13 \text{ mm}$  P5
4	2	8

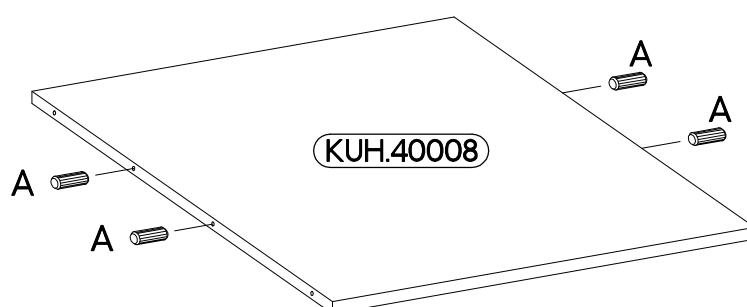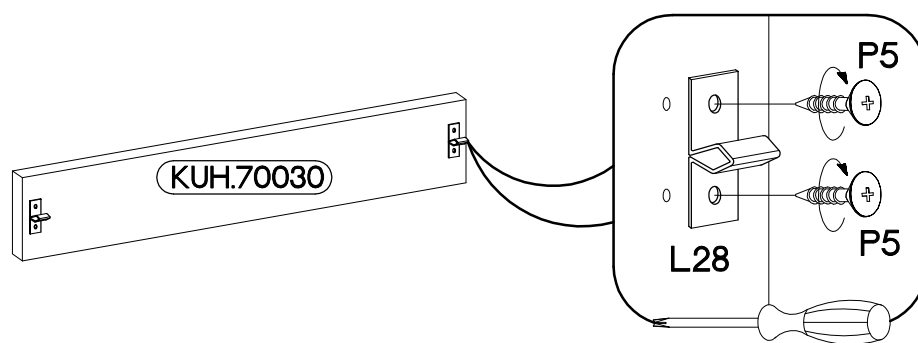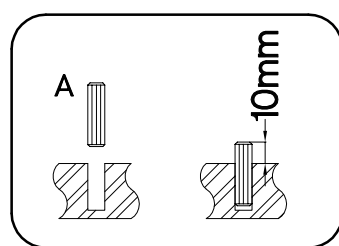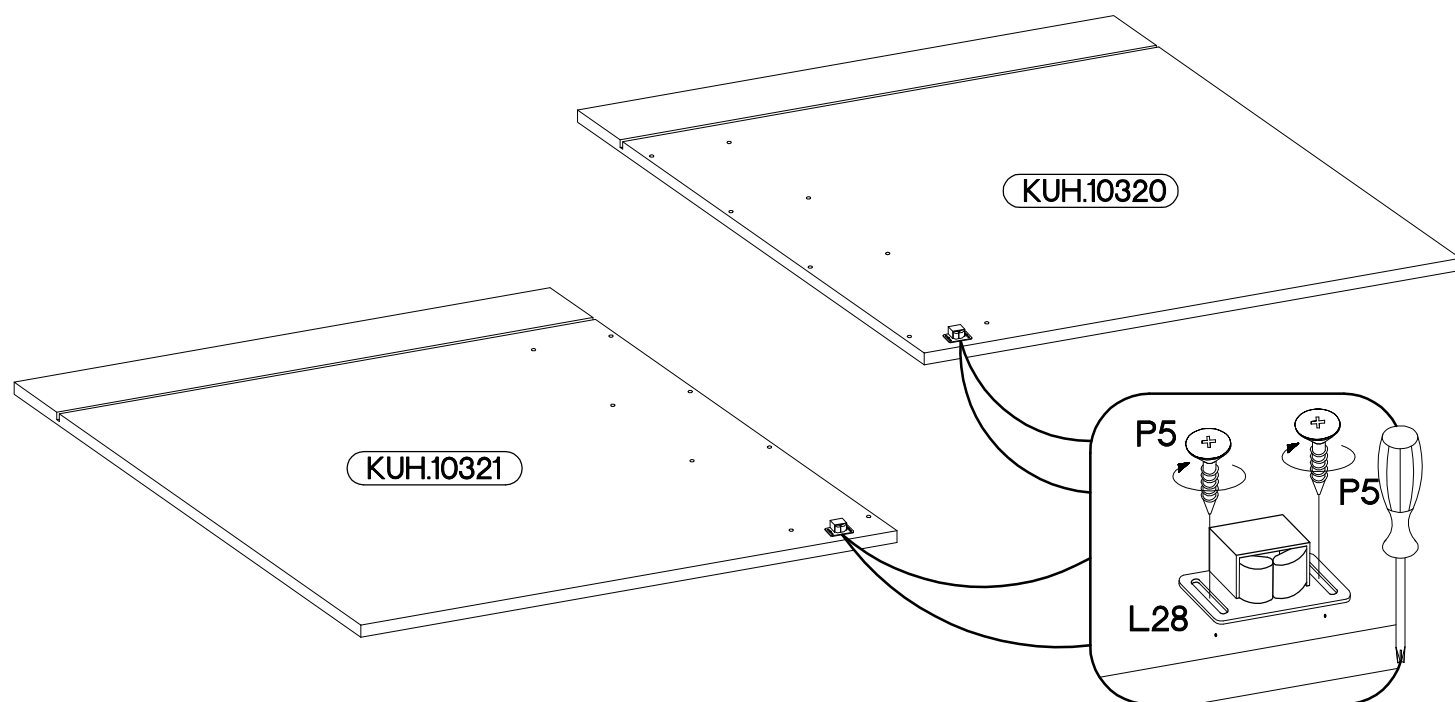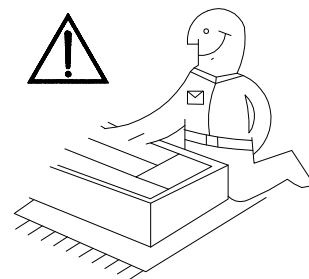


2

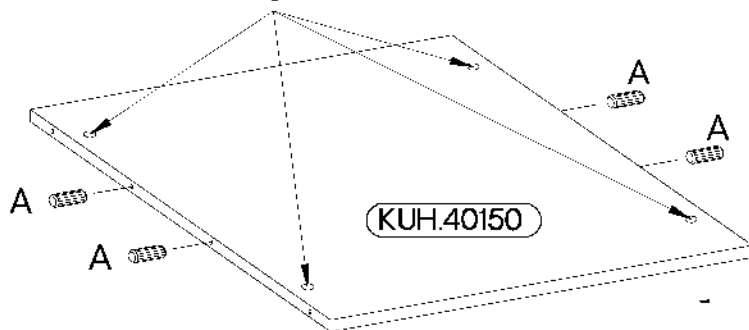
F15




	$\pm 3.5 \times 13 \text{mm}$	$\pm 8 \times 30 \text{mm}$
F15	P5	A
4	16	4

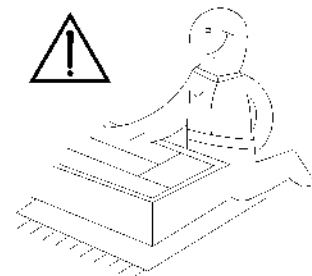


567

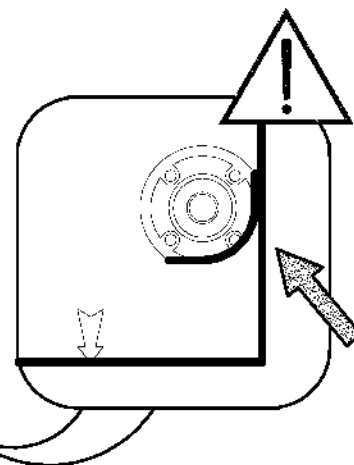

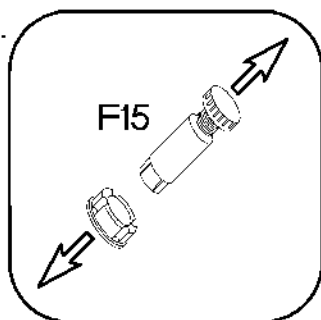
1.



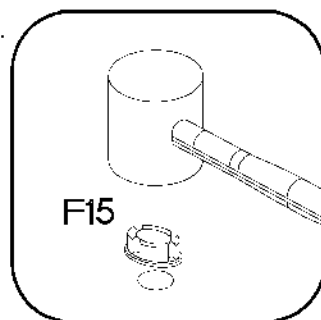
2.



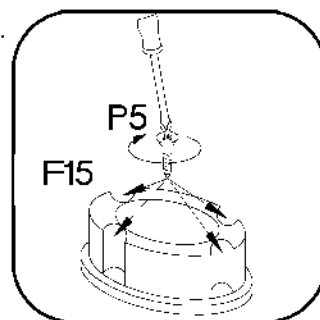3.



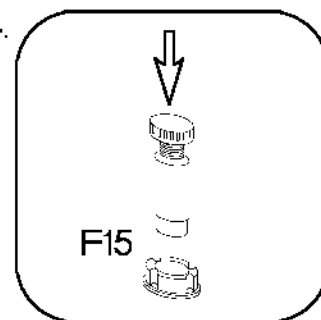4.



3

6,4 x 50mm




B

4





O

1



E1


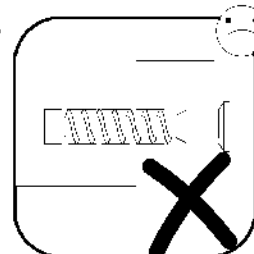
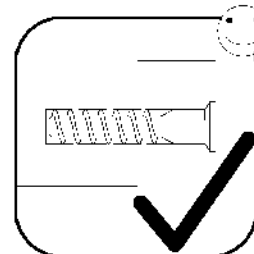
4



KUH.10321

KUH.40008

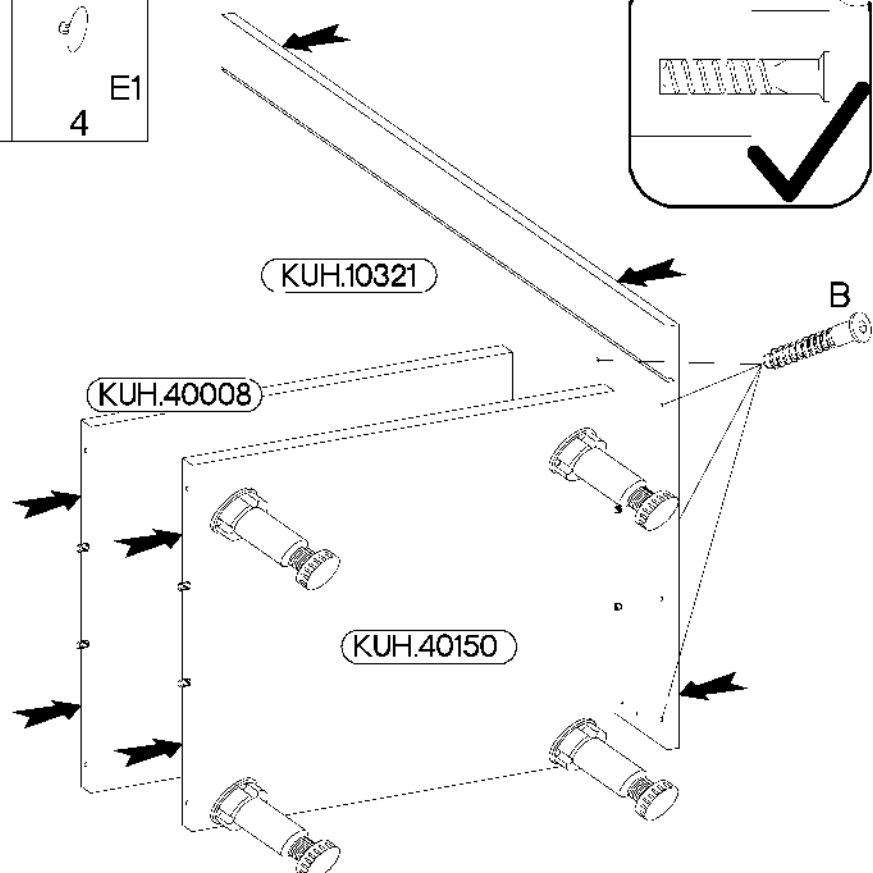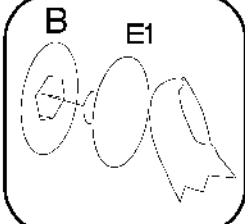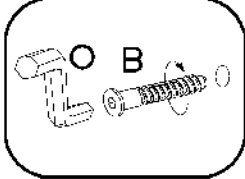KUH.40150



4

6,4 x 50mm



B

4



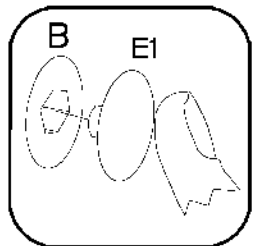
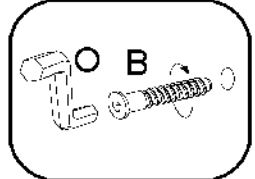
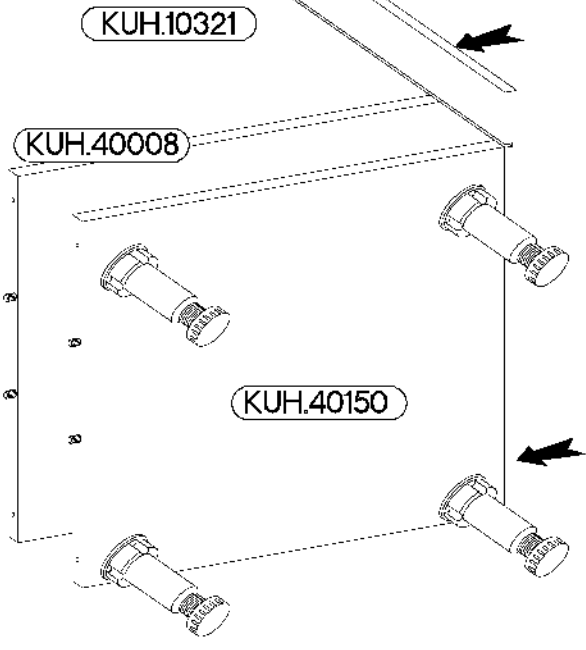
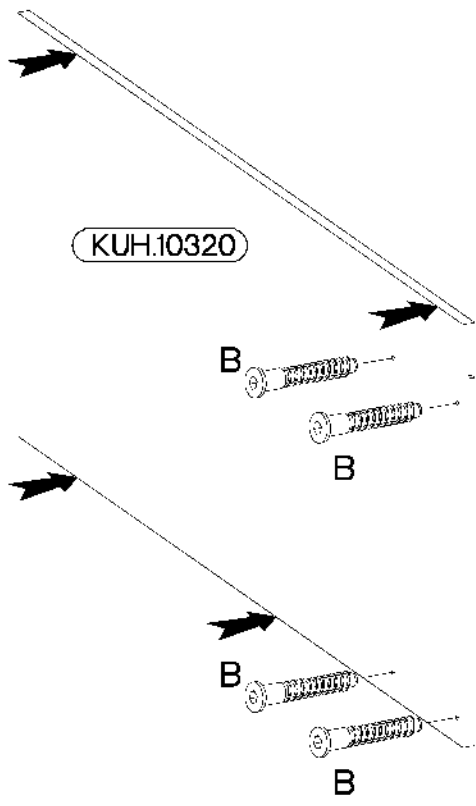
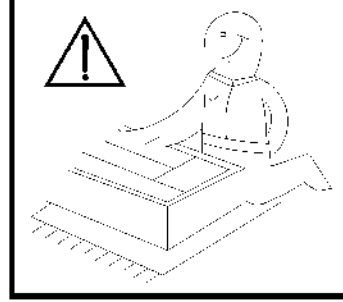
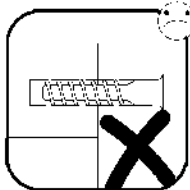
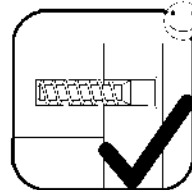
O

1



E1

4






5

4.3x20mm





P7


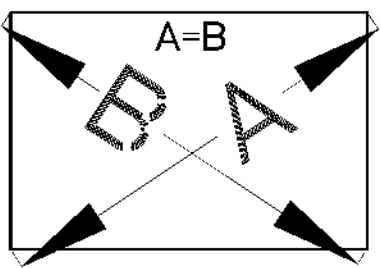
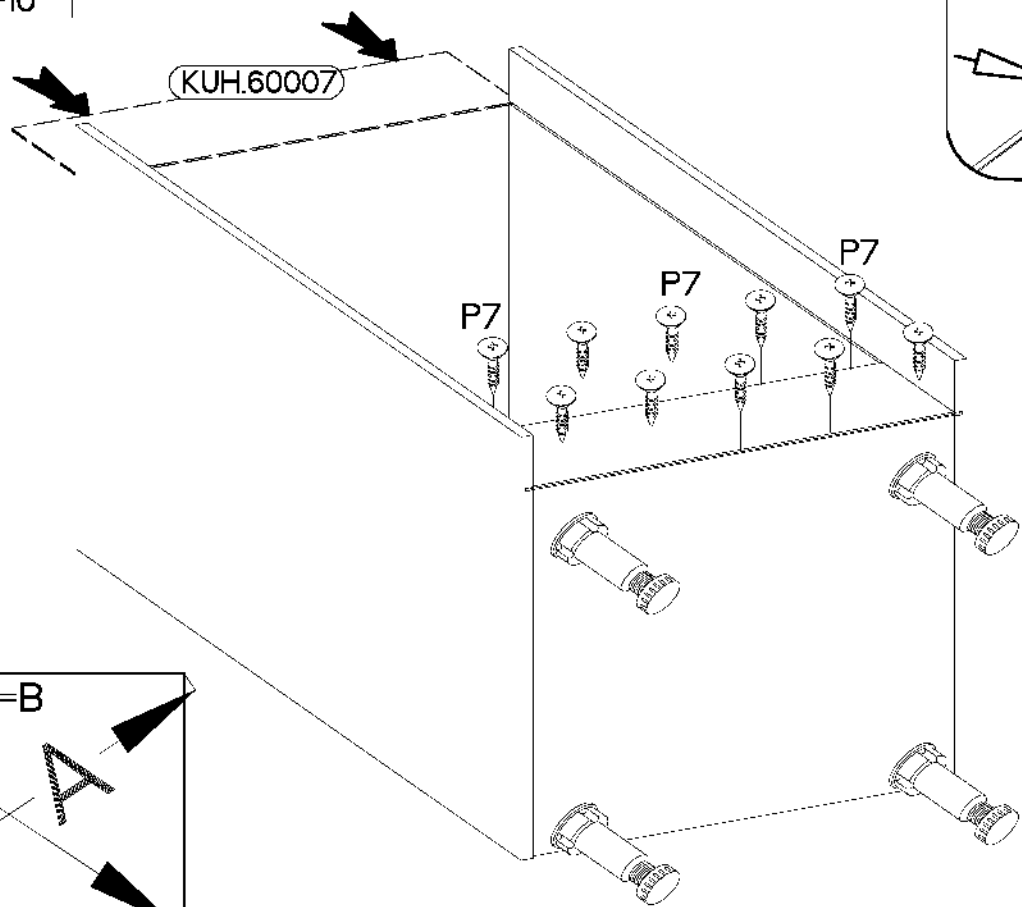
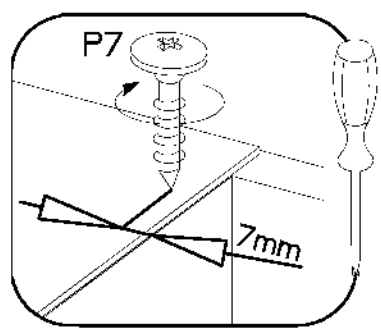
8-10




6

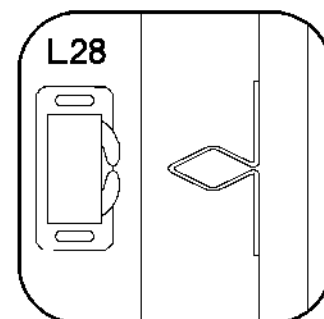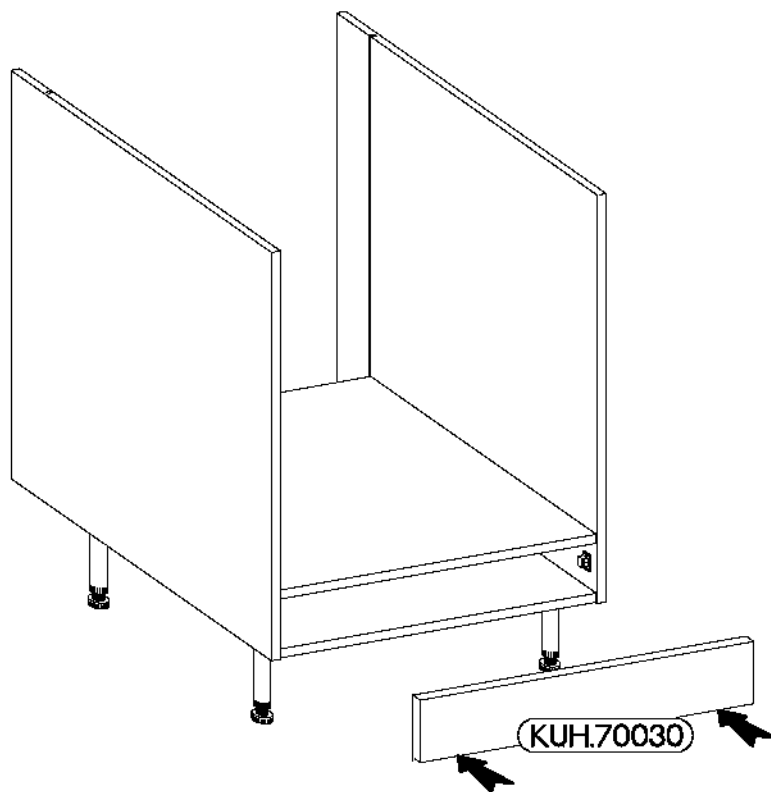

7

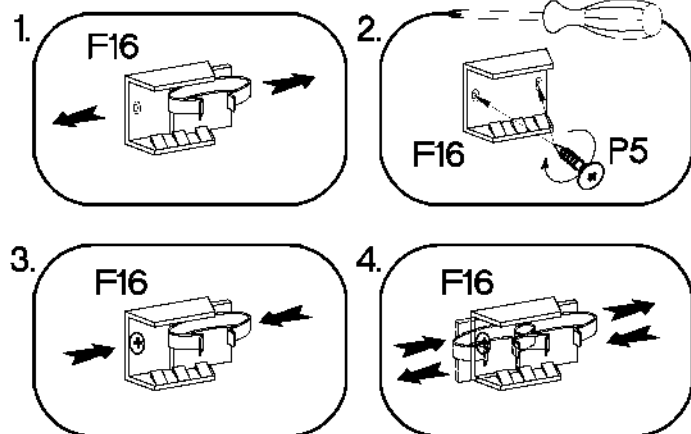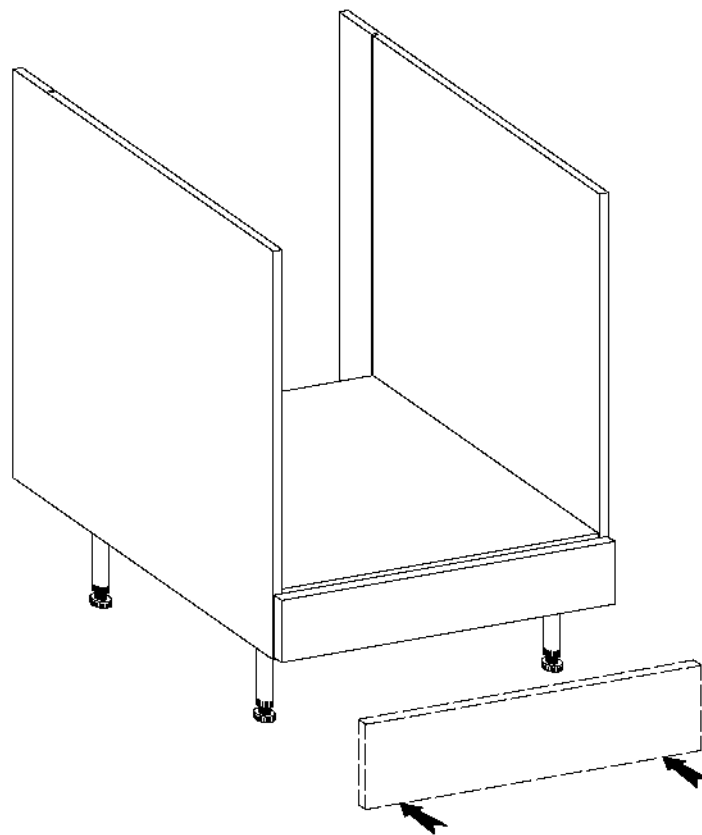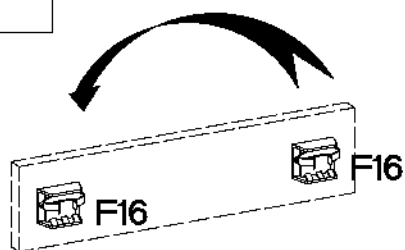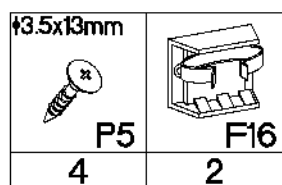


VARIANT HIGH GLOSS

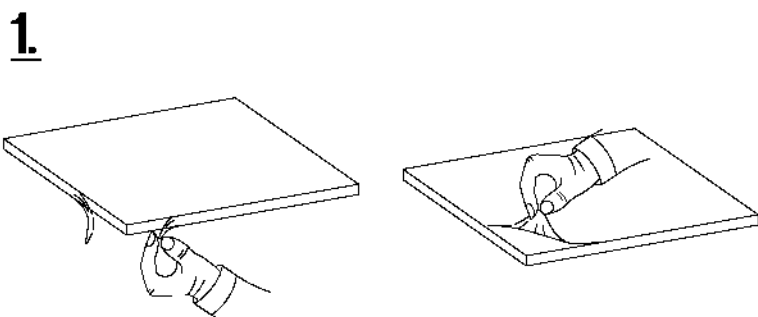

2.



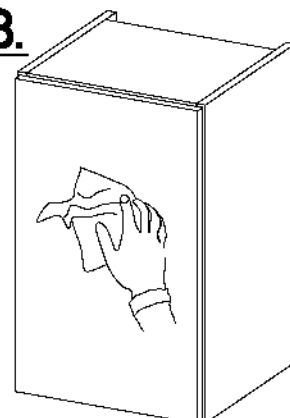3.



SAFADO / MARLEEN

84-170-...

84-176-...

84-17C-...




respekta®

KUH.40151

Colli		Spare Part	Dimension
Colli 3/6		KUH.10309	720x560x16
		KUH.10310	720x560x16
		KUH.40151	467x485x16
		KUH.70745	711x496x16
		KUH.90005	467x63x16
		KUH.90008	467x130x16

A 8	B 8	E1 8	L37 2	L38 2	F15 4	F16 2	HG 2	O 1	P5 32	P11 17	SL50 1	T10 2
-------------------	-------------------	--------------------	---------------------	---------------------	---------------------	---------------------	--------------------	-------------------	---------------------	----------------------	----------------------	---------------------

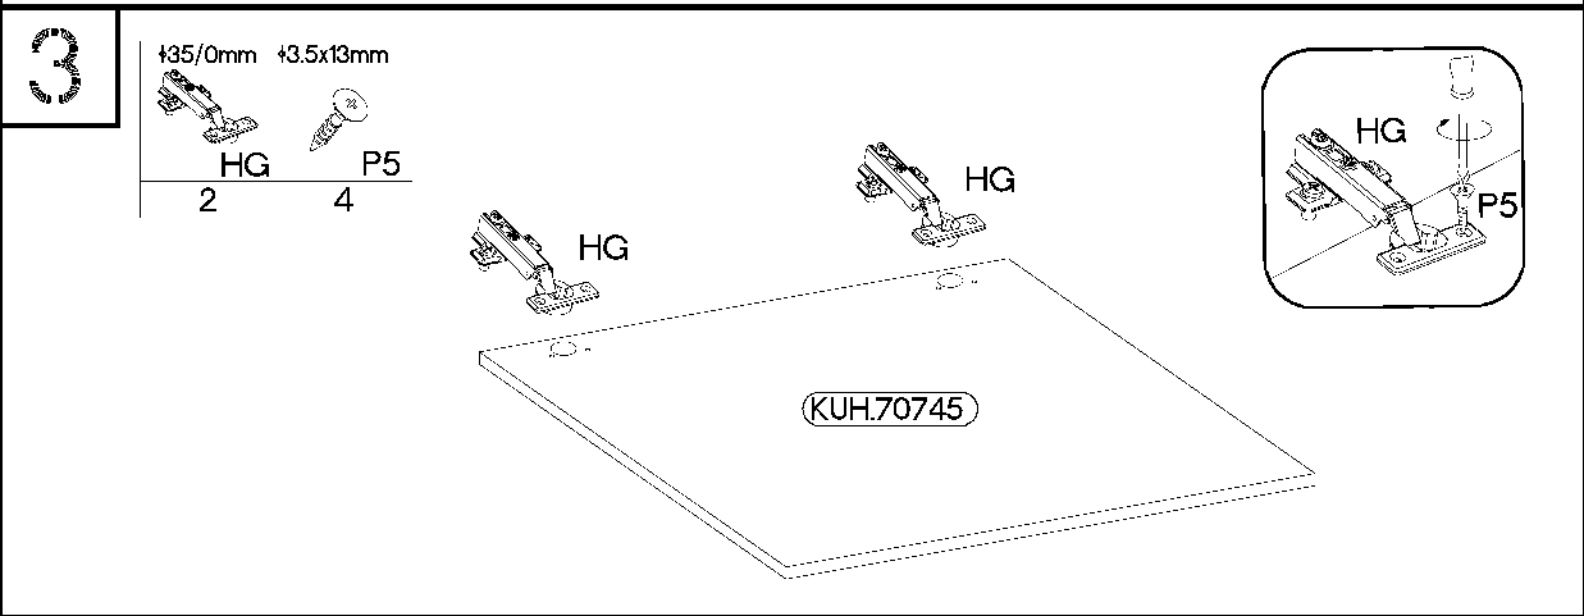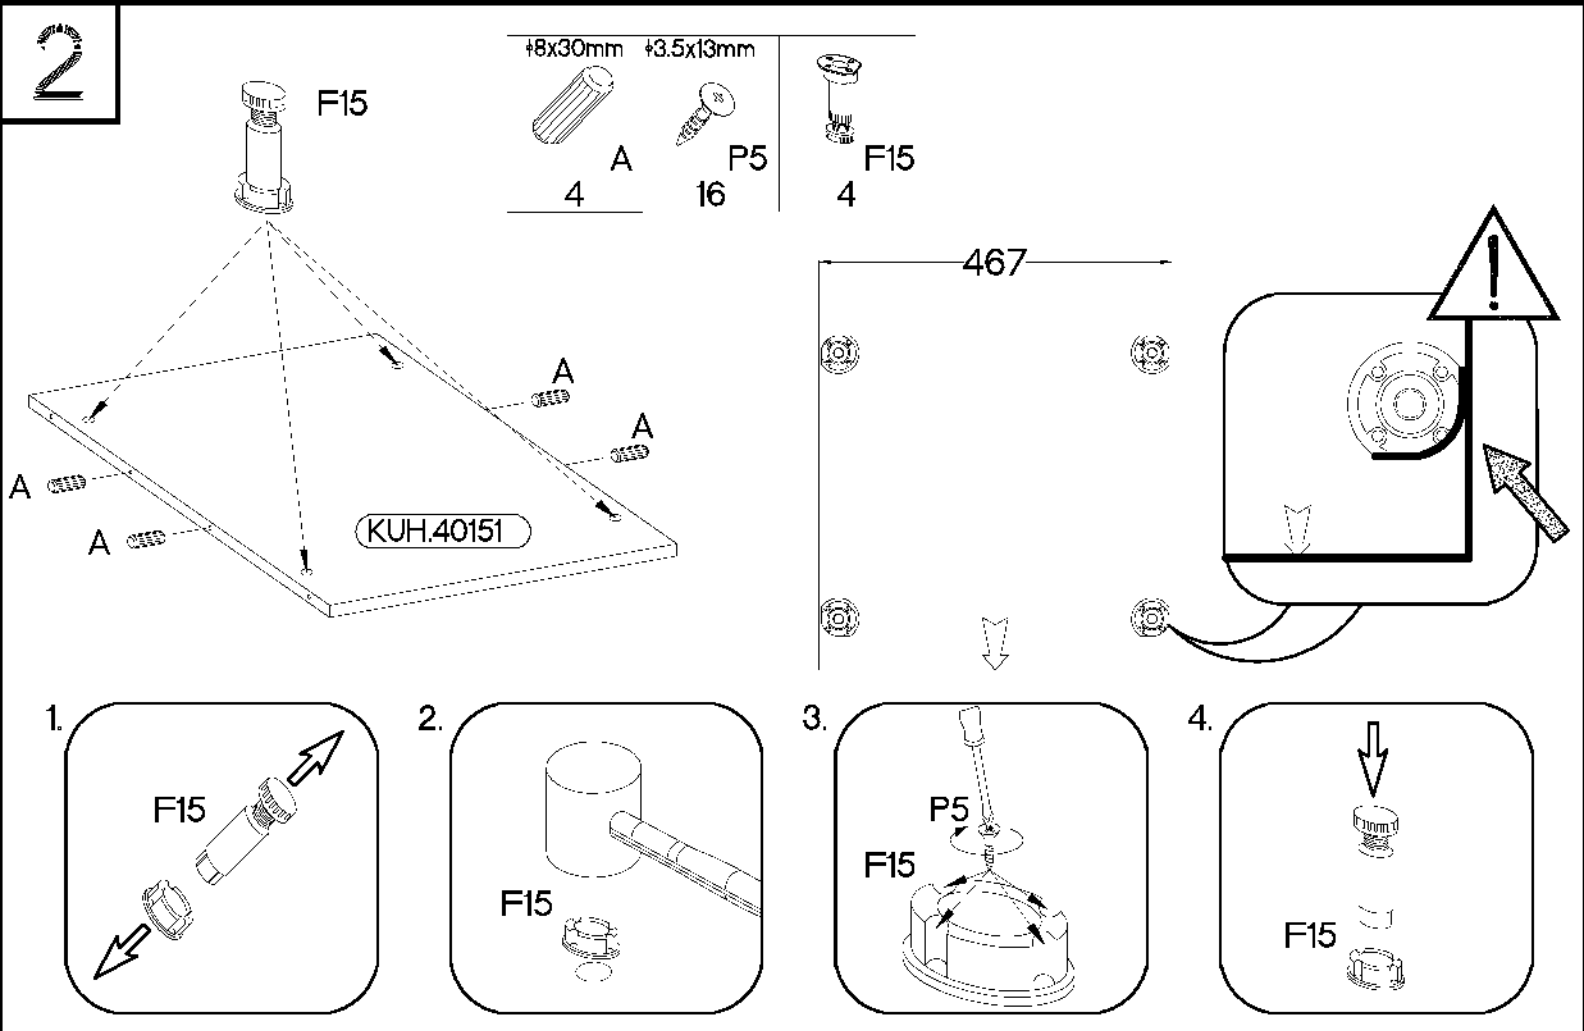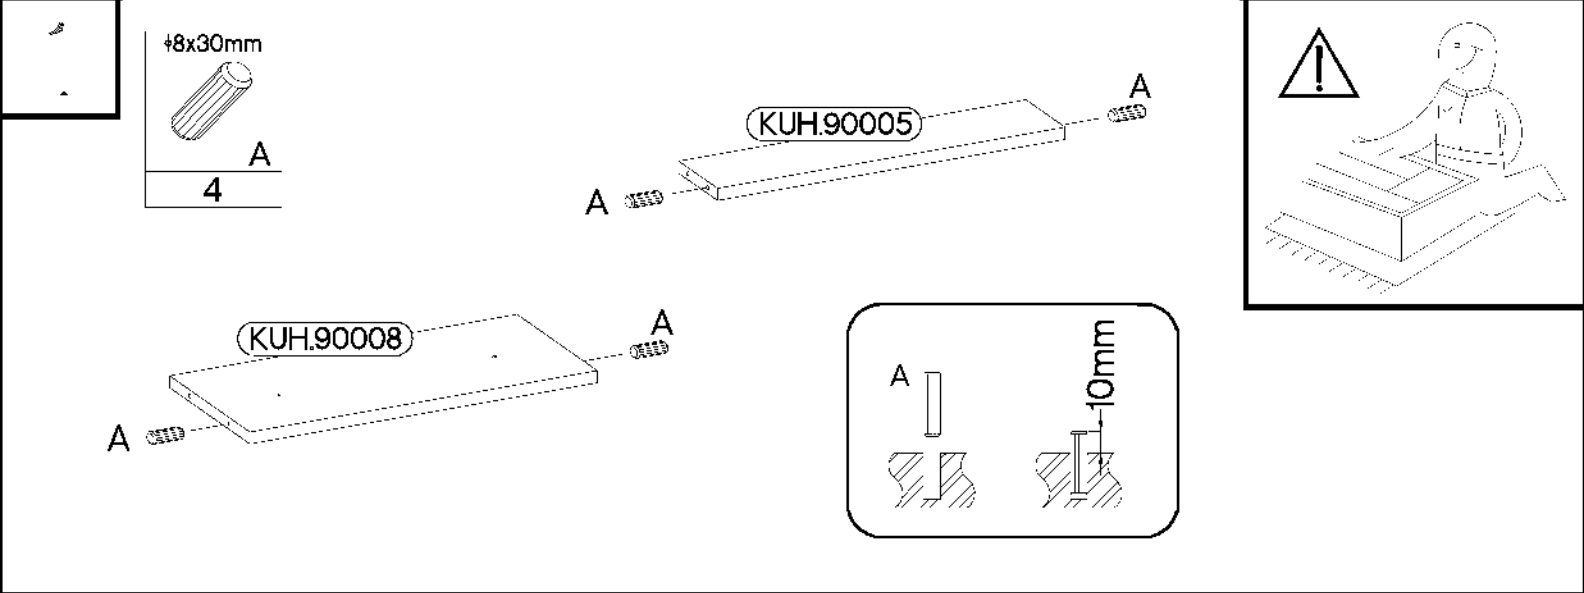
ISM-KUH-01603





4

6,4 x 50mm



4 B



1 O

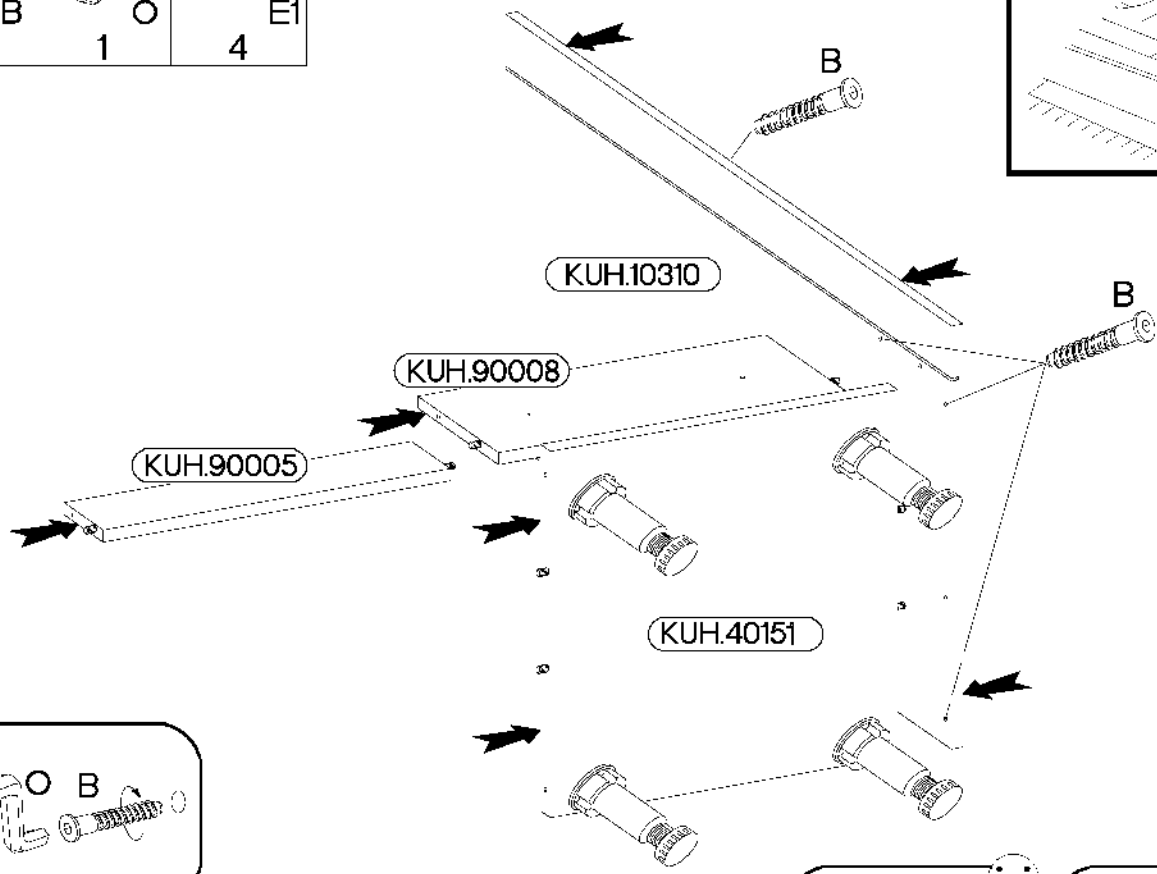
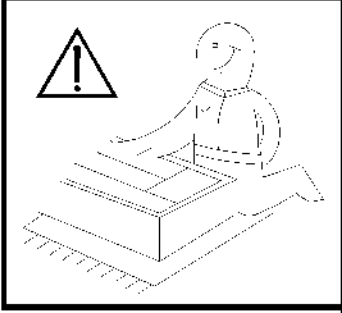

4 E1



5



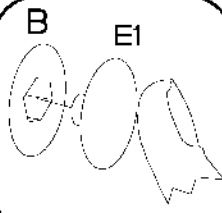

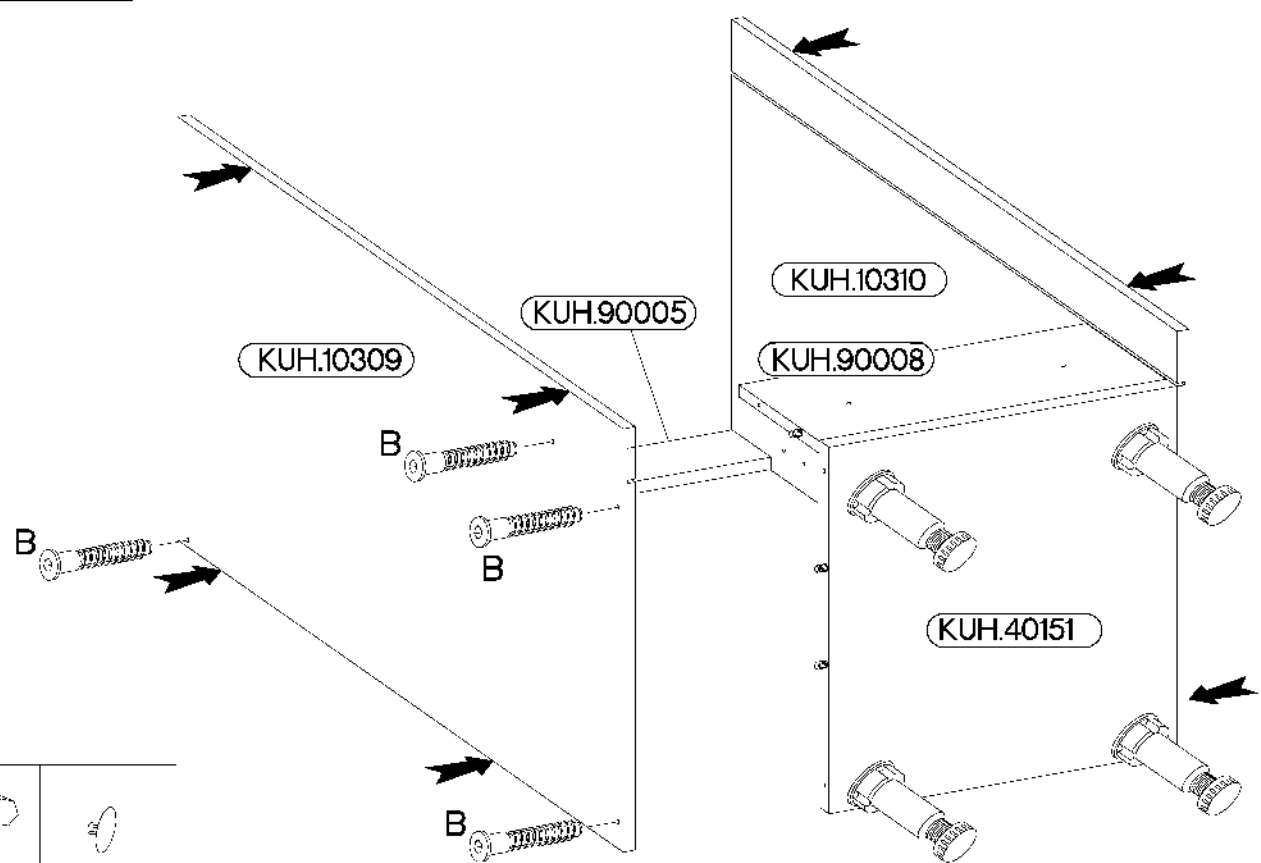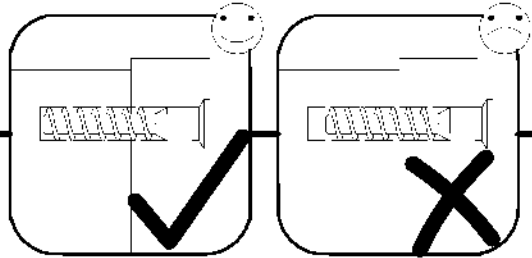

6,4 x 50mm


4 B


1 O


4 E1

6

±3.5x13mm



P5

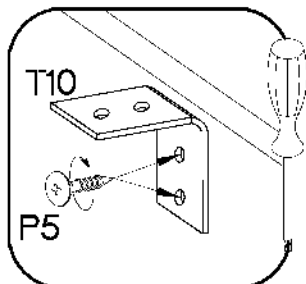
8





T10

2

1.



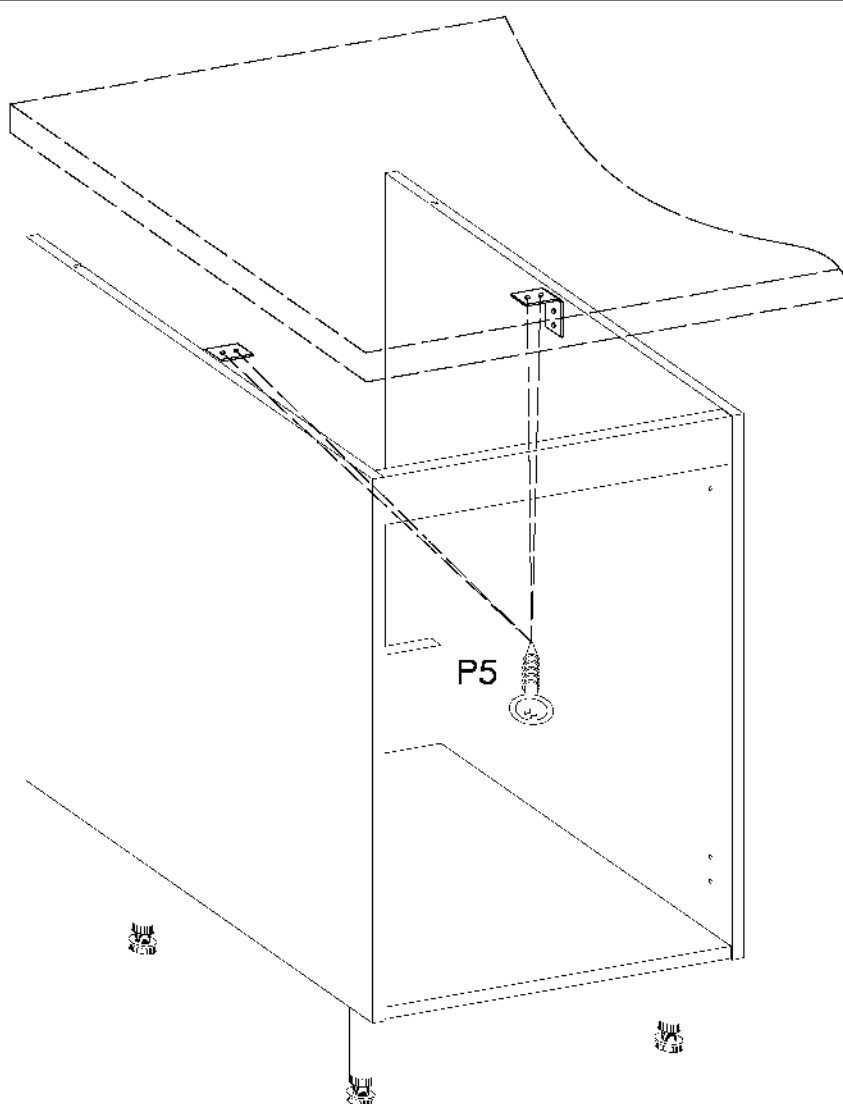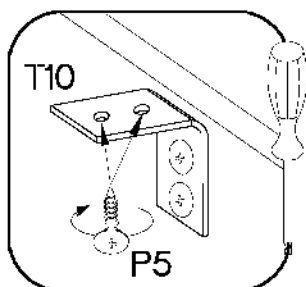2.



7

±3.5x13mm



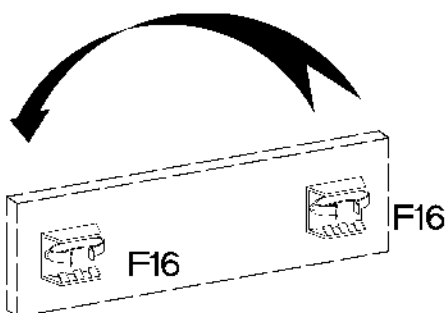
P5

4




F16


2



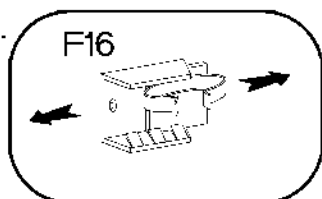
1.




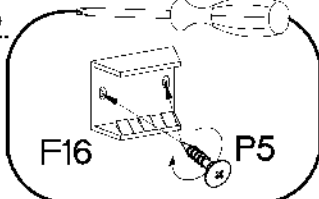
2.




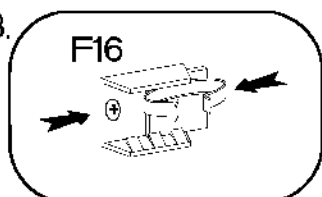
3.



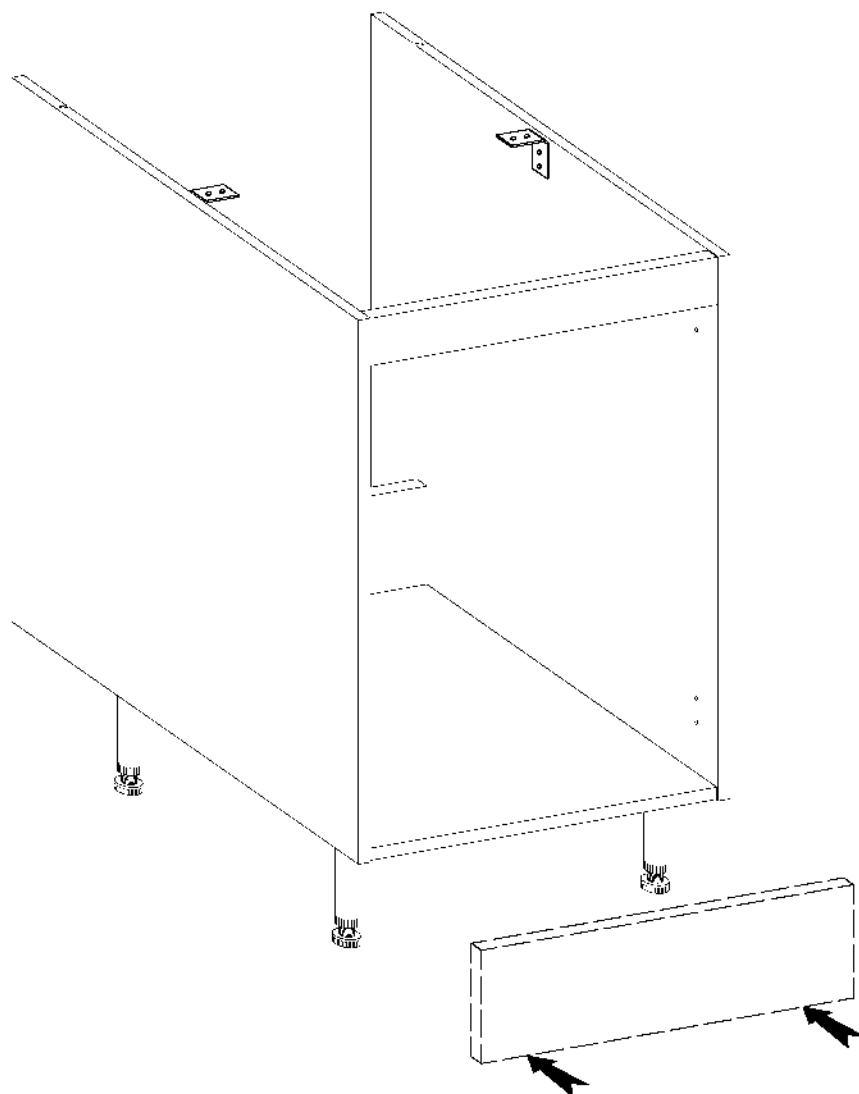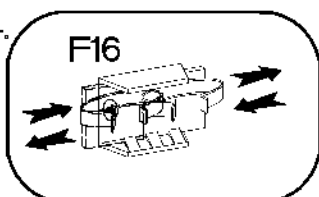
4.




3.0x16mm  P11 3	L=495mm  SL50 1
--	--

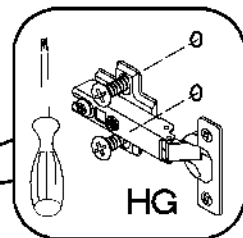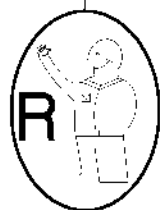

KUH.70745

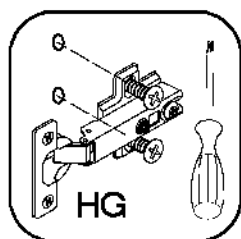


KUH.70745

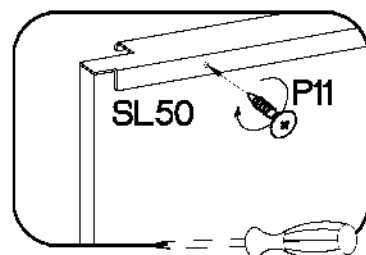

VARIANT HIGH GLOSS







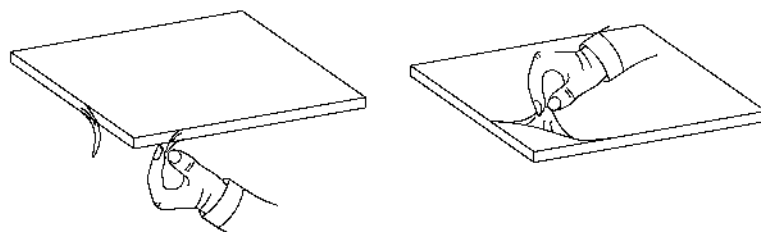
1.





2.













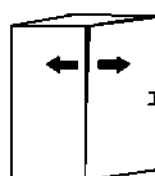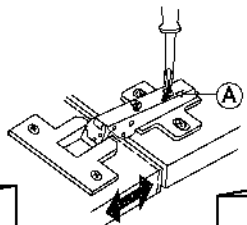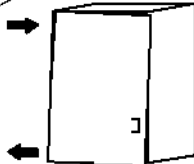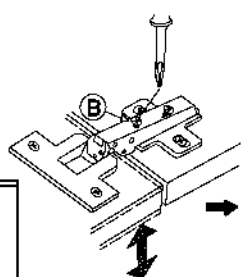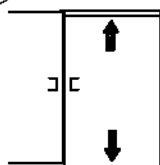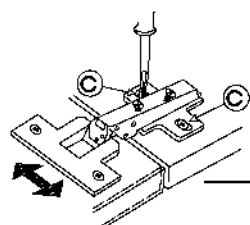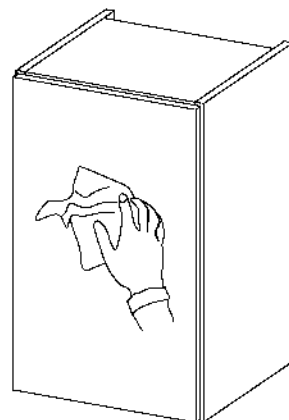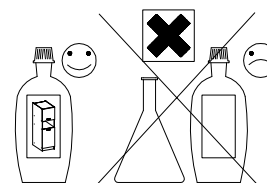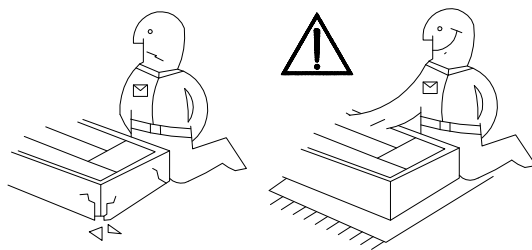3.





ISM-KUH-01604

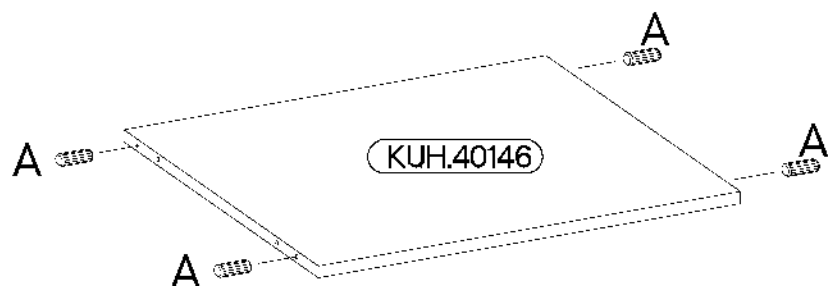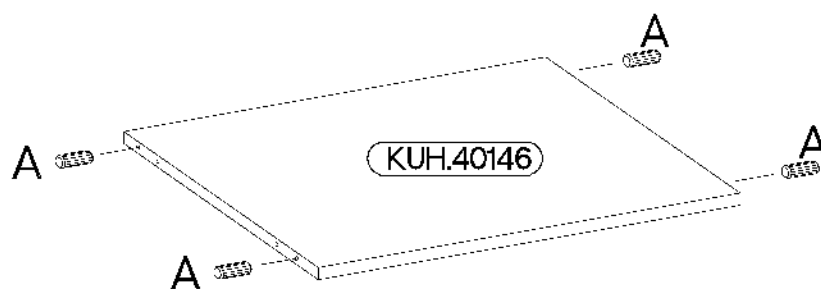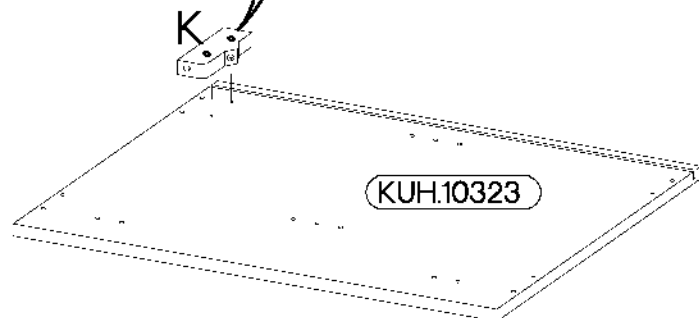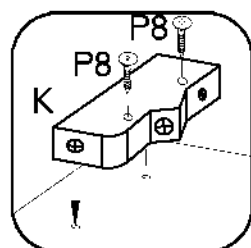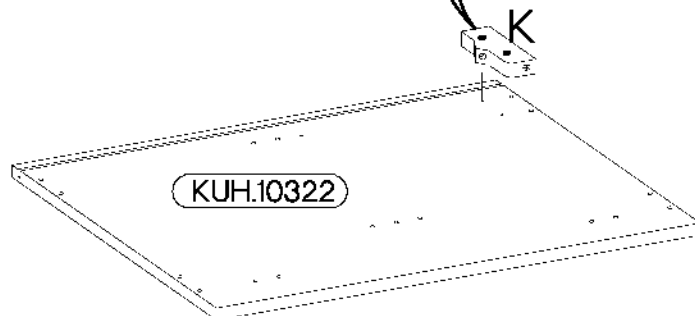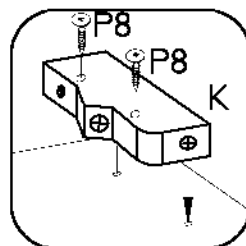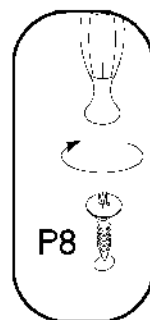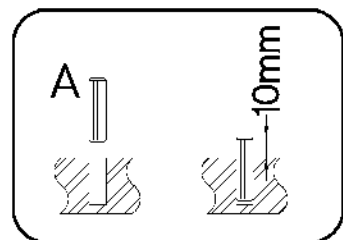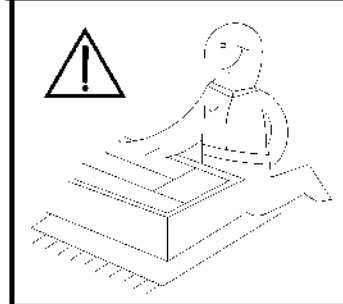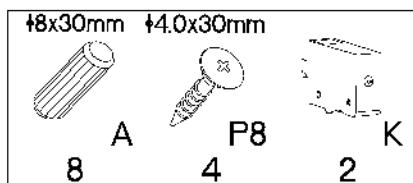

2

6,4 x 50mm



B

4



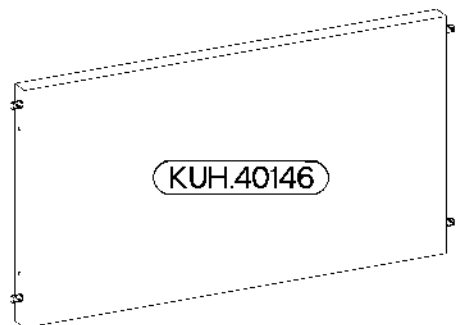
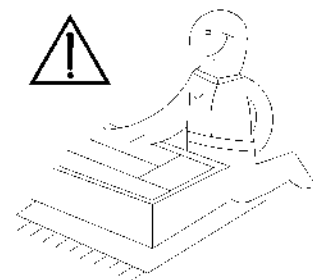
O

1



E1

4



KUH.40146







B

KUH.10323




B

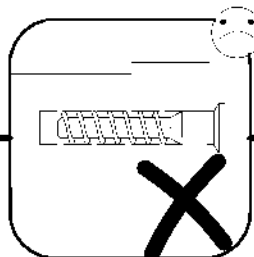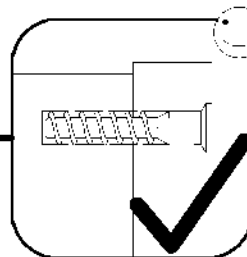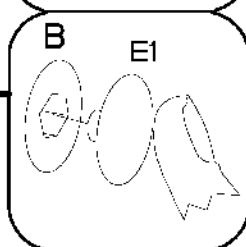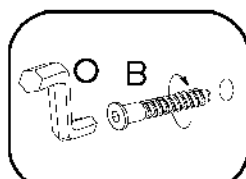KUH.40146



3

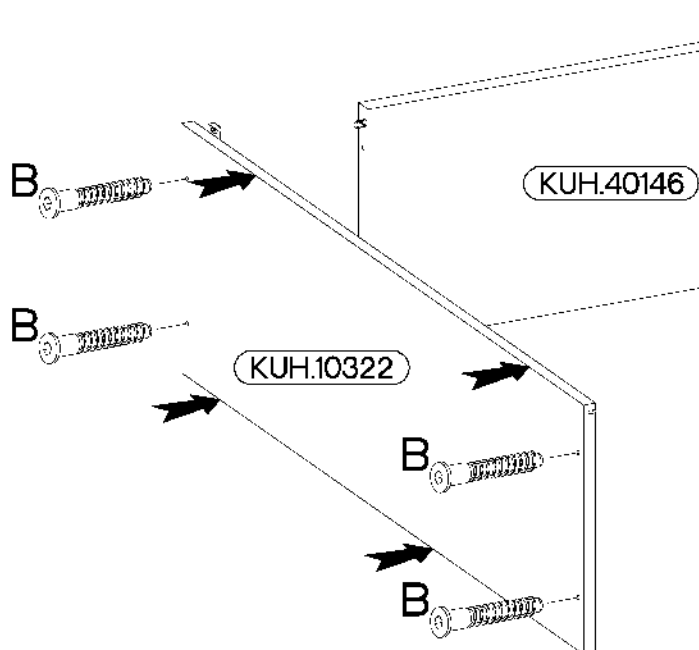

KUH.40146

KUH.10323

KUH.40146

6,4 x 50mm



B

4



O

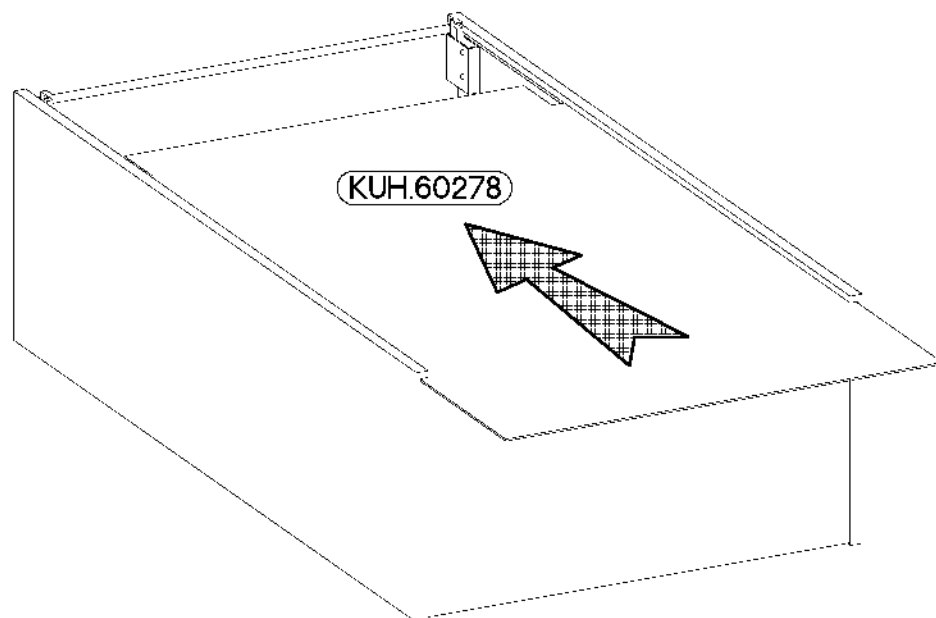
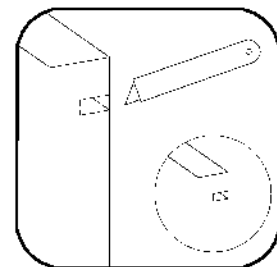
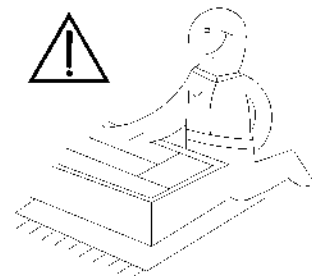
1



E1

4

4.






5


φ3.0x20mm







P7

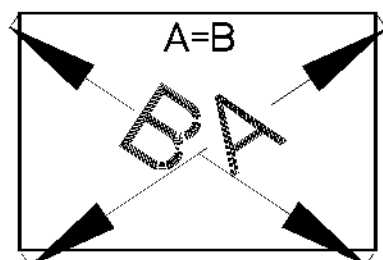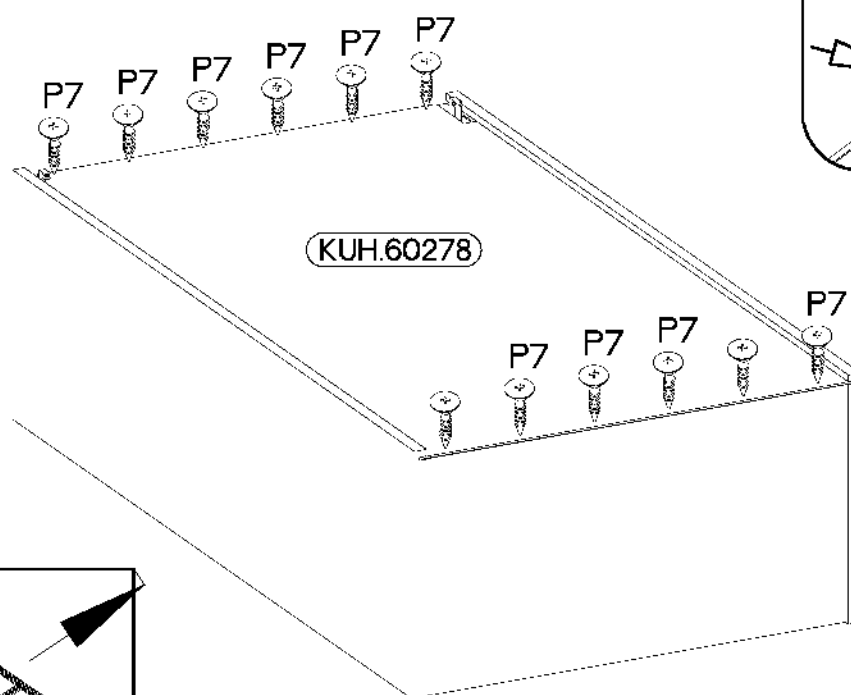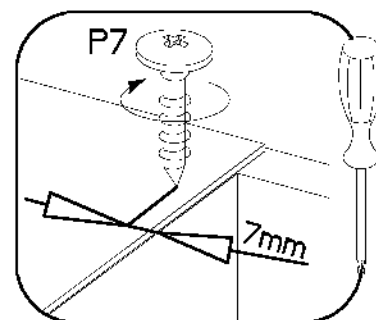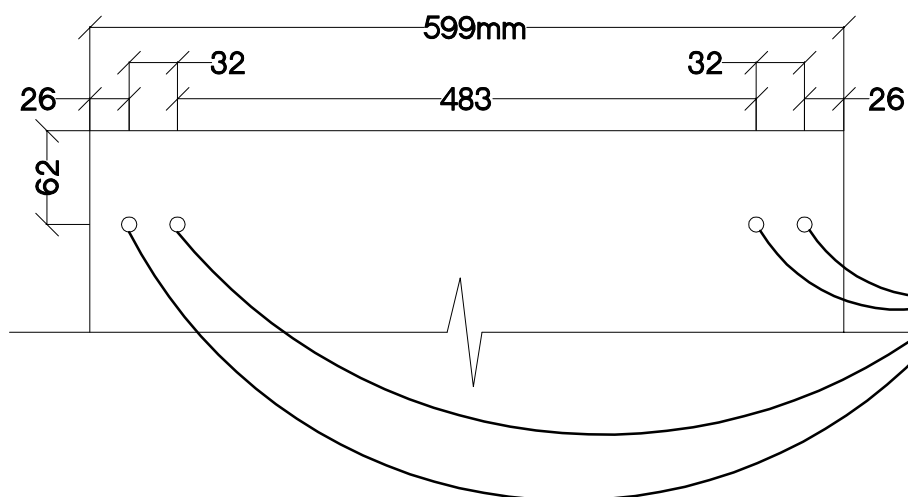10-15









Ø10mm

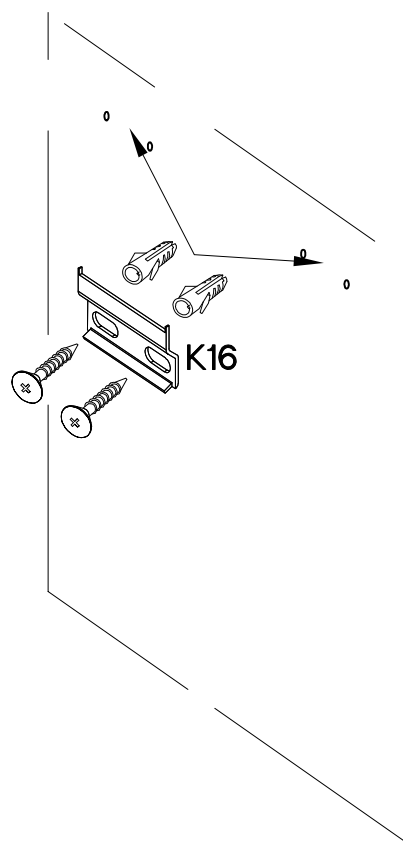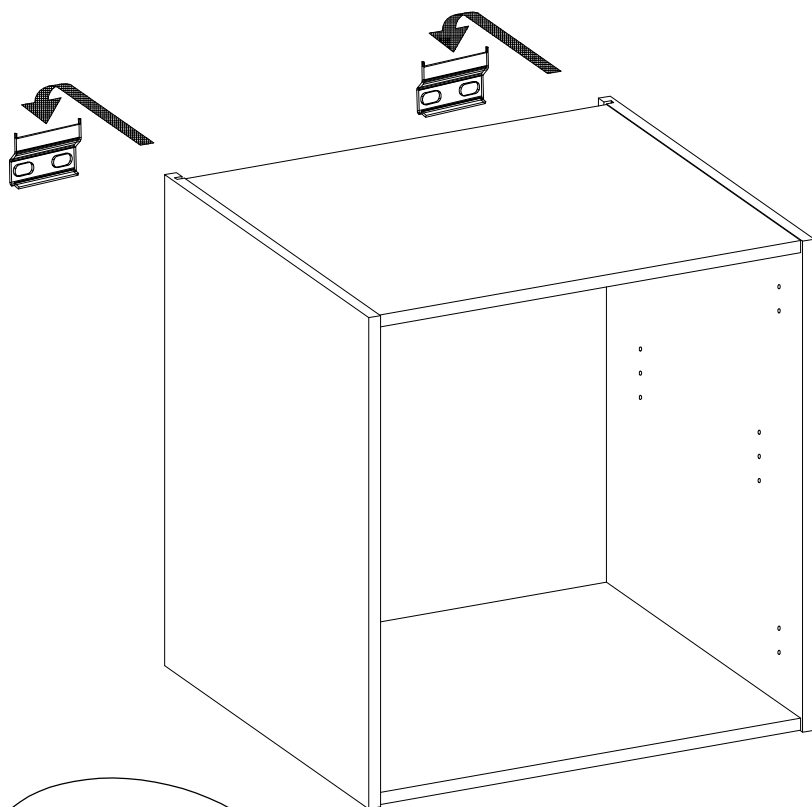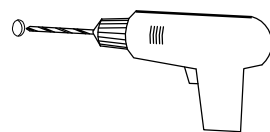

x4

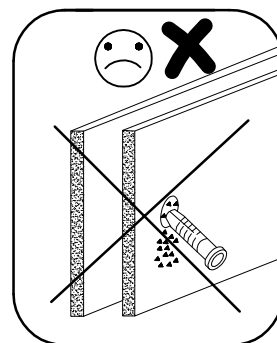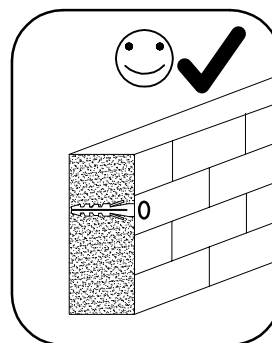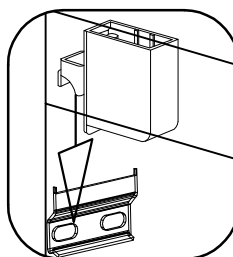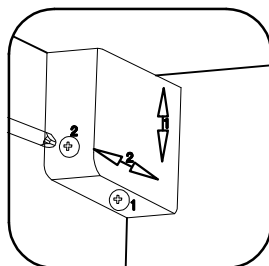





45/16mm



J3

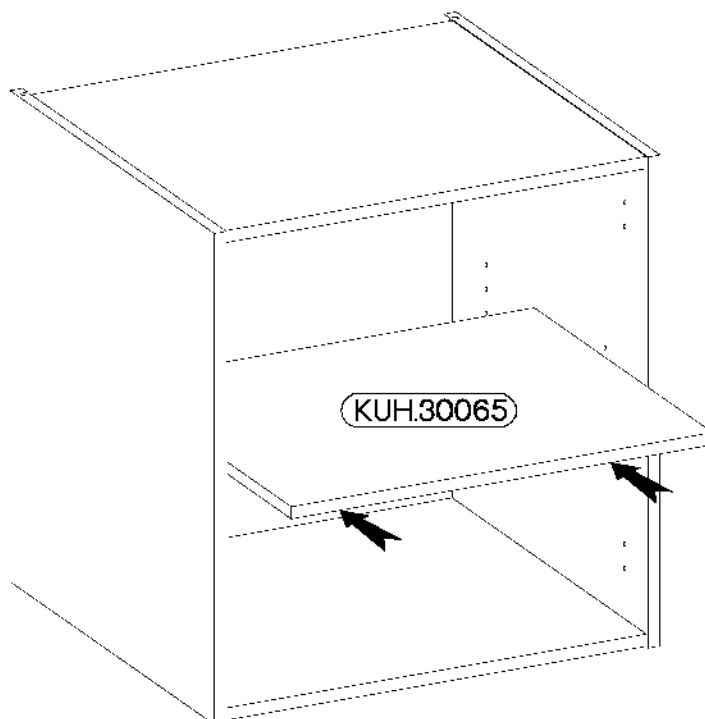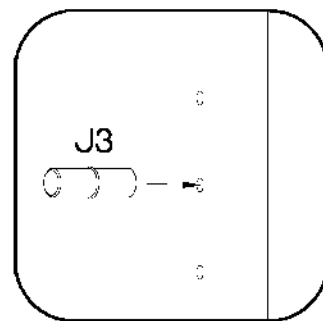4



8

35/0mm



HG

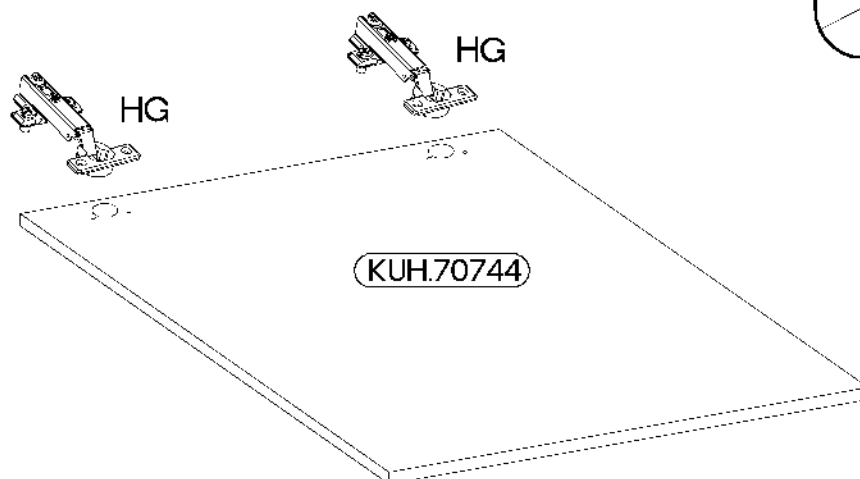
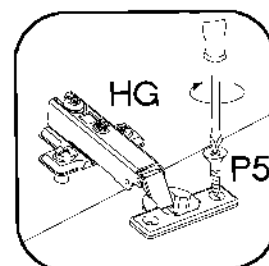
2

3.5x13mm









P5

4












9

$\varnothing 3.0 \times 16 \text{ mm}$  P11 4	L=595mm  SL60 1
--	---

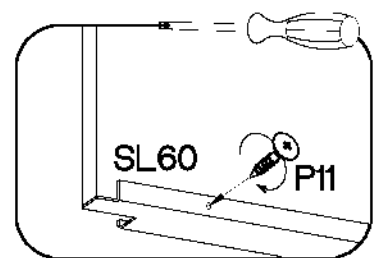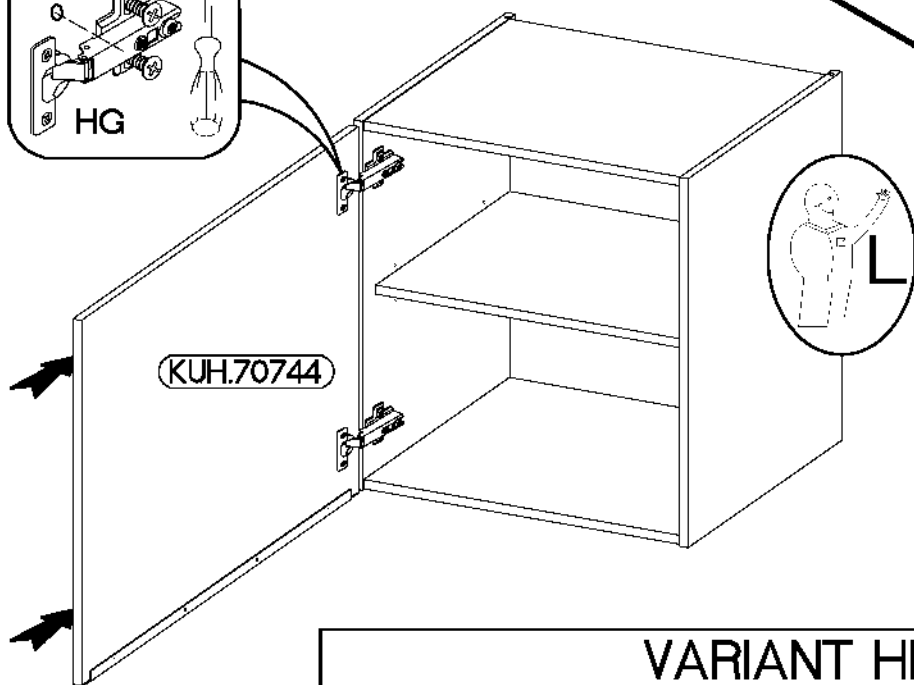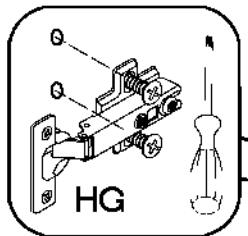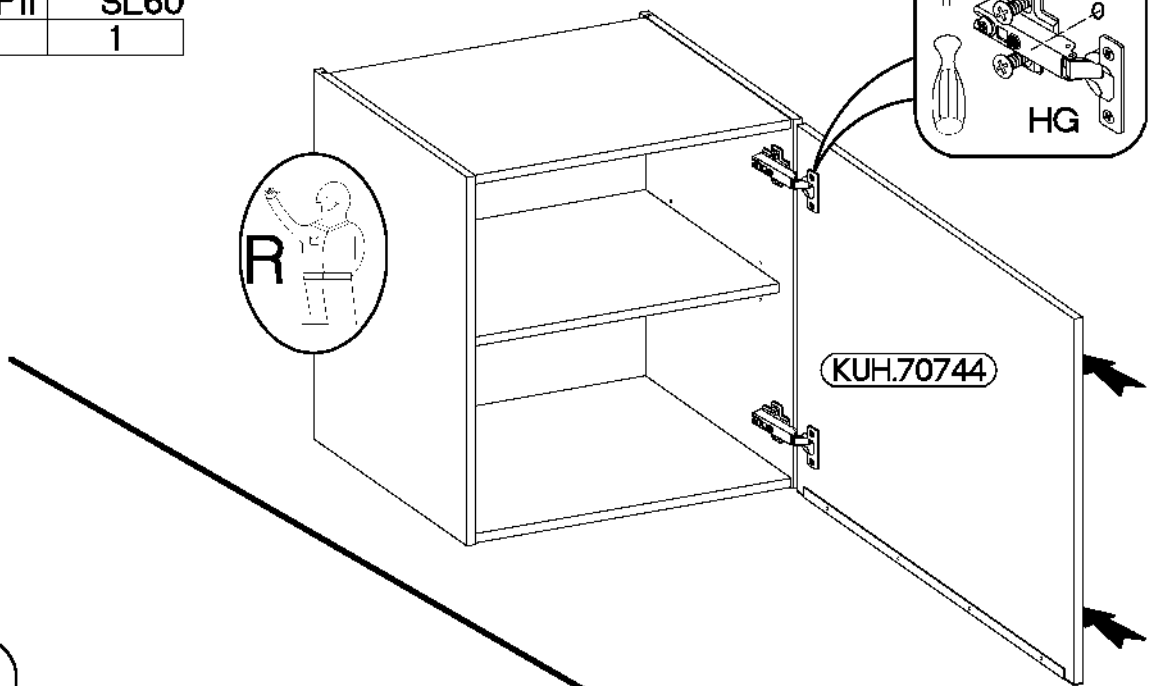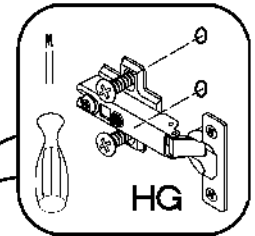



VARIANT HIGH GLOSS

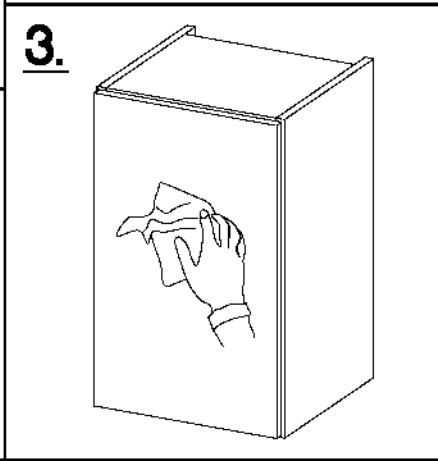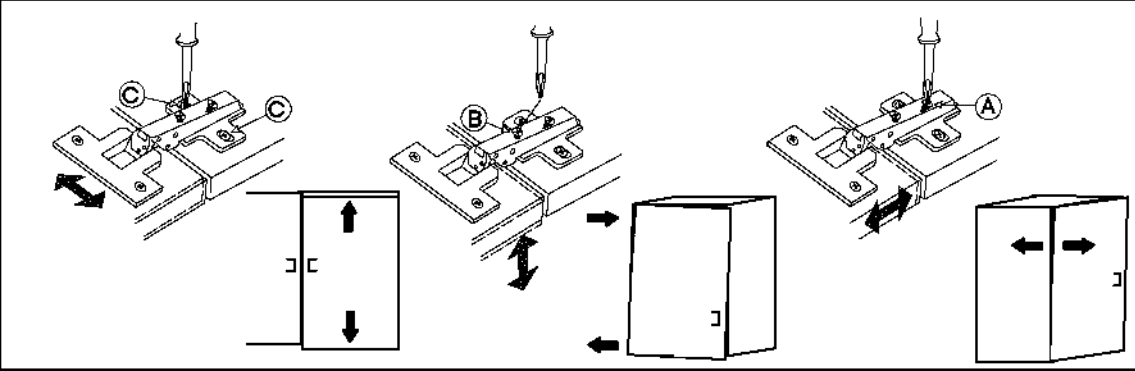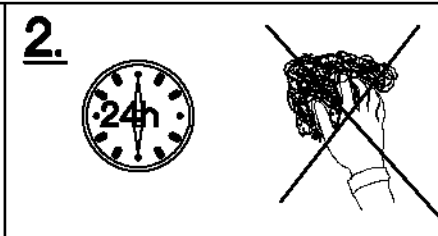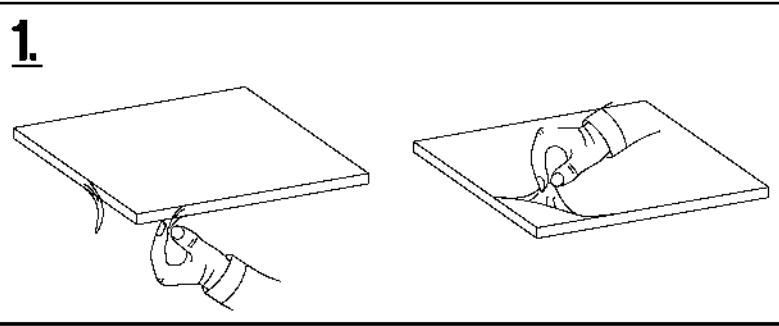

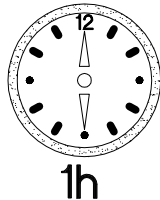
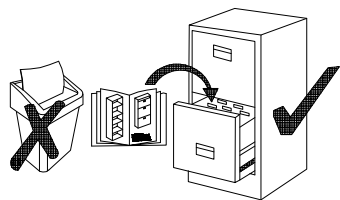
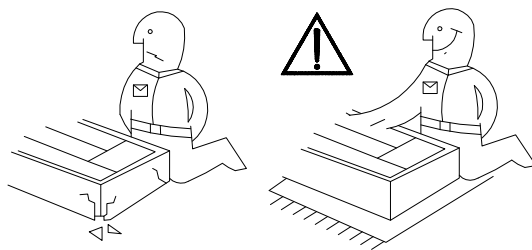
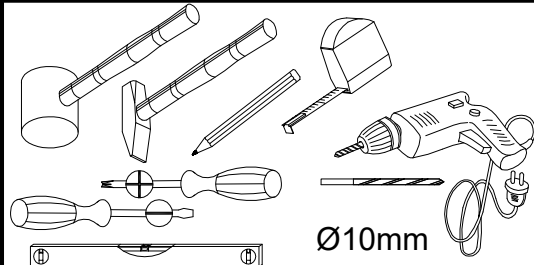
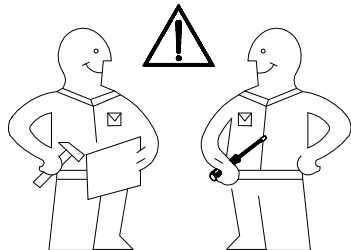


SAFADO / MARLEEN

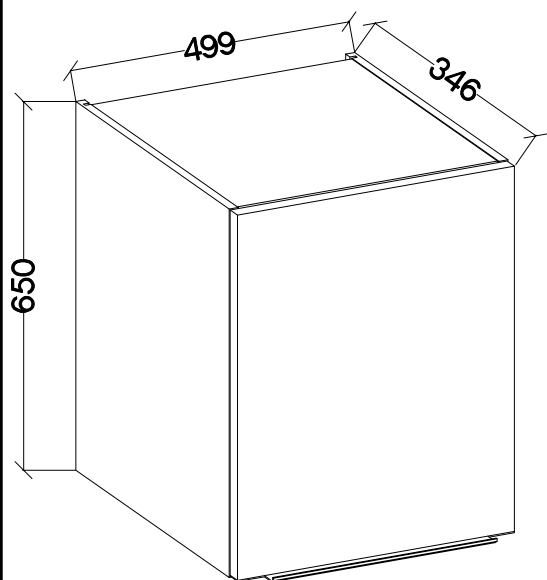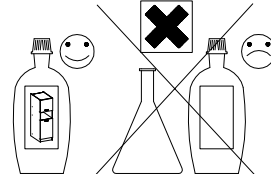84-170-...
84-176-...
84-17D-...



respekta®






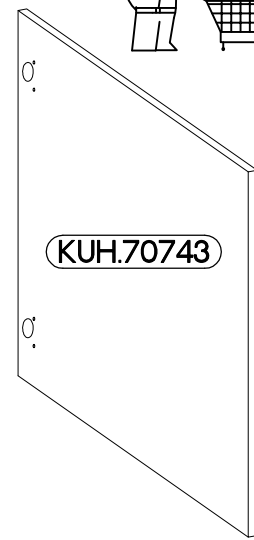
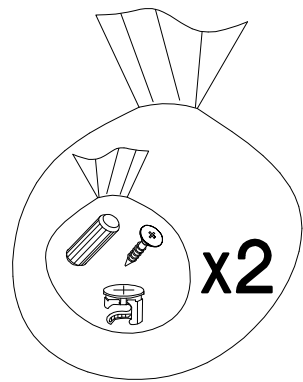
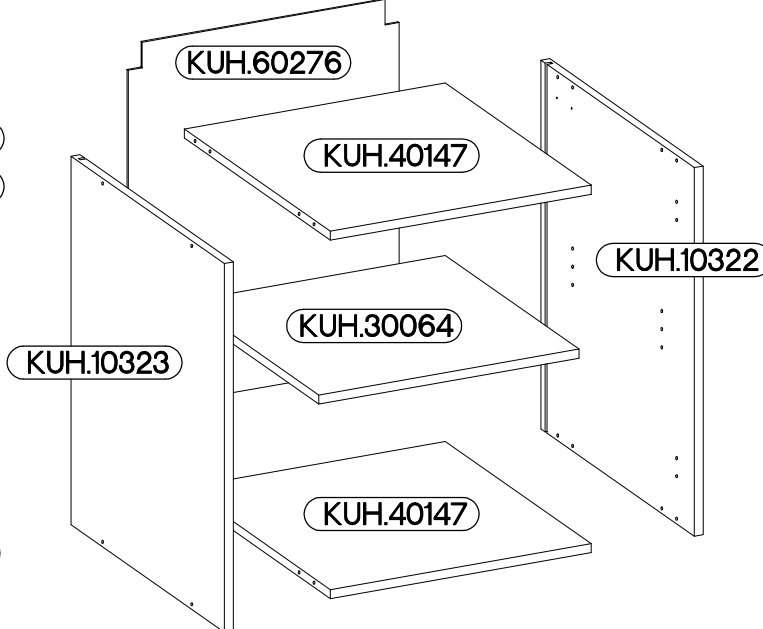
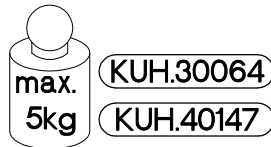
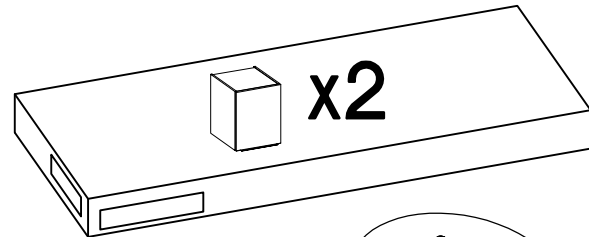


 A 8	 B 8	 E1 8	 HG 2	 J3 4	 K 2
 K16 2	 O 1	 P5 4	 P7 8-10	 P8 4	 P11 3
 SL50 1	L=495mm				

Colli	Spare Part	Dimension
Colli 4/6	KUH.10322	650x330x16
	KUH.10323	650x330x16
	KUH.30064	466x288x16
	KUH.40147 x2	467x314x16
	KUH.60276	646x485x2,5
	KUH.70743	644x496x16

x2

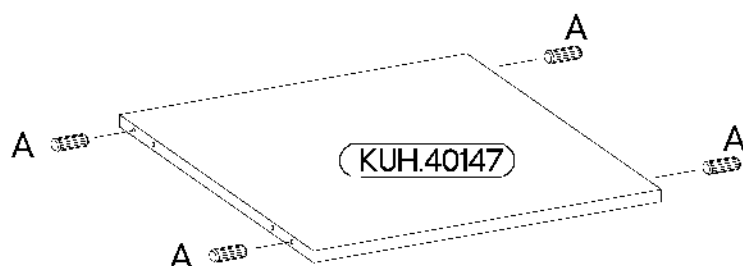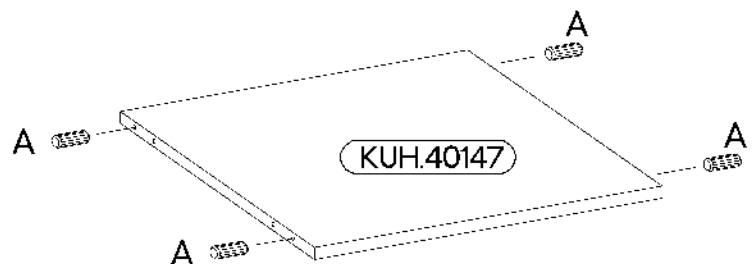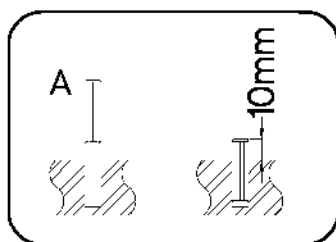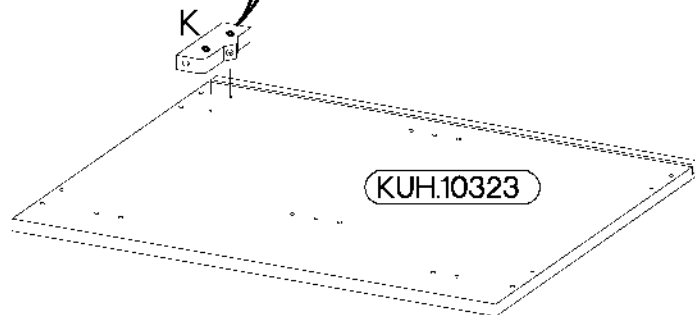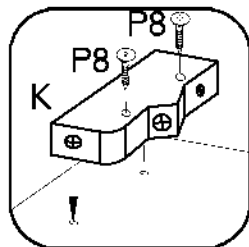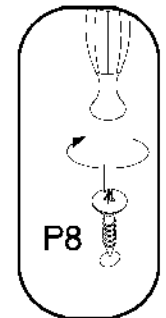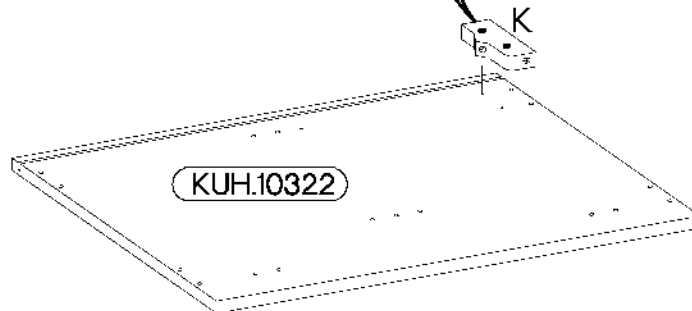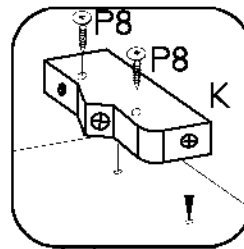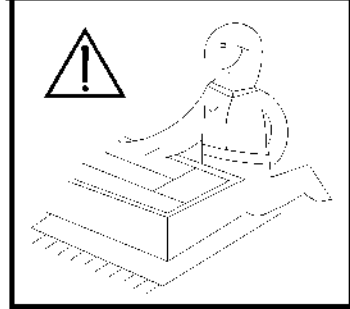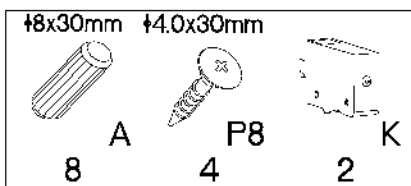ISM-KUH-01605



2

6,4 x 50mm



B

4



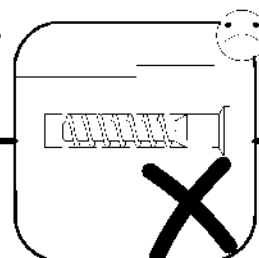
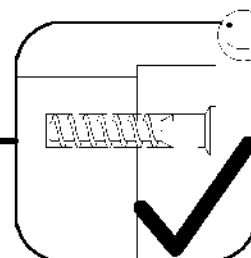
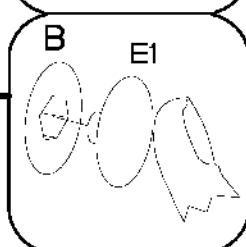
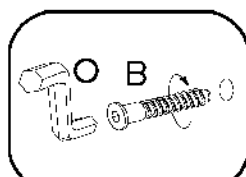
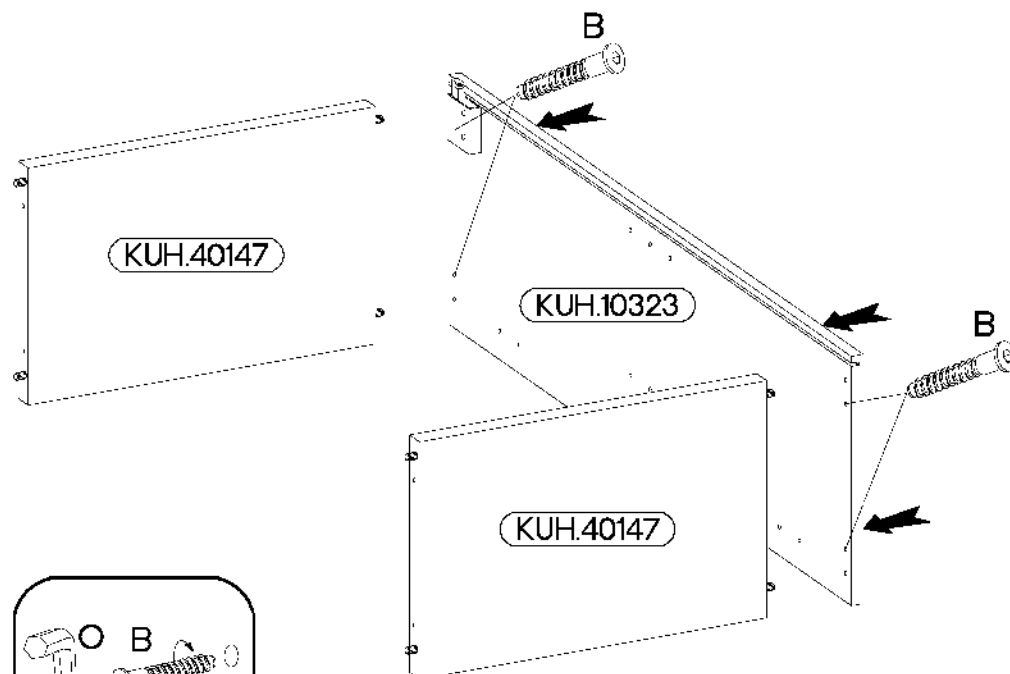
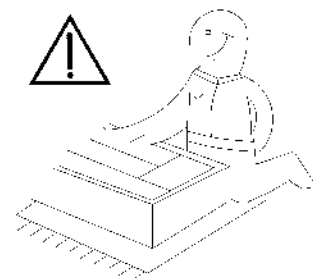
O

1




E1

4



3

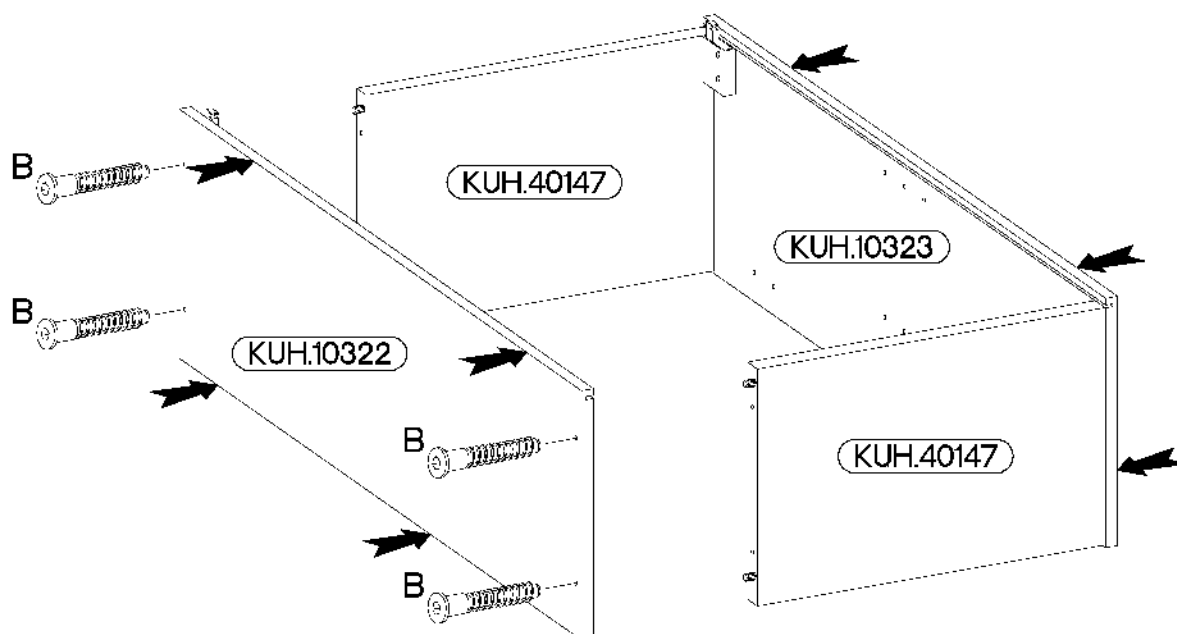

6,4 x 50mm



B

4



O

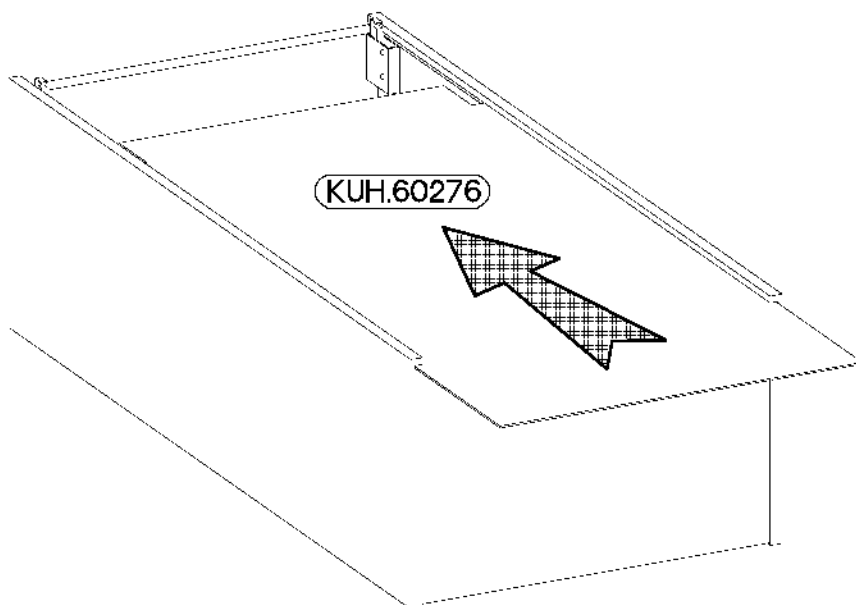
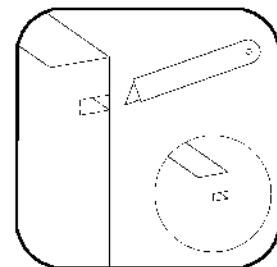
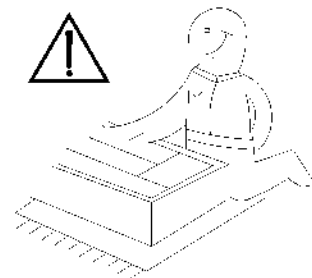
1



E1

4

4.






5










φ3.0x20mm



P7

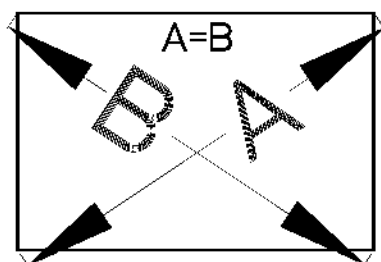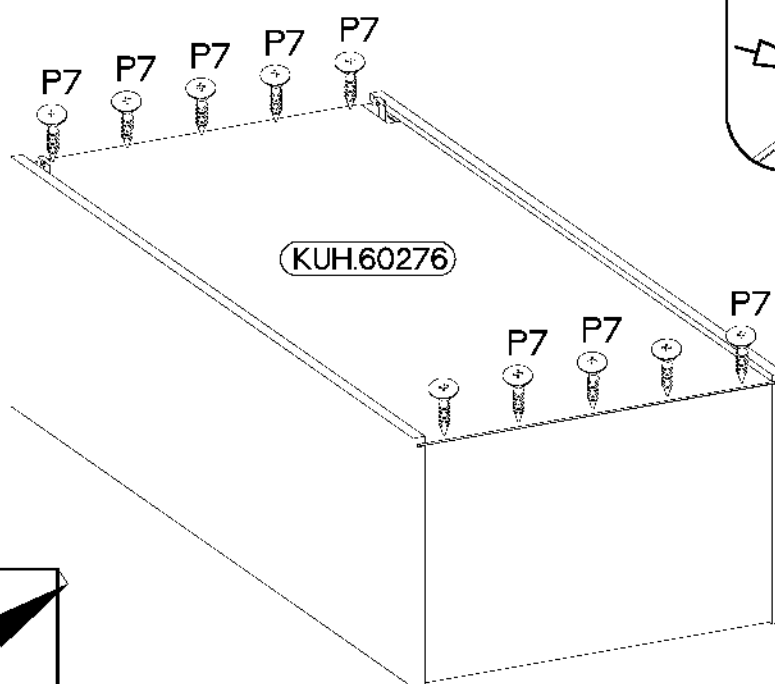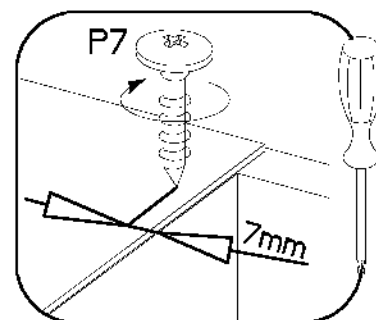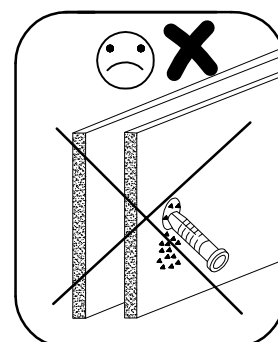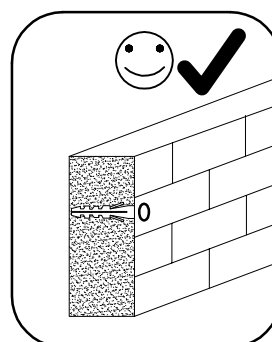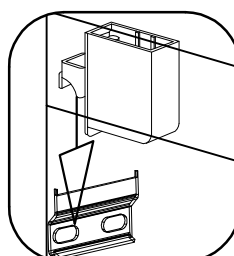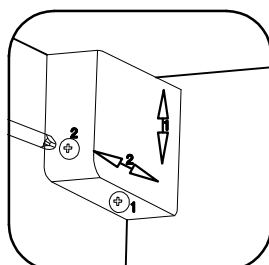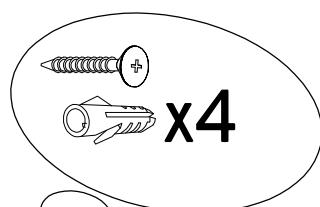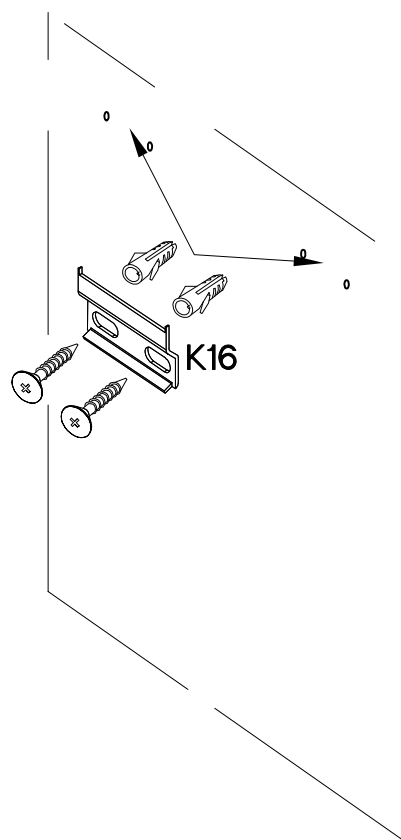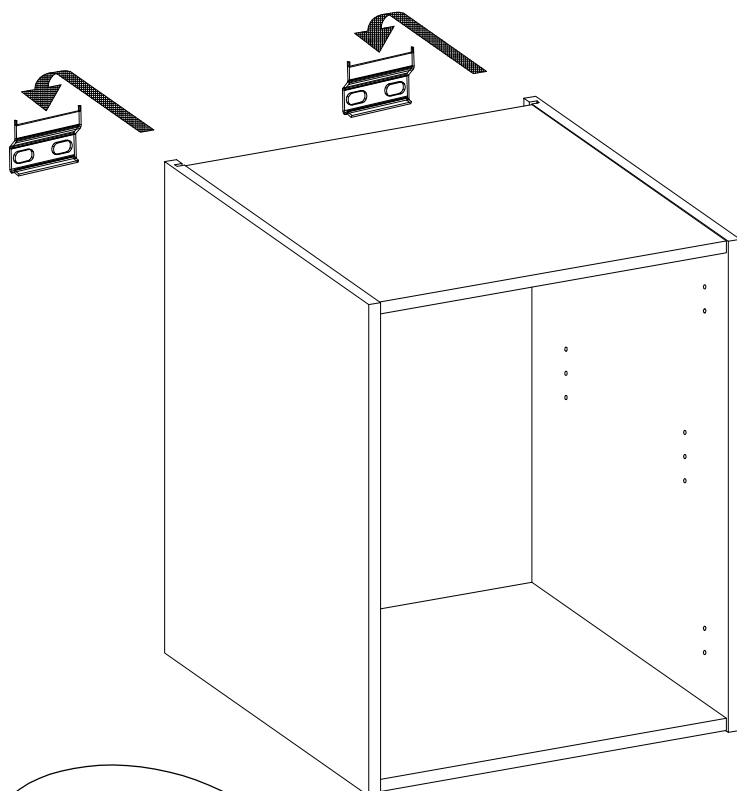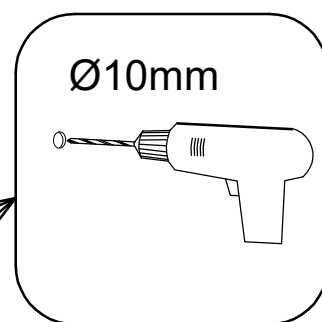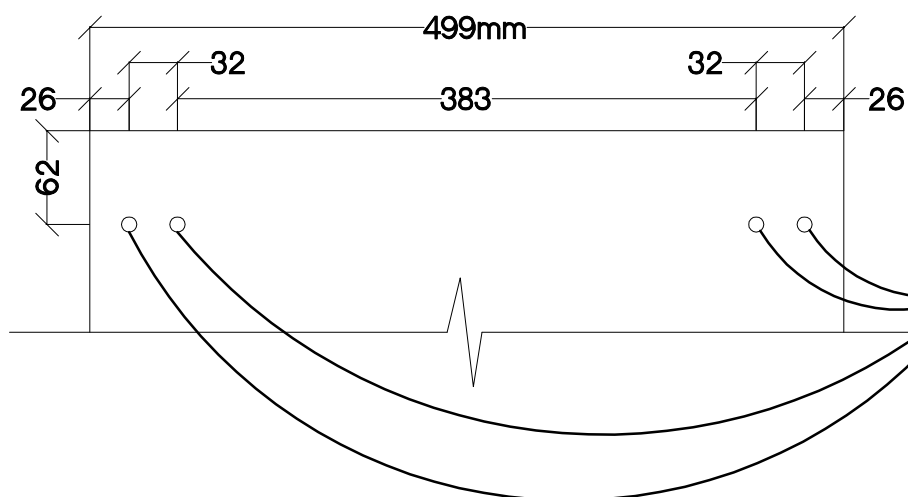8-10









45/16mm



J3

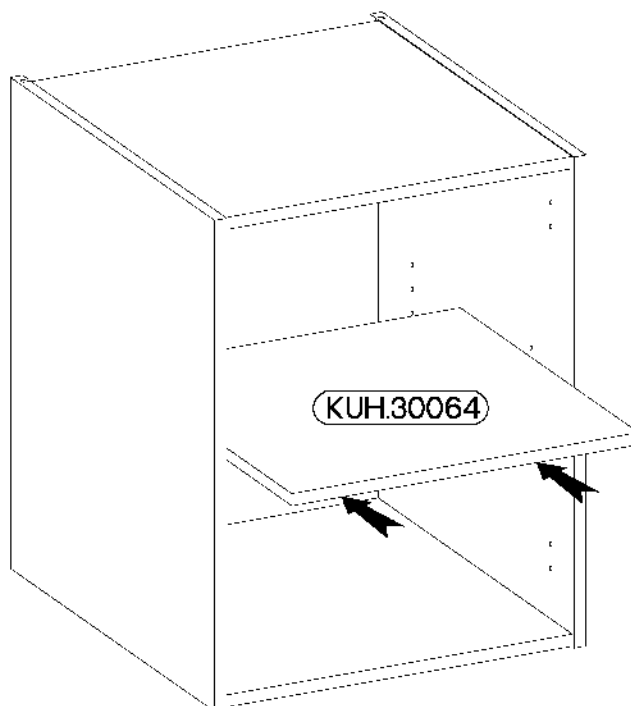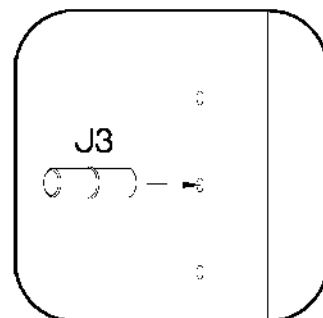4



8

35/0mm



HG

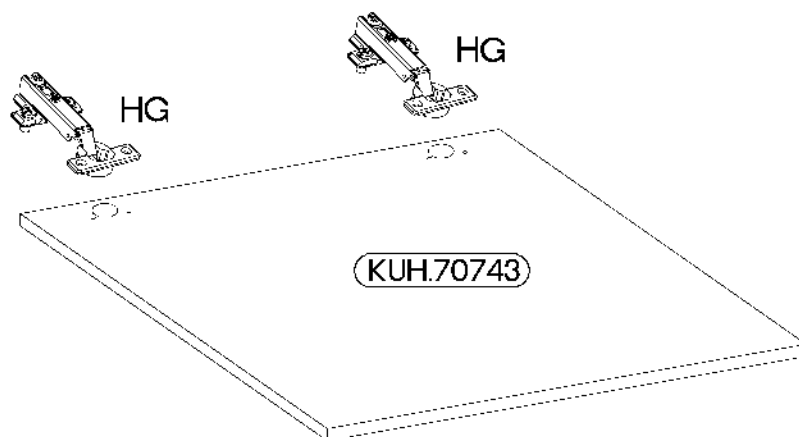
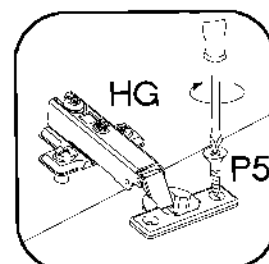
2

3.5x13mm








P5

4




9

3.0x16mm	L=495mm
	
P11	SL50
3	1

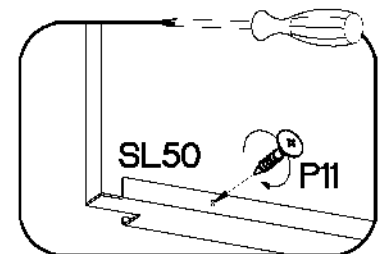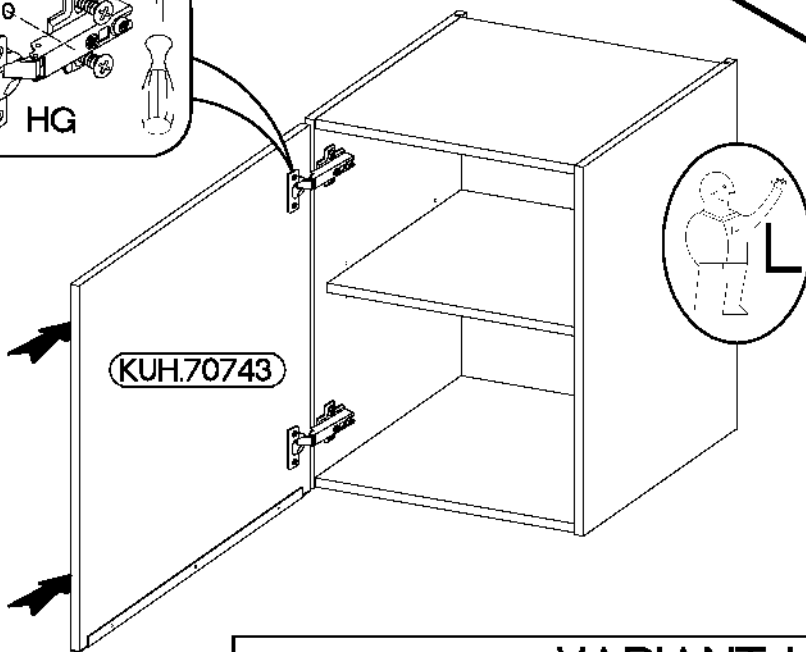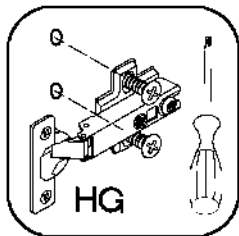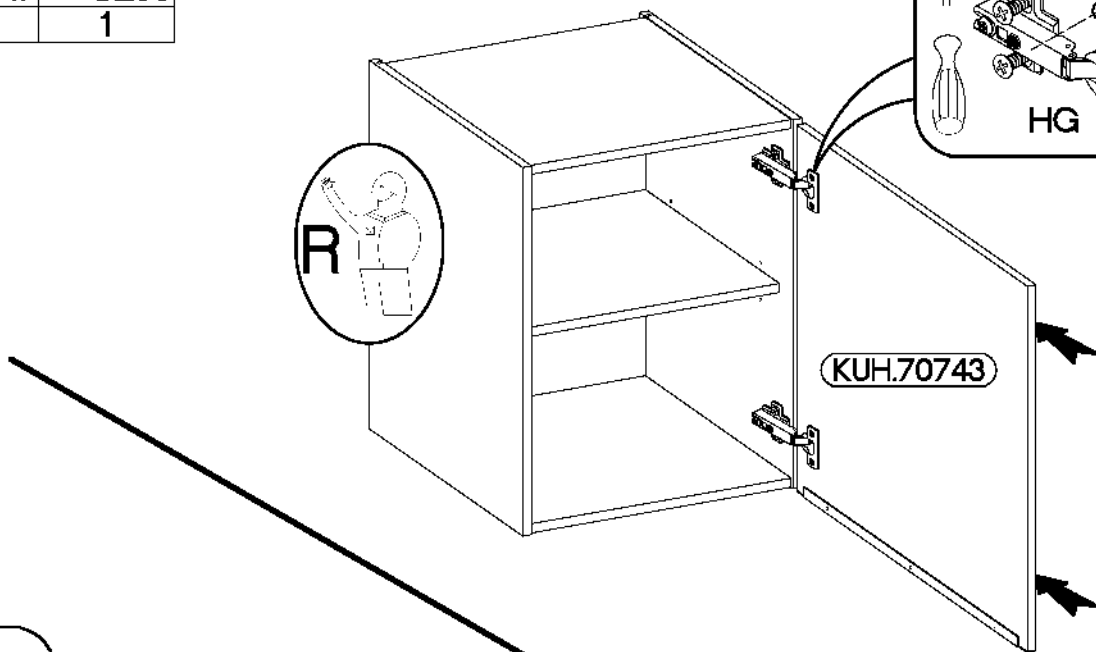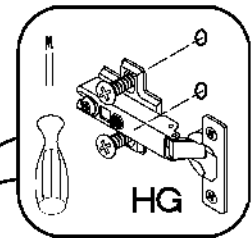

VARIANT HIGH GLOSS







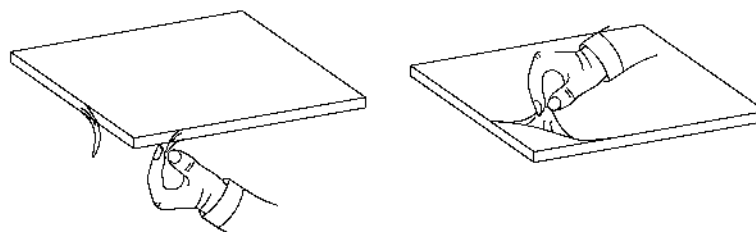
1.




2.




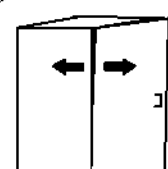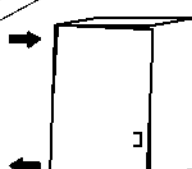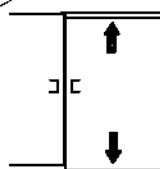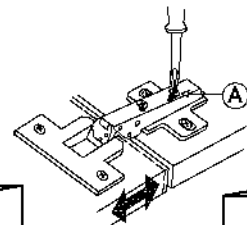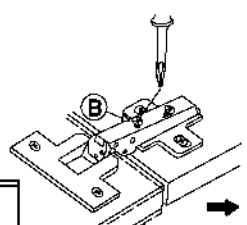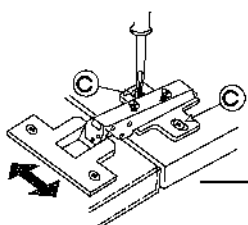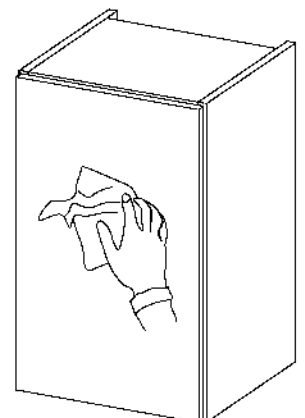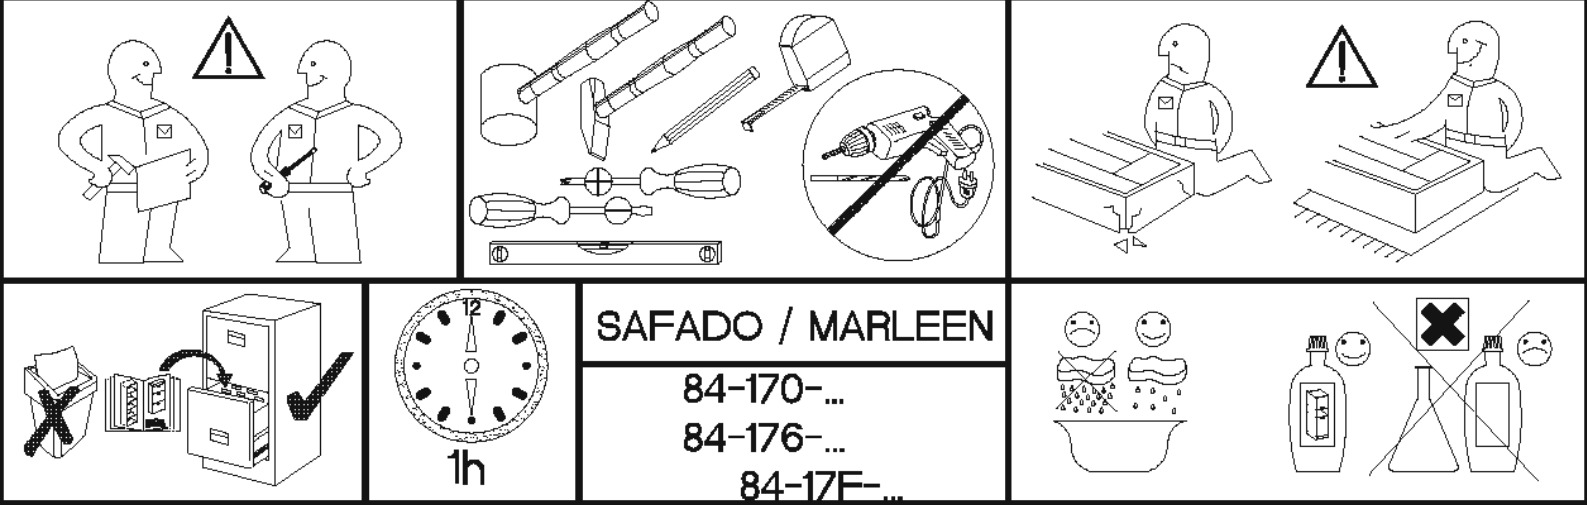3.







respekta®

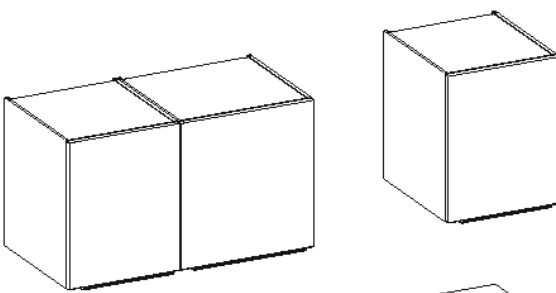


VARIANT 1

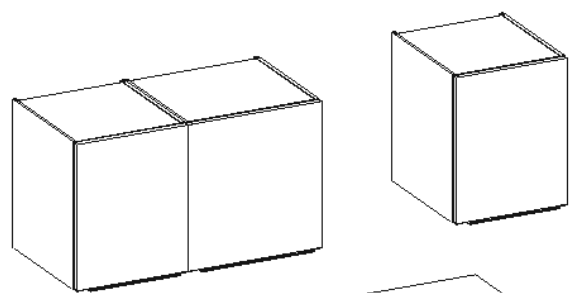

VARIANT 2

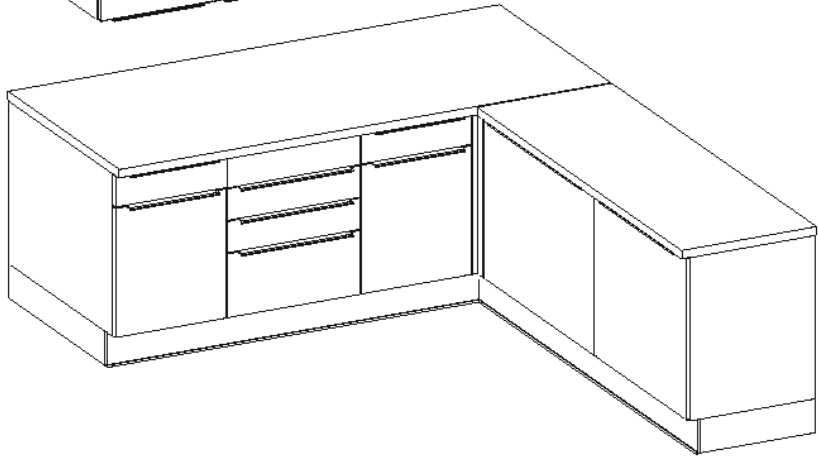

VARIANT 1

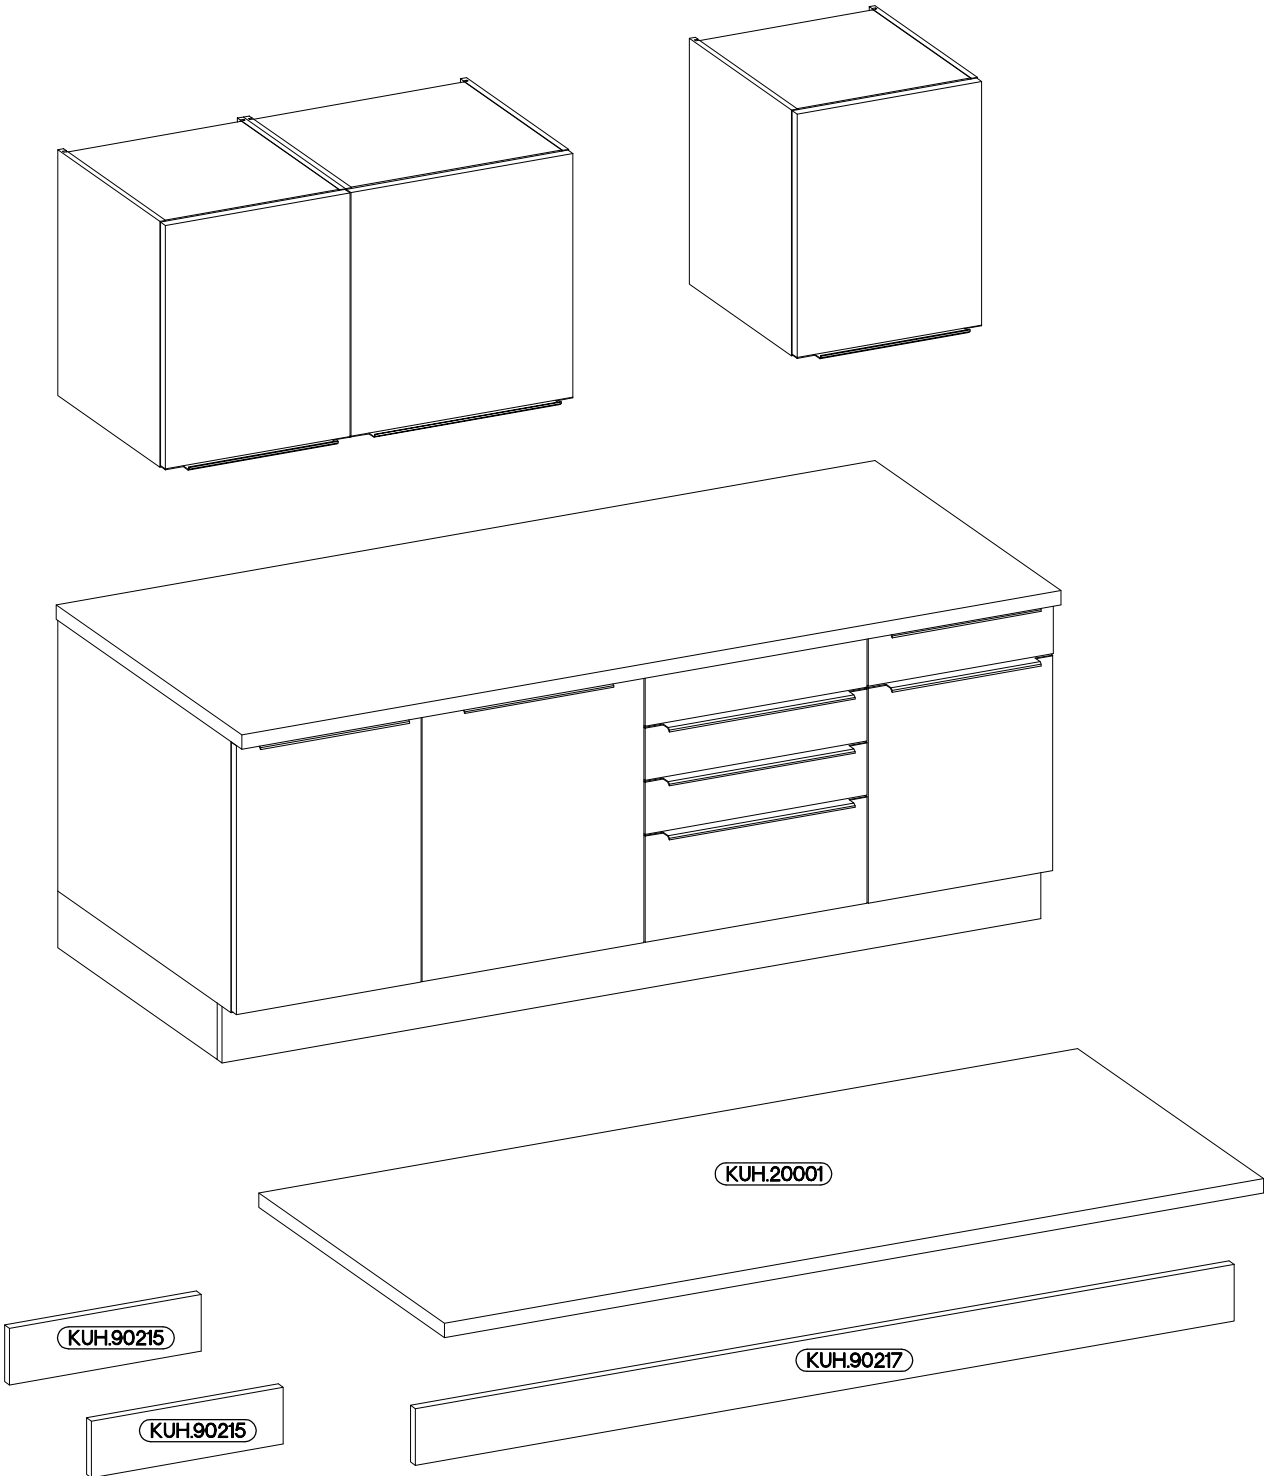

Colli	Spare Part	Dimension
Colli 6/6	KUH.20001	2200x600x38
	KUH.90215 x2	515x150x16
	KUH.90217	2199x150x16

3.5x13mm



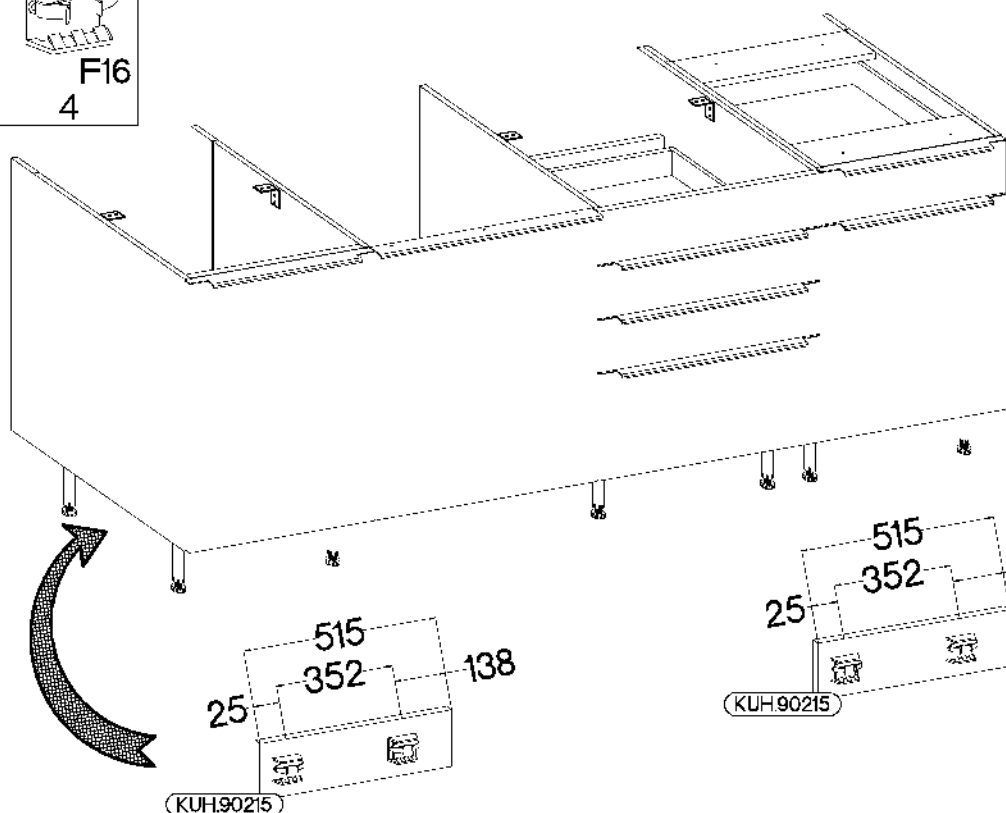
P5

8



F16

4




1.

F16



2.

F16



P5

3.

F16

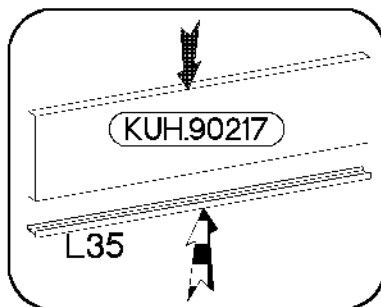
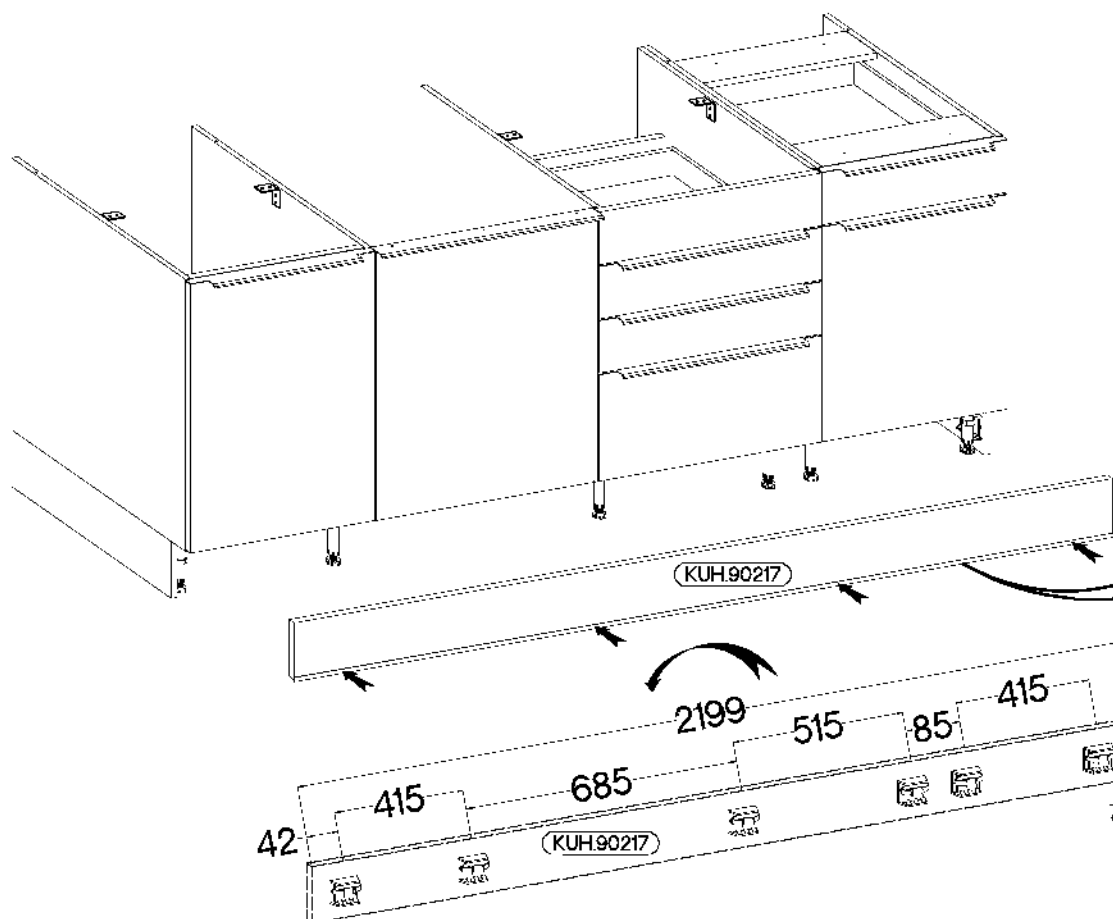


4.

F16



2




3.5x13mm



P5

12



F16

6

L=2200mm







L35


1


3

4.0x35mm	3.5x13mm
	
R3	P5
4	8

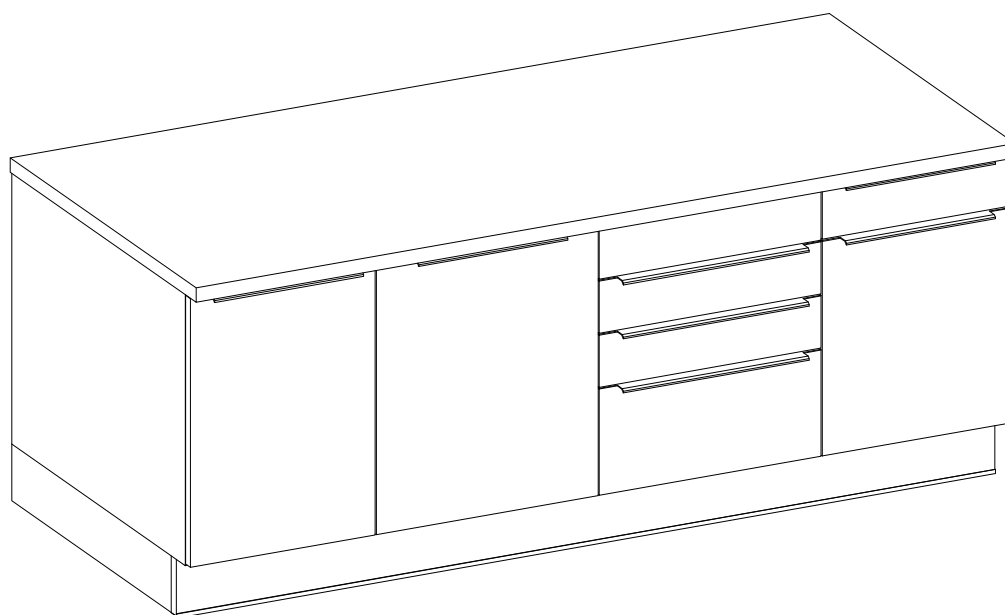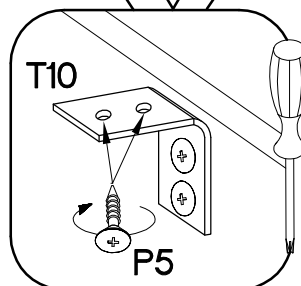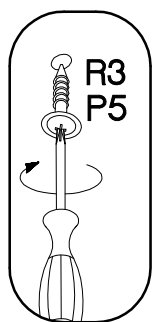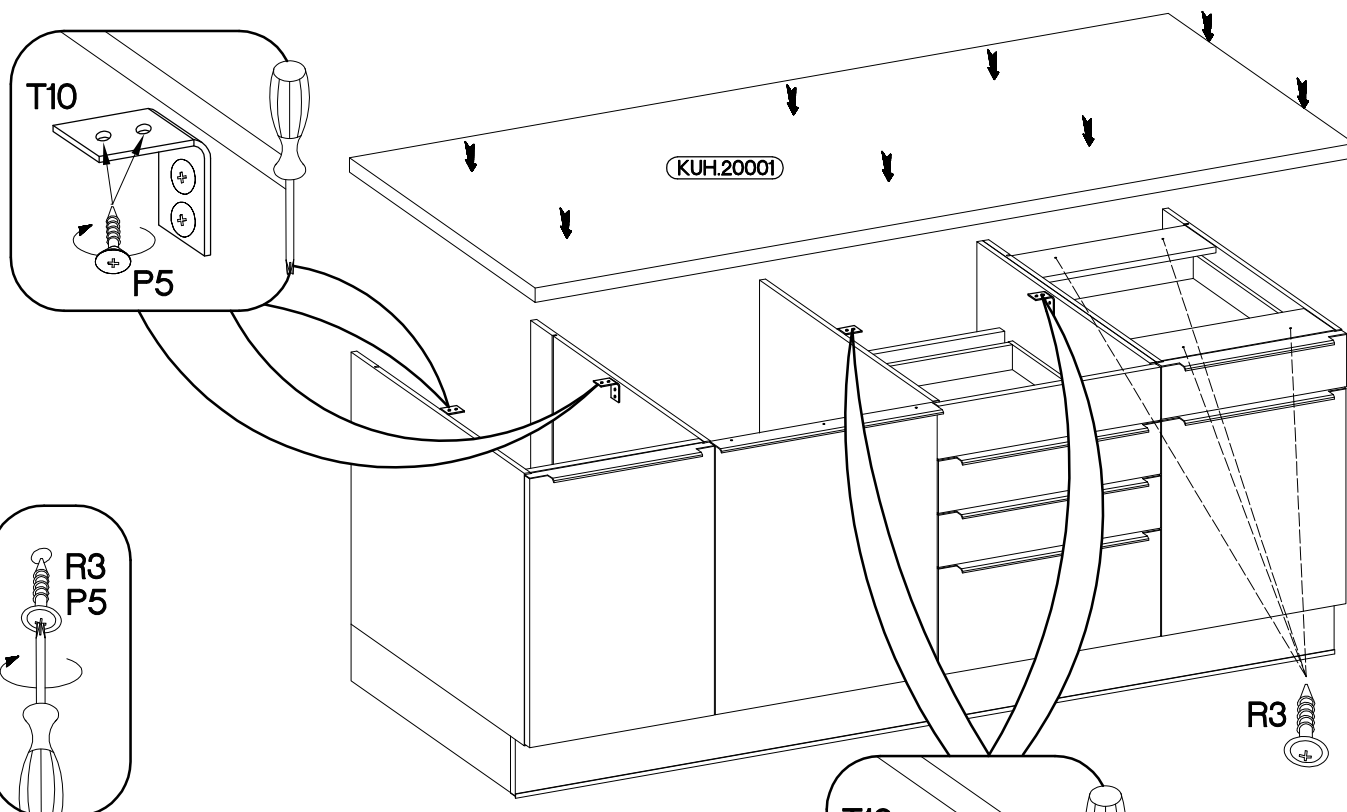


4


3.0x16mm  P11 8	L=2200mm  L36 1	 L37 2
---	---	---

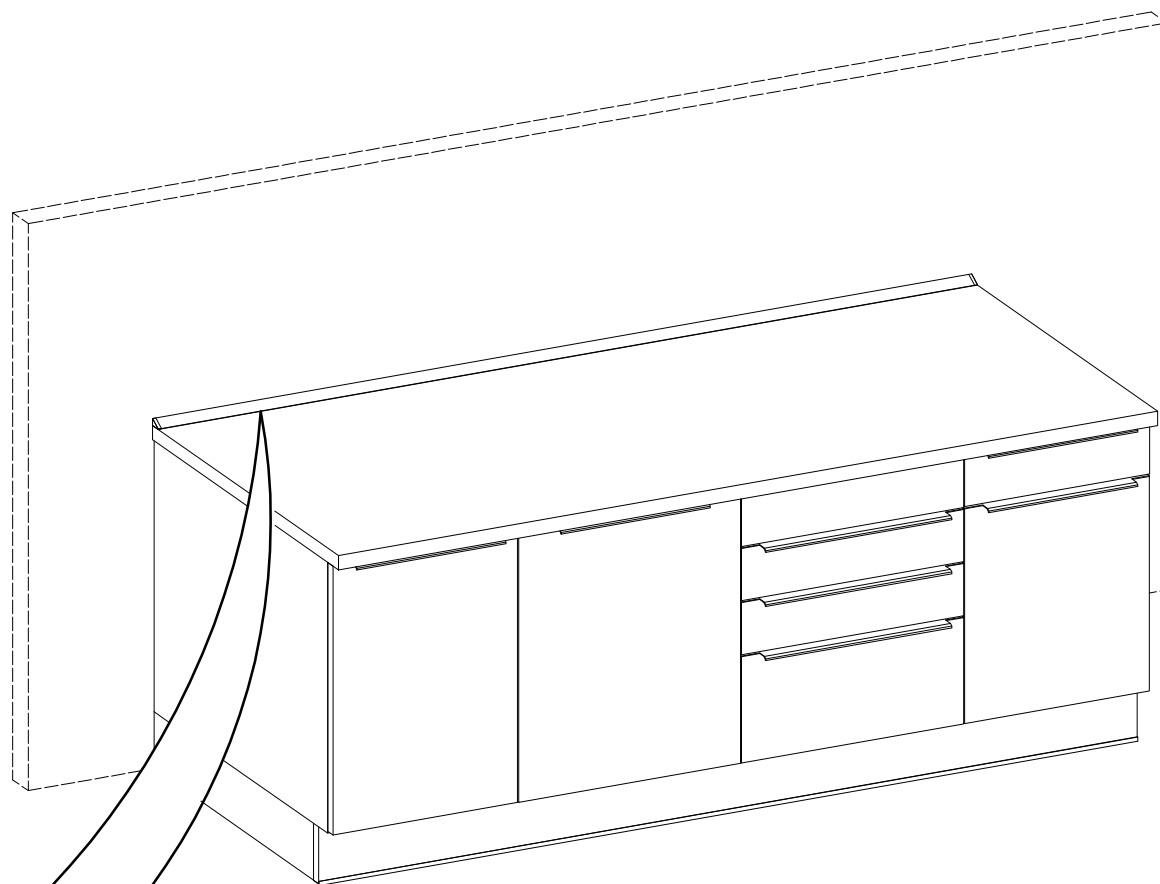

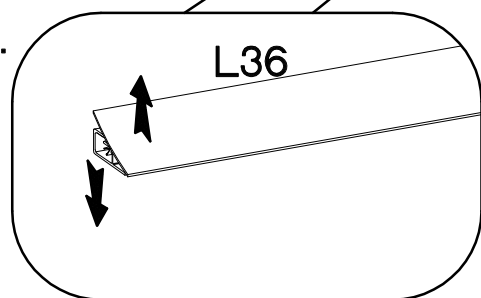
1.



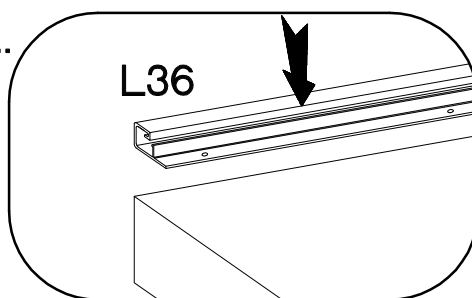
2.



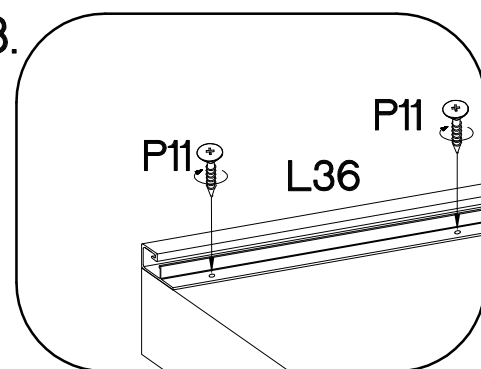
3.



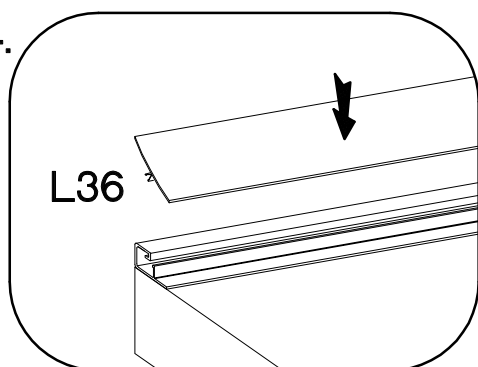
4.



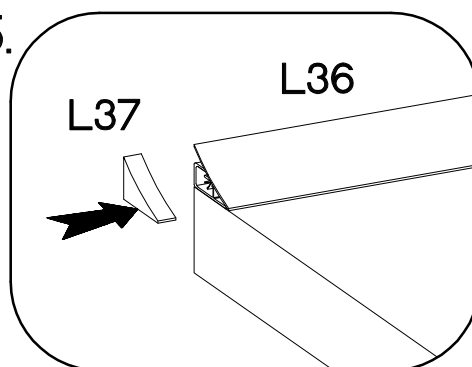5.









VARIANT 2

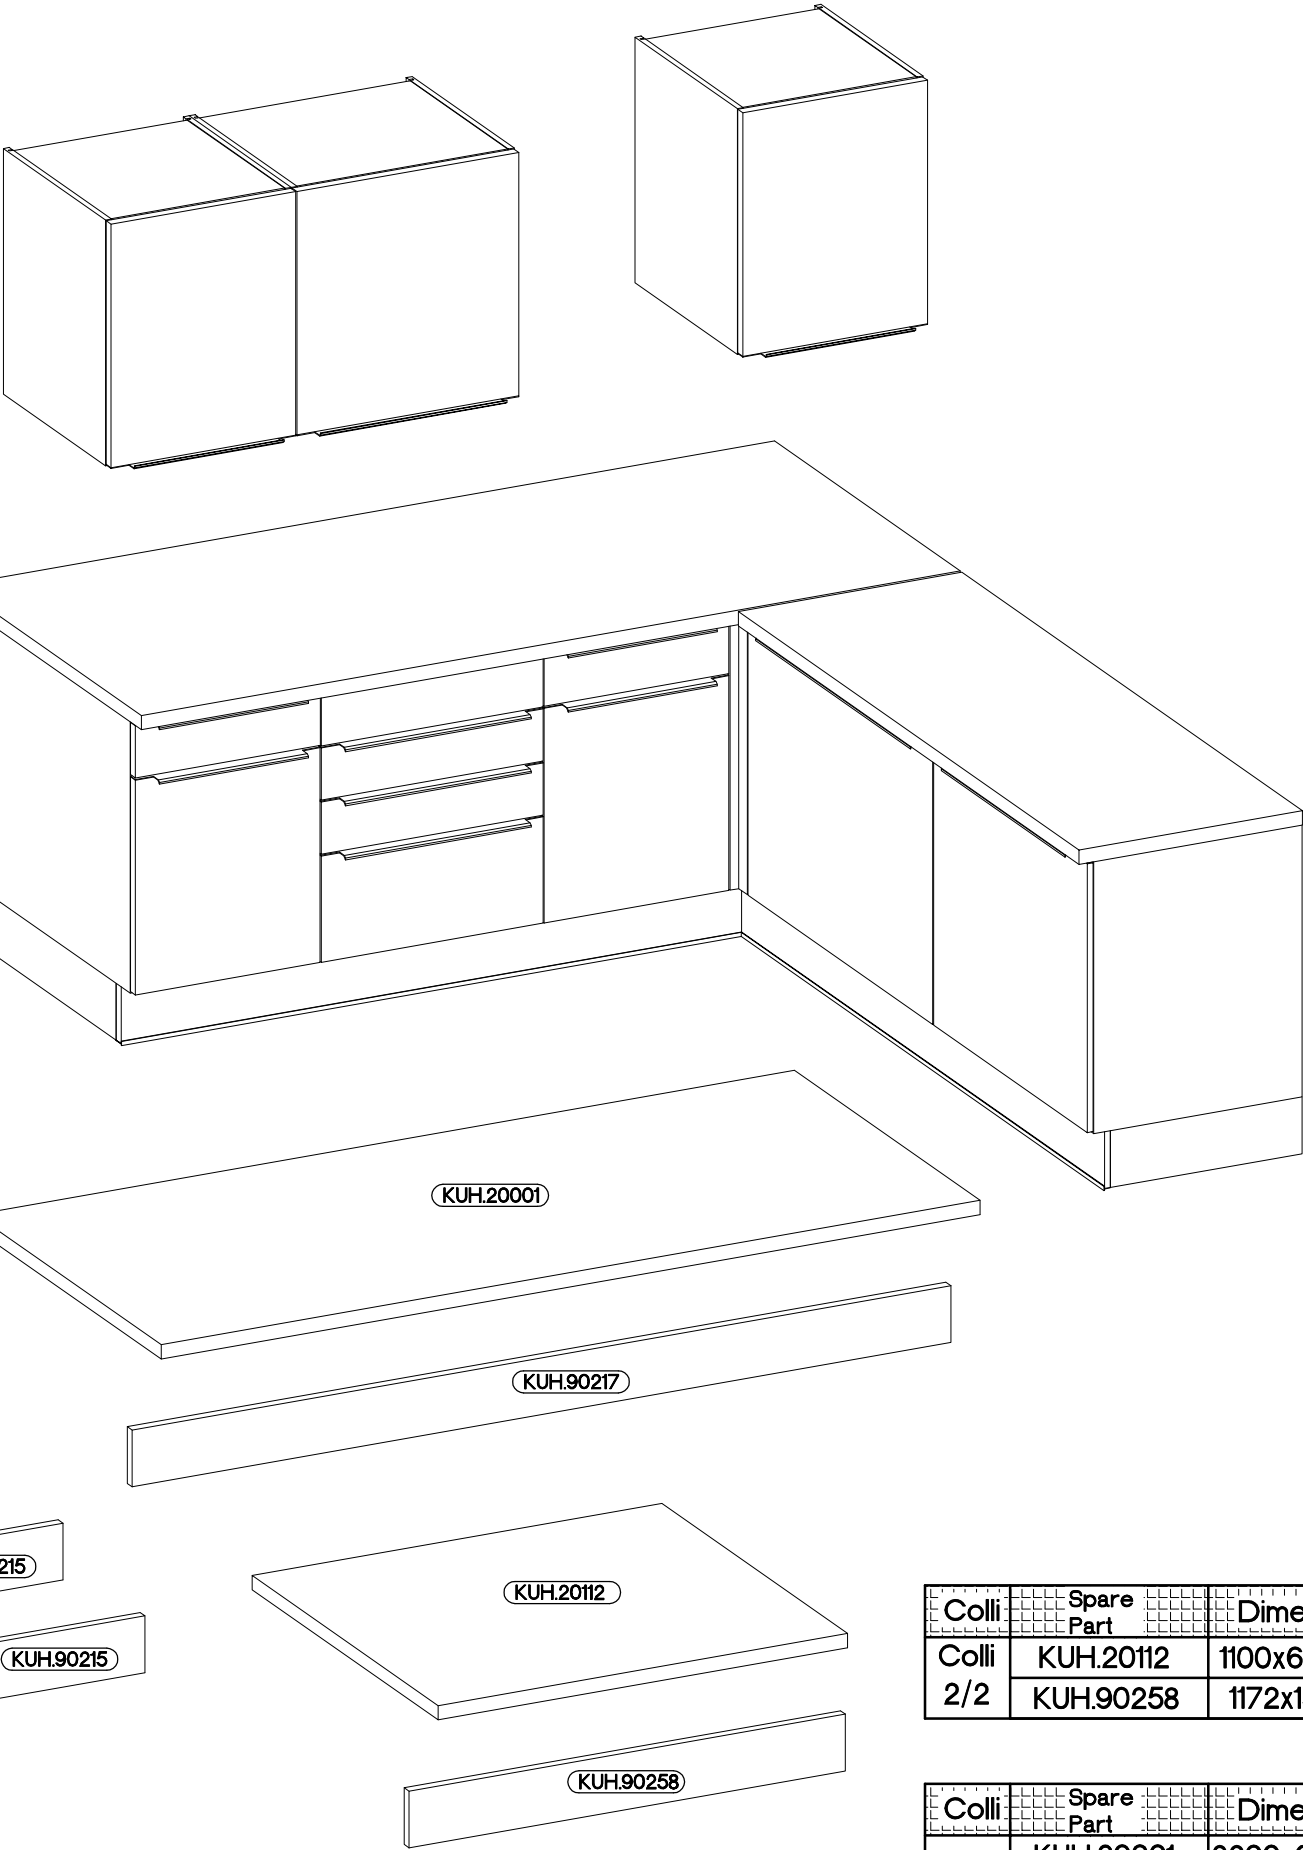


Colli	Spare Part	Dimension
Colli 2/2	KUH.20112	1100x600x38
	KUH.90258	1172x150x16

Colli	Spare Part	Dimension
Colli 6/6	KUH.20001	2200x600x38
	KUH.90215 x2	515x150x16
	KUH.90217	2199x150x16

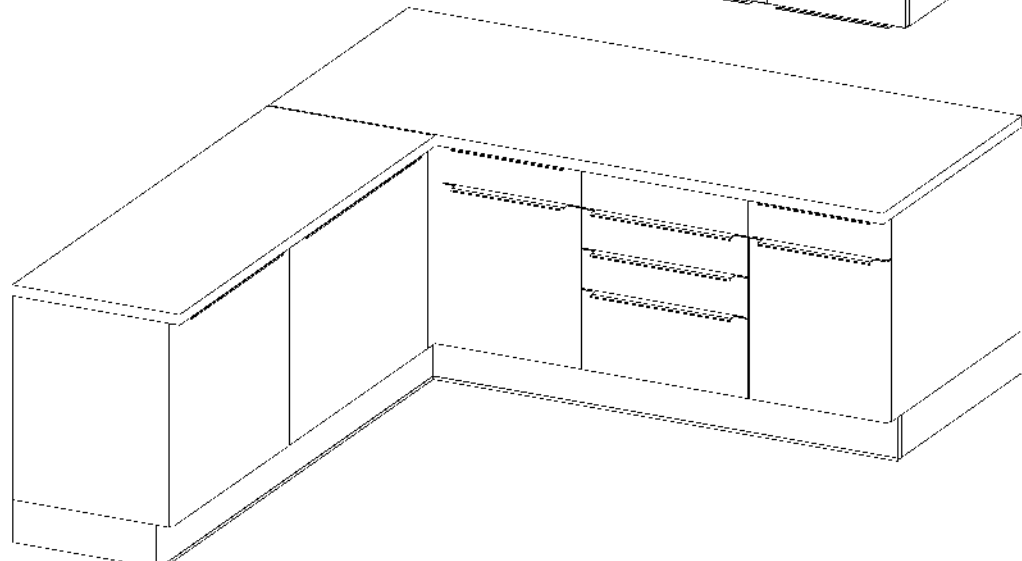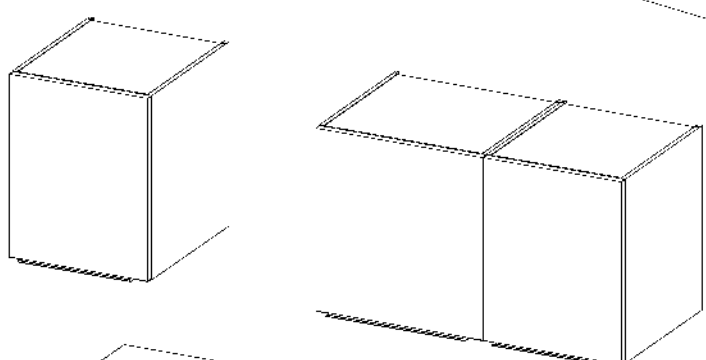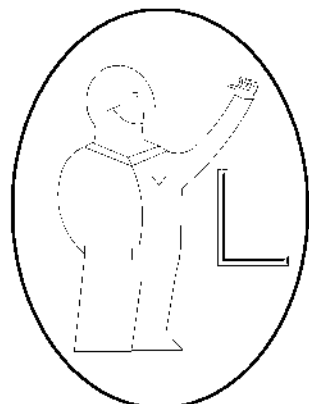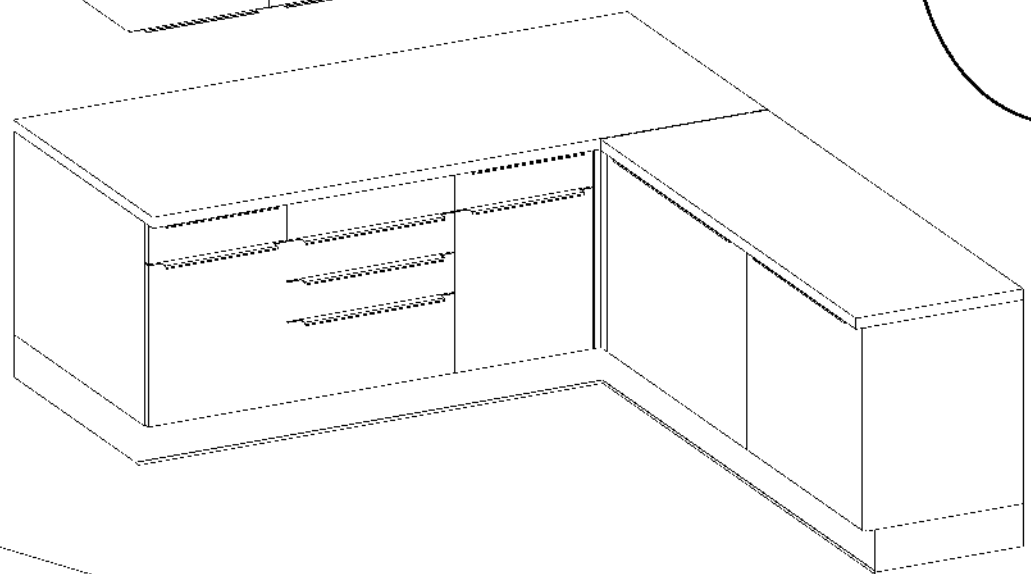
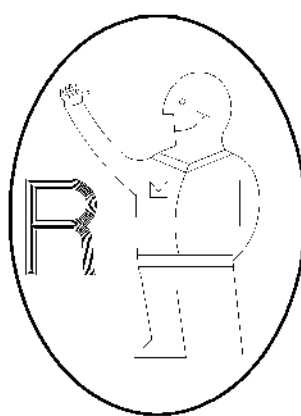
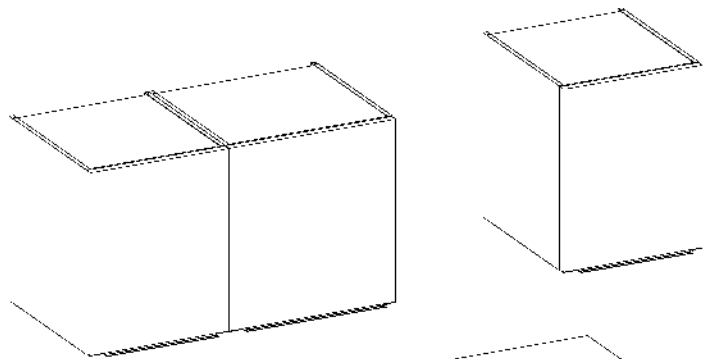


4

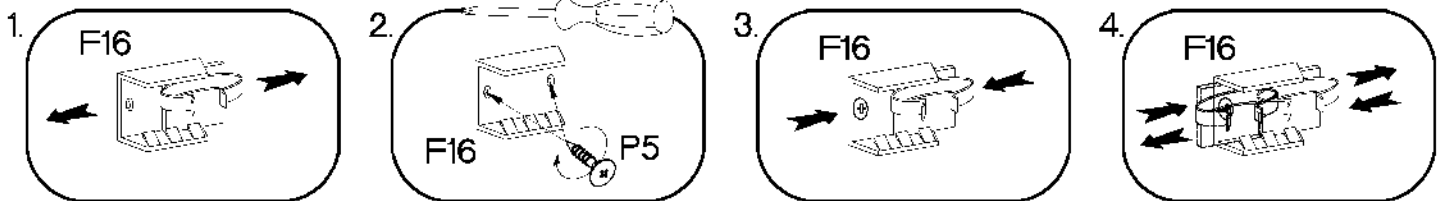









#3.5x13mm L=2200mm

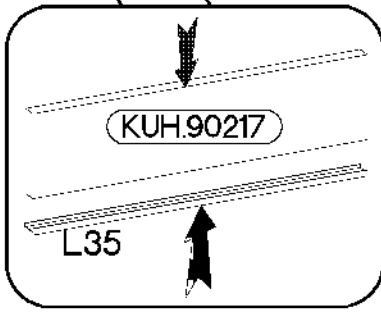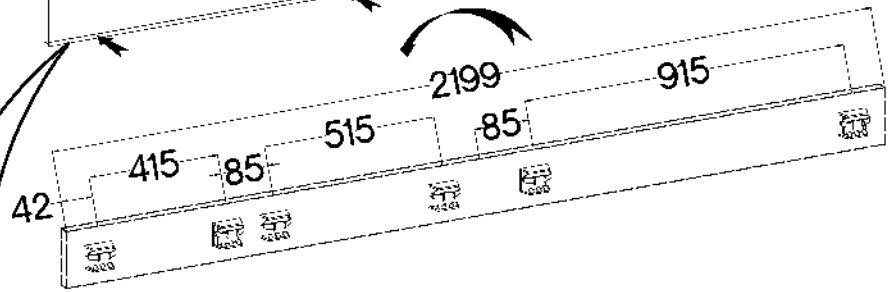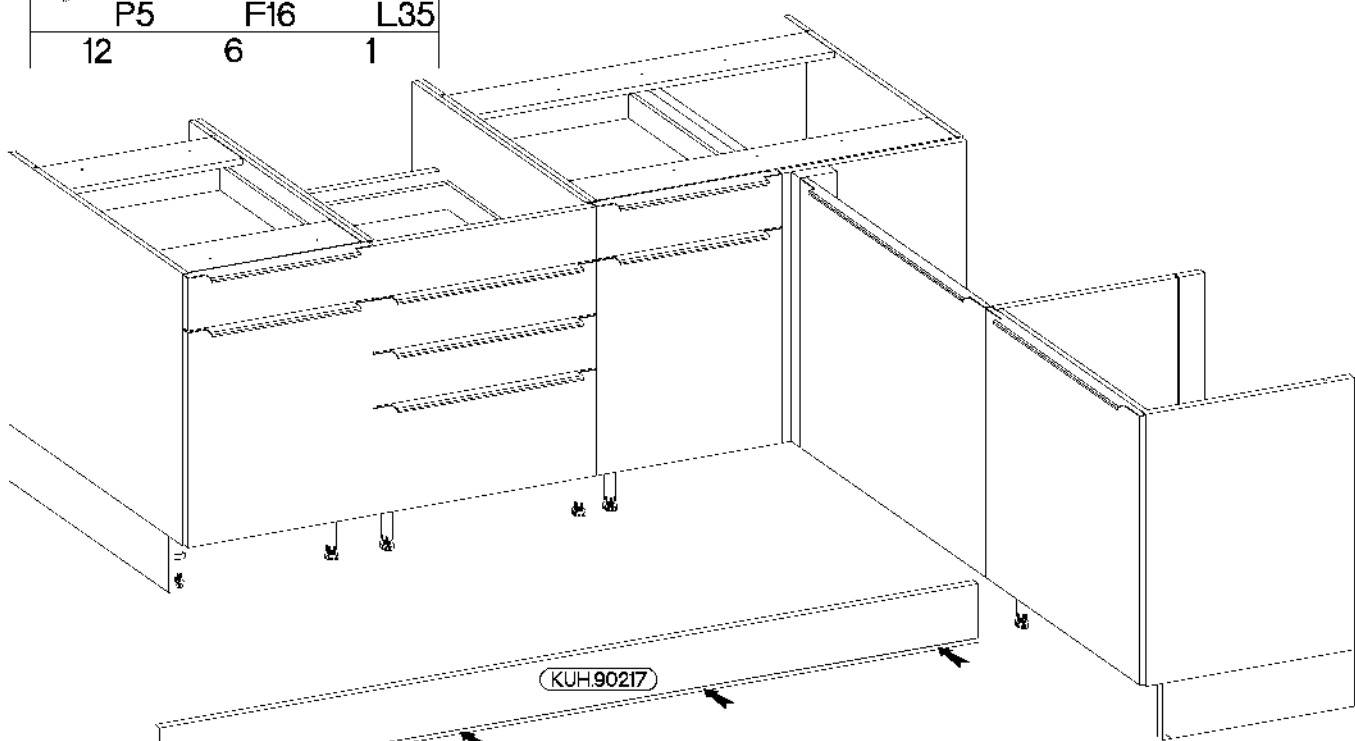P5	F16	L35
12	6	1





1. F16
2. F16 P5
3. F16
4. F16

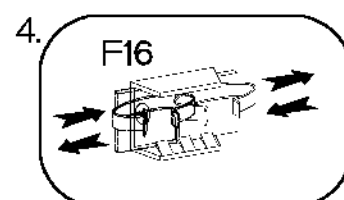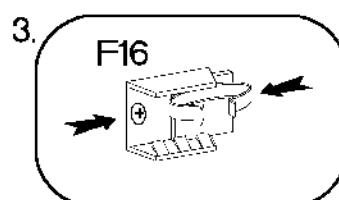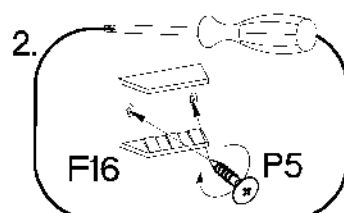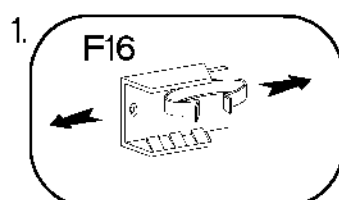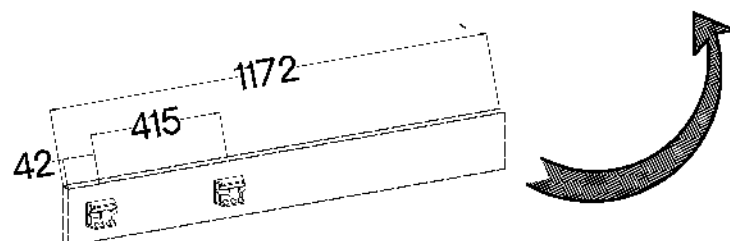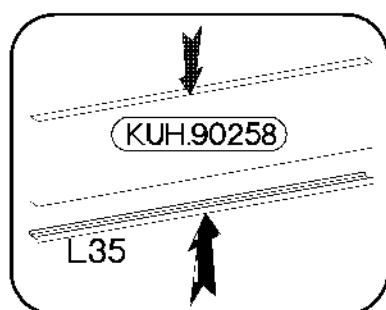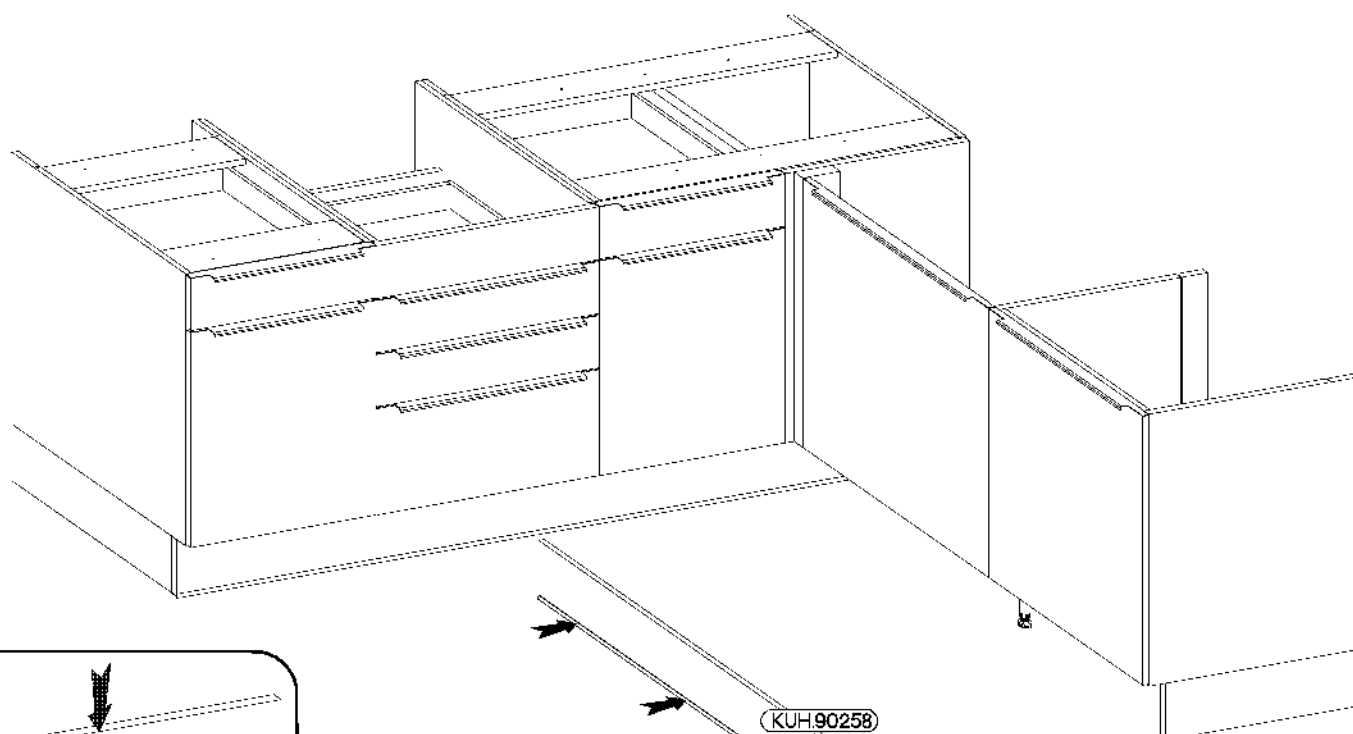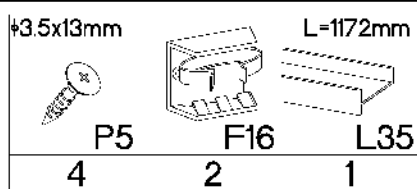
7



4.0x35mm	3.5x13mm
	
R3	P5
8	8

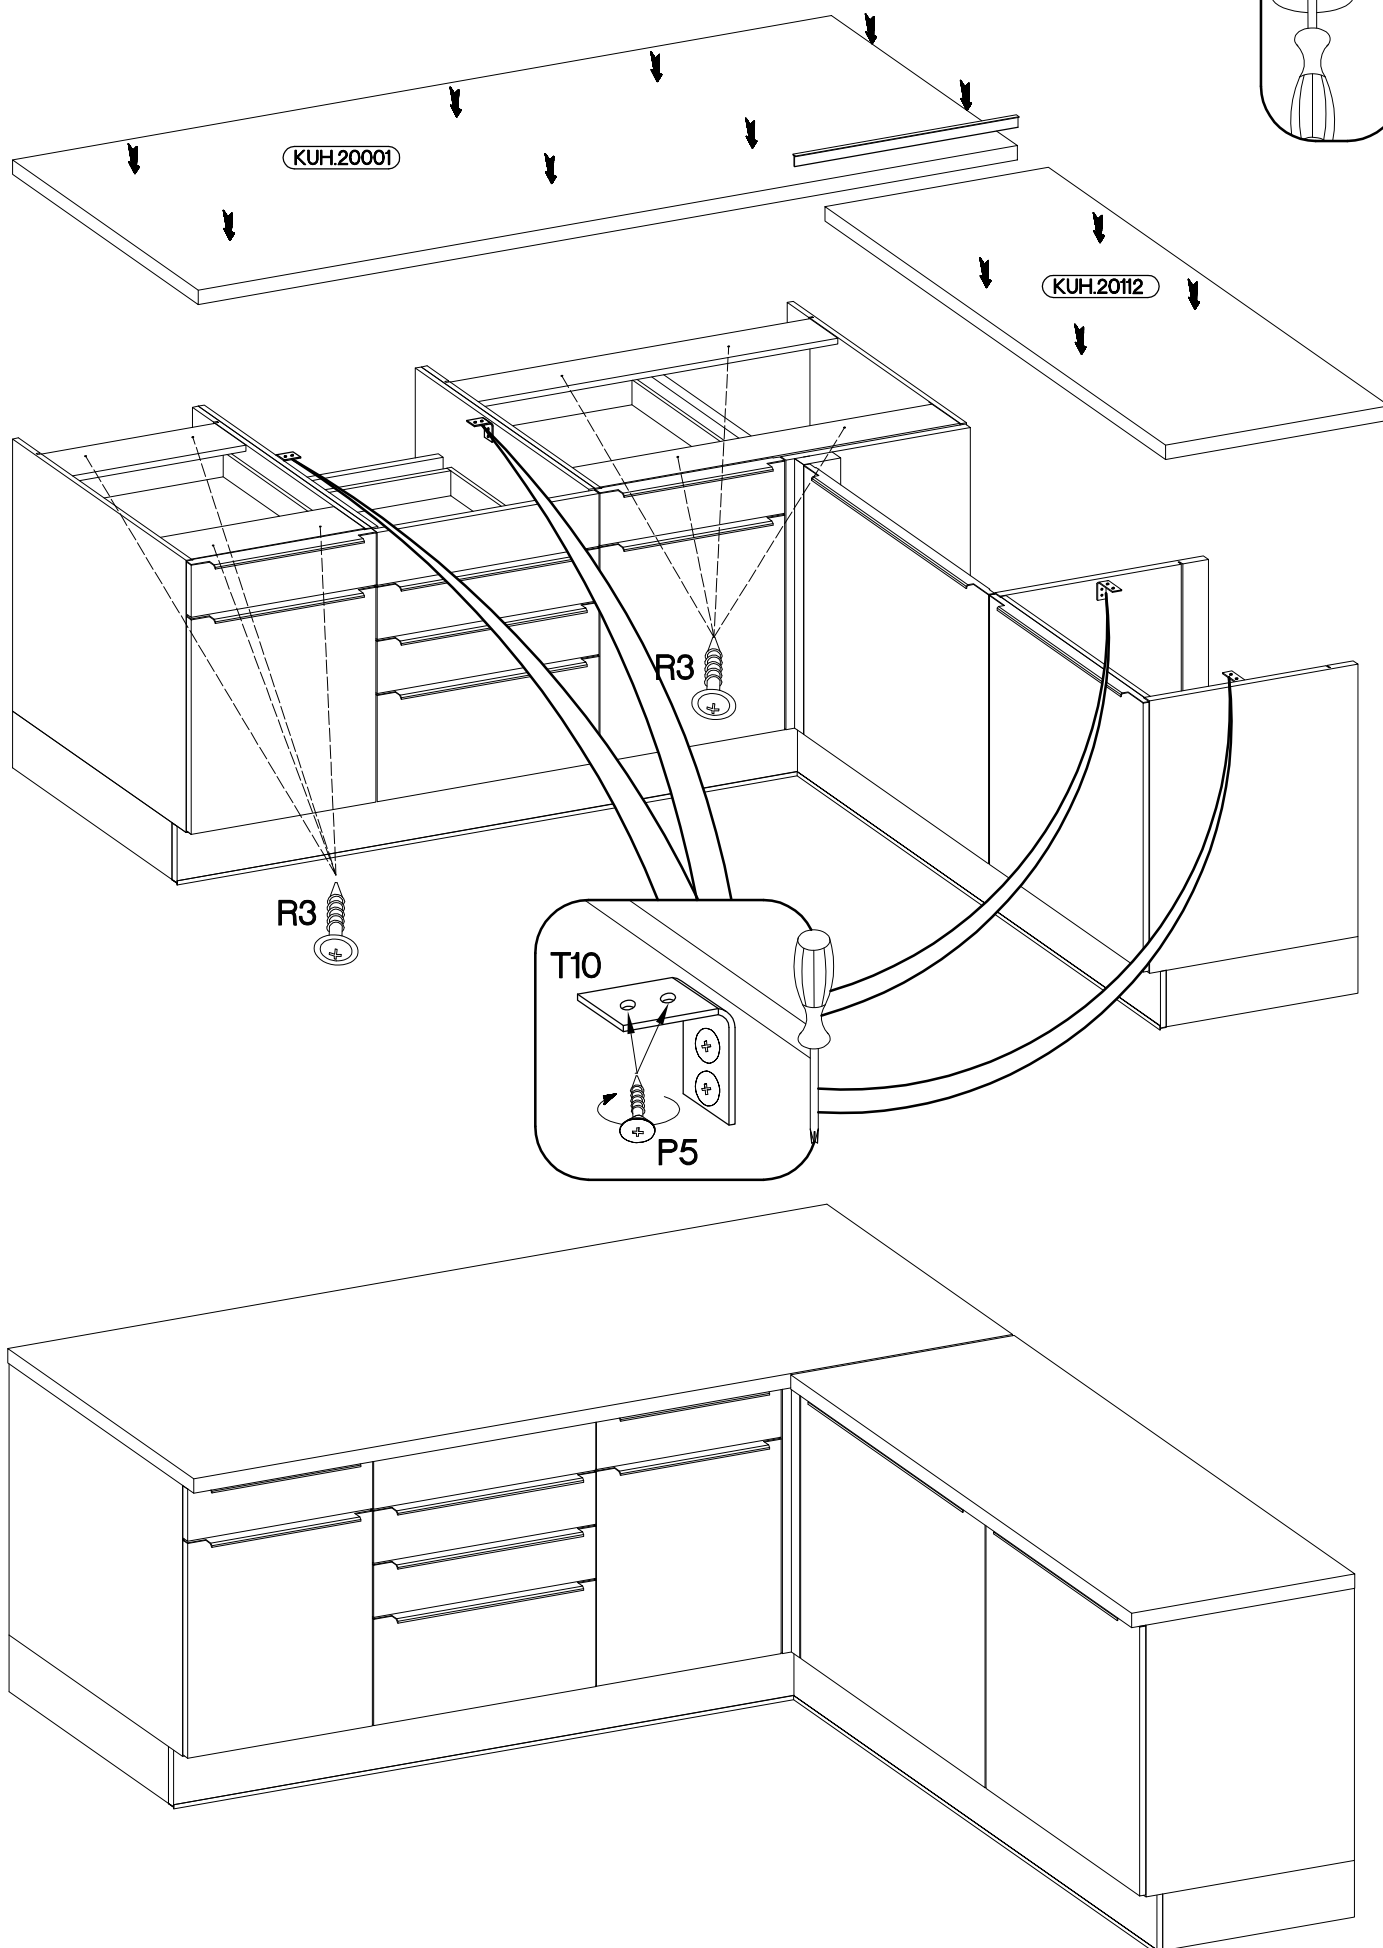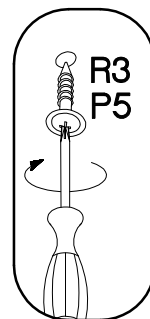

$\varnothing 3.0 \times 16 \text{ mm}$  P11 14	L=2200mm  L36 2	 L37 2	 L38 1
--	--	---	---

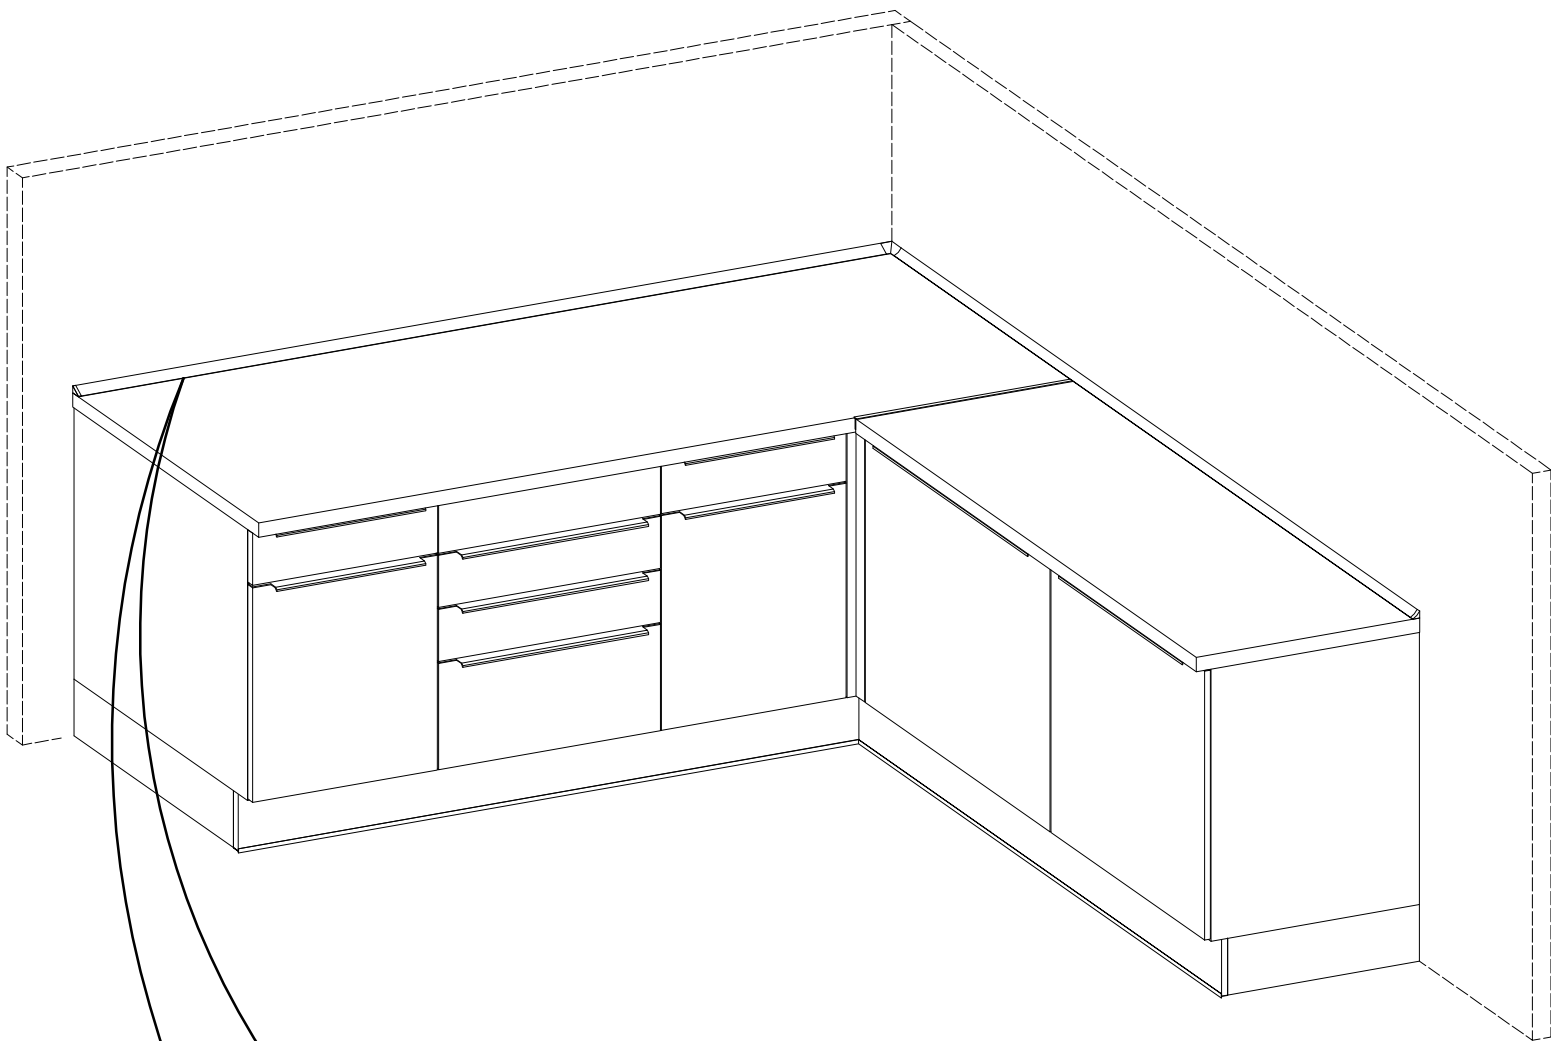

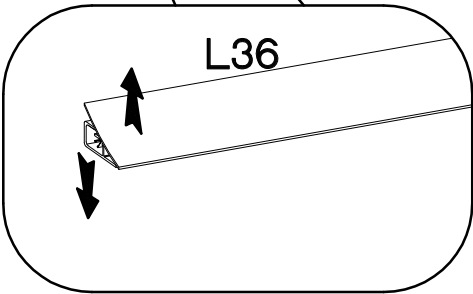
- 

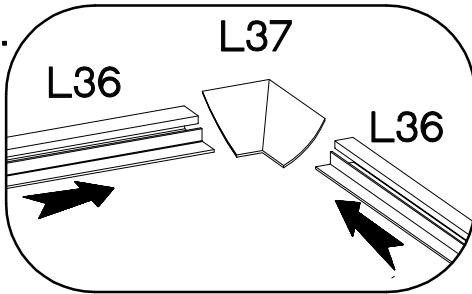
Diagram 1 shows an L-shaped profile (L36) being attached to the corner of the cabinet base. Arrows indicate the profile is being slid into place.
- 

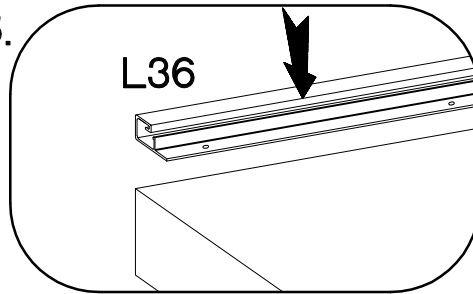
Diagram 2 shows two L-shaped profiles (L36) and one triangular profile (L37) being attached to the side panel of the cabinet. Arrows indicate the direction of attachment.
- 

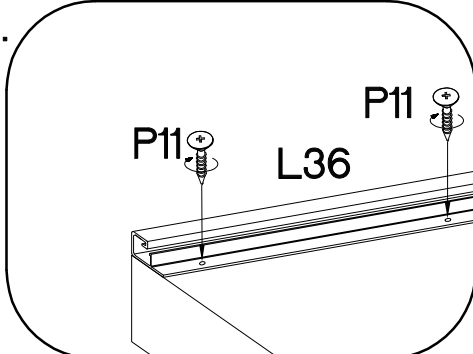
Diagram 3 shows an L-shaped profile (L36) being attached to the top edge of the cabinet base. An arrow indicates the profile is being slid into place.
- 

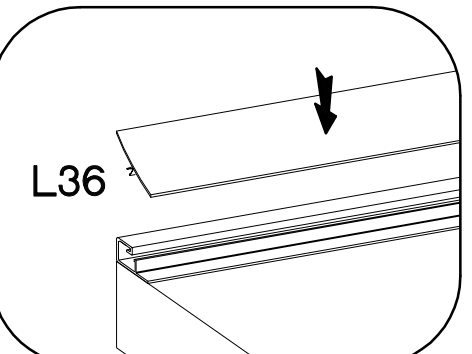
Diagram 4 shows two screws (P11) being used to secure the L-shaped profile (L36) to the cabinet base. Arrows indicate the screws are being driven into the profile.
- 



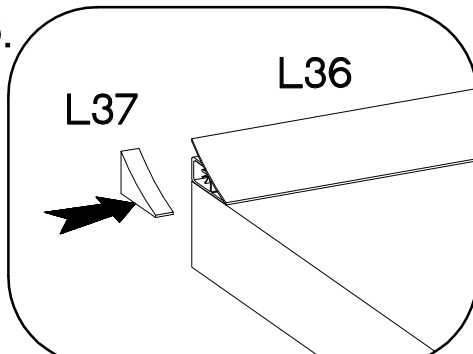
Diagram 5 shows an L-shaped profile (L36) being attached to the side panel of the cabinet. An arrow indicates the profile is being slid into place.
- 


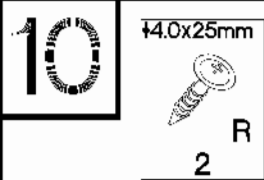
Diagram 6 shows a triangular profile (L37) and an L-shaped profile (L36) being attached to the top edge of the cabinet base. Arrows indicate the direction of attachment.




V 1

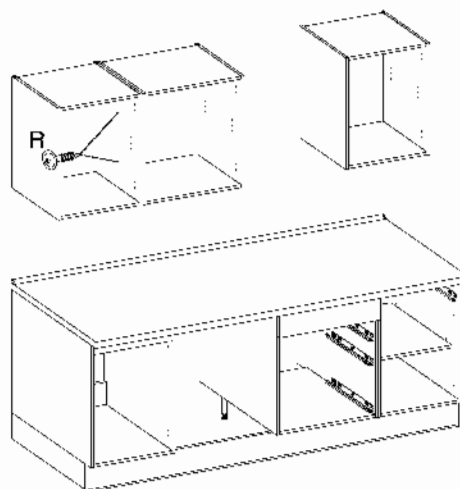


V 2




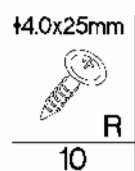
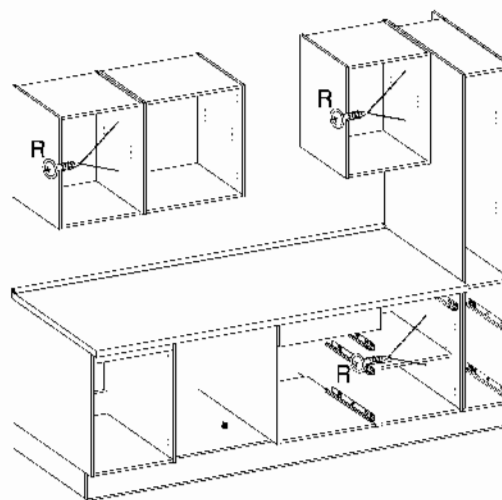


V 3

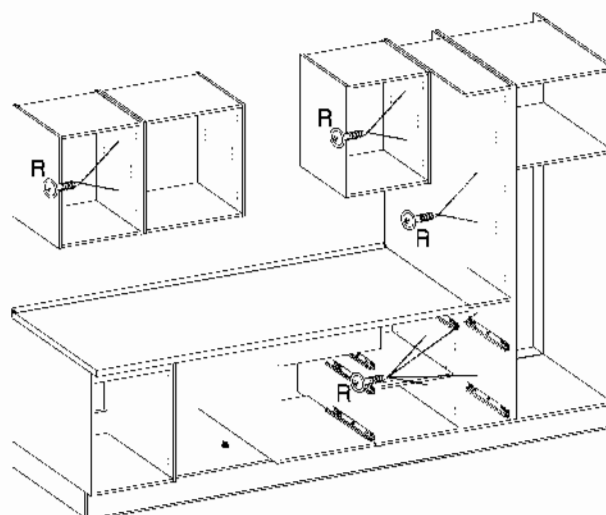





V 4

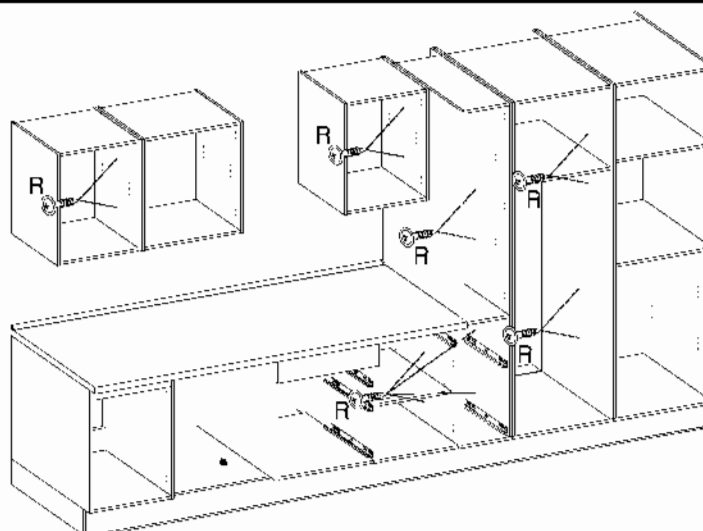

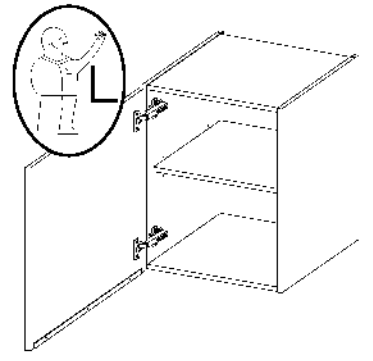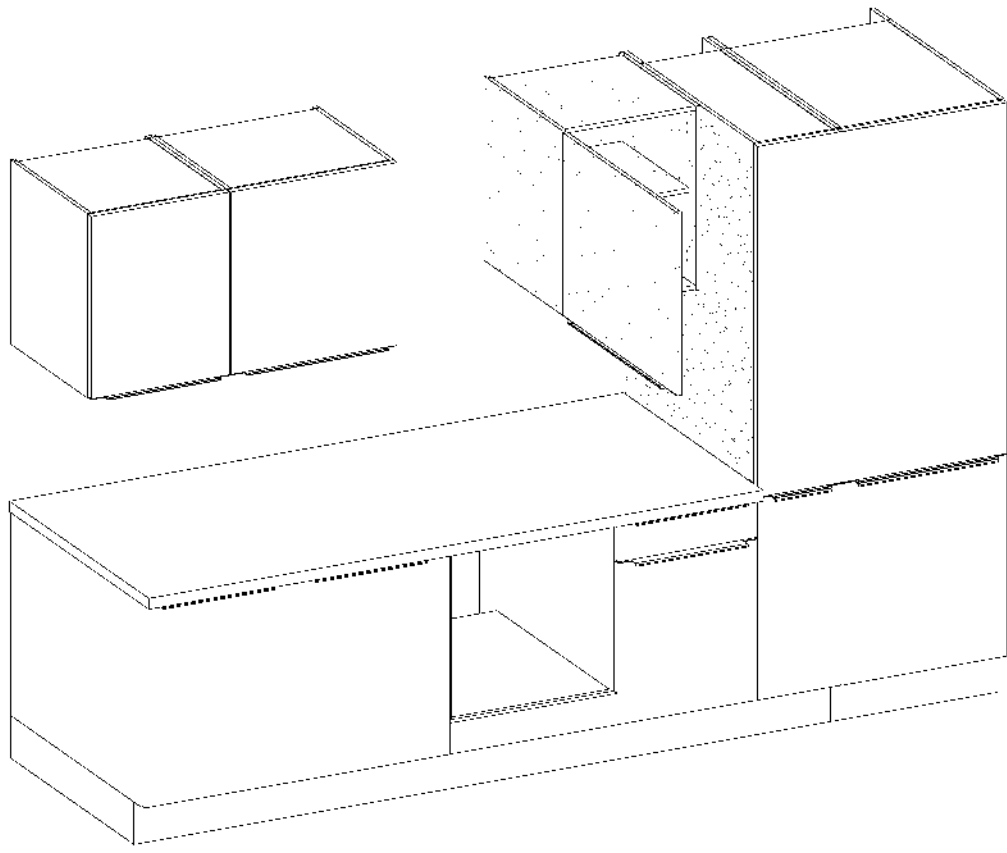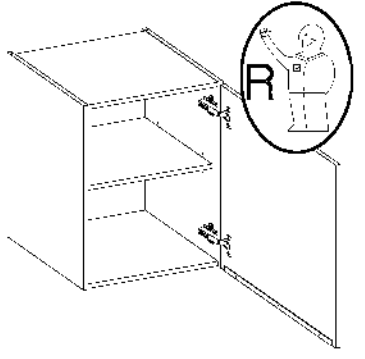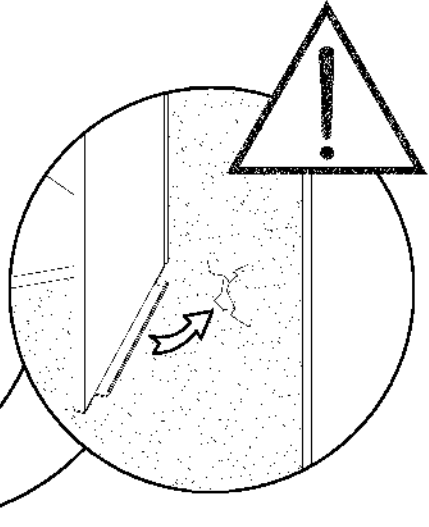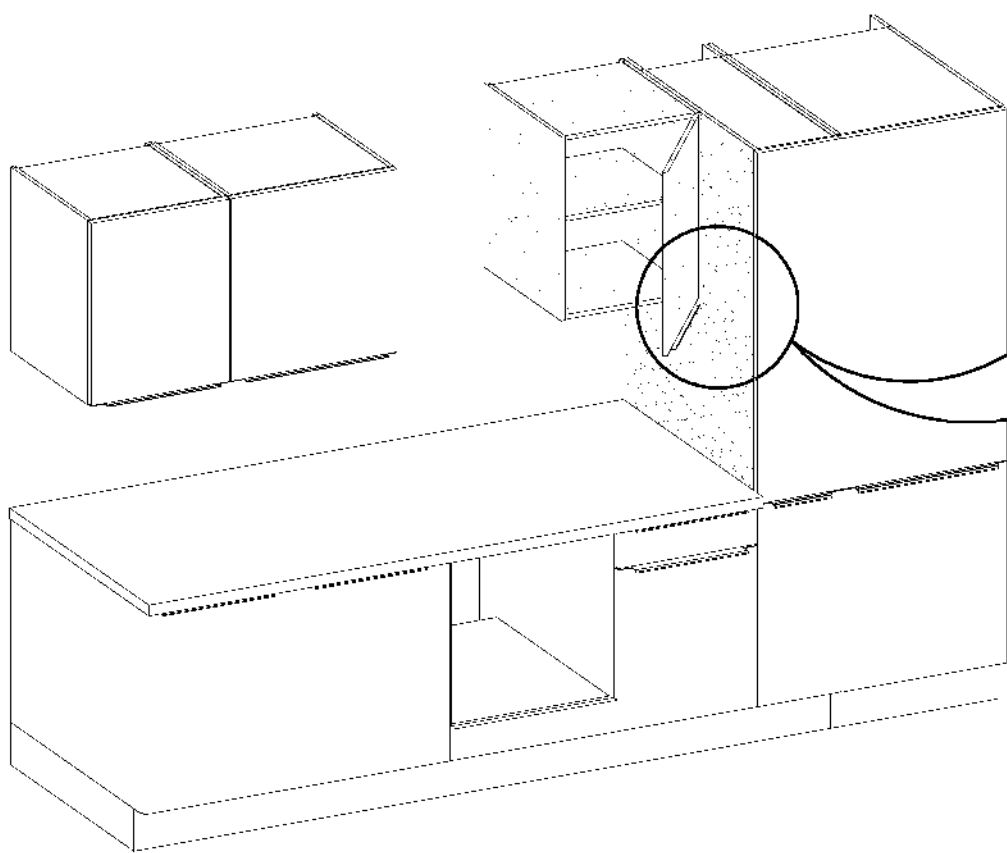

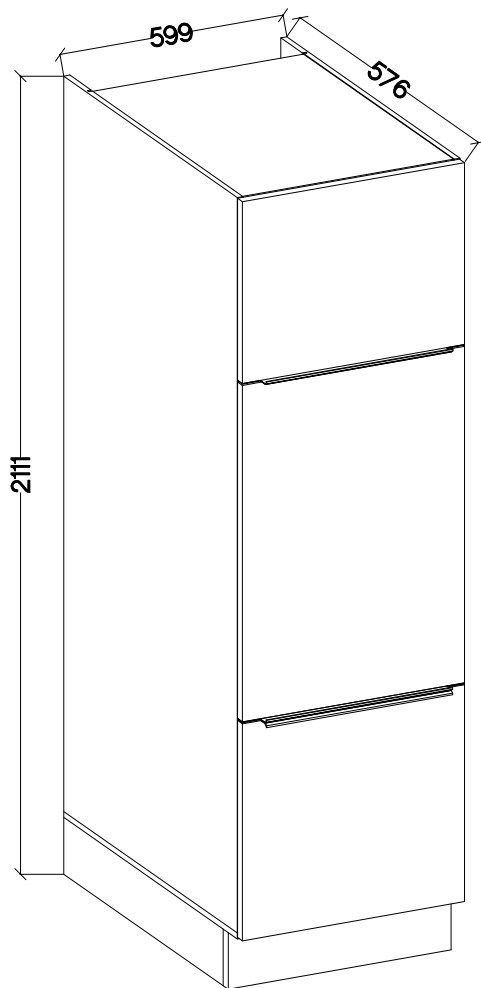

SAFADO / MARLEEN
73-155-...
73-15E-...
73-15F-...



 A	 B	 E1	 F15	 F16	 HG	 L35
8	14	8	4	6	6	1
 L25		 O	 P5	 P7	 P11	 R
1		1	42	8-10	12	4
 SL60						3










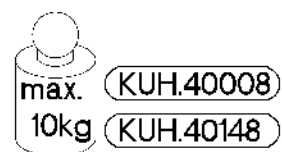
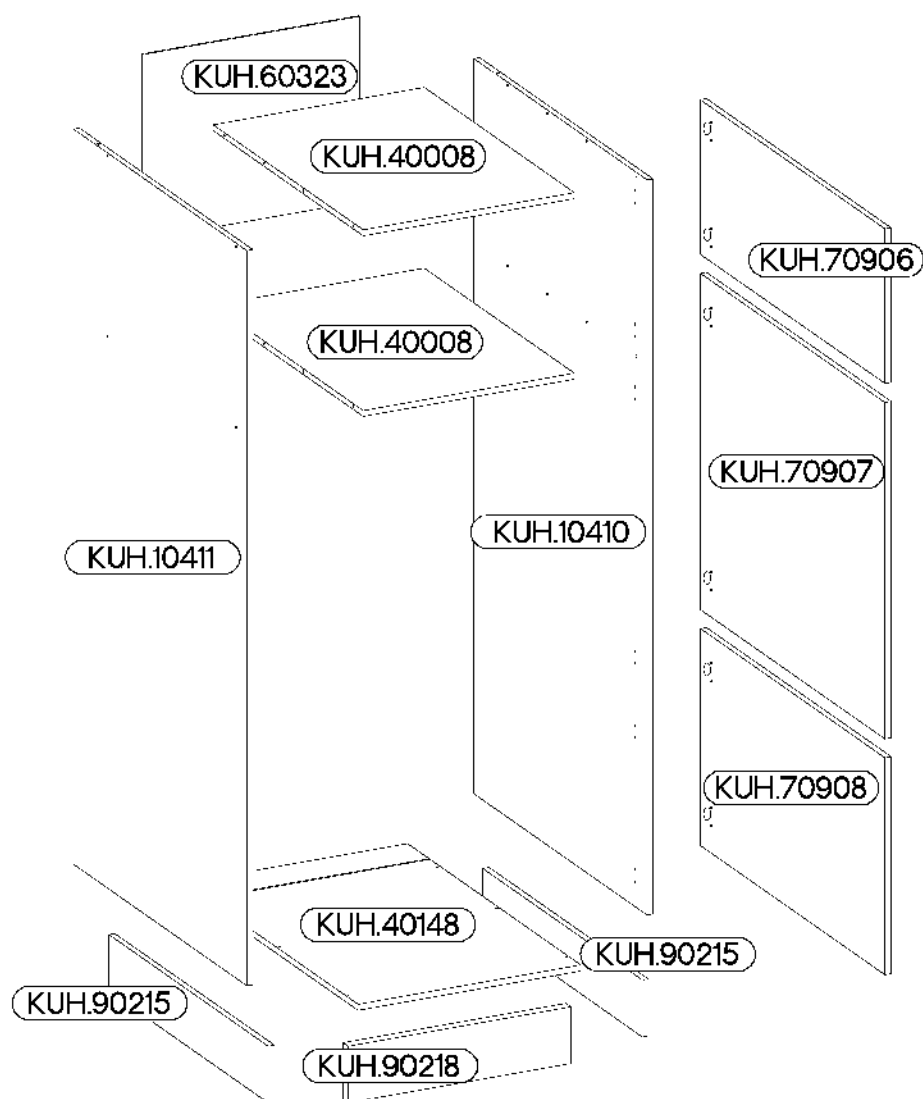
ISM-KUH-01594



Colli	Spare Part	Dimension
Colli 1/2	KUH.40008 x2	567x485x16
	KUH.40148	599x560x16
	KUH.60323	490x585x2,5
	KUH.70906	481x596x16
	KUH.70907	890x596x16
	KUH.70908	574x596x16
	KUH.90215 x2	515x150x16
	KUH.90218	599x150x16
Colli 2/2	KUH.10410	1945x560x16
	KUH.10411	1945x560x16

1







$\varnothing 8 \times 30 \text{ mm}$	$\varnothing 3.5 \times 13 \text{ mm}$	
		
A	P5	F15
8	16	4

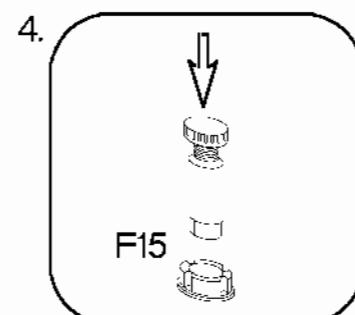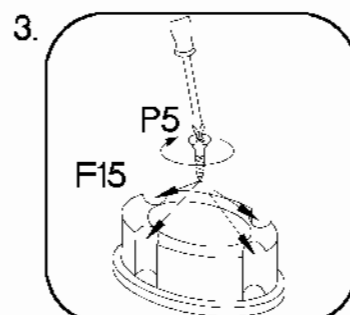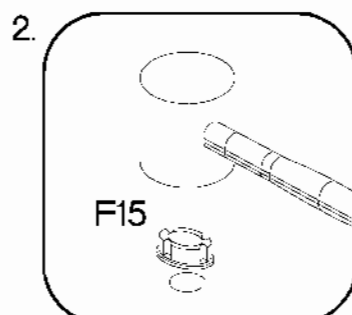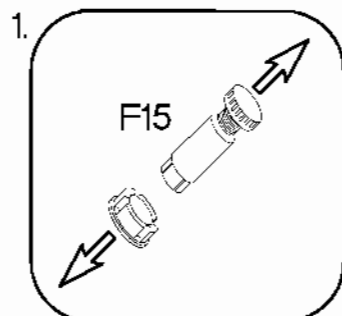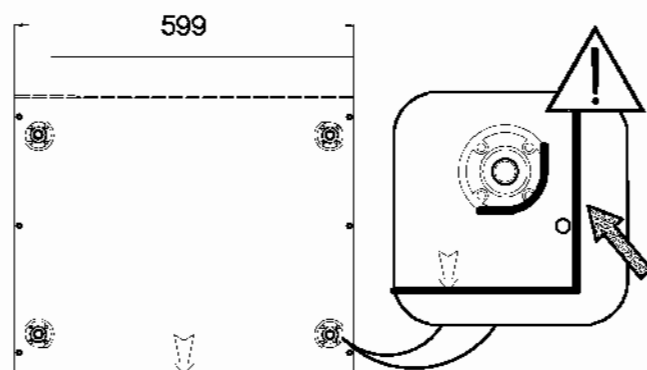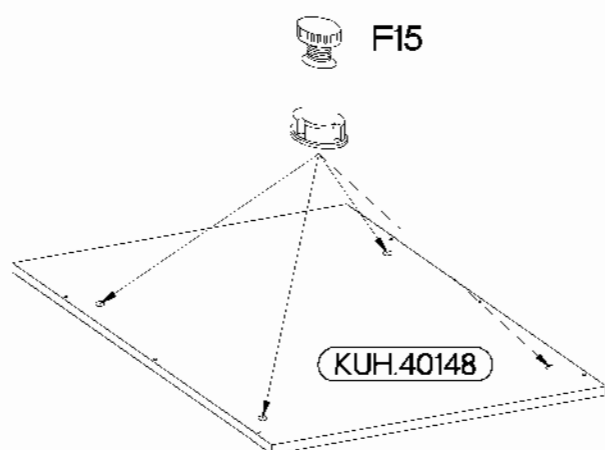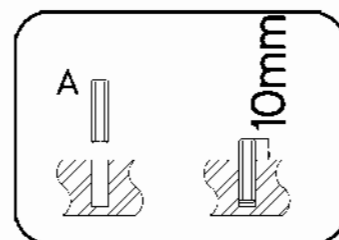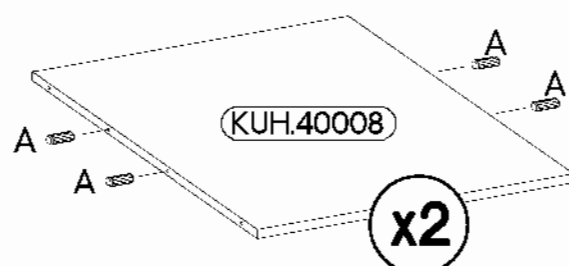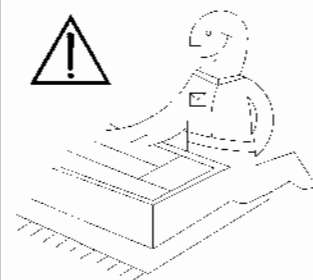

2








6,4 x 50mm

 B	 O	 E1
4	1	4

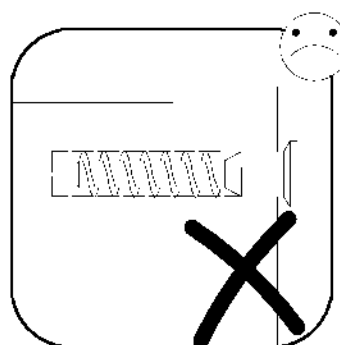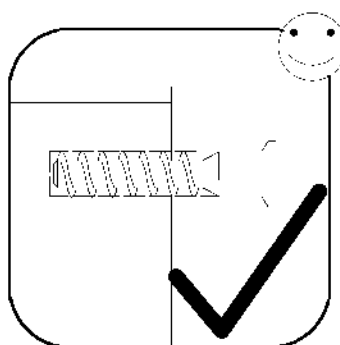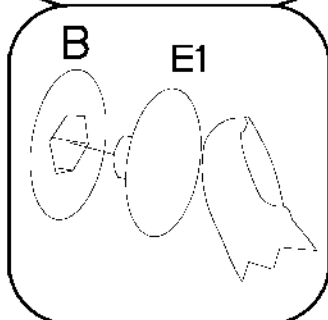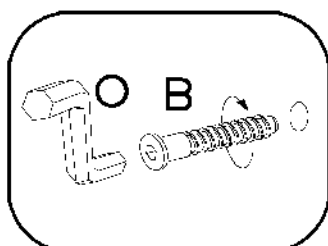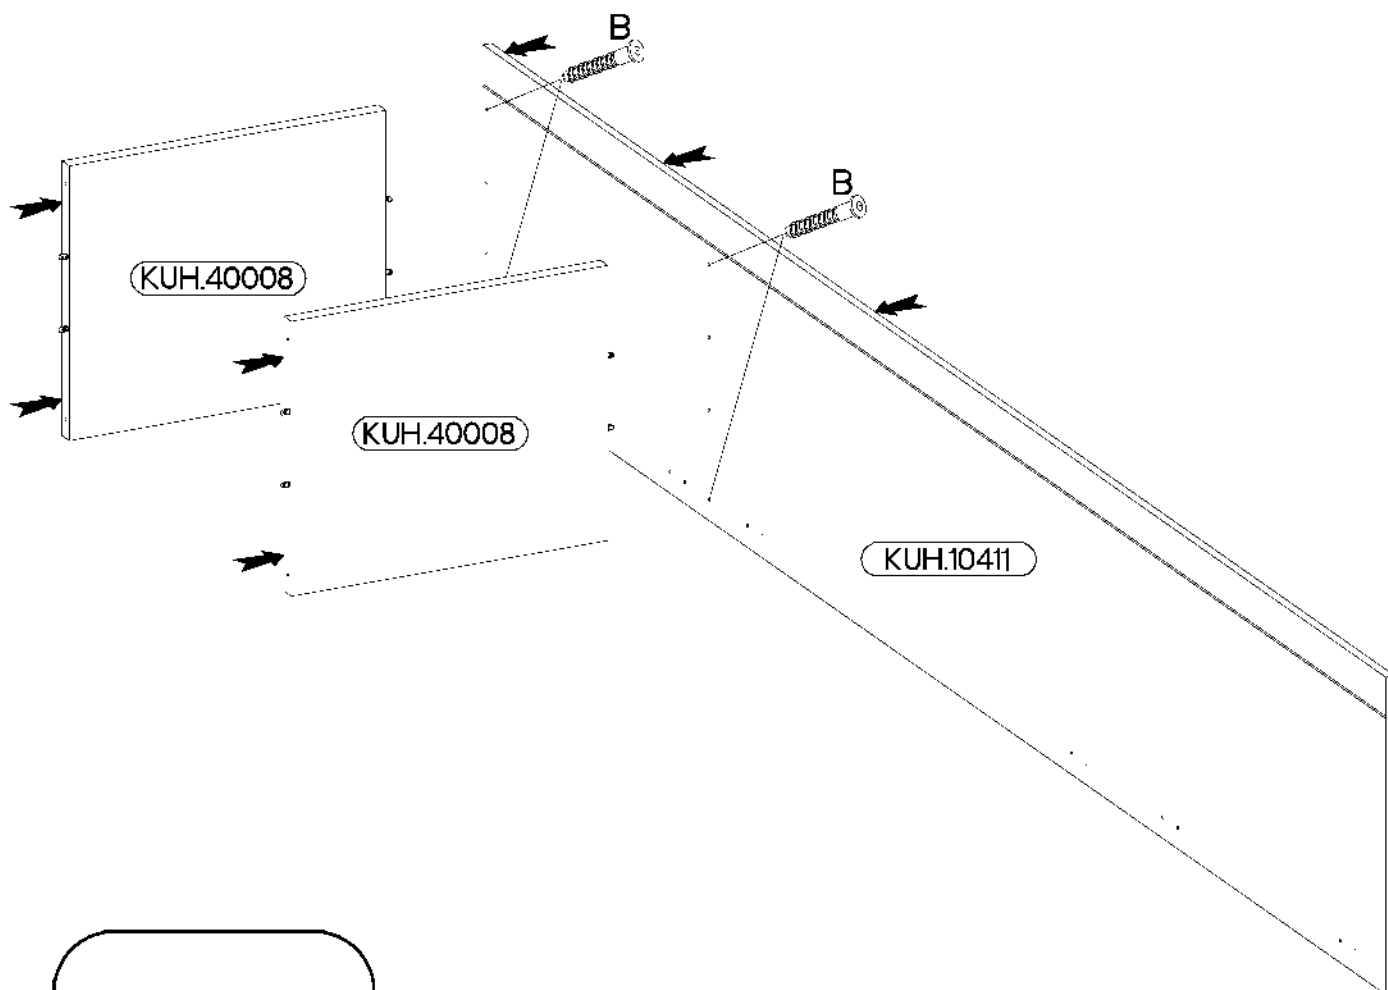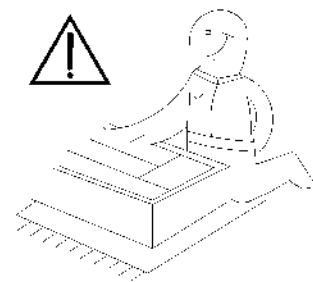

3

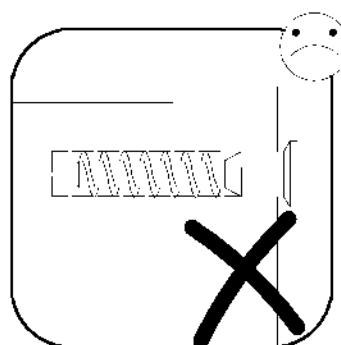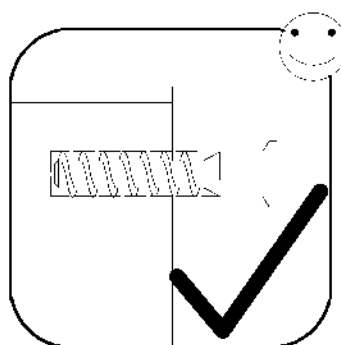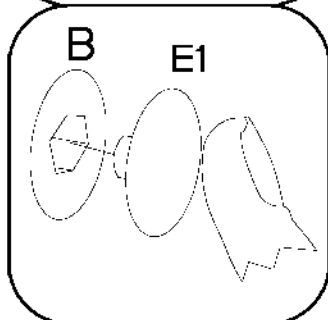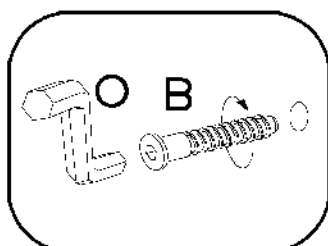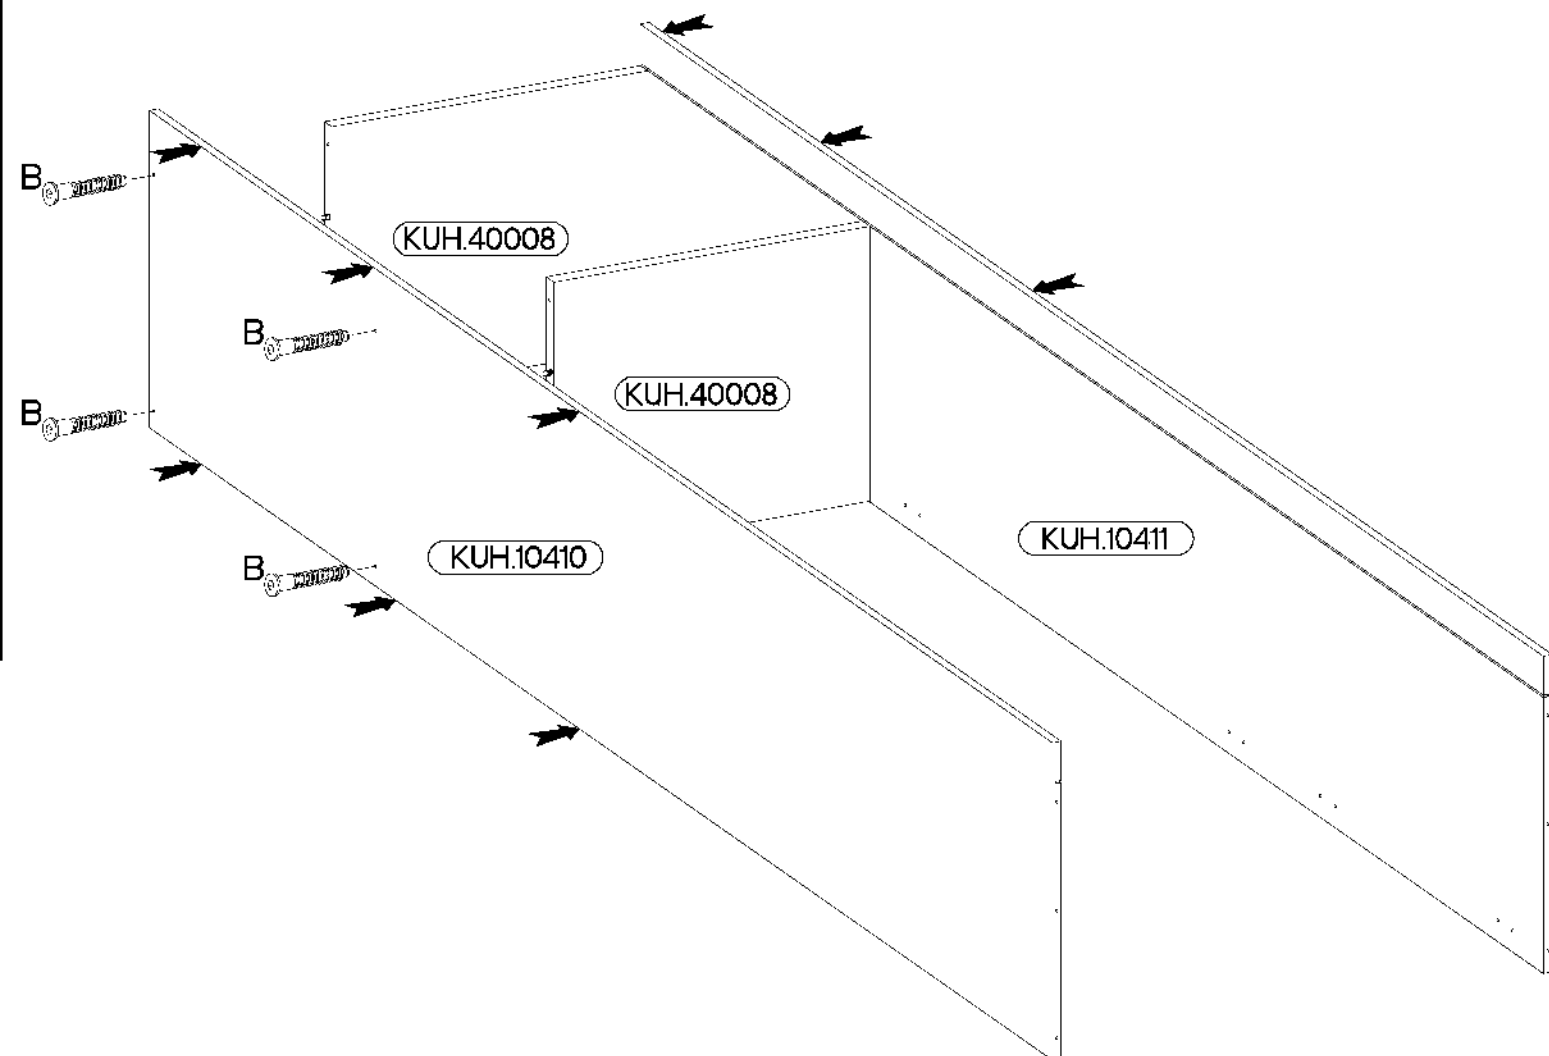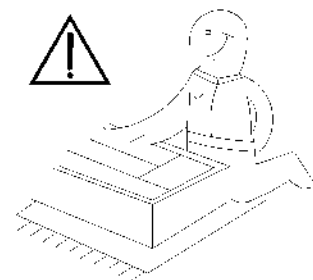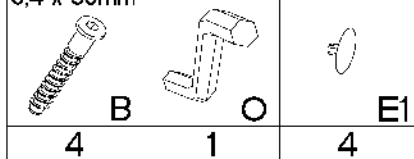6,4 x 50mm



4.

6,4 x 50mm



B



O

KUH.40008

KUH.40008





KUH.10410

KUH.10411



KUH.40148

B

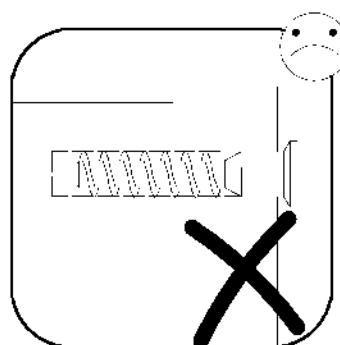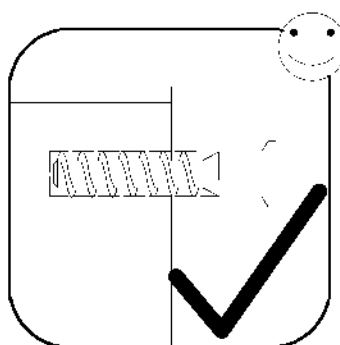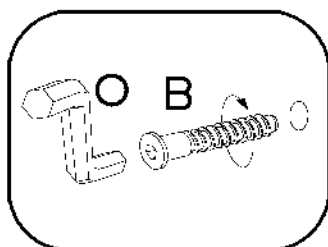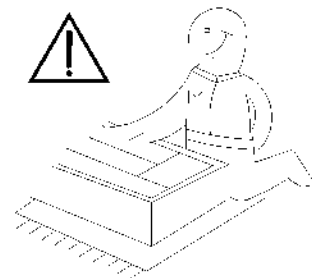B



5

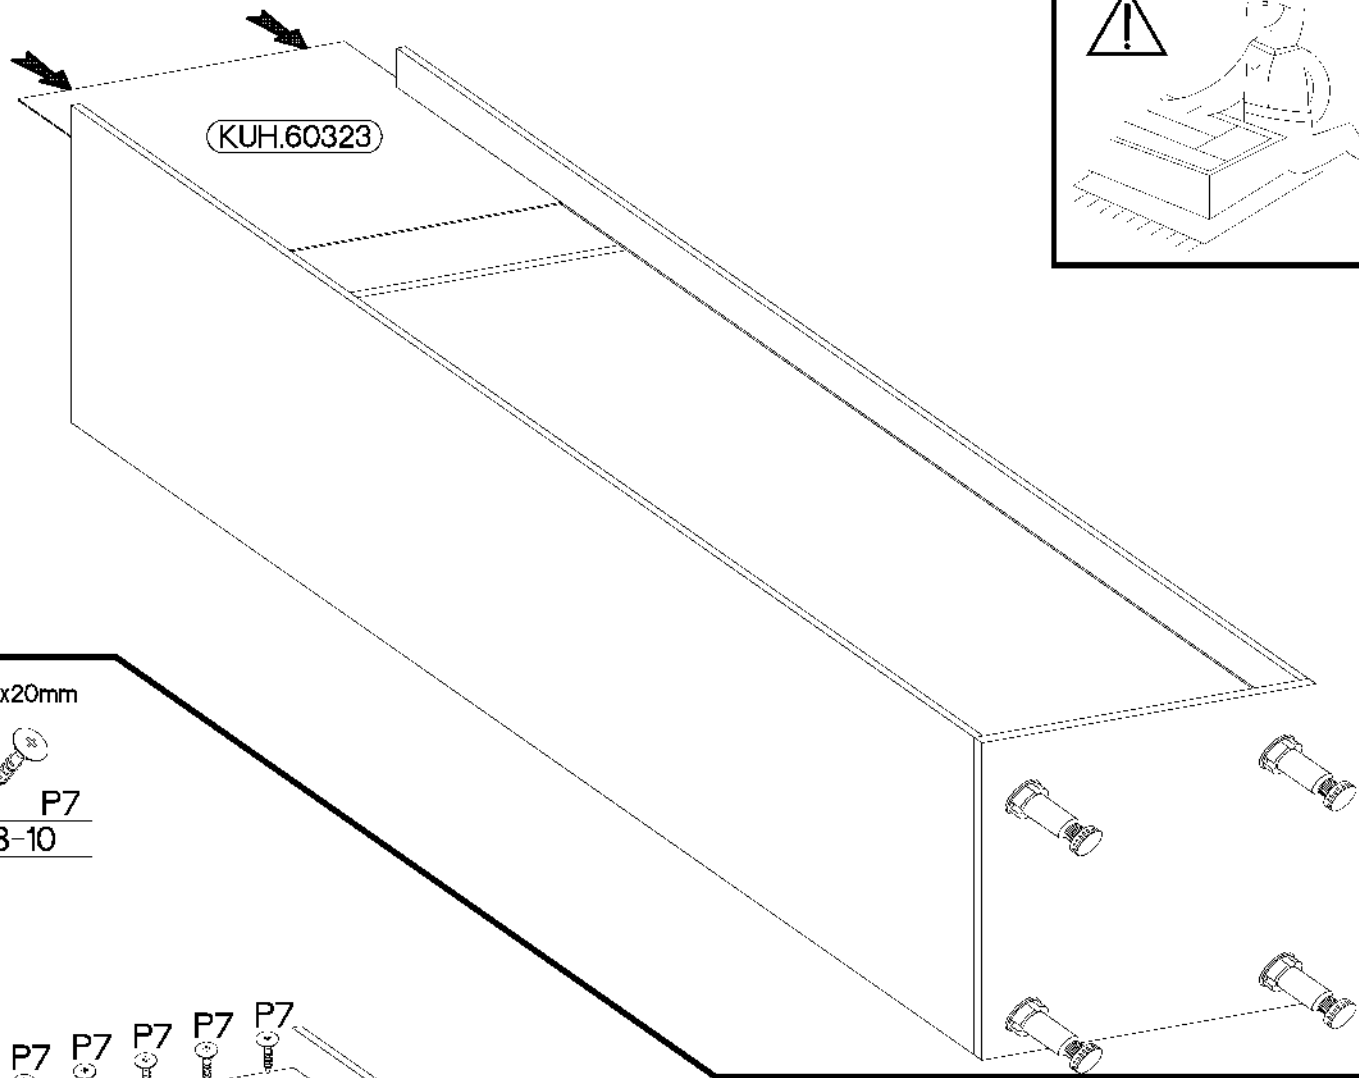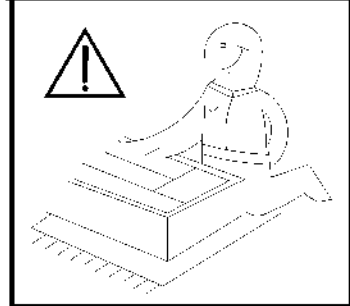



6

3.0x20mm



P7

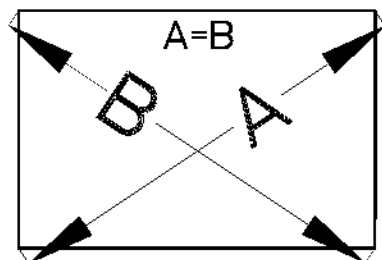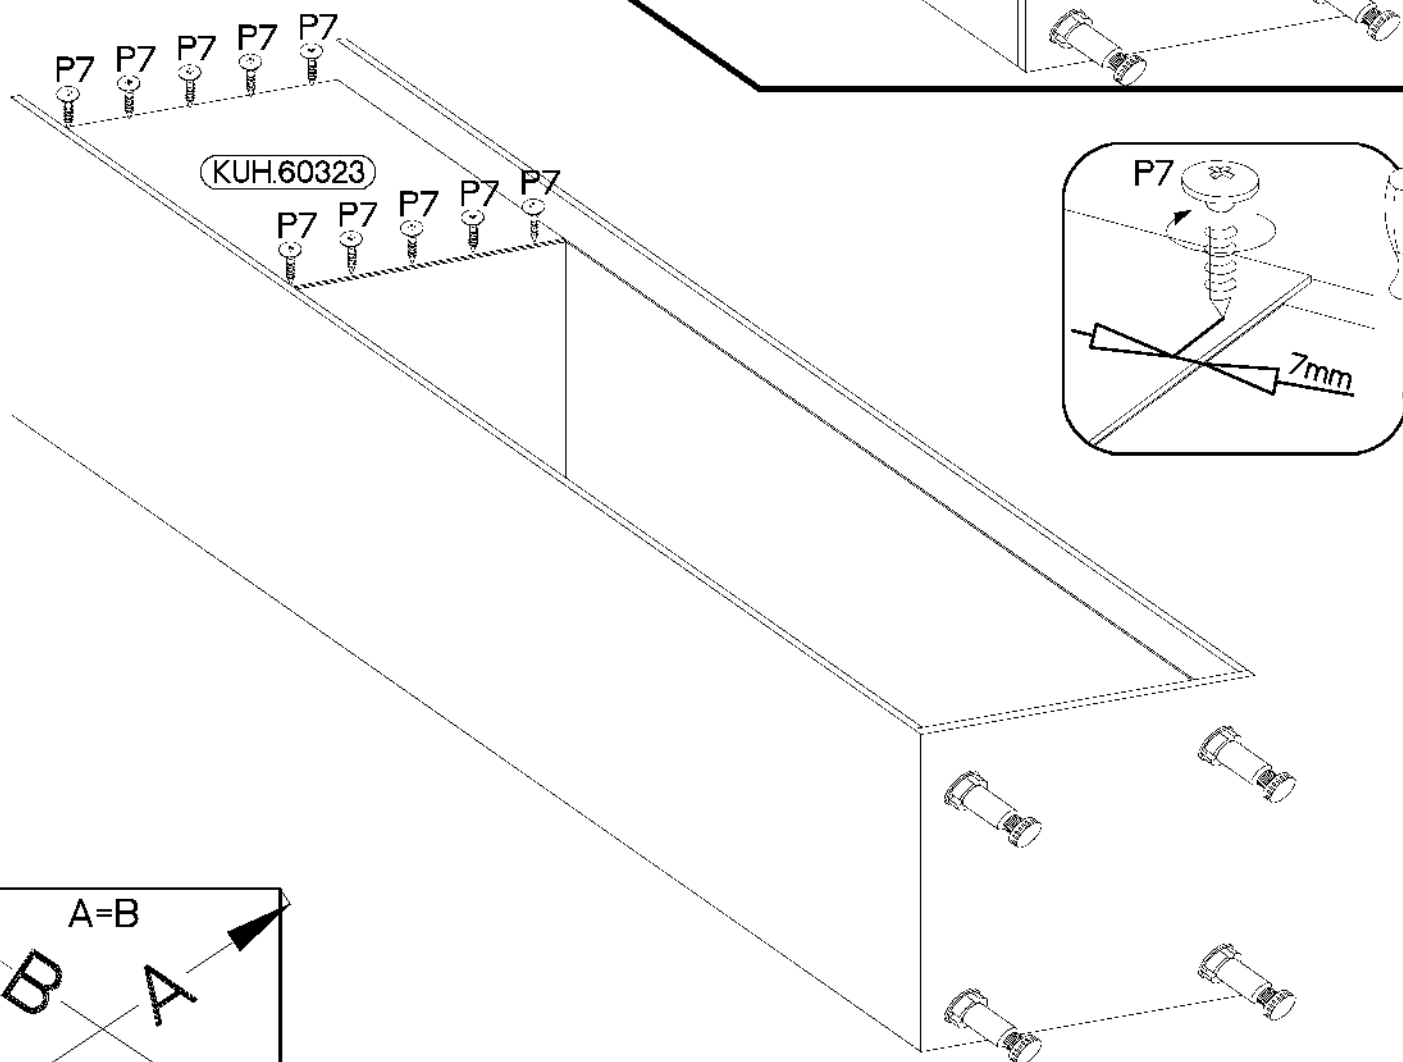8-10





3.5x13mm

L=600mm




P5

12




F16

6



L35

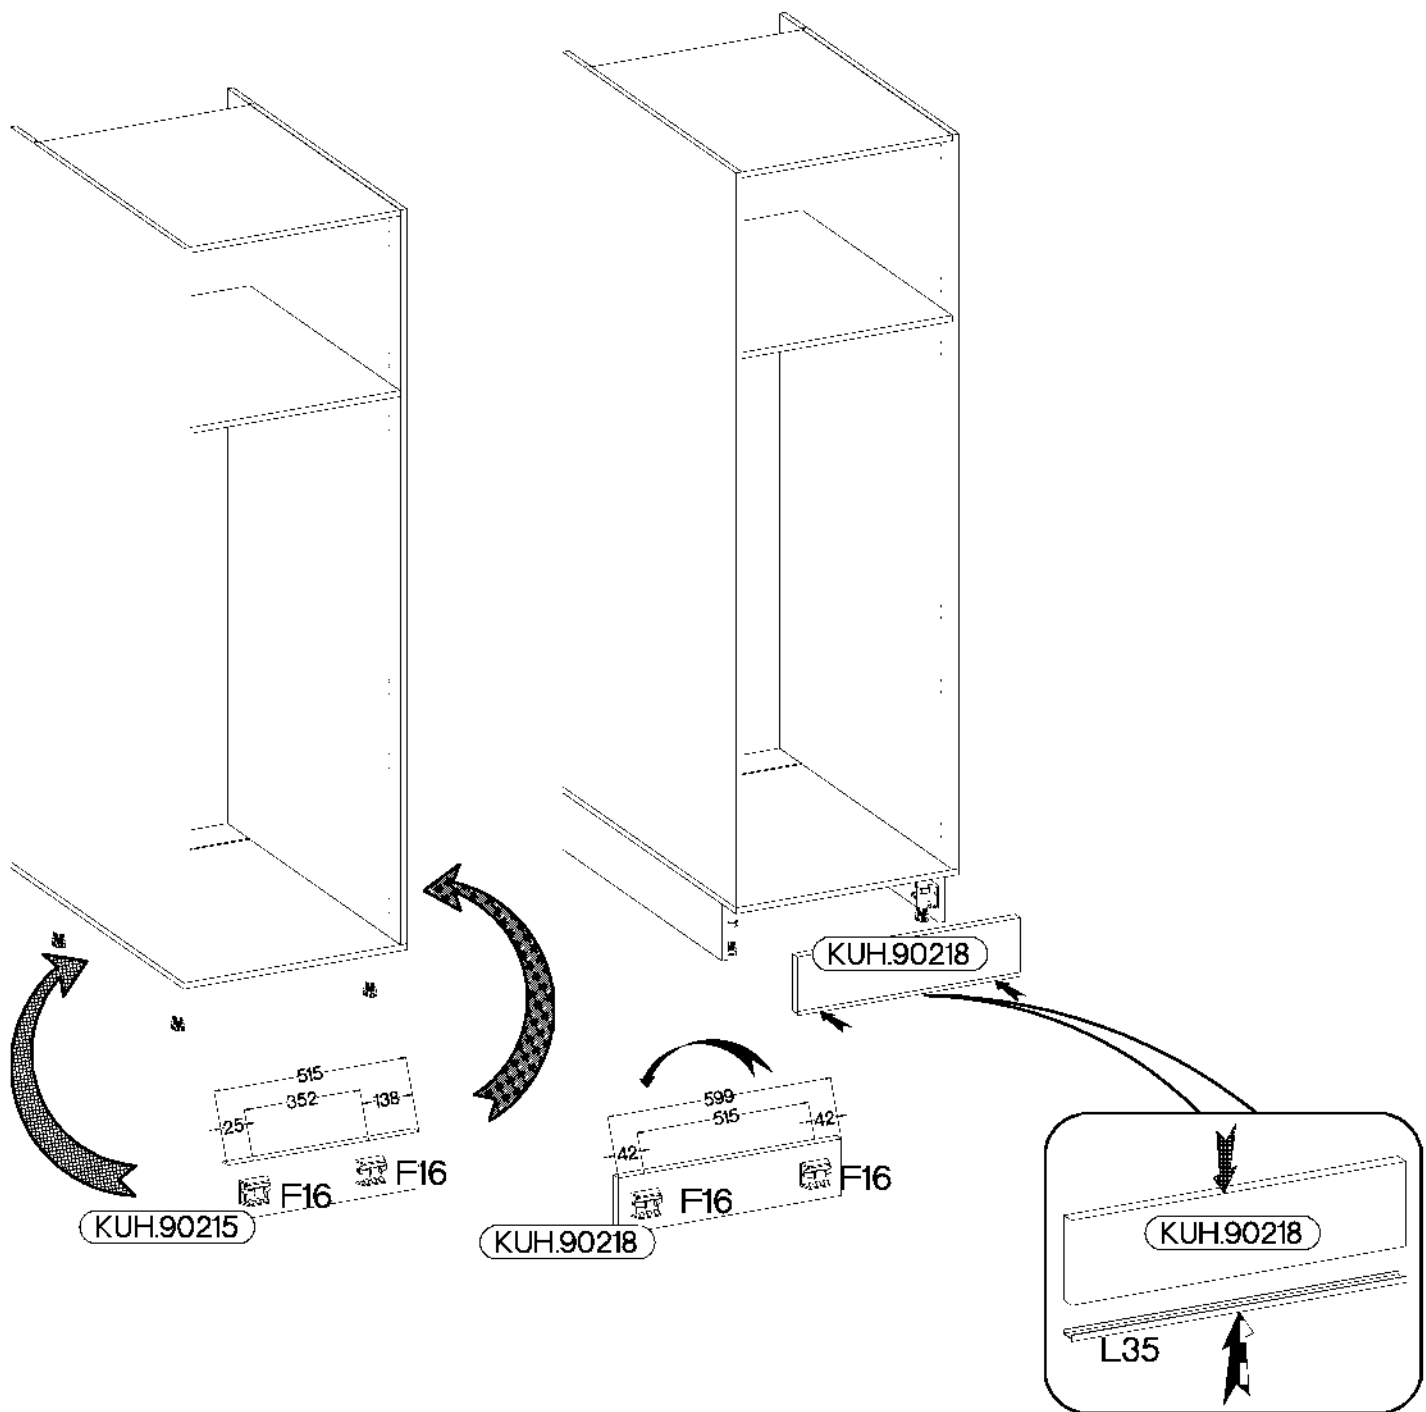
1




-
-
-
-

8


$\pm 3.5 \times 13 \text{ mm}$  P5 2	$120 \times 30 \times 15 \text{ mm}$  L25 1
--	---

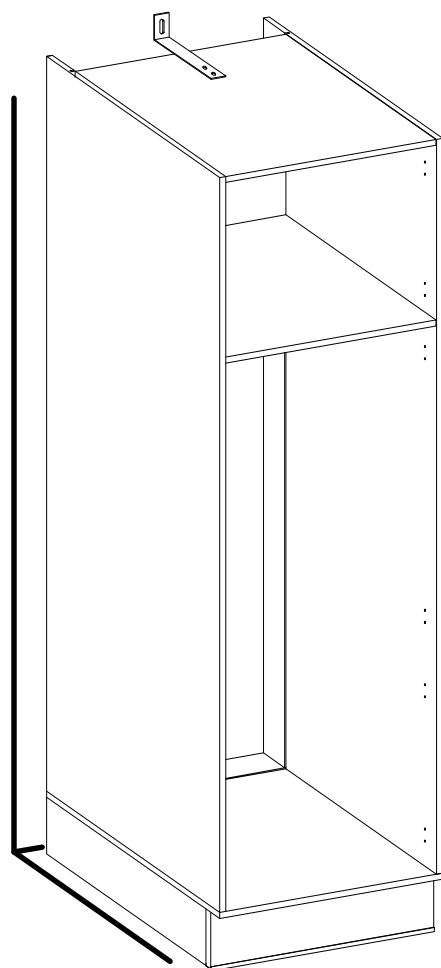

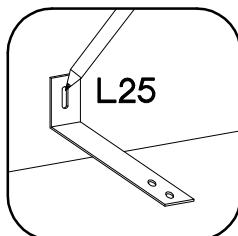
1.



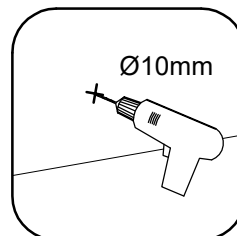
2.






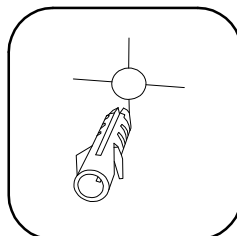
3.



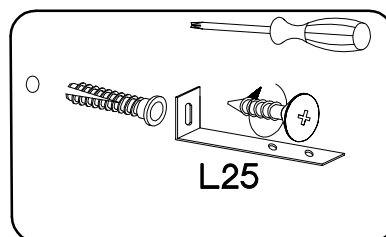
4.







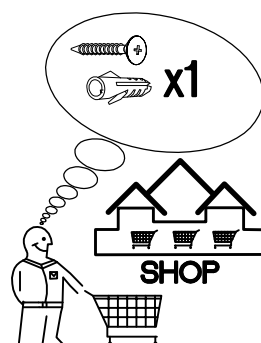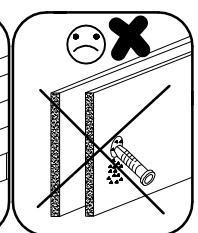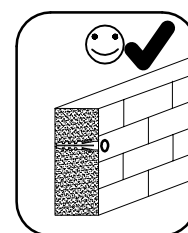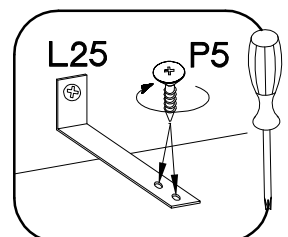5.






9





$\pm 35/0 \text{ mm}$  HG 6	$\pm 3.5 \times 13 \text{ mm}$  P5 12
--	--

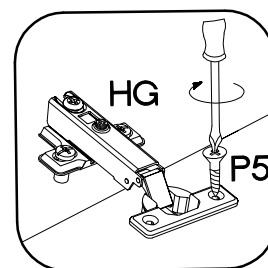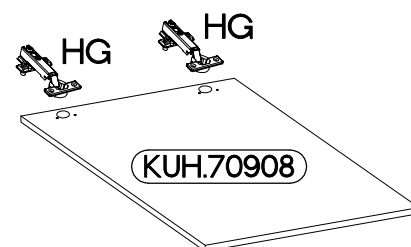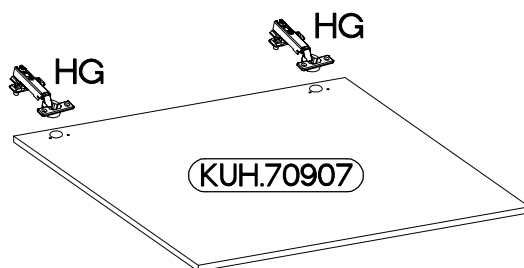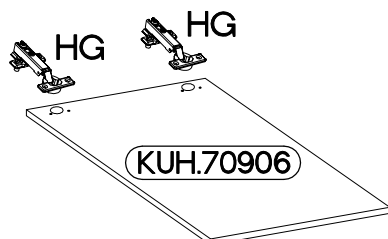


3.0x16mm  P11 12	L=595mm  SL60 3
---	--

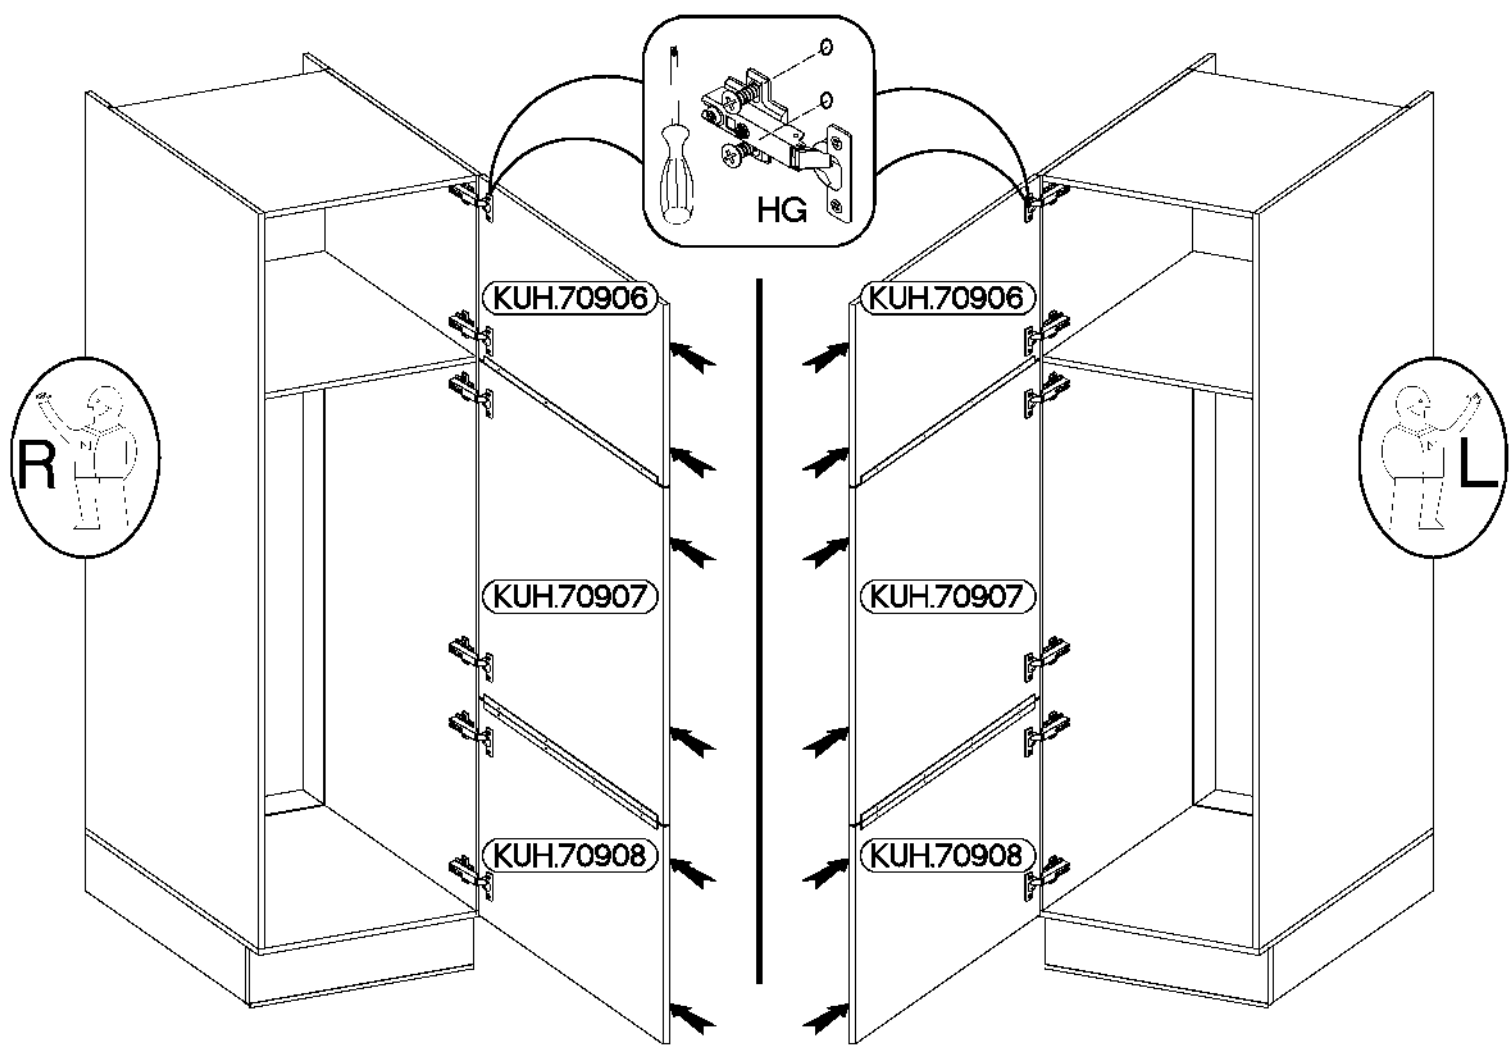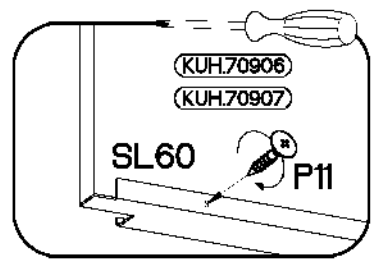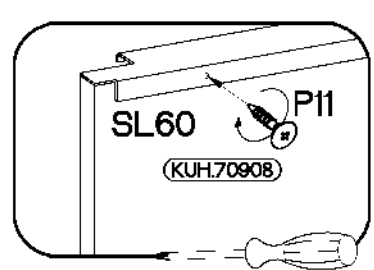


VARIANT HIGH GLOSS

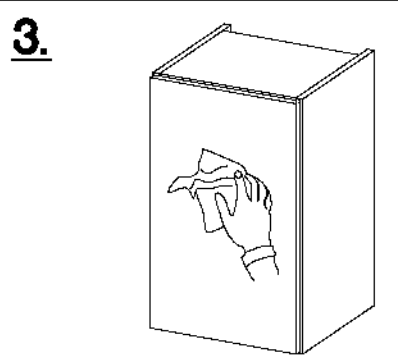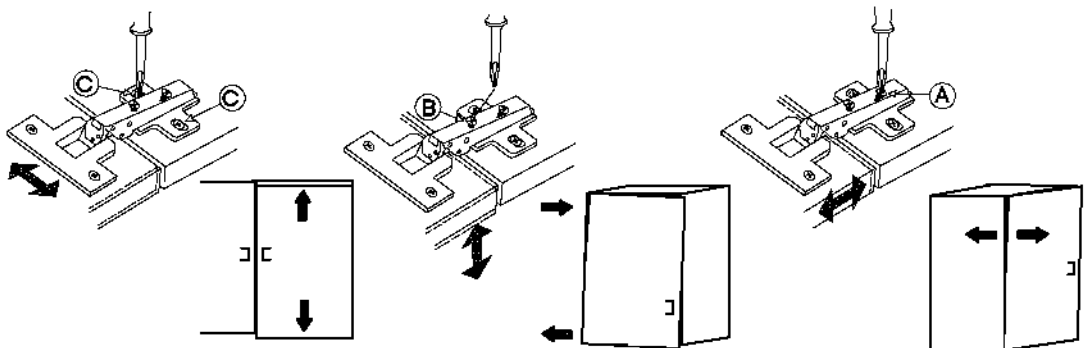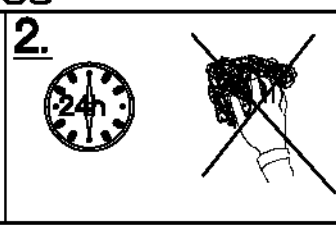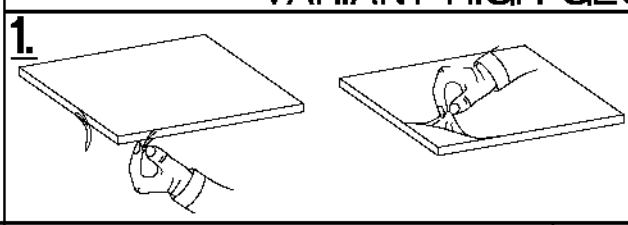




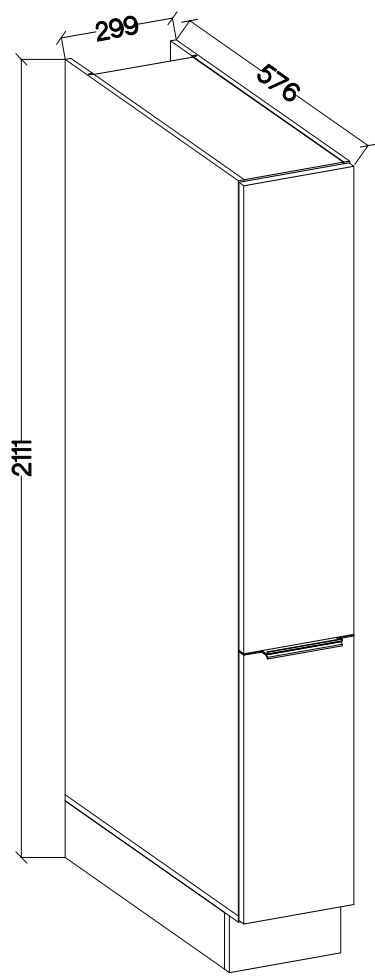
SAFADO / MARLEEN
73-152-...
73-15B-...
73-15A-...





†8x30mm A 16	6,4 x 50mm B 14	†6x42mm B2 8	†12/10mm C5 4	†35/0mm HG 3	L R L=450mm I11 2	†5/16mm J3 8
L=20mm D2 4	†6.3x13mm M2 16	†3.5x13mm O 1	†3.0x20mm P5 36	†3.0x16mm P7 8-10	†4.0x25mm P11 6	L=295mm SL30 2

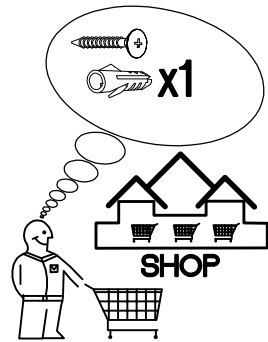

ISM-KUH-01606

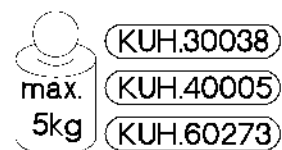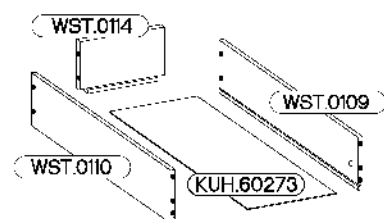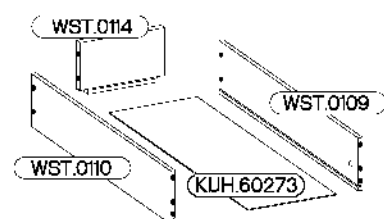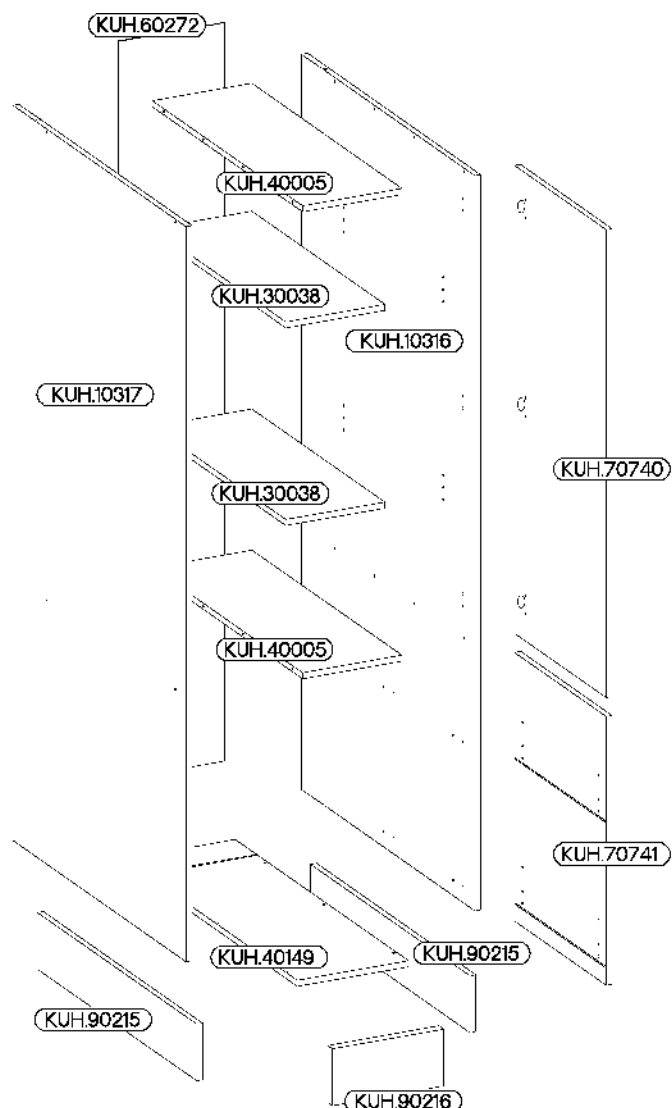

Colli	Spare Part	Dimension
Colli 1/2	KUH.40005 x2	267x485x16
	KUH.40149	299x560x16
	KUH.70740	1238x296x16
	KUH.90215 x2	515x150x16
	KUH.90216	299x150x16
Colli 2/2	KUH.10316	1945x560x16
	KUH.10317	1945x560x16
	KUH.30038 x2	266x430x16
	KUH.60272	1953x285x2,5
	KUH.60273 x2	448x237x2,5
	KUH.70741	711x296x16
	WST.0109 x2	450x140x12
	WST.0110 x2	450x140x12
	WST.0114 x2	227x140x12

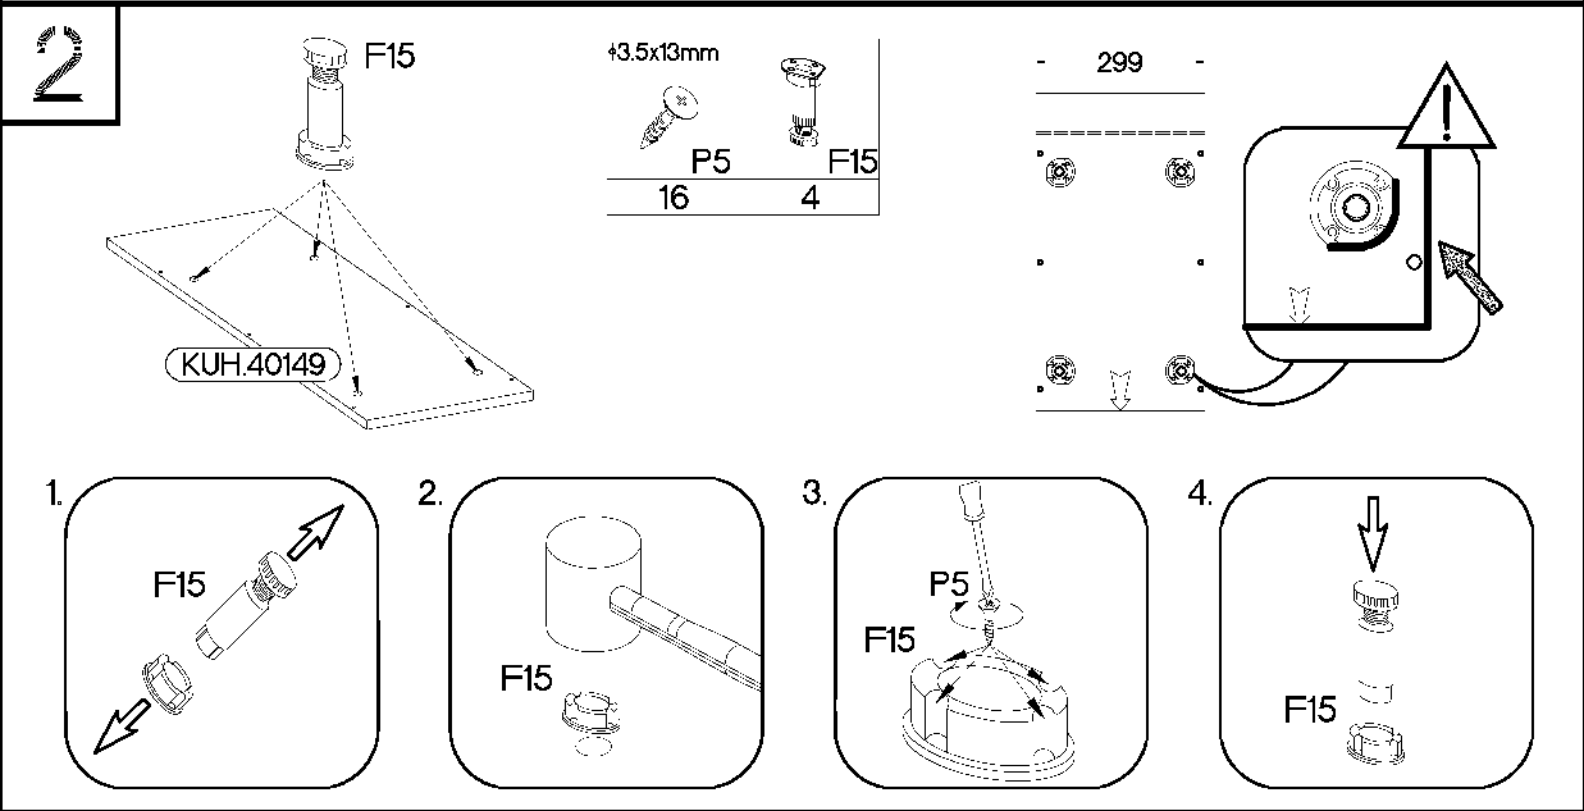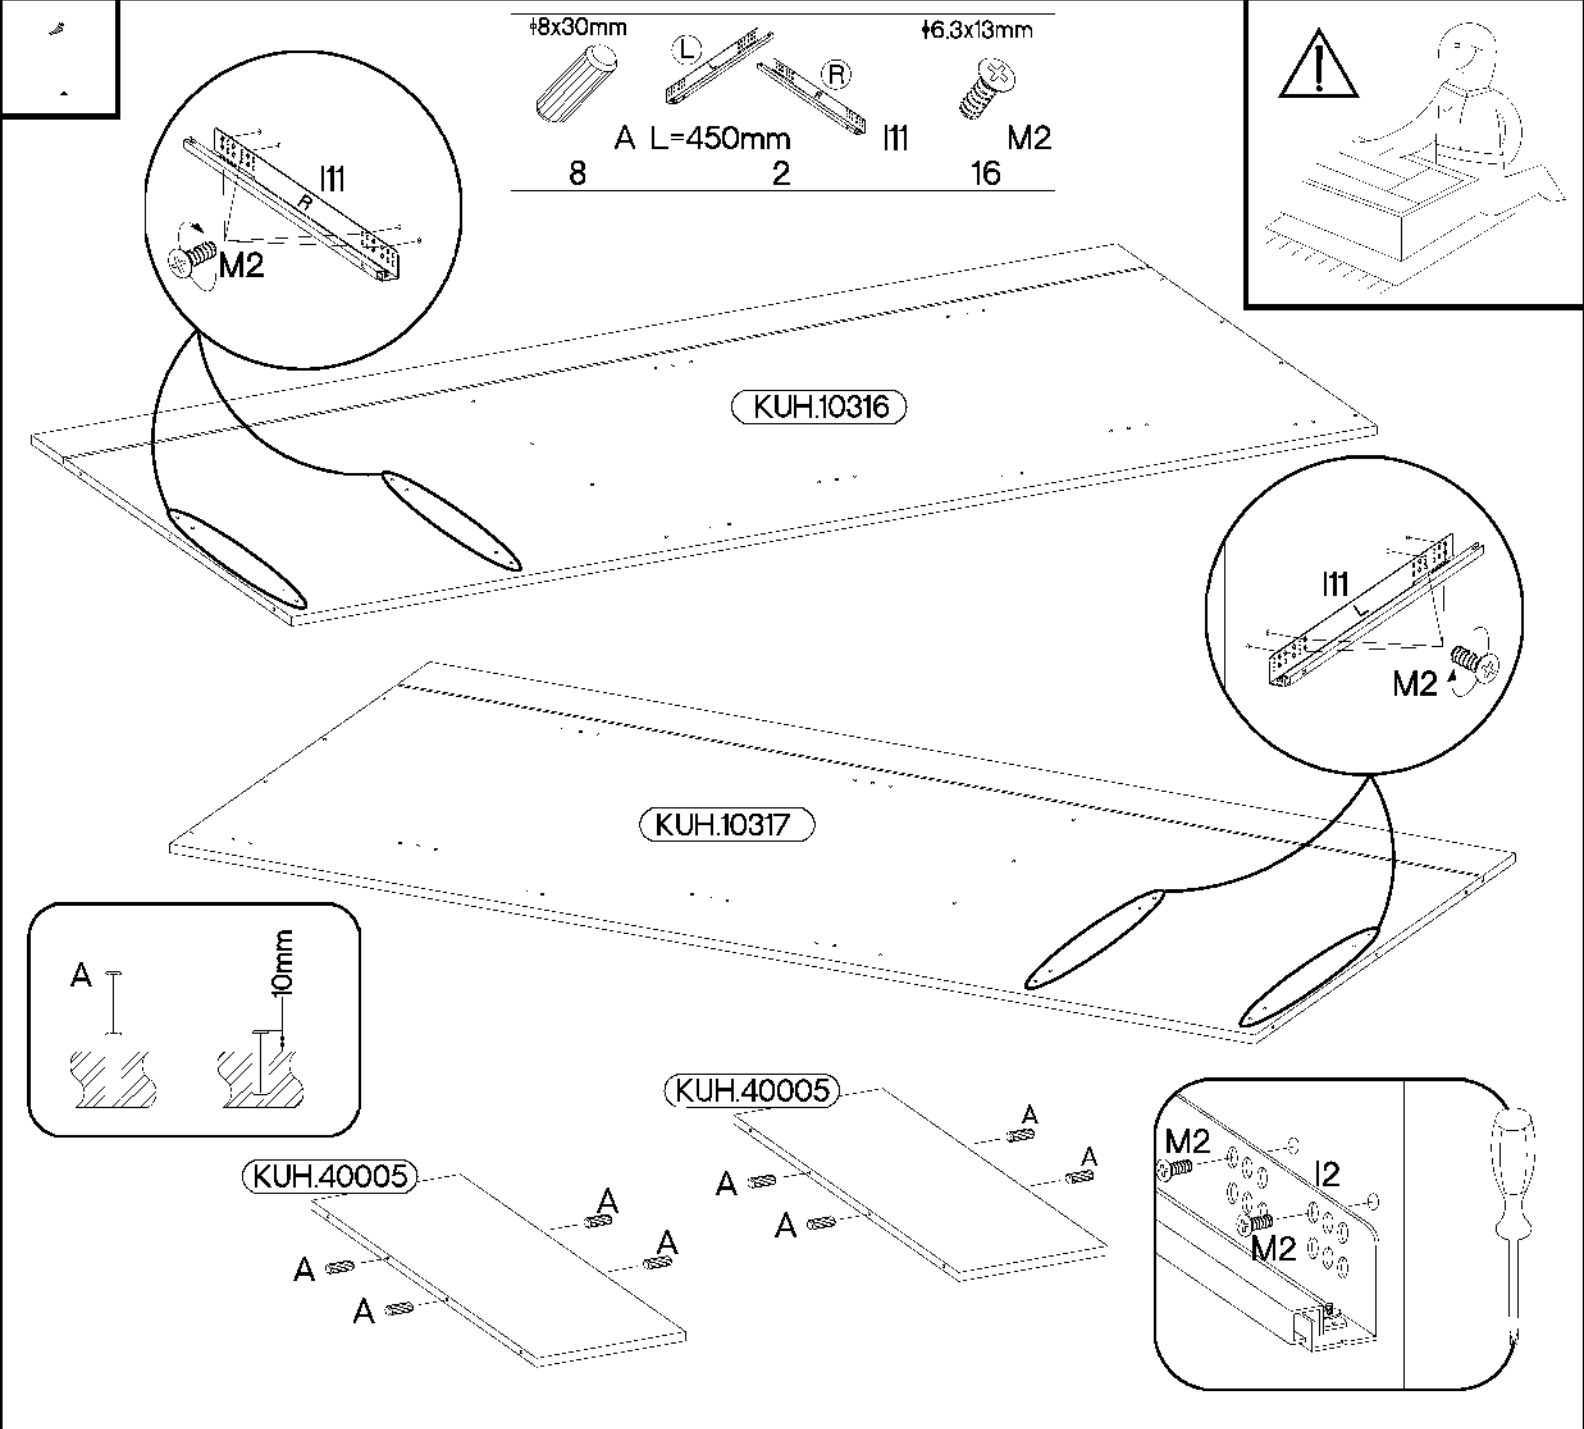

3

KUH.40005

KUH.10317

6,4 x 50mm



2

B



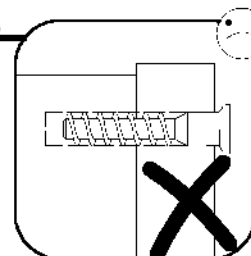
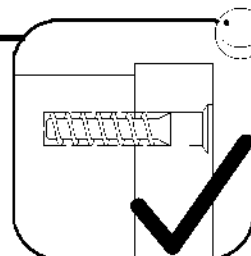
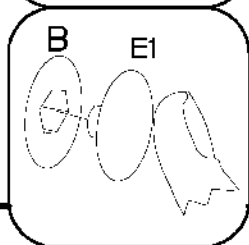
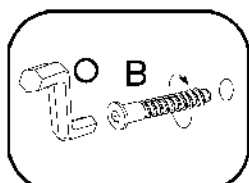
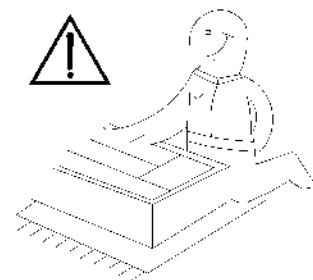
1

O



2

E1



KUH.40005

KUH.10317

KUH.40005

6,4 x 50mm



2

B



1

O



2

E1

5

6,4 x 50mm



B

4



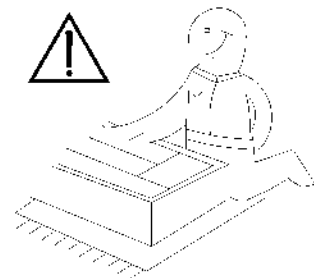
O

1



E1

4





KUH.40005



KUH.10317

KUH.10316

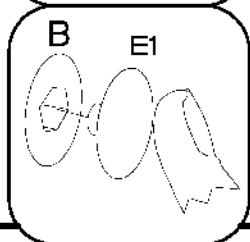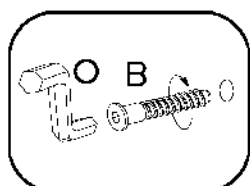KUH.40005



6

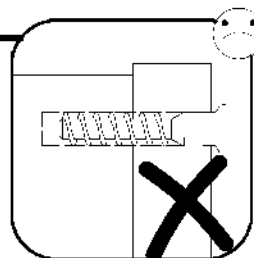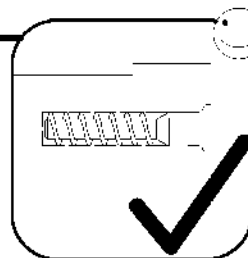

KUH.10317

KUH.10316

6,4 x 50mm



B

6



O

1








E1

6

KUH.40149

B

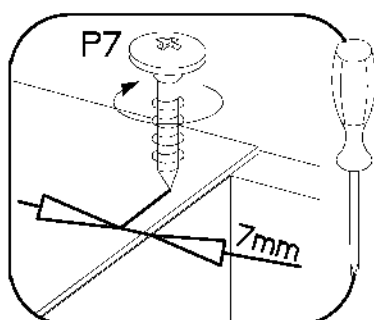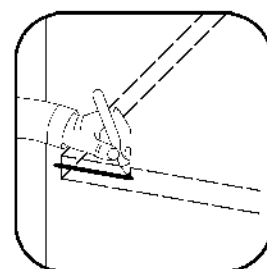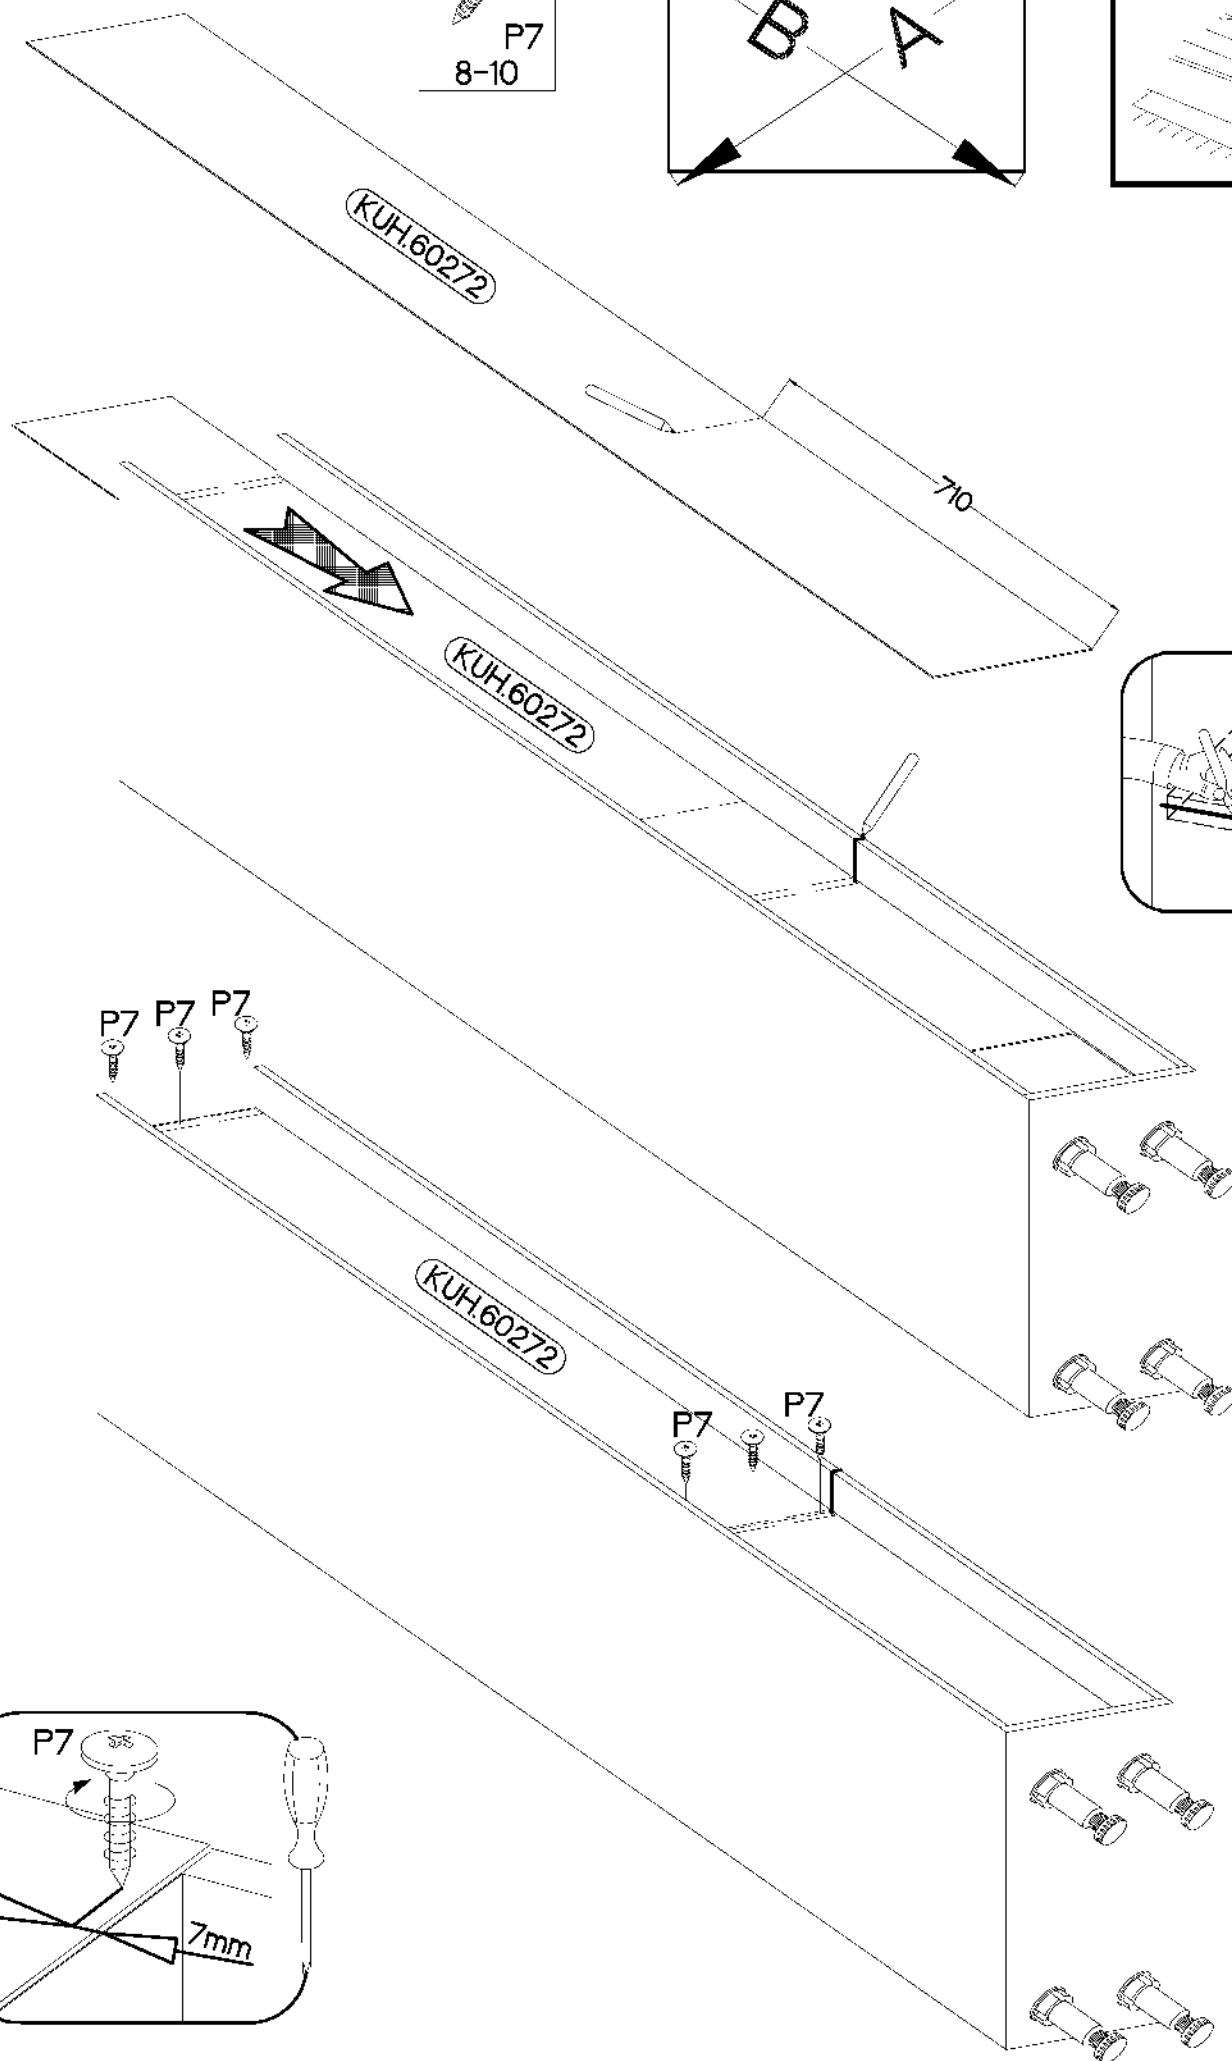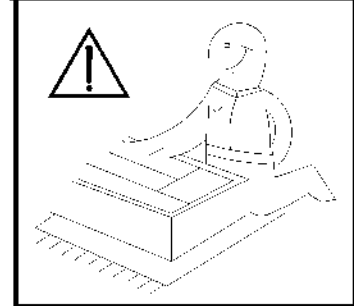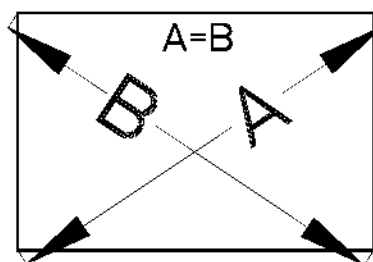B






3.5x13mm





P5

12





F16

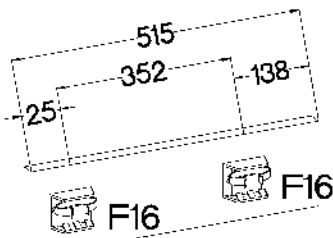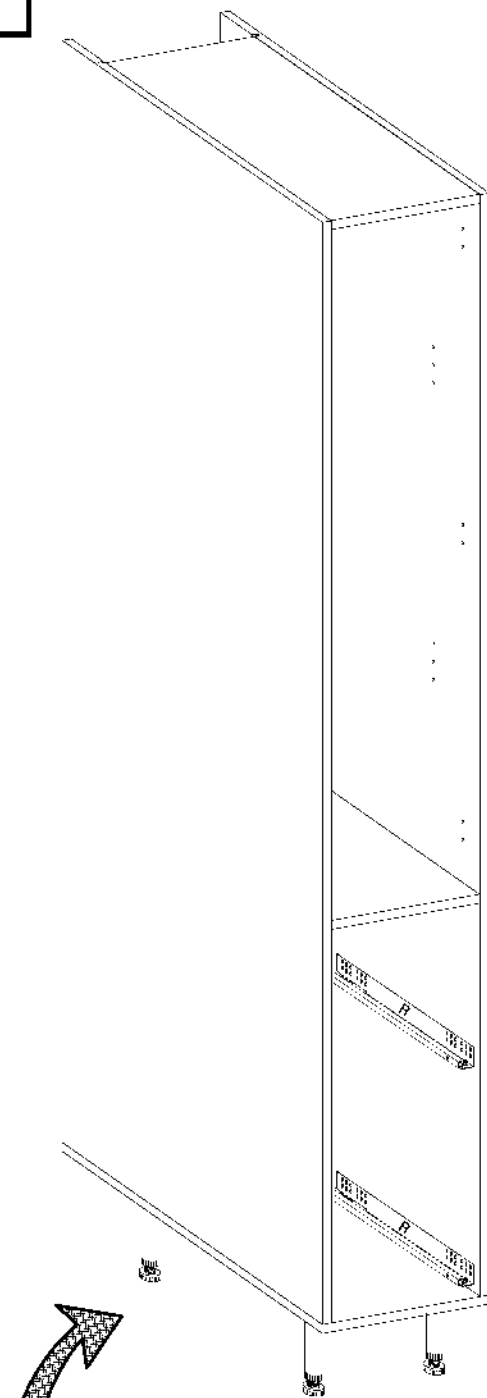
6



KUH.90215

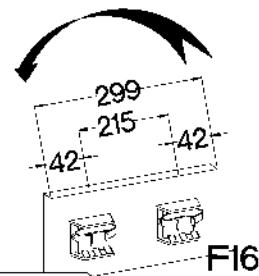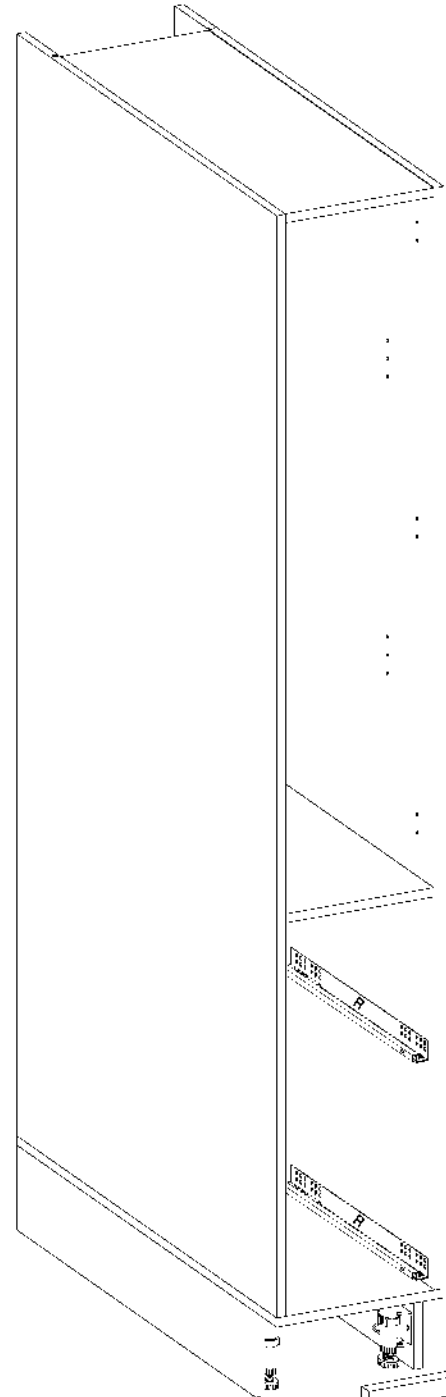


KUH.90216

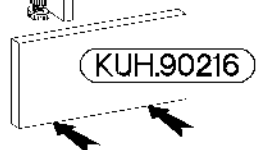


KUH.90216

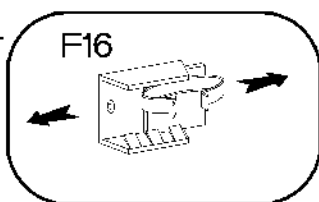
1.



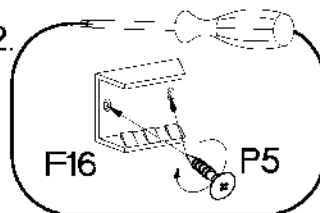
2.



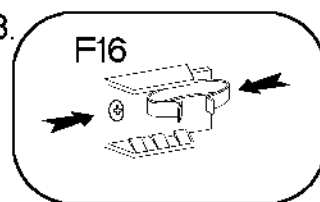
3.



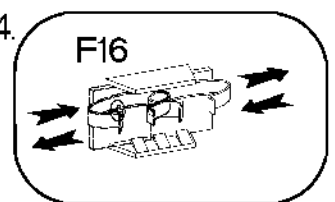
4.




9

	
L25	P5
1	2

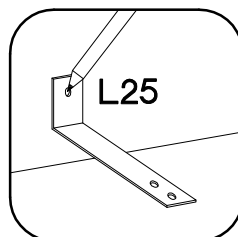
1.



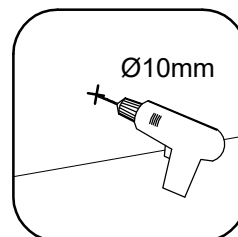
2.







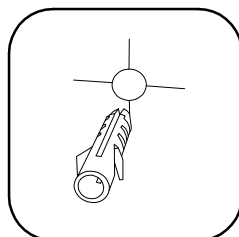
3.



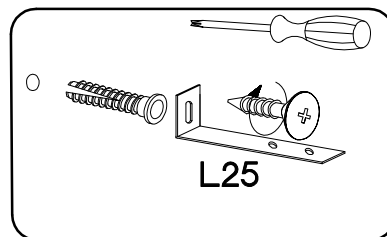4.



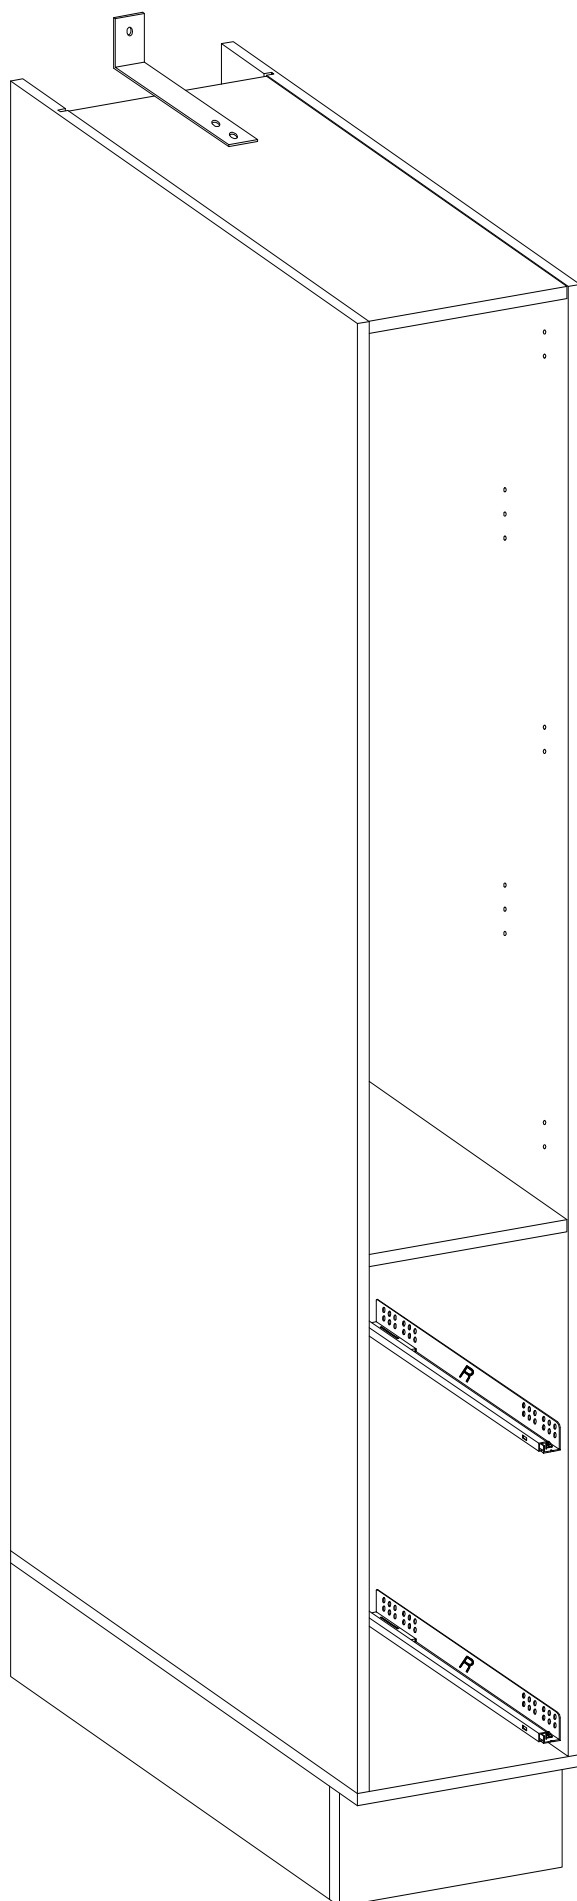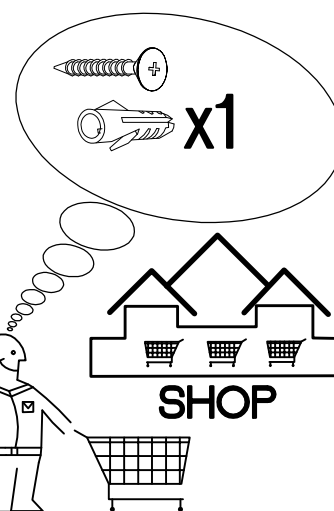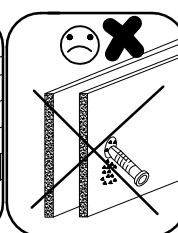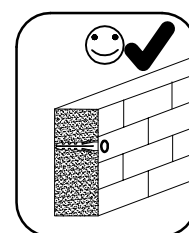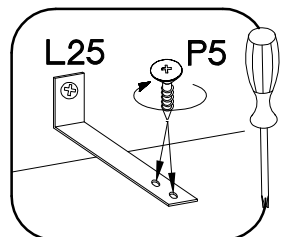5.



10

#12/10mm



C5

4

#8x30mm



A

(WST.0110)

A

A





C5

(WST.0109)




C5

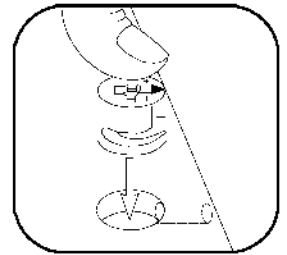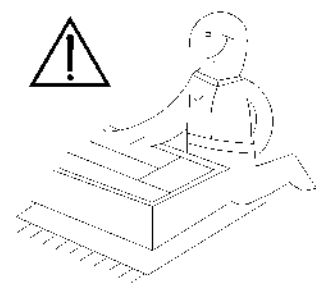x2



1

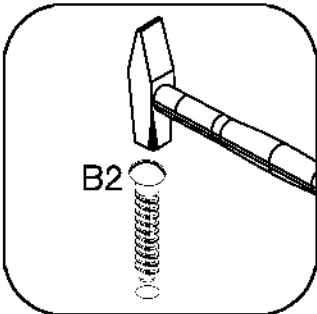

B2

#6x42mm



B2

8

(WST.0114)



B2



(WST.0110)

B2



(WST.0109)

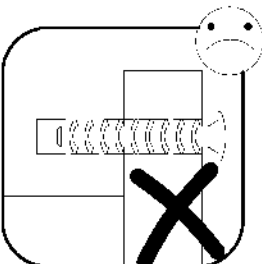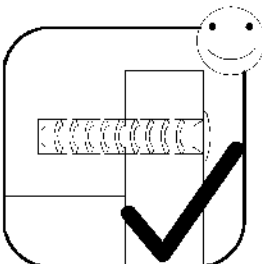x2



2

L=20mm



D2

4

D2

D2

100

100

100

100

100

100

100

100

100

100

100

100

100

100

100

100

100

100

100

100

(KUH.70741)

D2

100

100

100

100

100

100

100

100

100

100

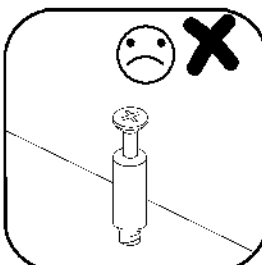
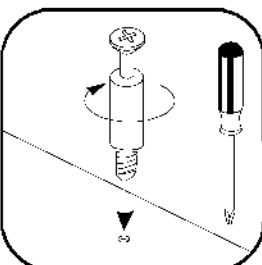
100


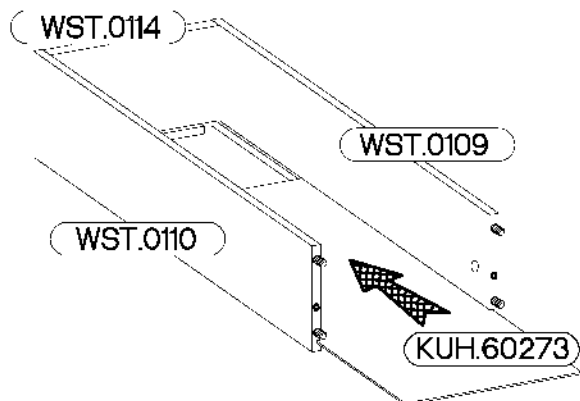
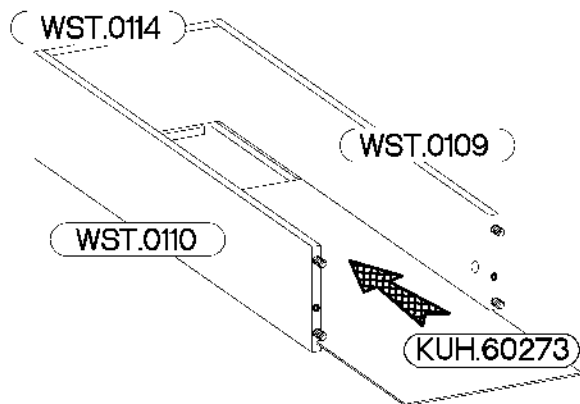
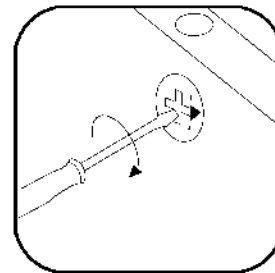
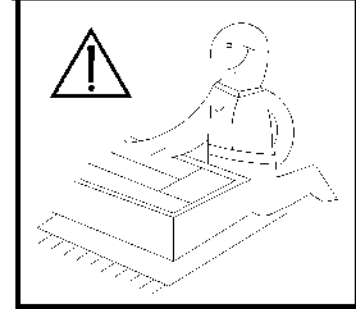
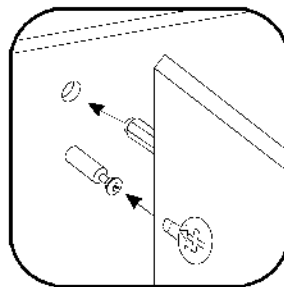
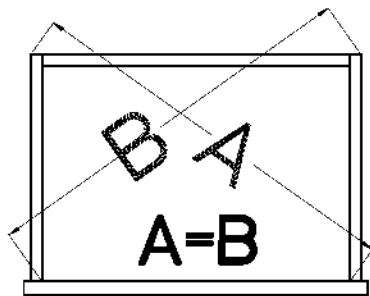
100

100








100

100






(KUH.70741)

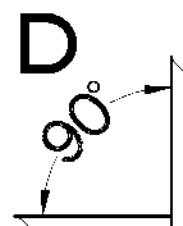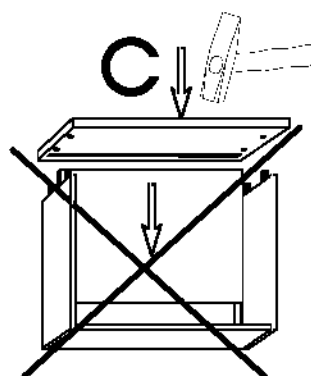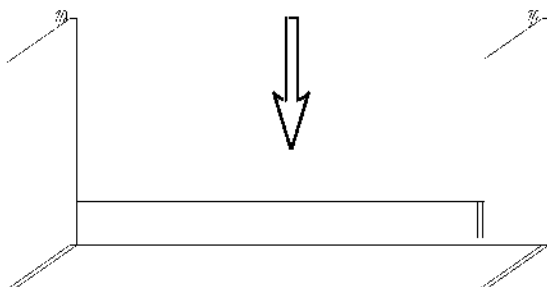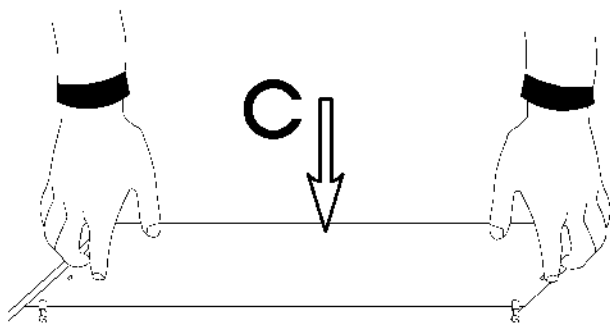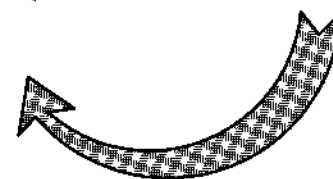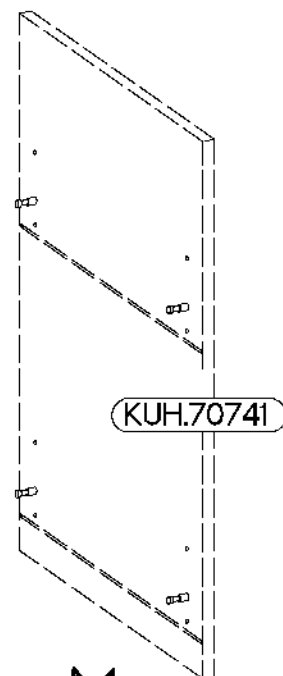

14

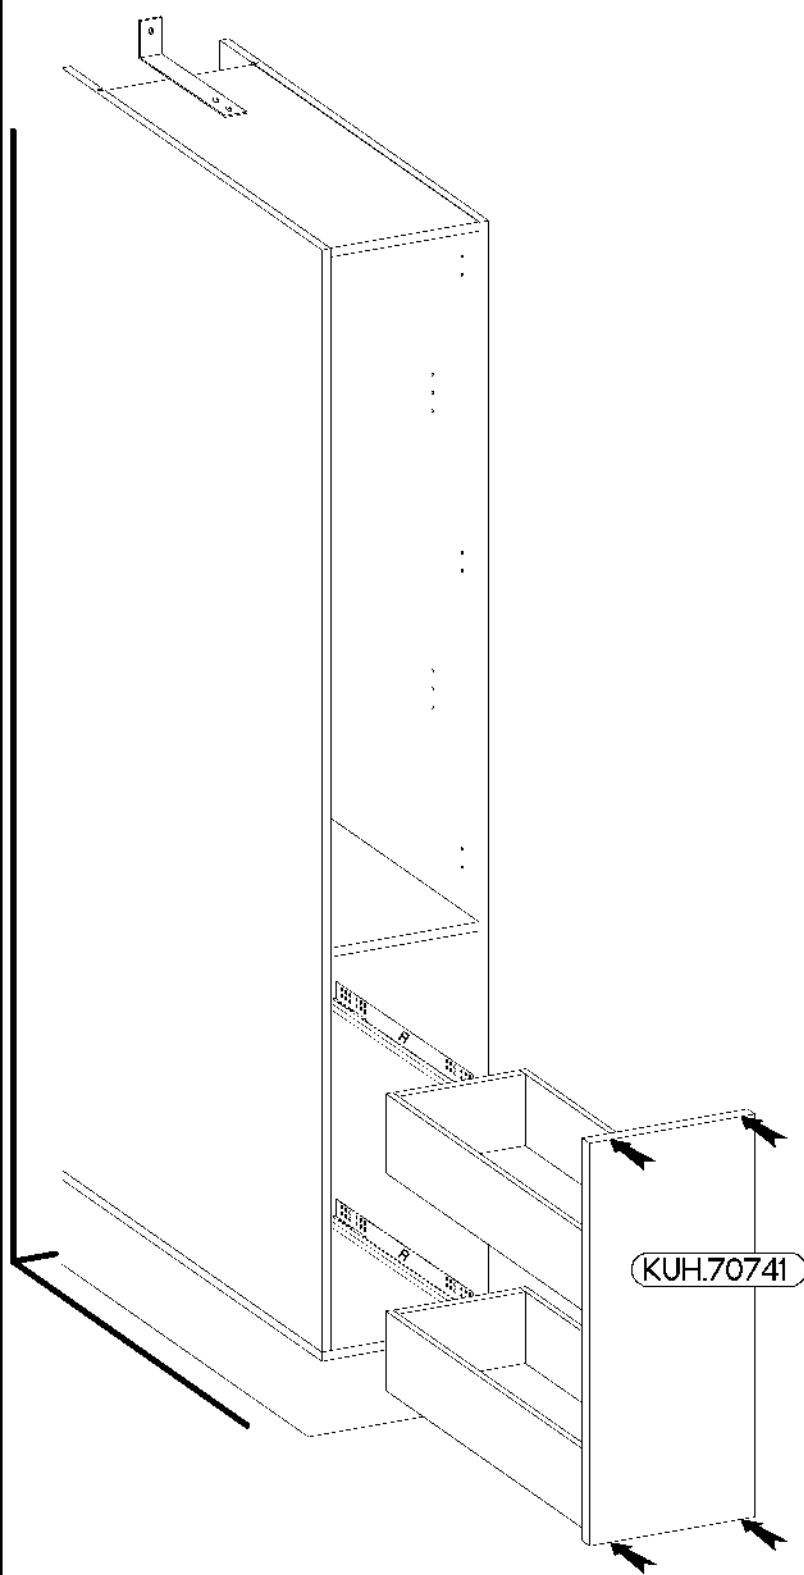


15

45/16mm



J3

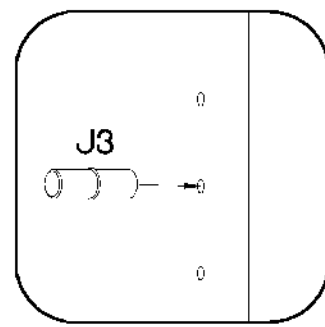8




KUH.30038


KUH.30038

KUH.70741

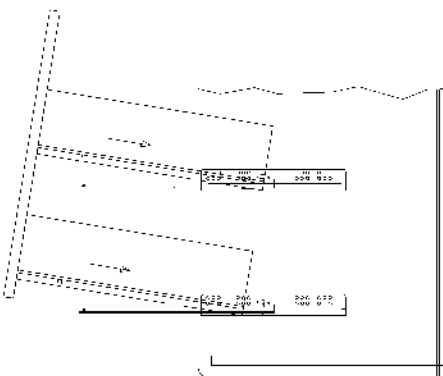1.





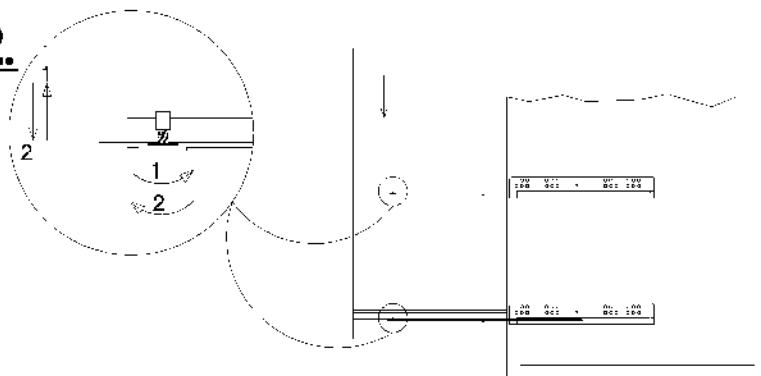2.





16



 HG 3	 P5 6
--	--

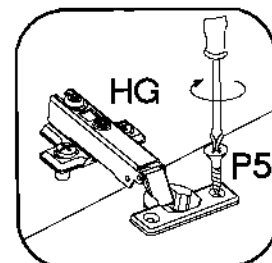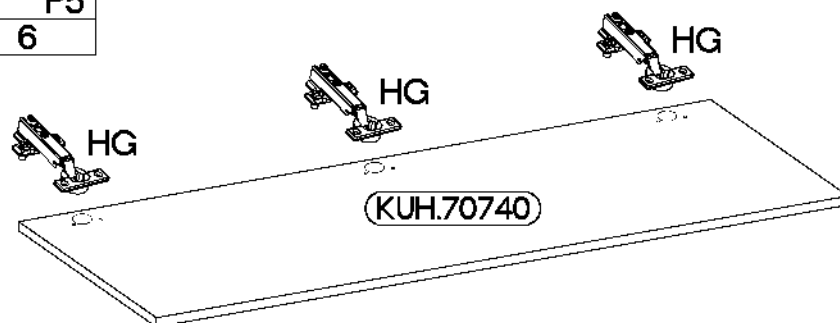

17

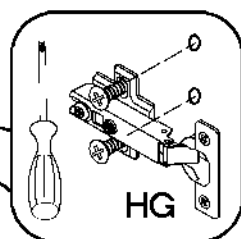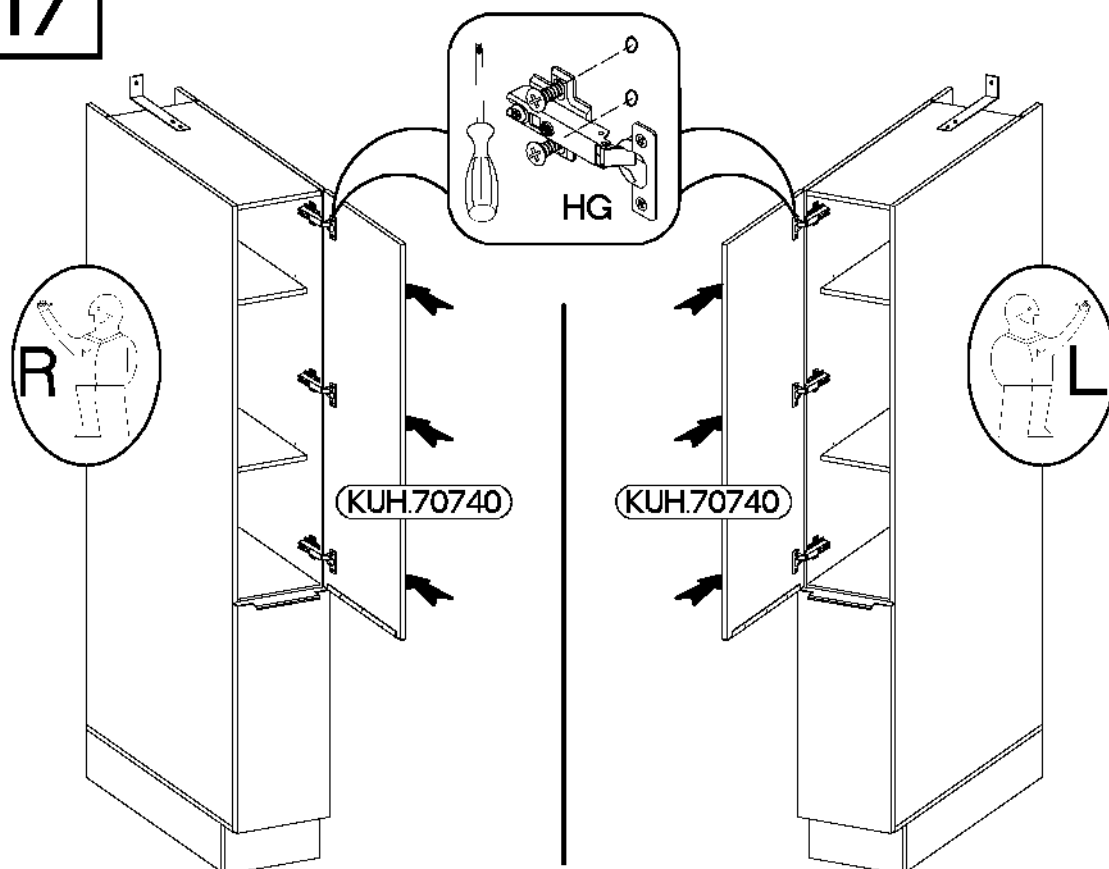


 P11 6	 SL30 2
--	---

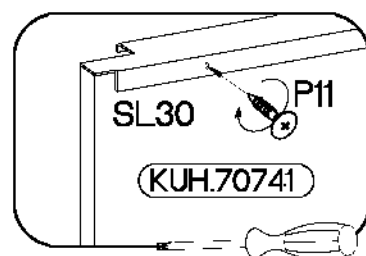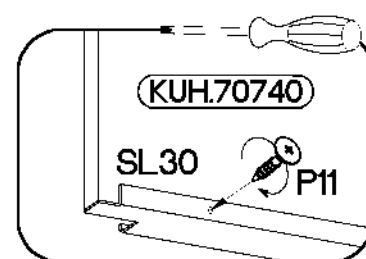


VARIANT HIGH GLOSS

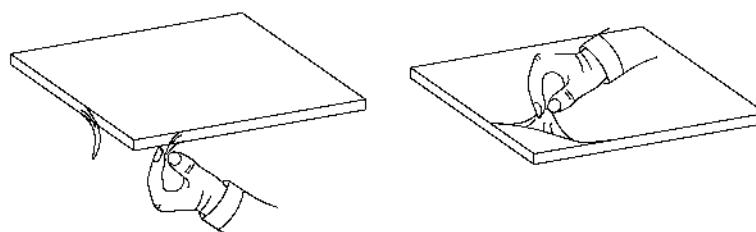1.



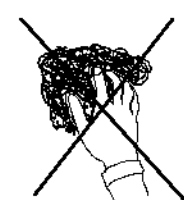2.



3.

