


5090065/00

MONTAGEANLEITUNG



2F.REC/BK
REC/BK.2F

11-12/2019


A








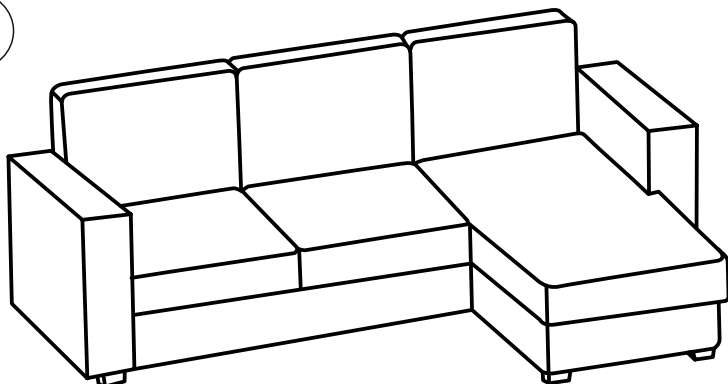


B

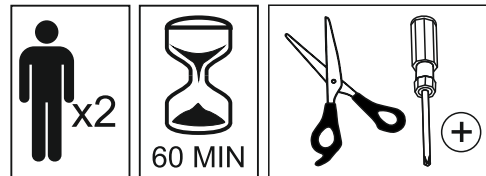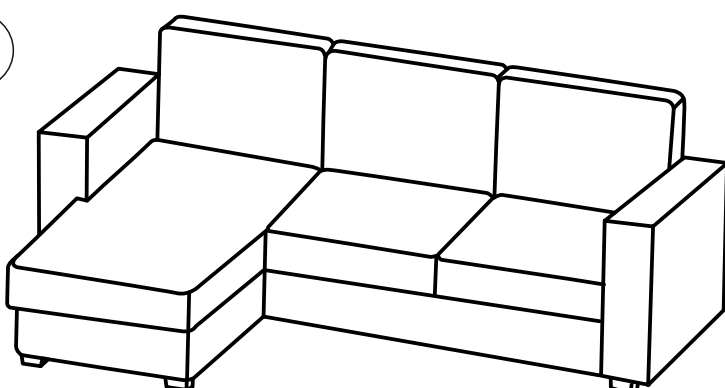


**Vor der Montage bitte
beiliegende Informationen
beachten**

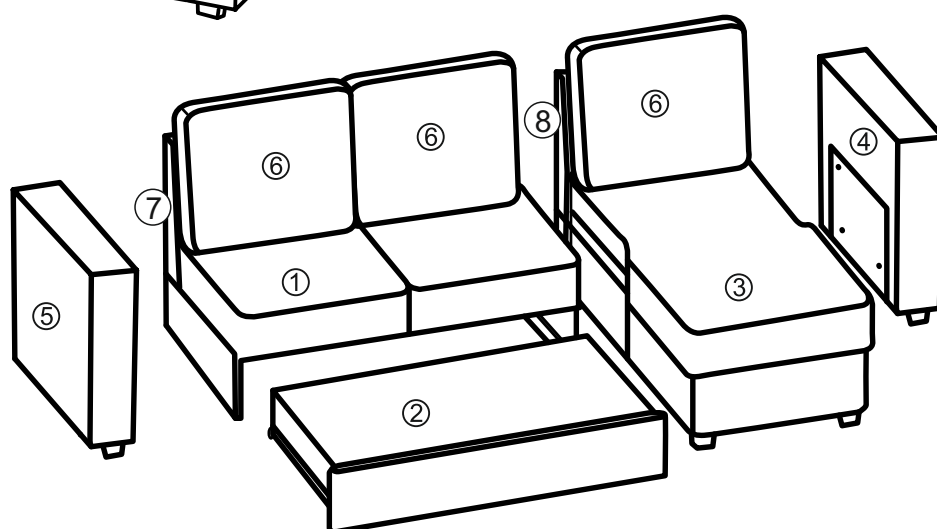


A  Ax10 M6x40	B  Bx10 M8	C  Cx4	D  Dx7 Felt
E  Ex7	F  Fx8 M6x20	G  Gx1 4mm	H  Hx3 5x40
I  Ix2	J  Jx16 +	K  Kx2	L  Lx4
M  Mx4 5x50 +			





1a,b

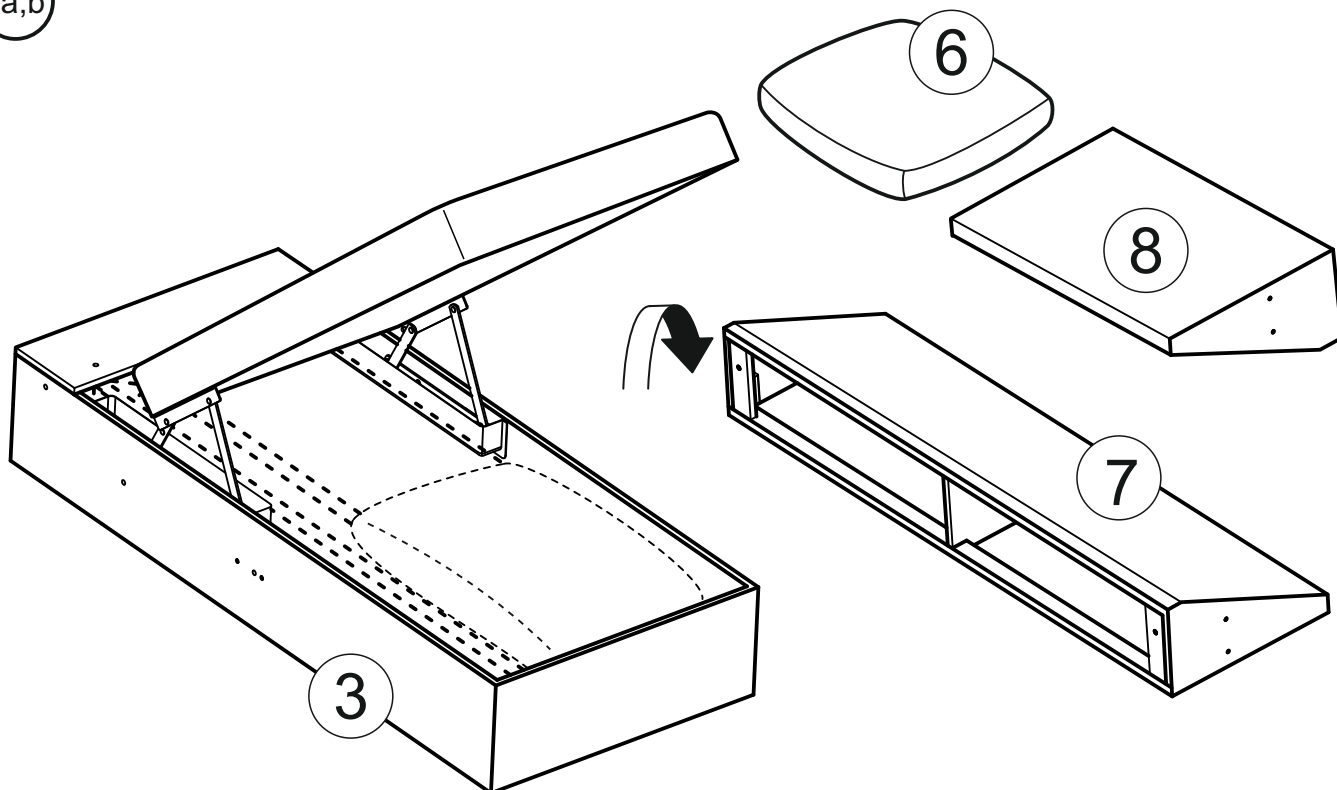




2a,b

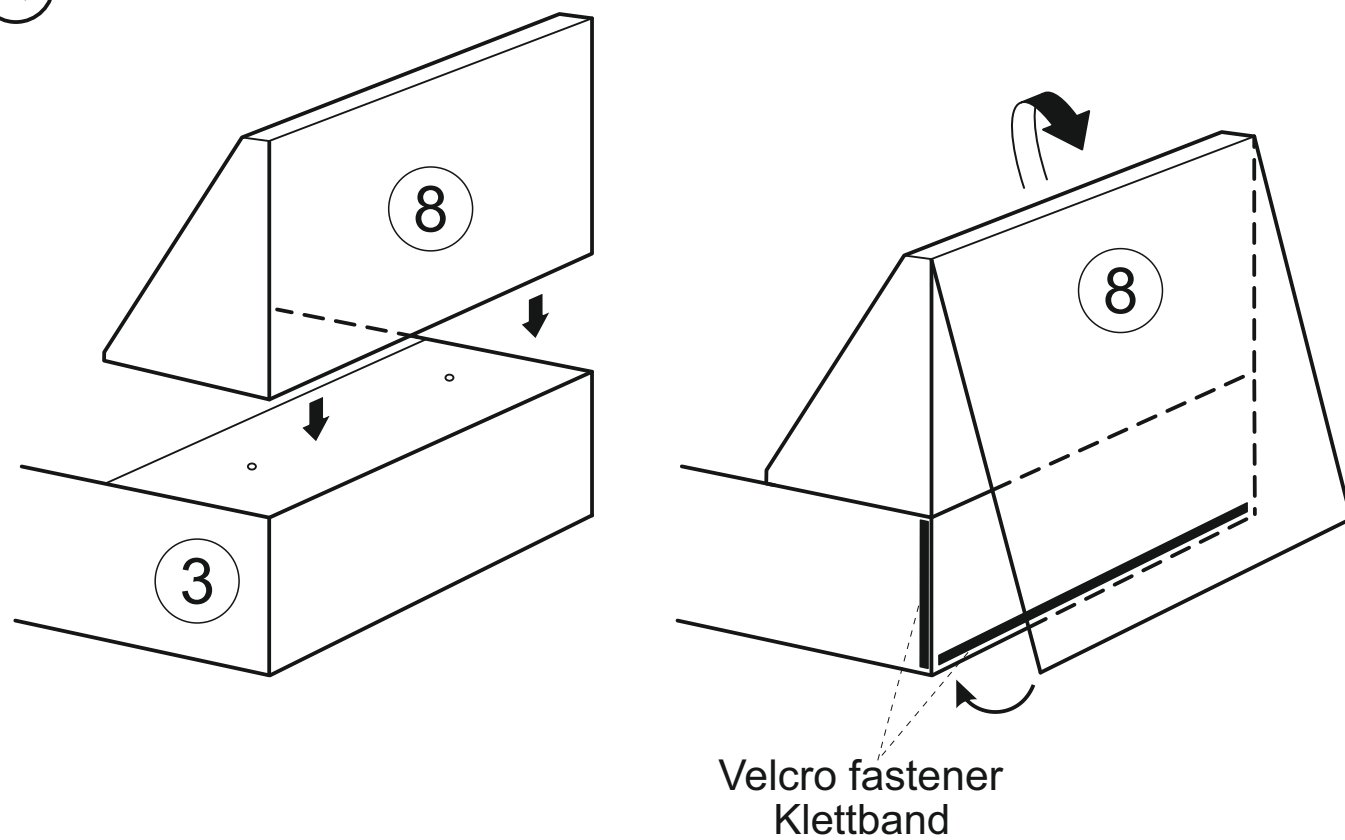


3a,b

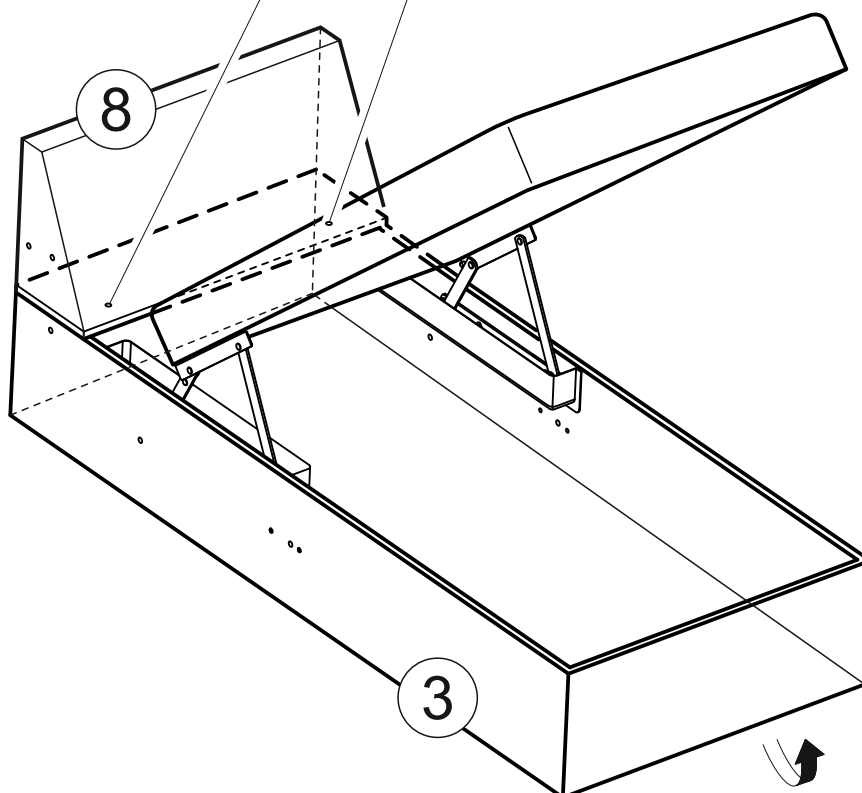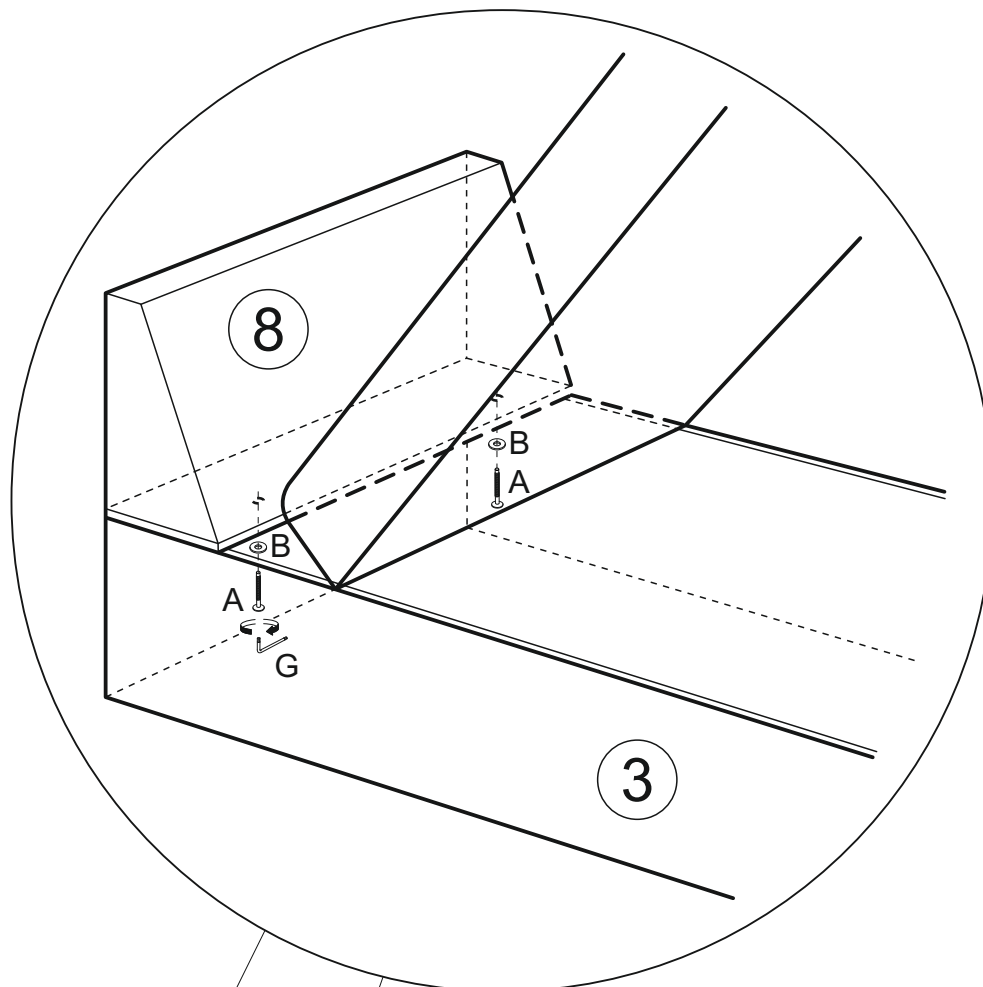




4a

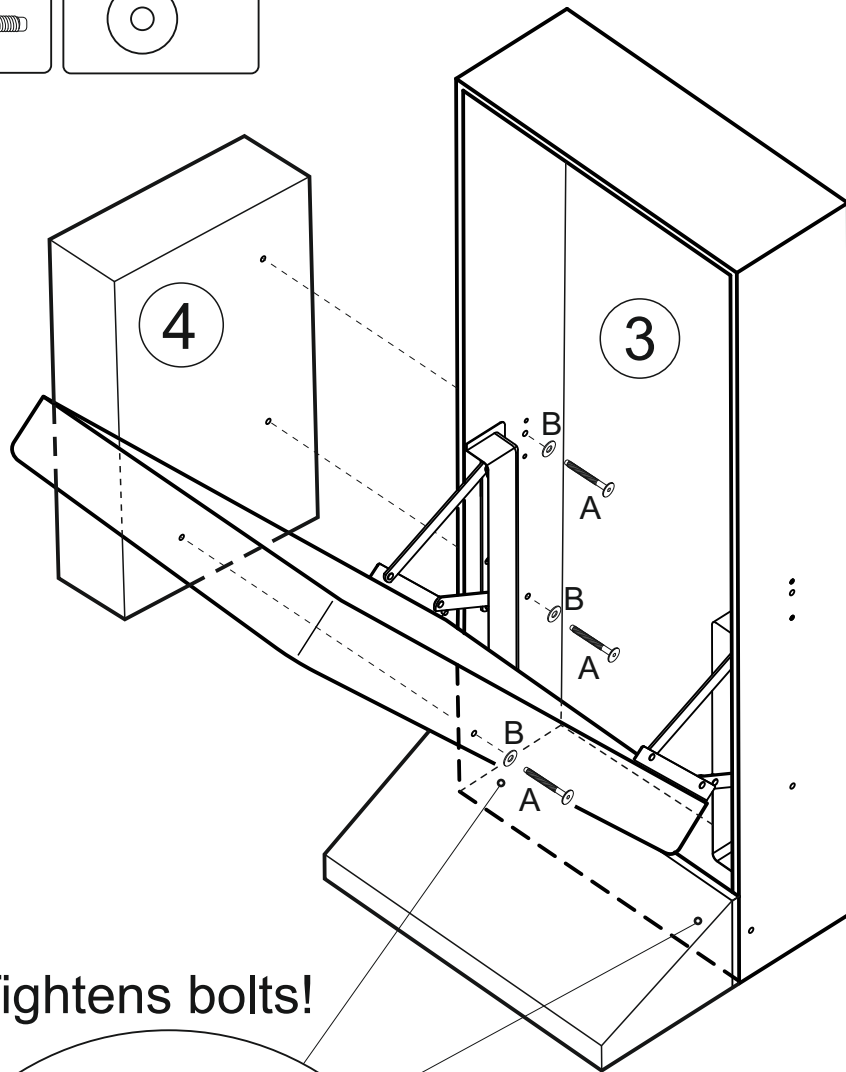


Tightens bolts!

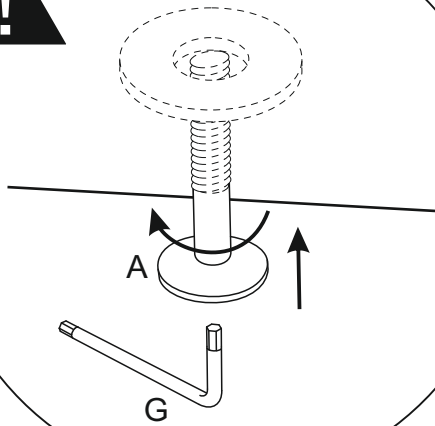

4b

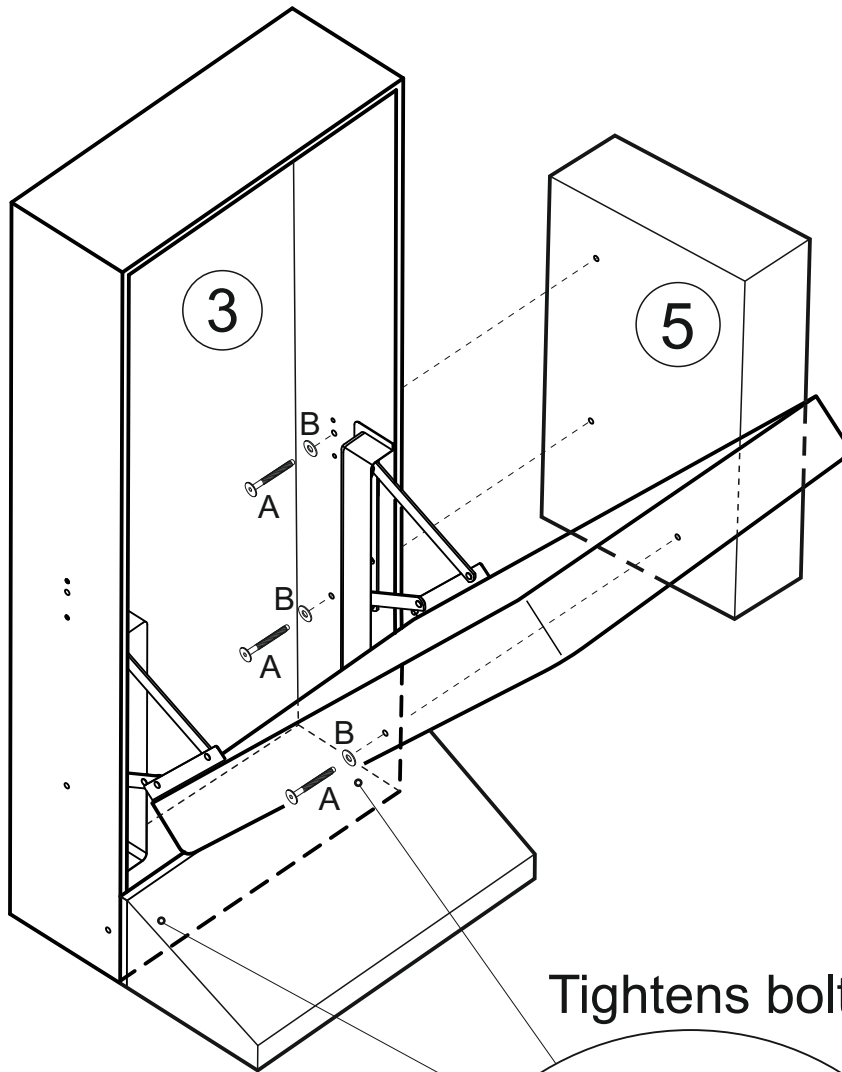

Tightens bolts!


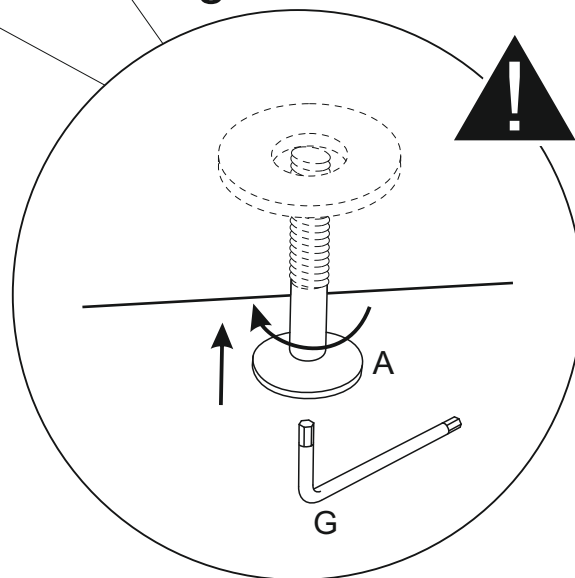


5a





F **Fx4**








F **Fx4**

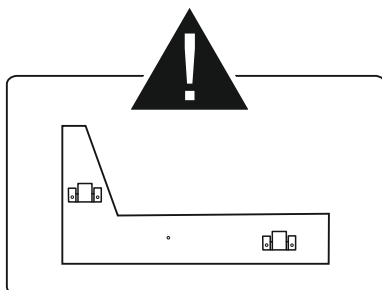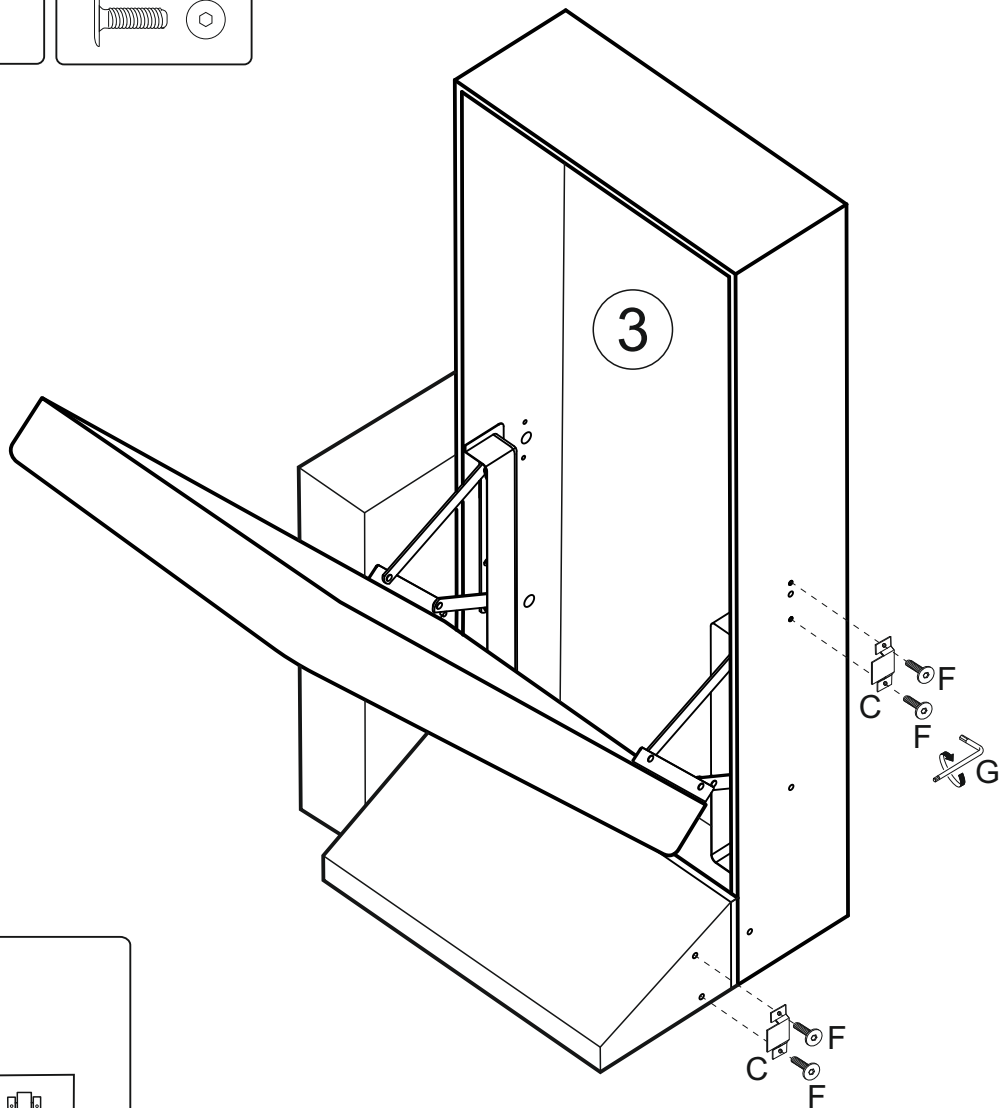





5b

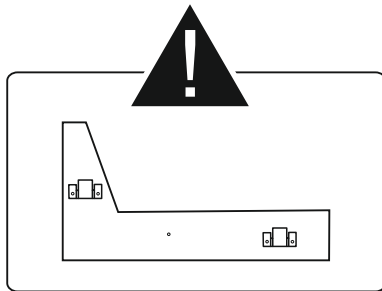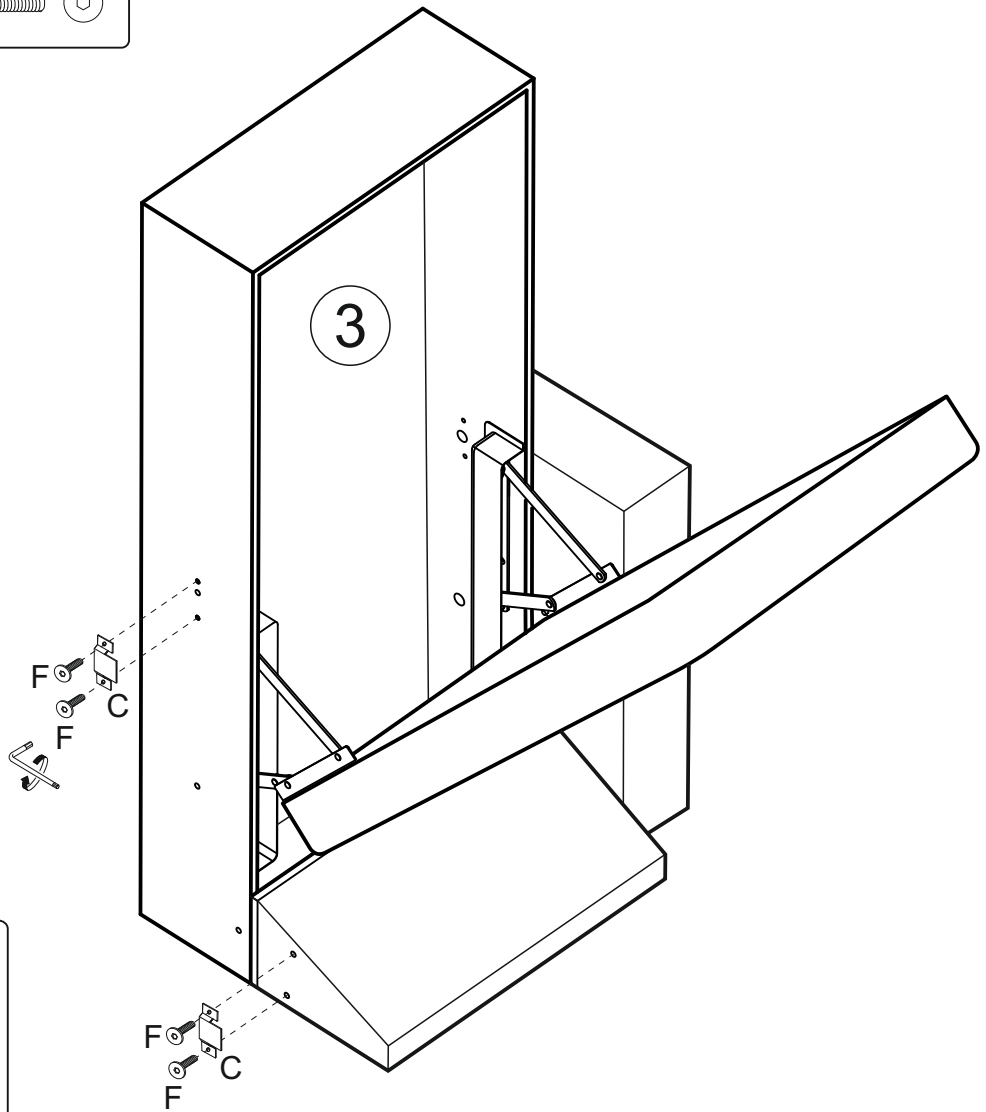



6a

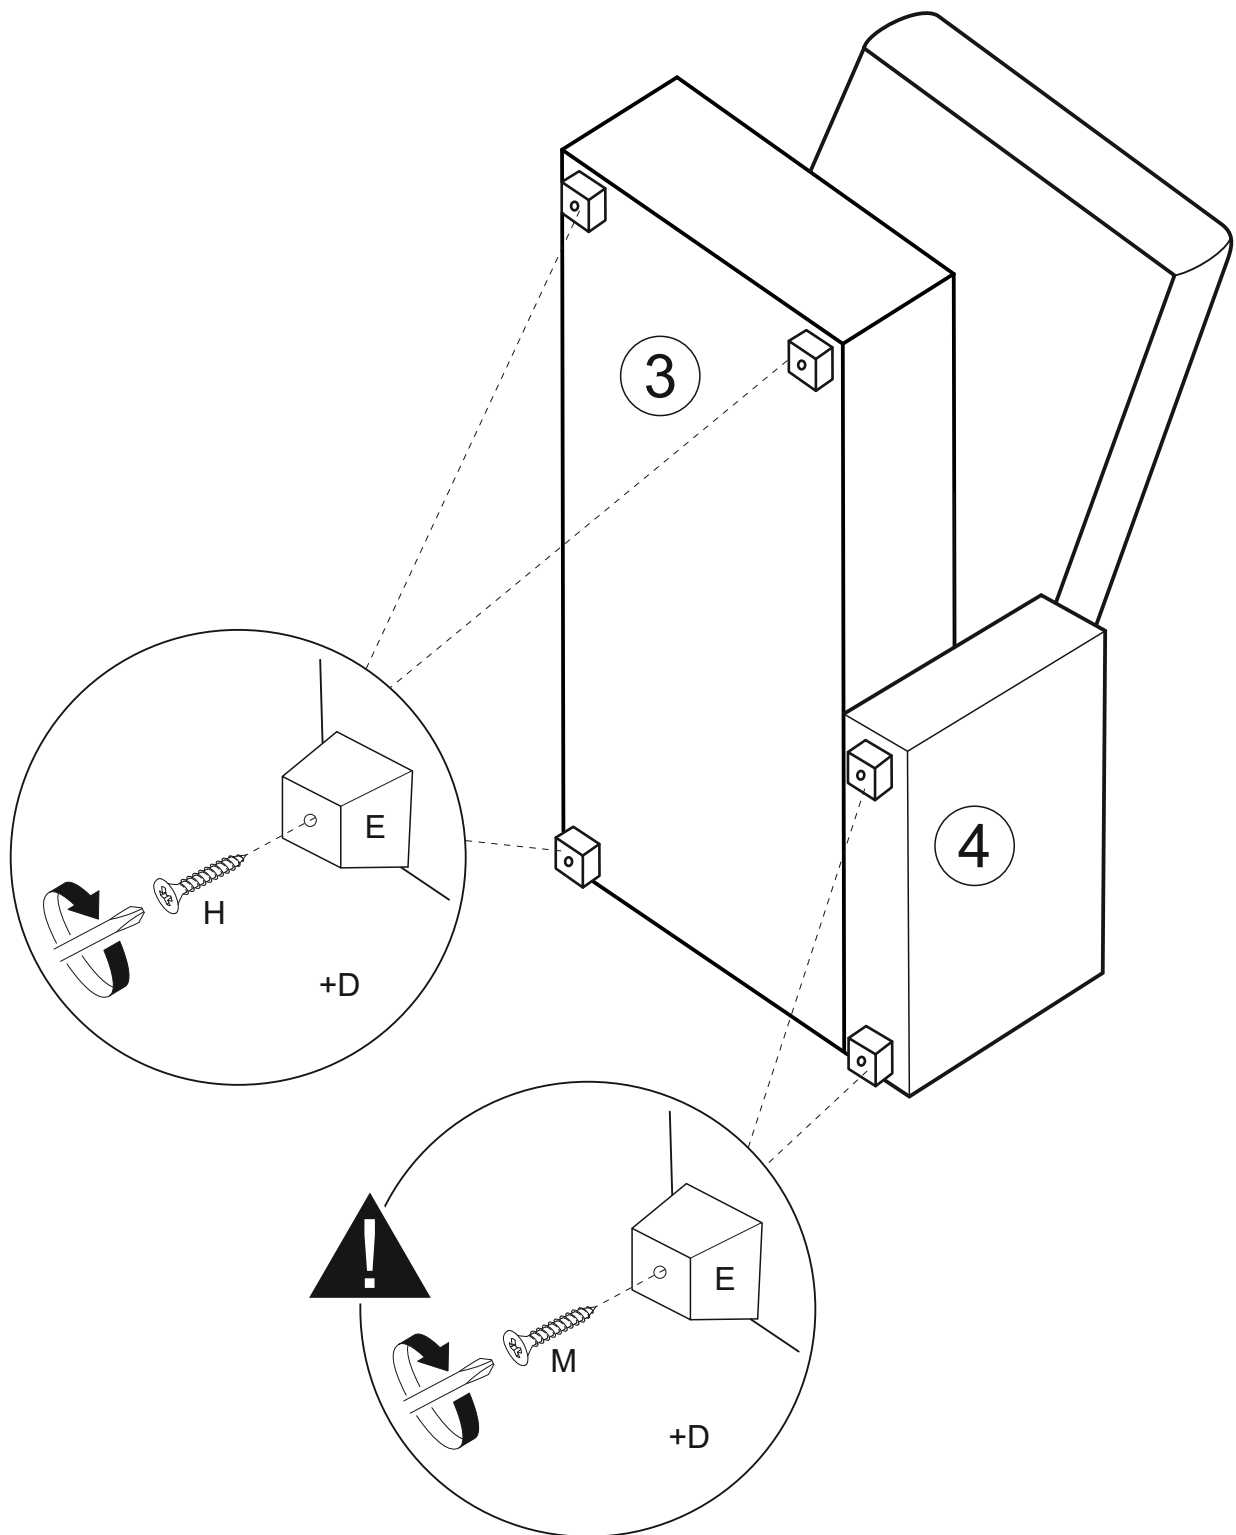





6b

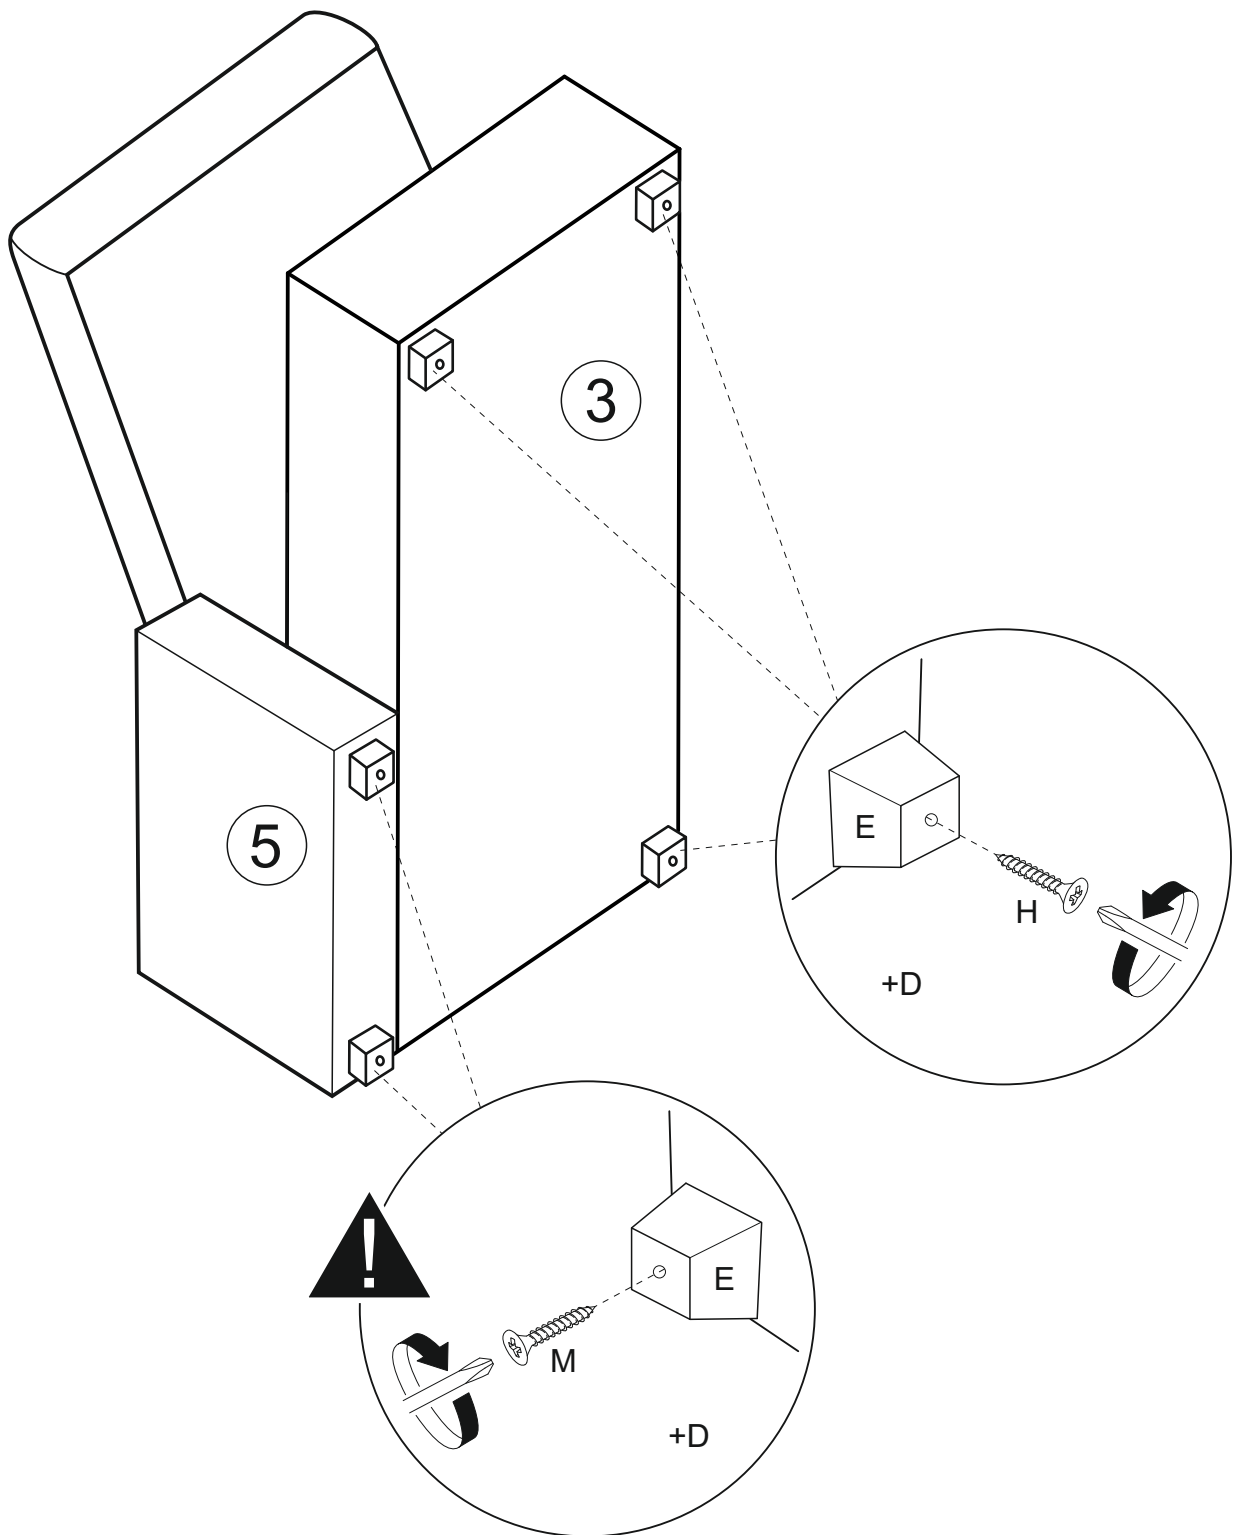



7a,b



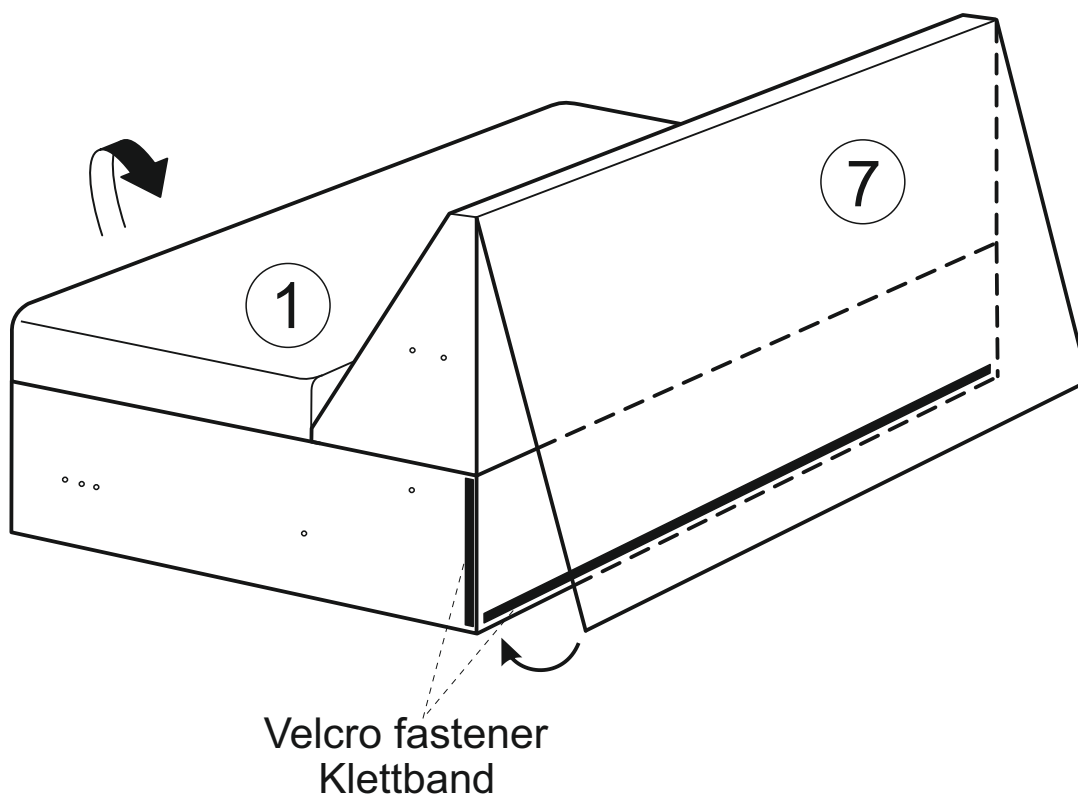
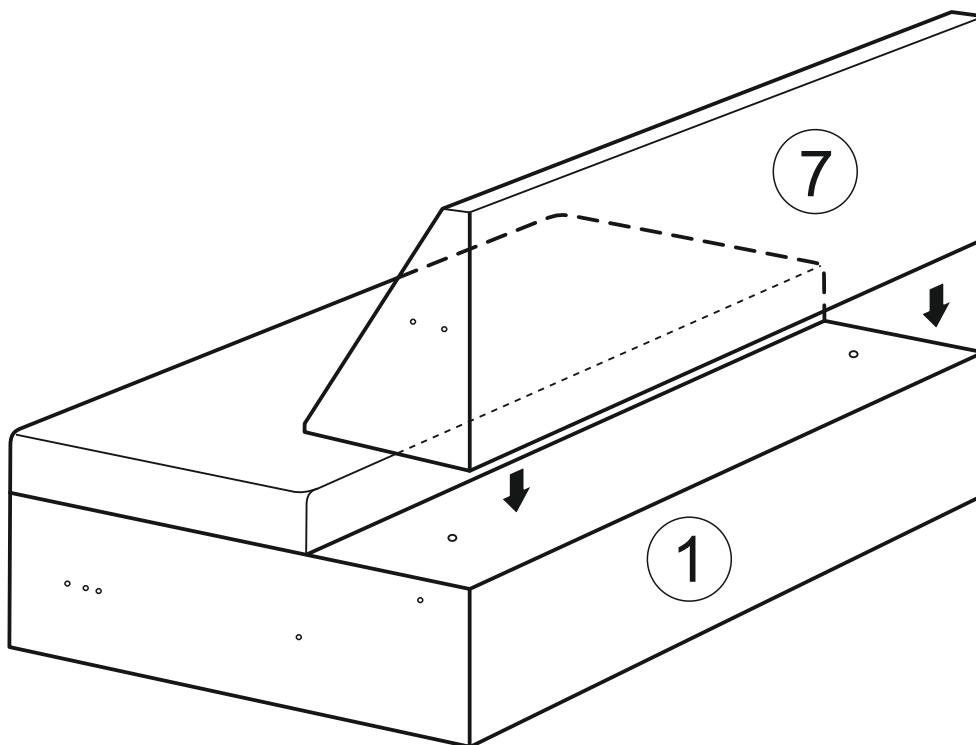


8a,b

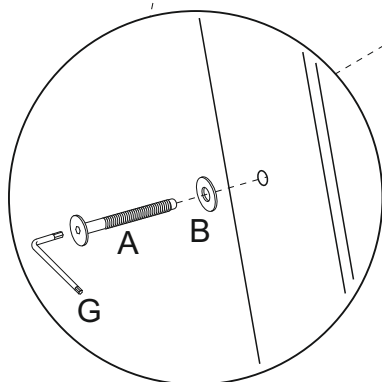
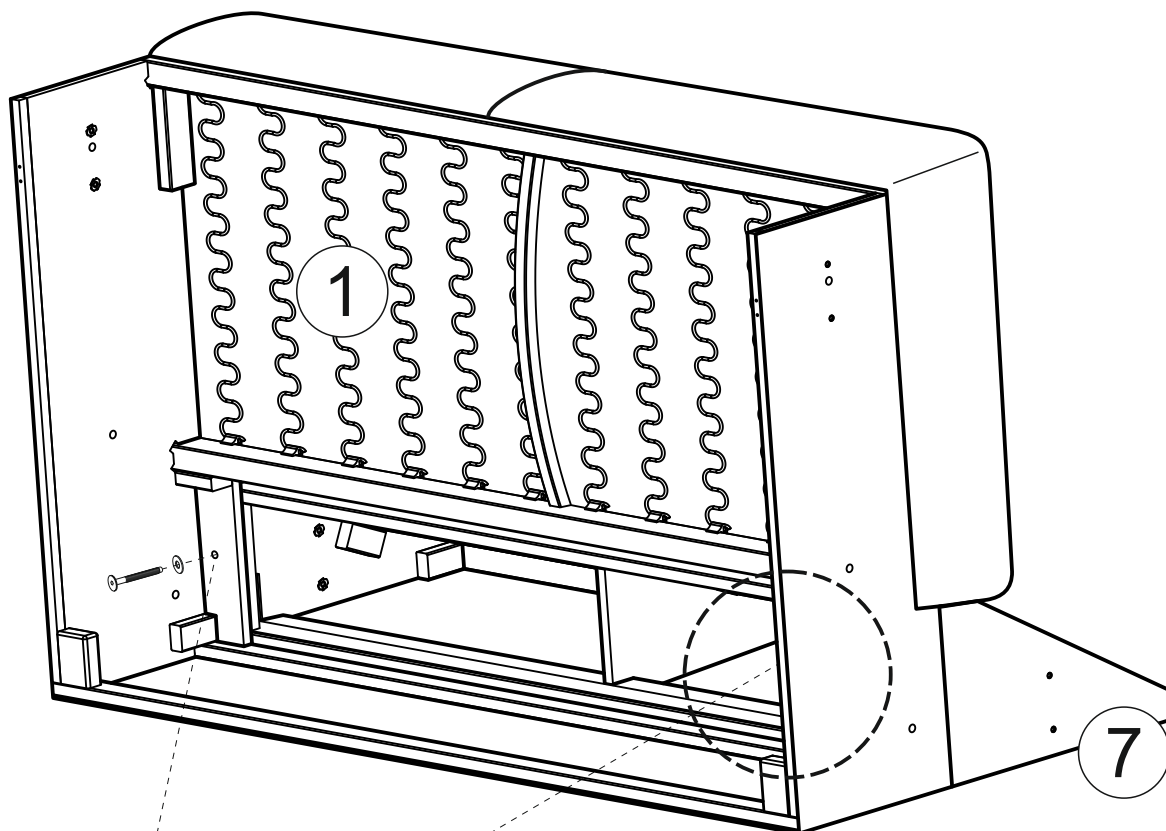




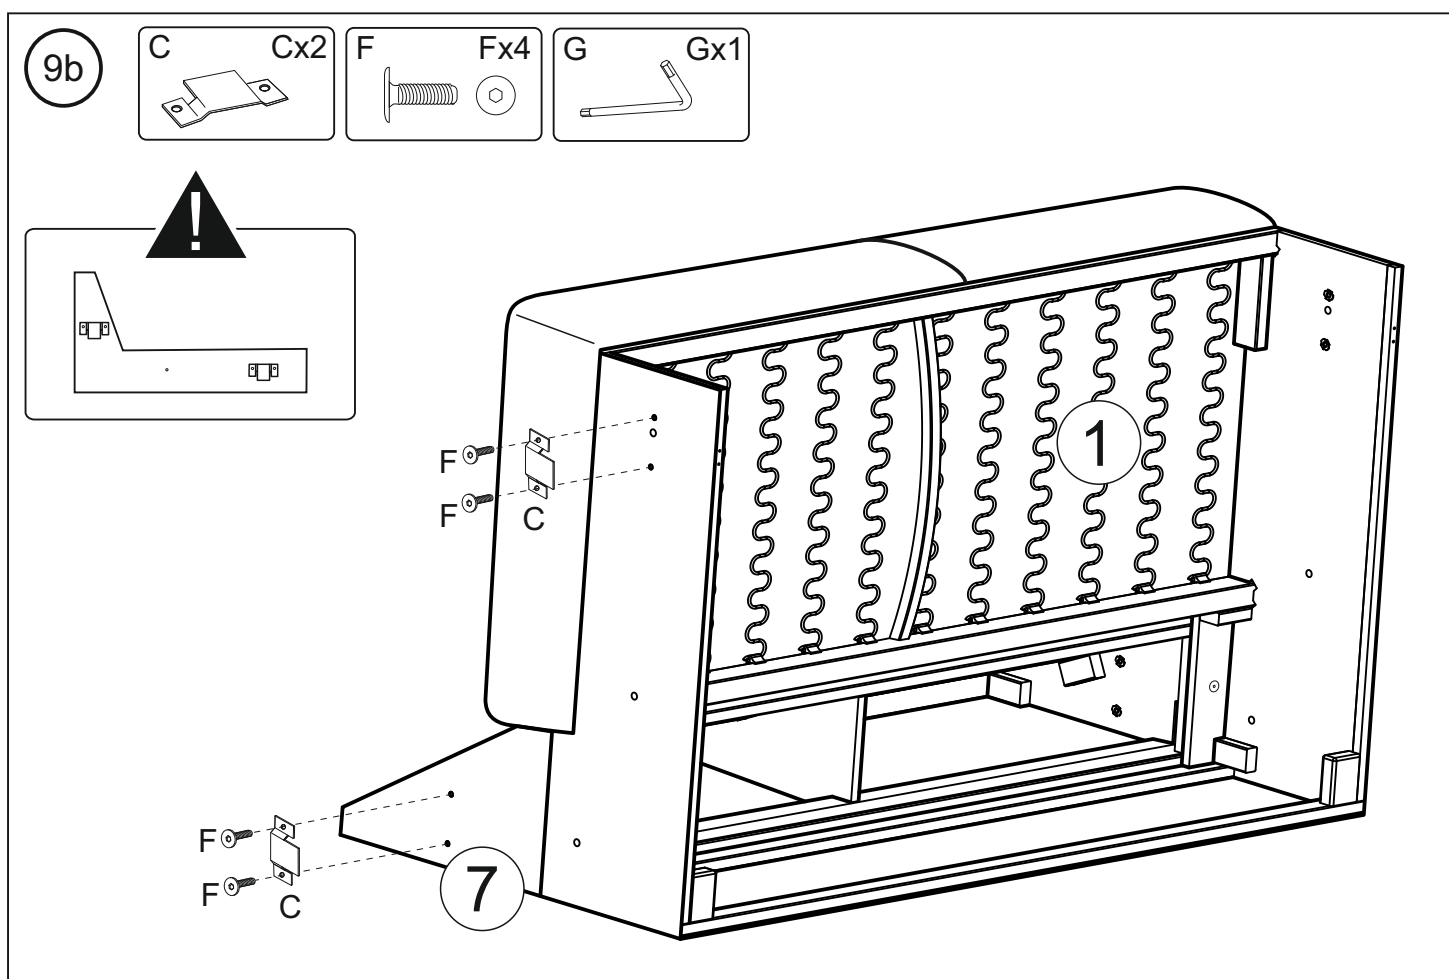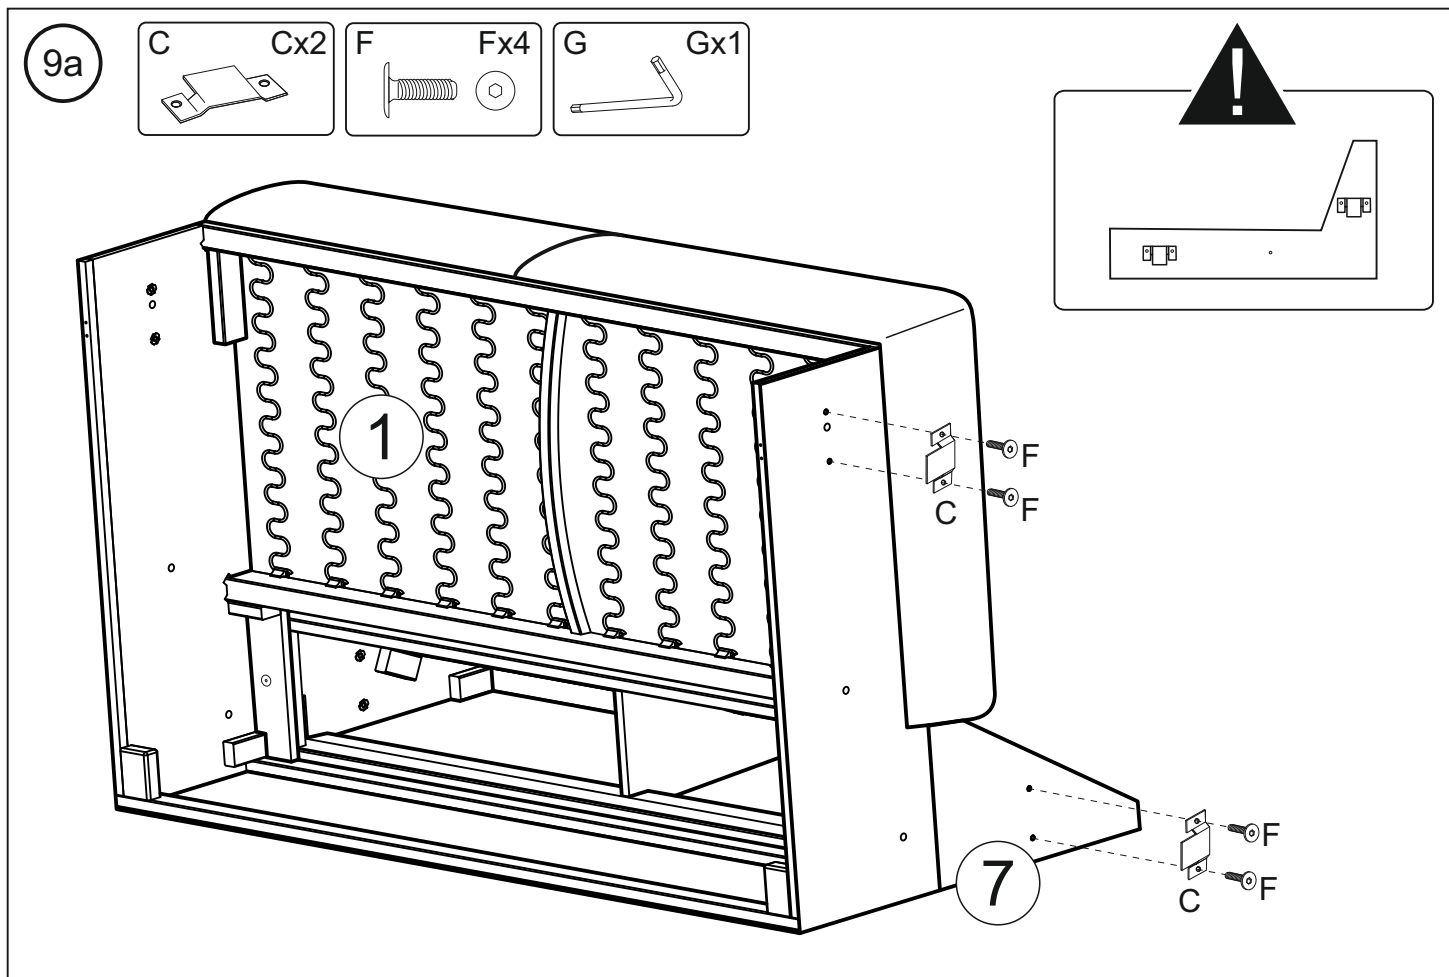




10a

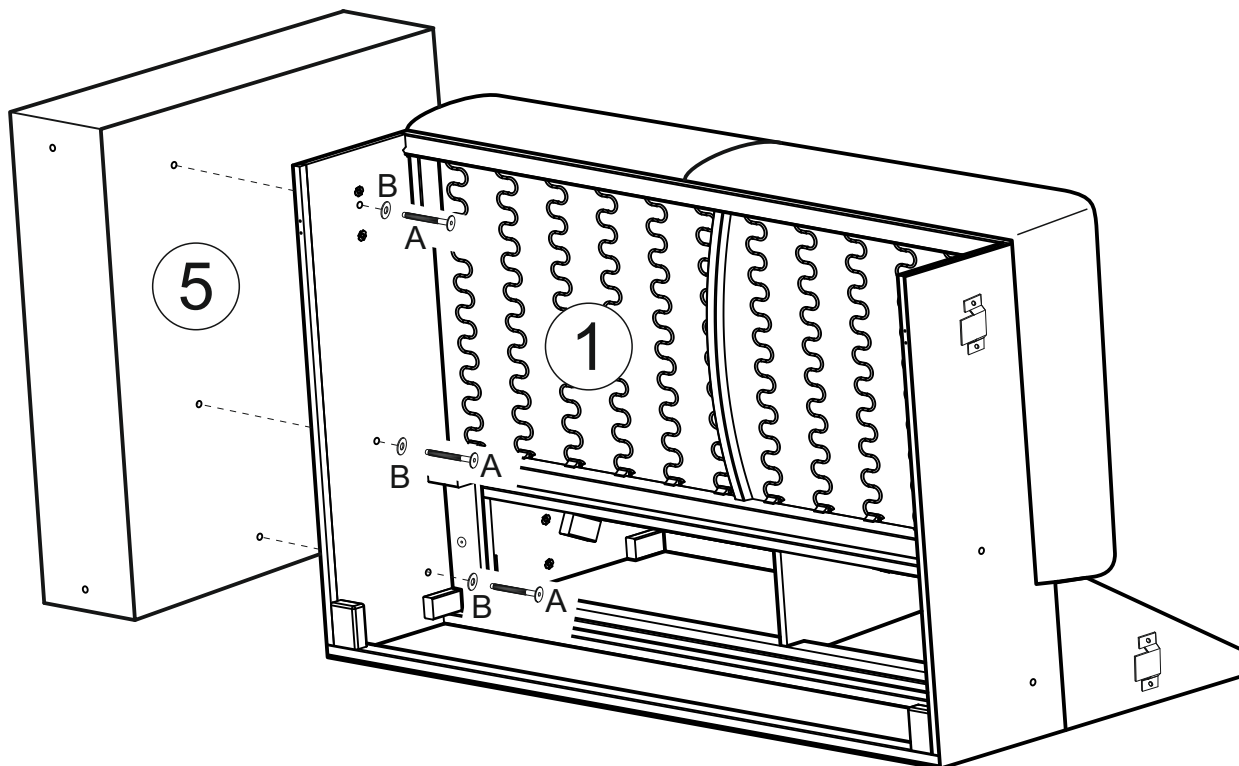




10b

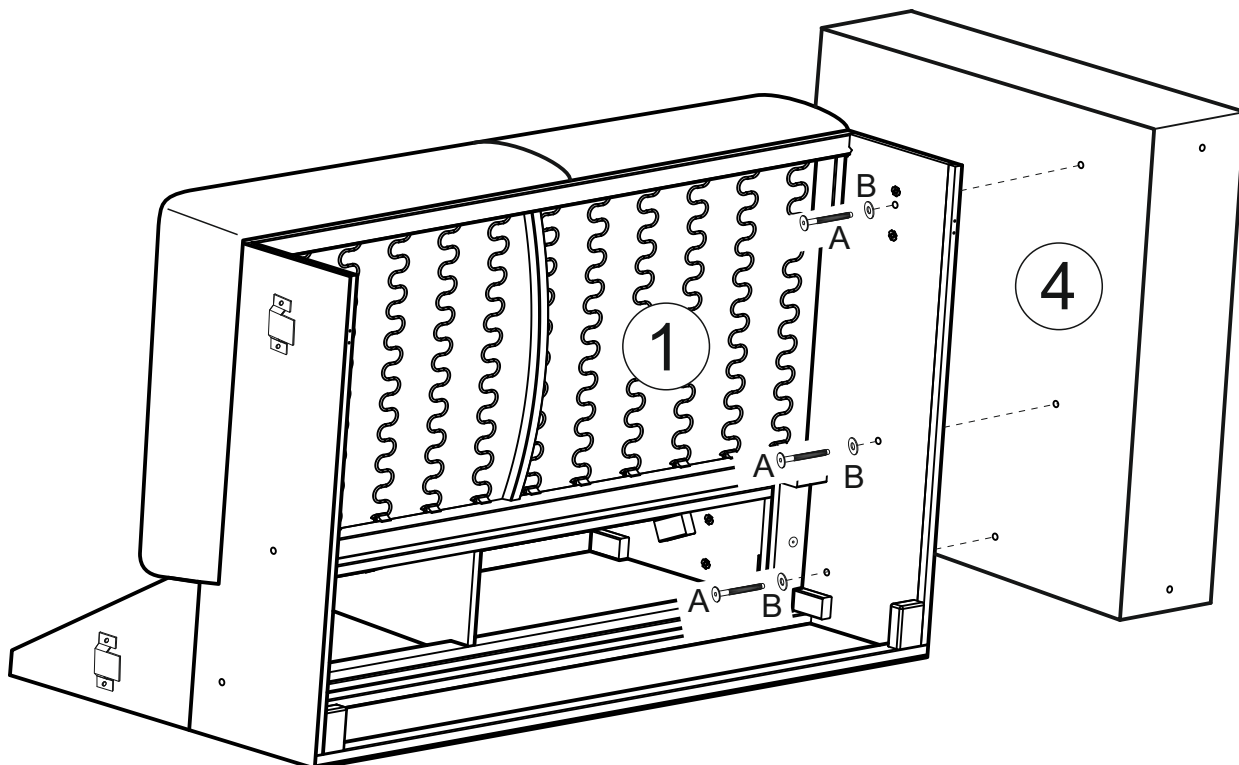






11a

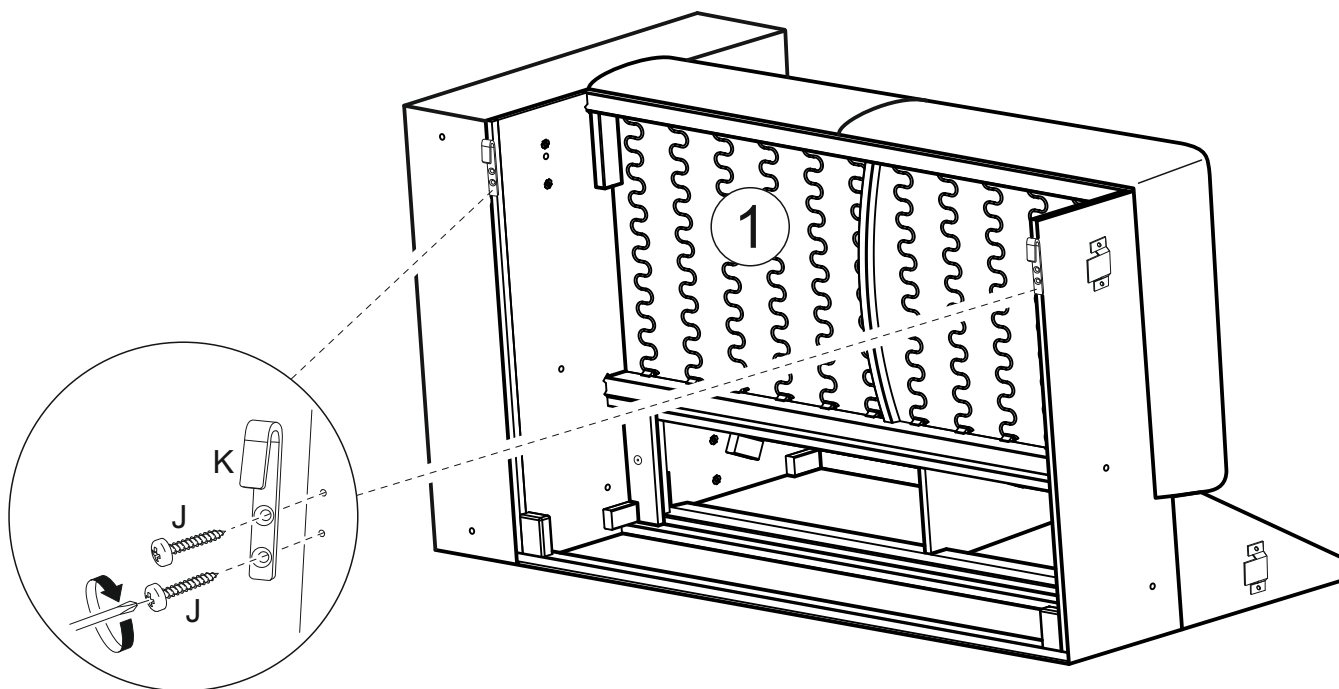






11b

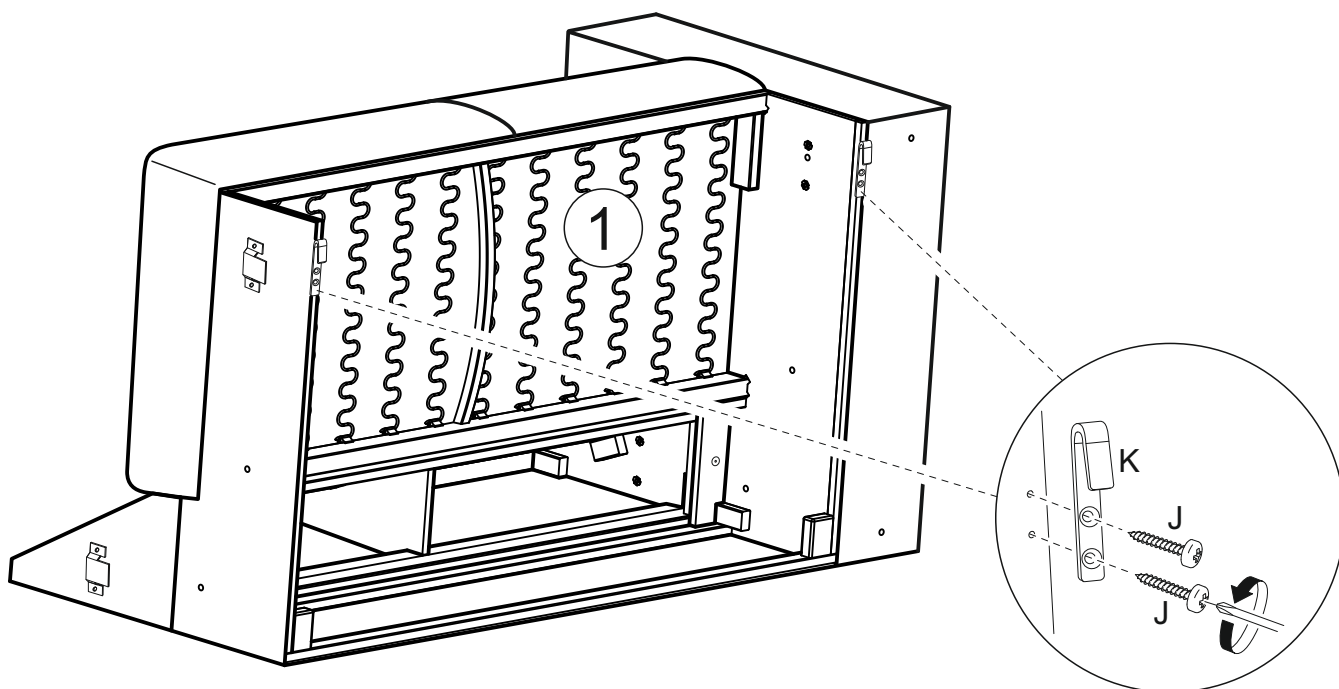



12a

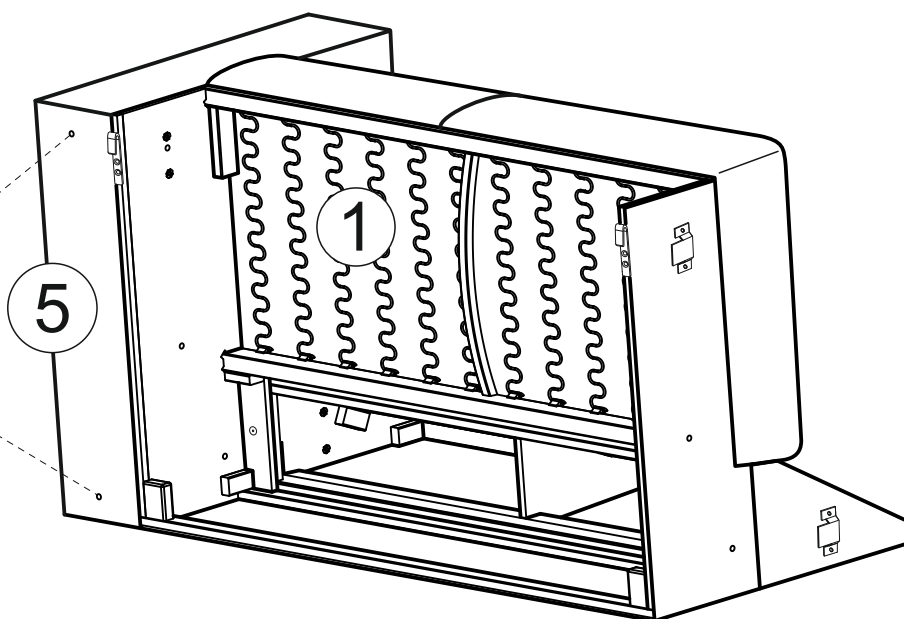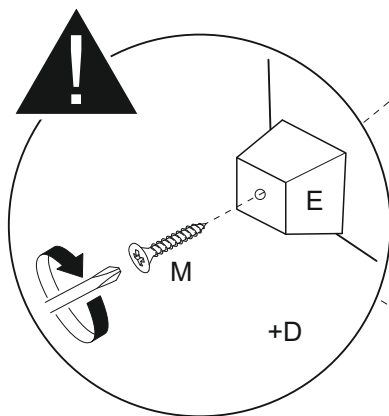



12b

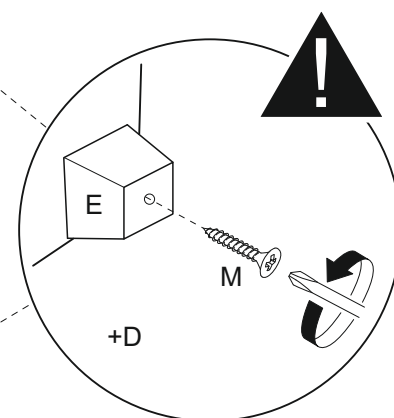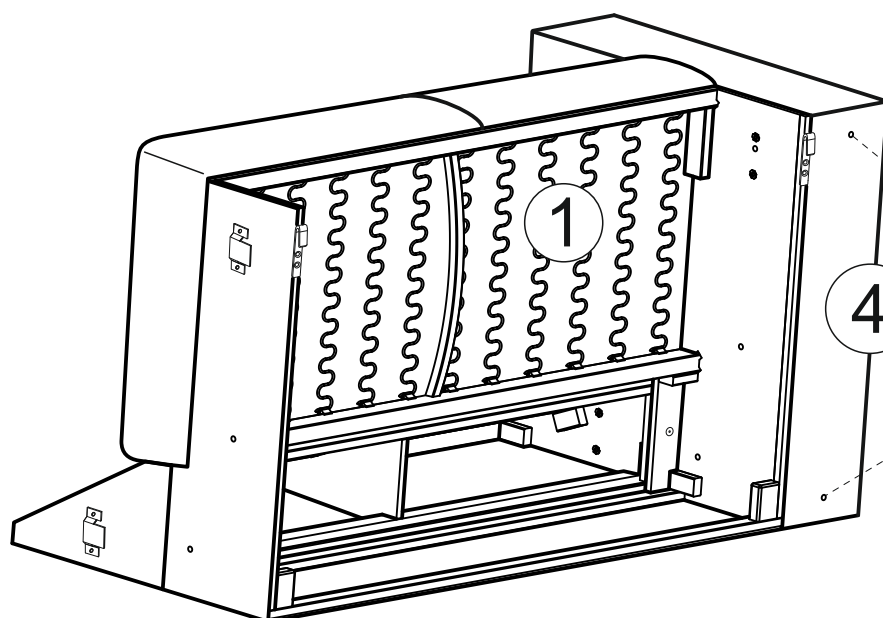


13a,b

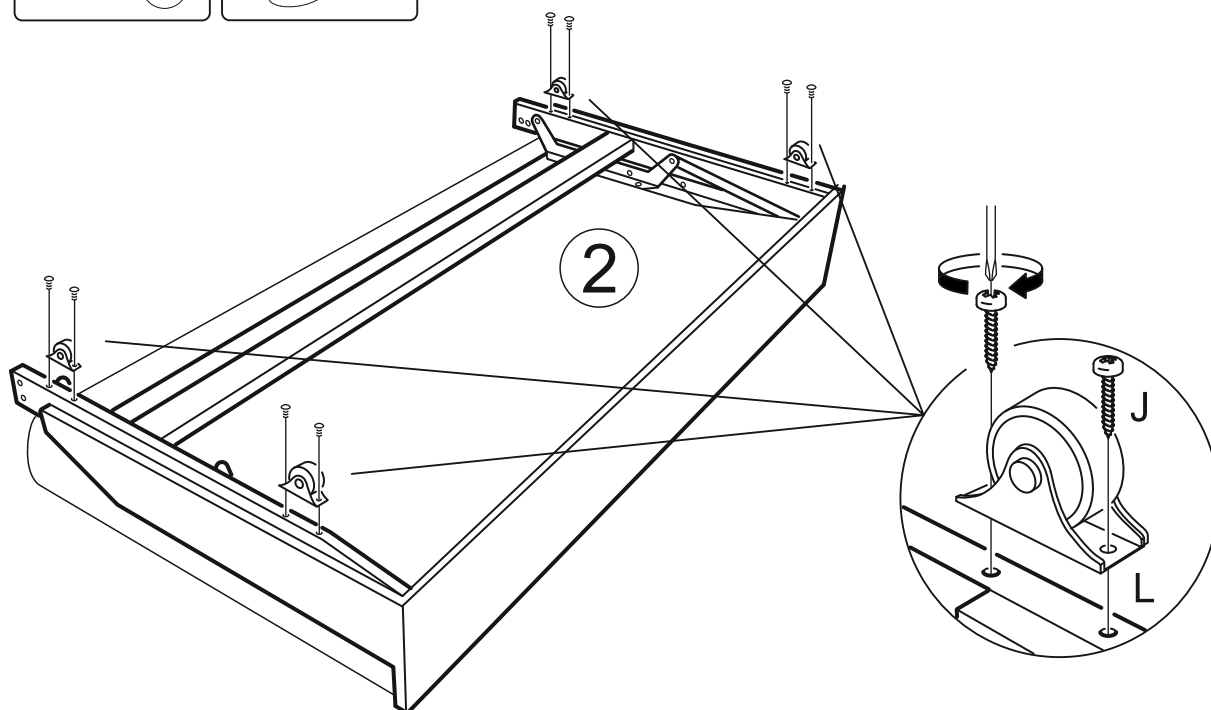


14a,b

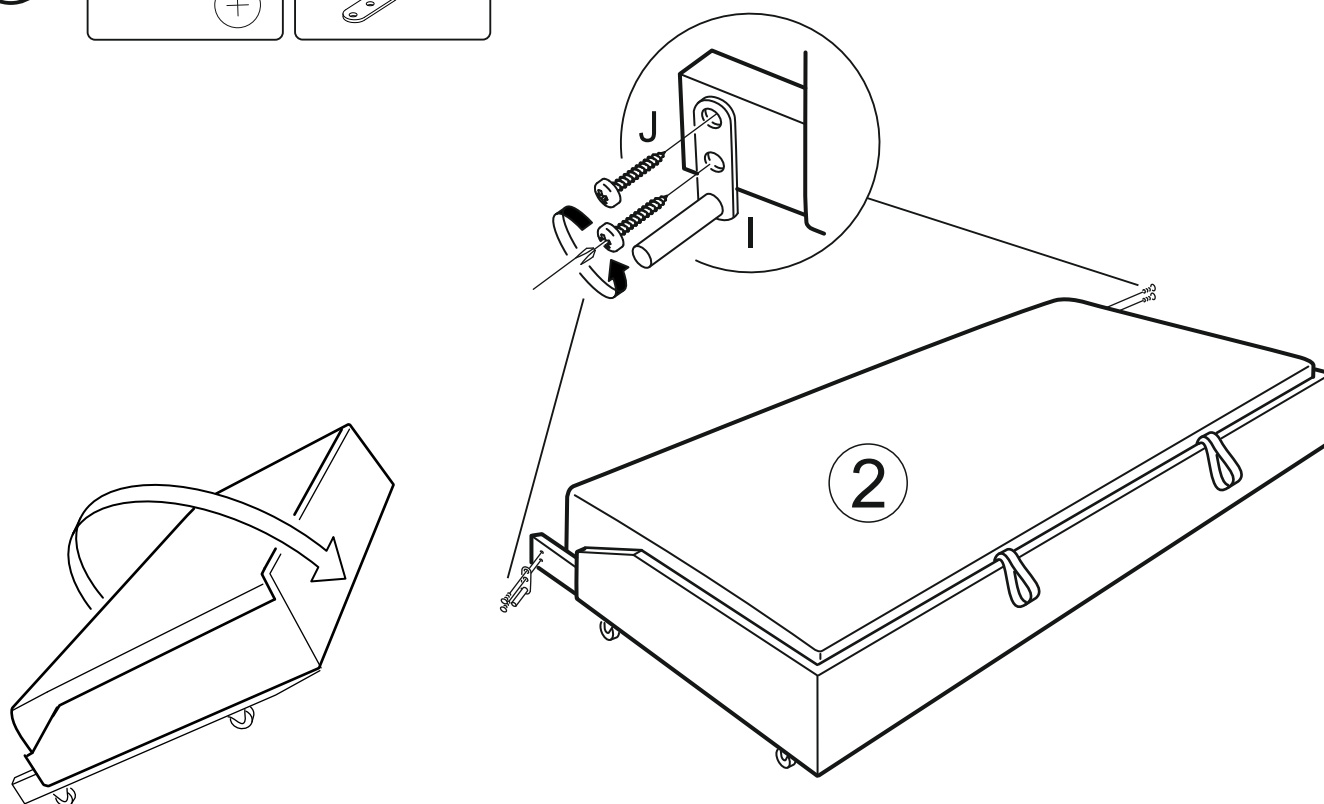






15a




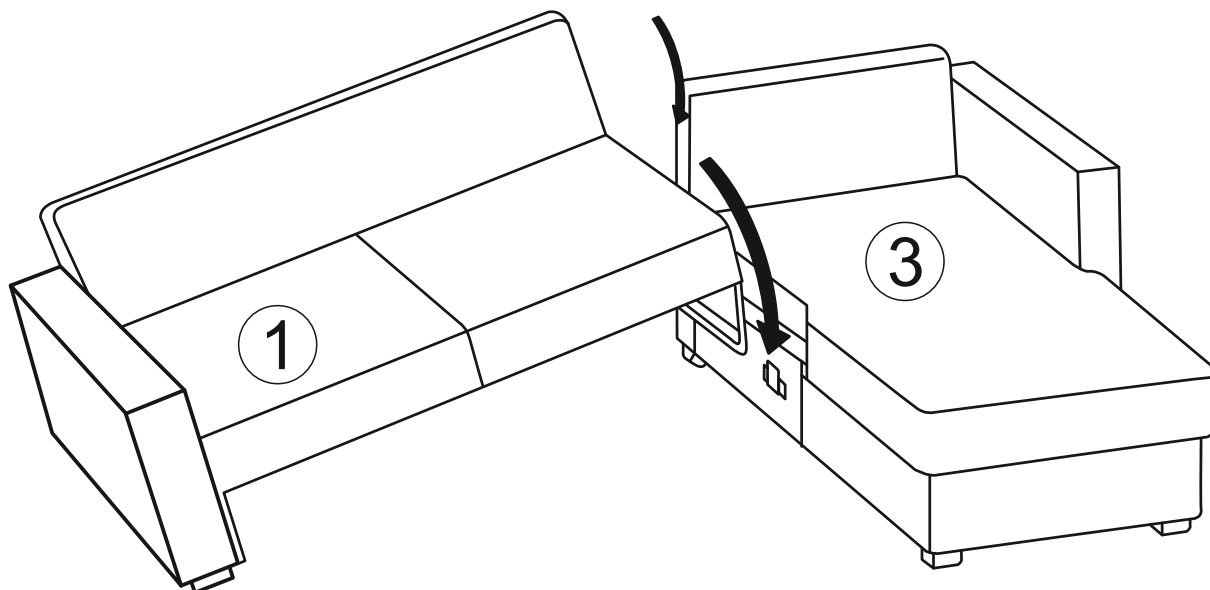


15b

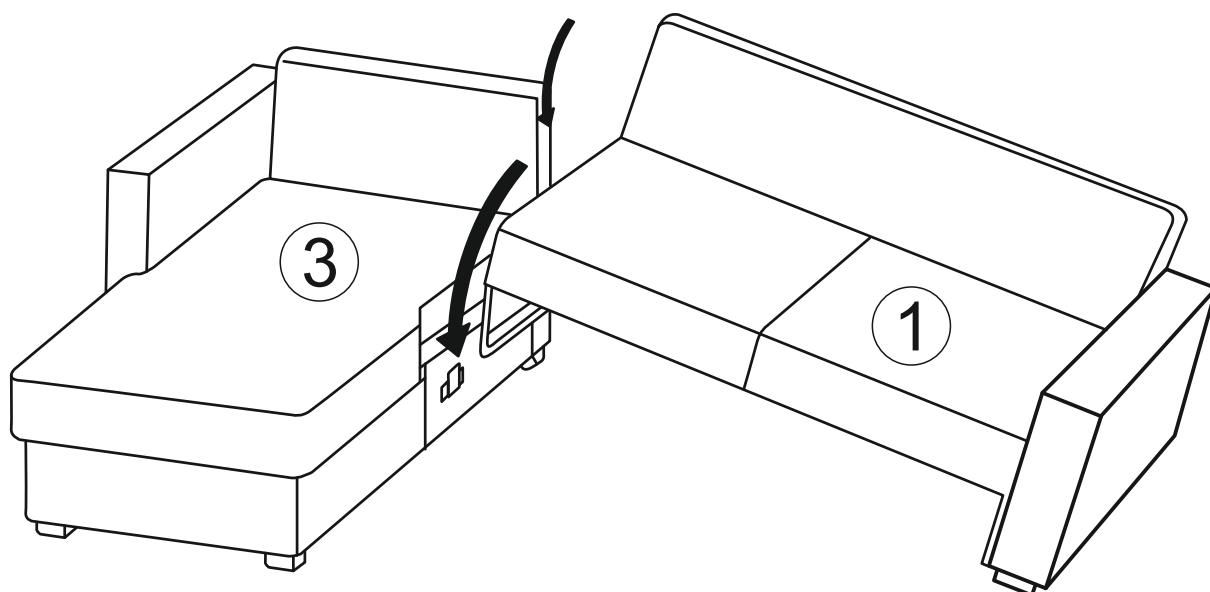

16a,b

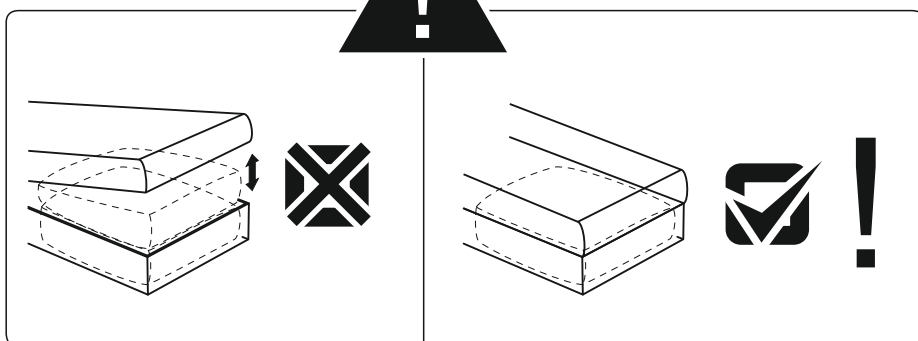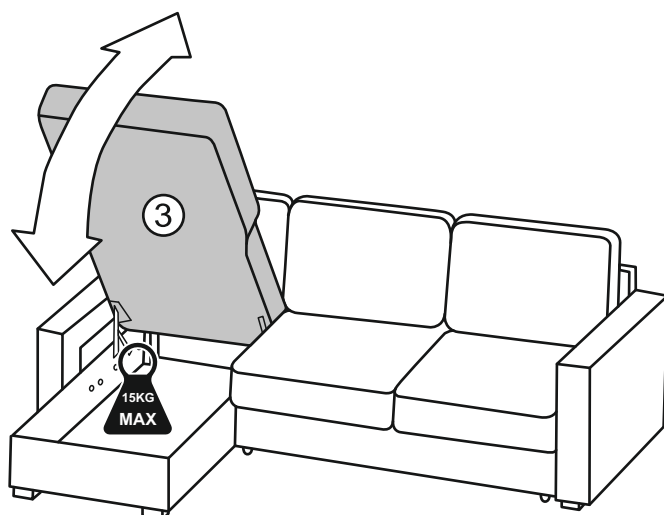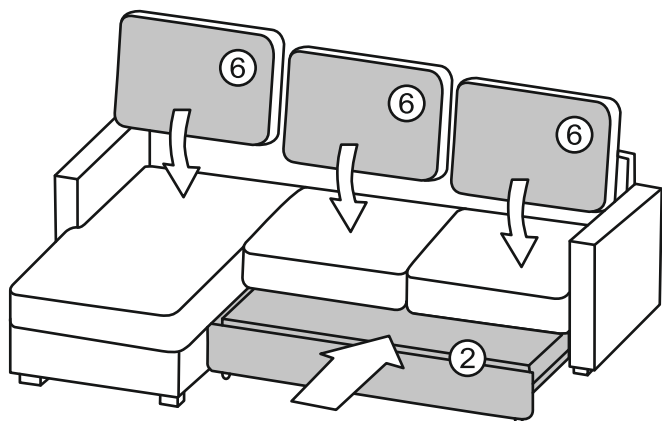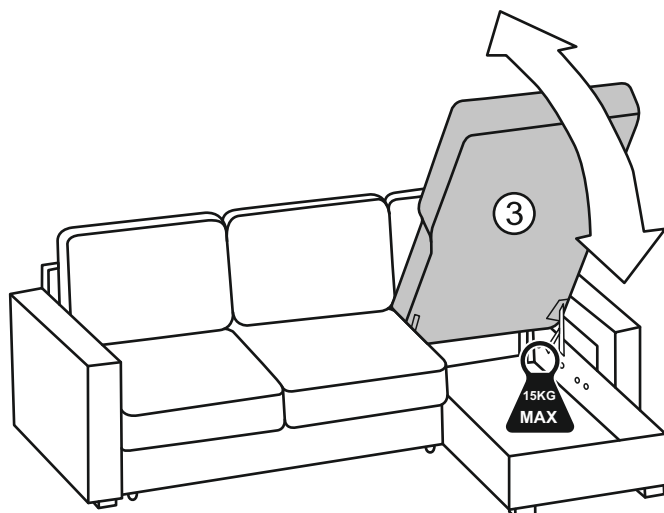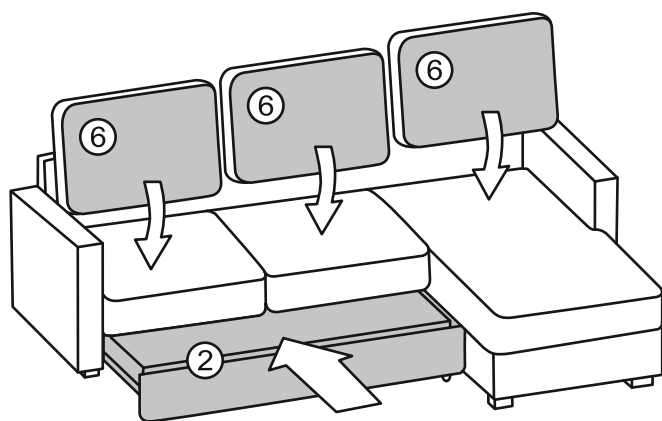

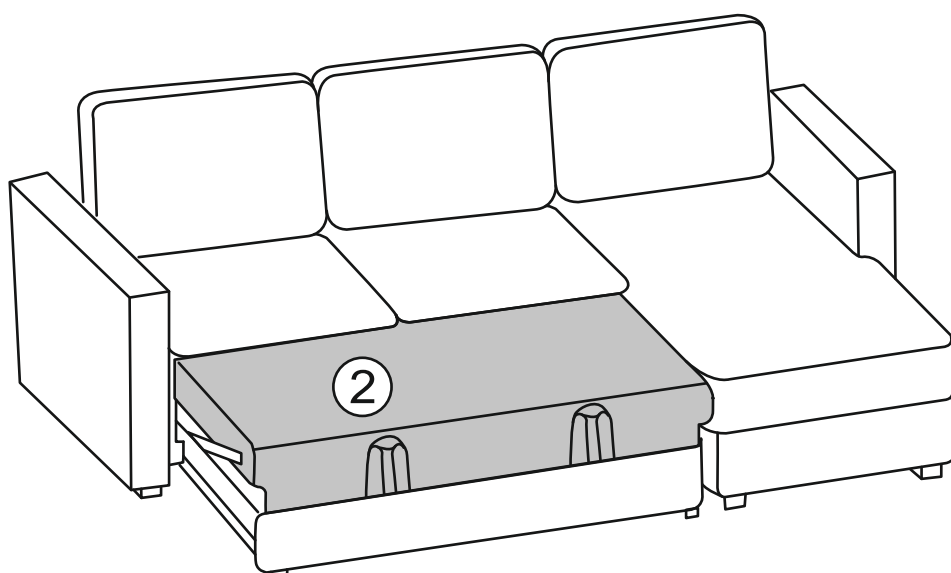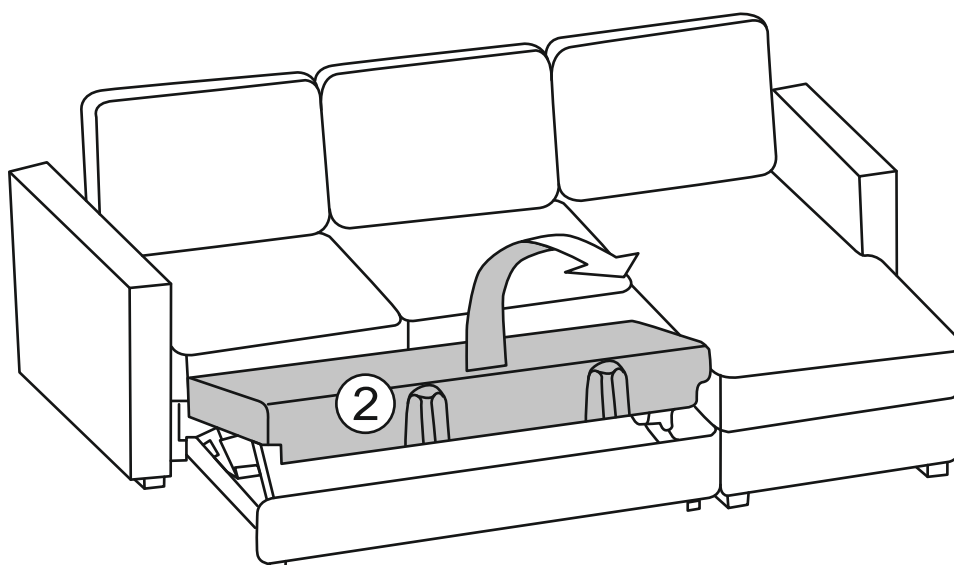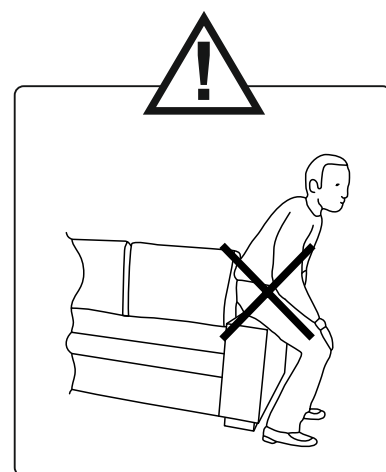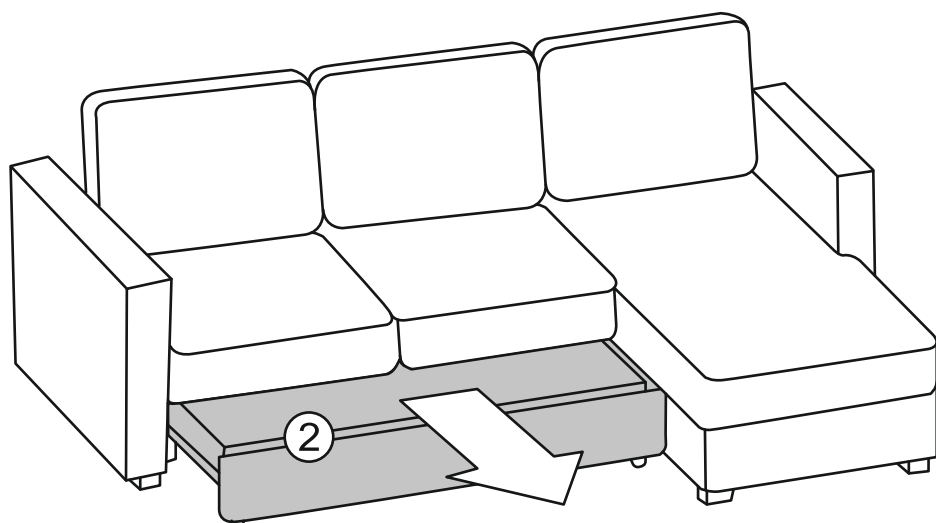

WARNING!

