
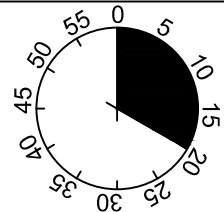
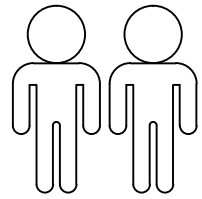





Florentina

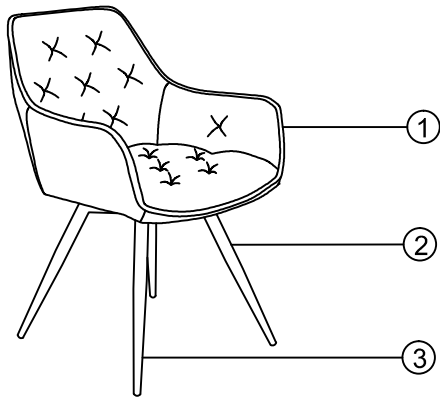


1

2

3

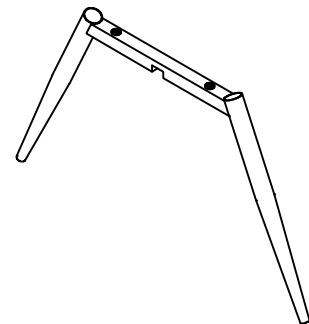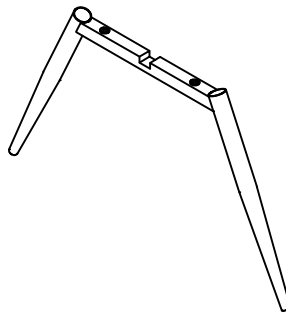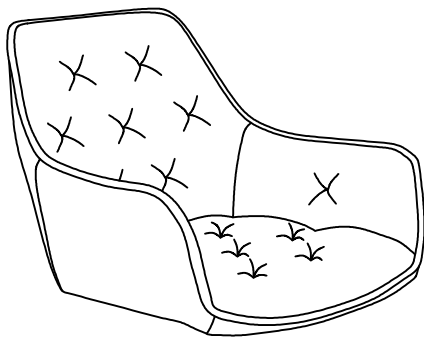


4

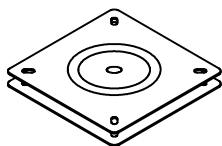


DT408 200x200mm

1	1 x
2	1 x
3	1 x
4	1 x




1/1

A	M6X20	B	M6x13	C	M6x30	D	Ø18xØ6x1.5	E	Ø18xØ8x10	F	4MM
	6x		4x		2x		8x		2x		1x
G	T2.0x90x90										
	1x										


I.

1

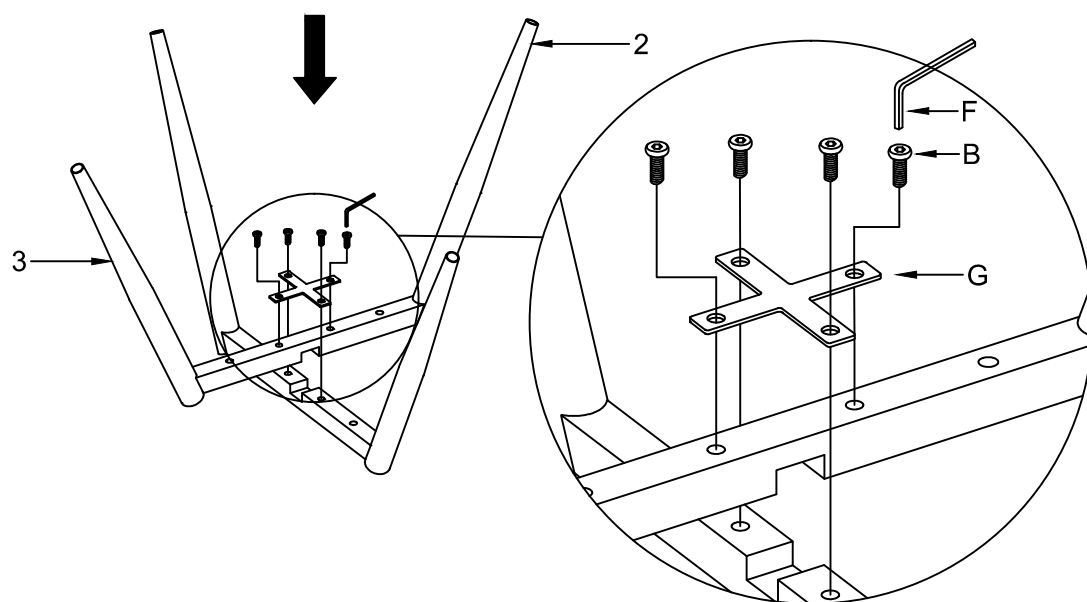

B	M6x13
	4x
F	4MM
	1x
G	T2.0x90x90
	1x
75%	


2


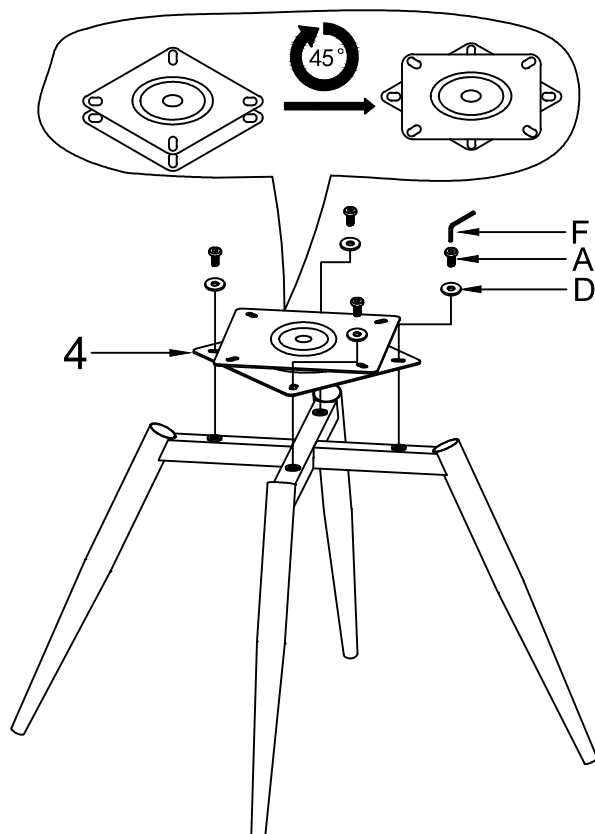


A	M6X20
	4x
D	Ø18xØ6x1.5
	4x
F	4MM
	1x
100%	


II.


3

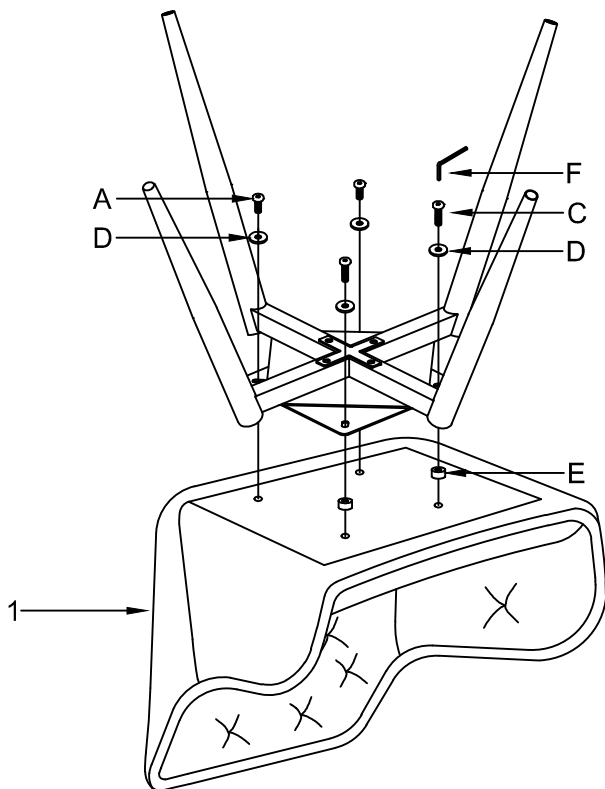

A	M6X20
	2x
C	M6X30
	2x
D	Ø18xØ6x1.5
	4x
E	Ø18xØ8x10
	2x
F	4MM
	1x
	

4

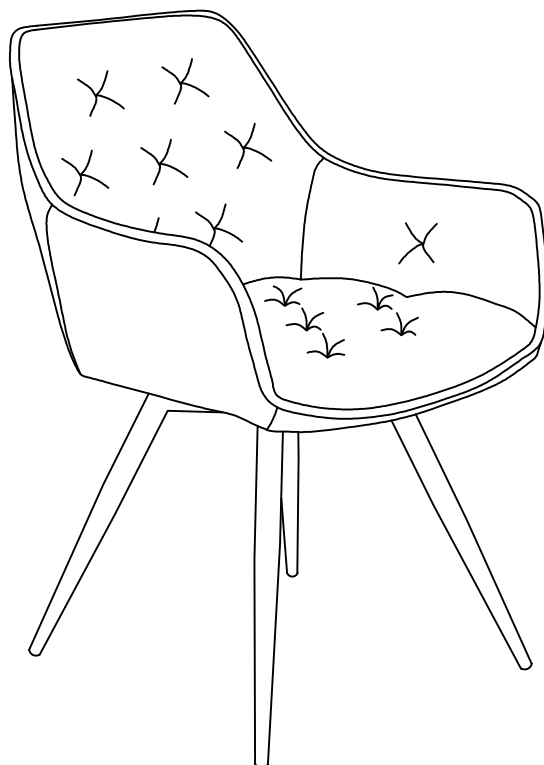

F	4MM
	1x
	



LE TRI
+ FACILE



Séparez les éléments avant de trier