
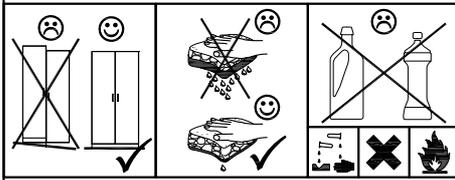


Montageanleitung Mailand 23 Garderobenhochschrank 3trg.

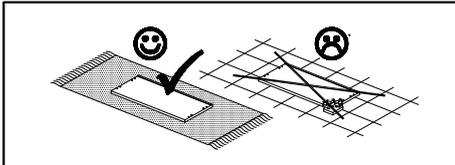

DE - Sicherheitsvorschriften

Beachten Sie bitte unbedingt die angegebenen Aufbauvorschriften.

EN - Caution




Follow carefully the assembling instructions described in the directions.

FR - Sécurité

Respecter les instructions de montage décrites dans la notice.


NL - Veiligheid


De in de Gebruiksaanwijzing beschreven Instructies respecteren.

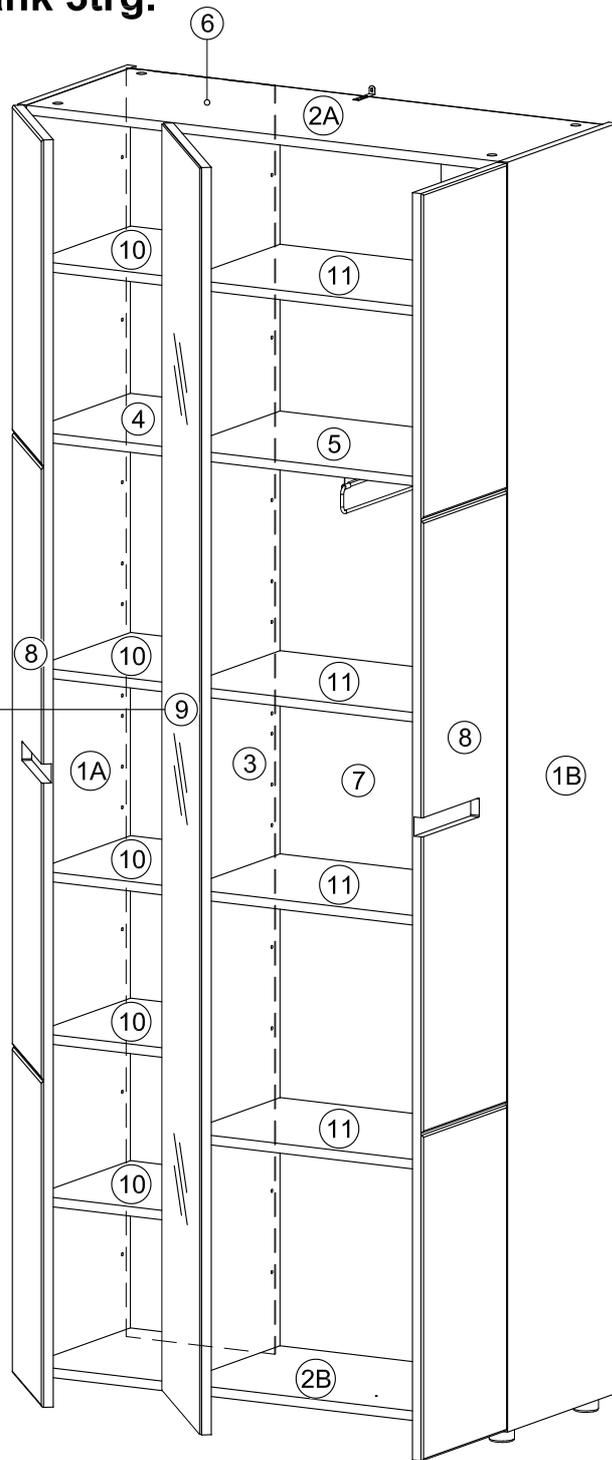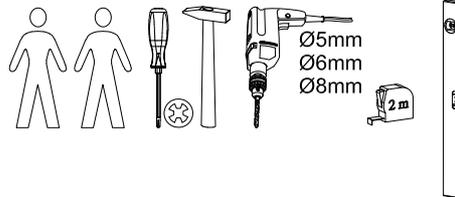





**Achtung
Spiegeltür!**



20x EX	16x ADK-EX
16x VB	4x VBM
12x KP0-26	2x HUE
12x TB26-0	3,5x13 24x SP1
8x30 8x RD8x40	4x15 6x RWS15
6x SB	20x NA
1x WBF	4,0x15 4x PH1
36x BT	1x GOH
5x KG	4x30 5x SP5

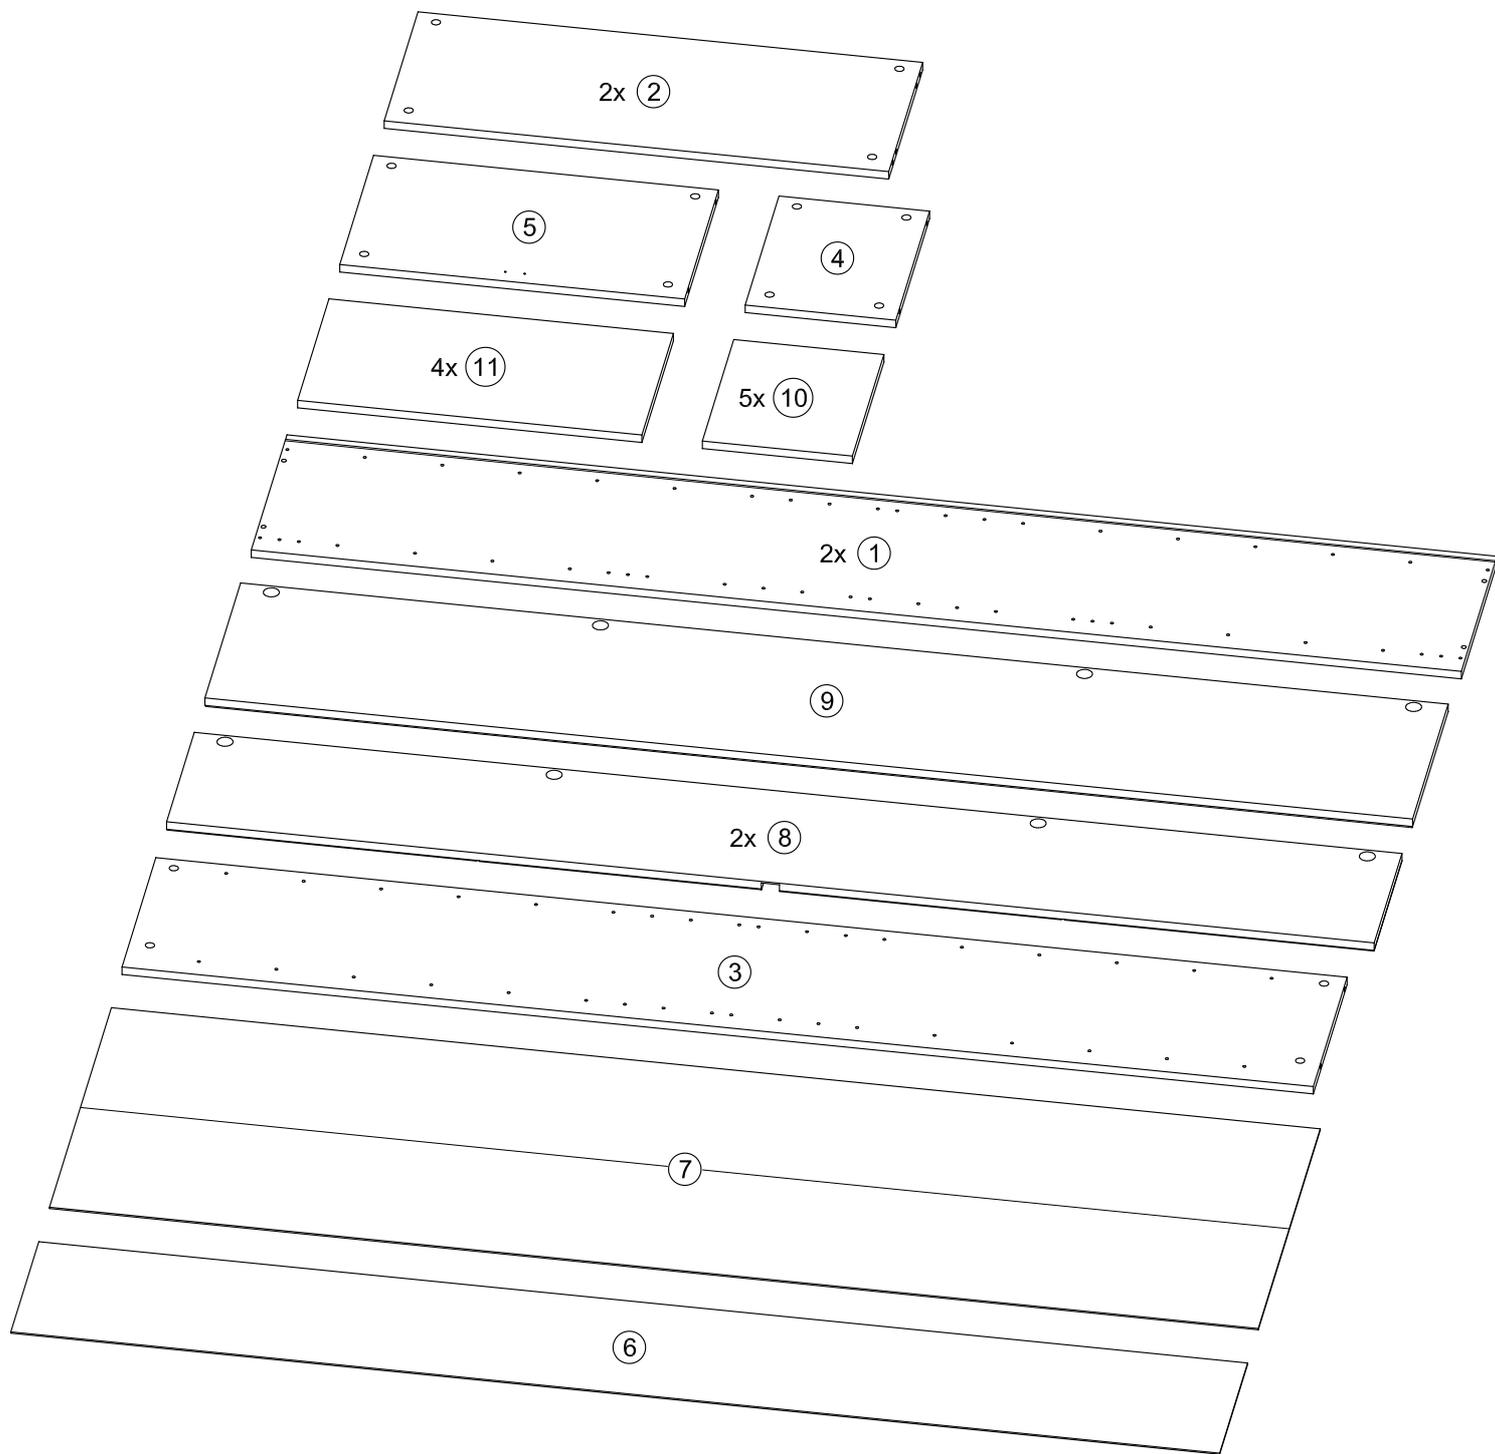

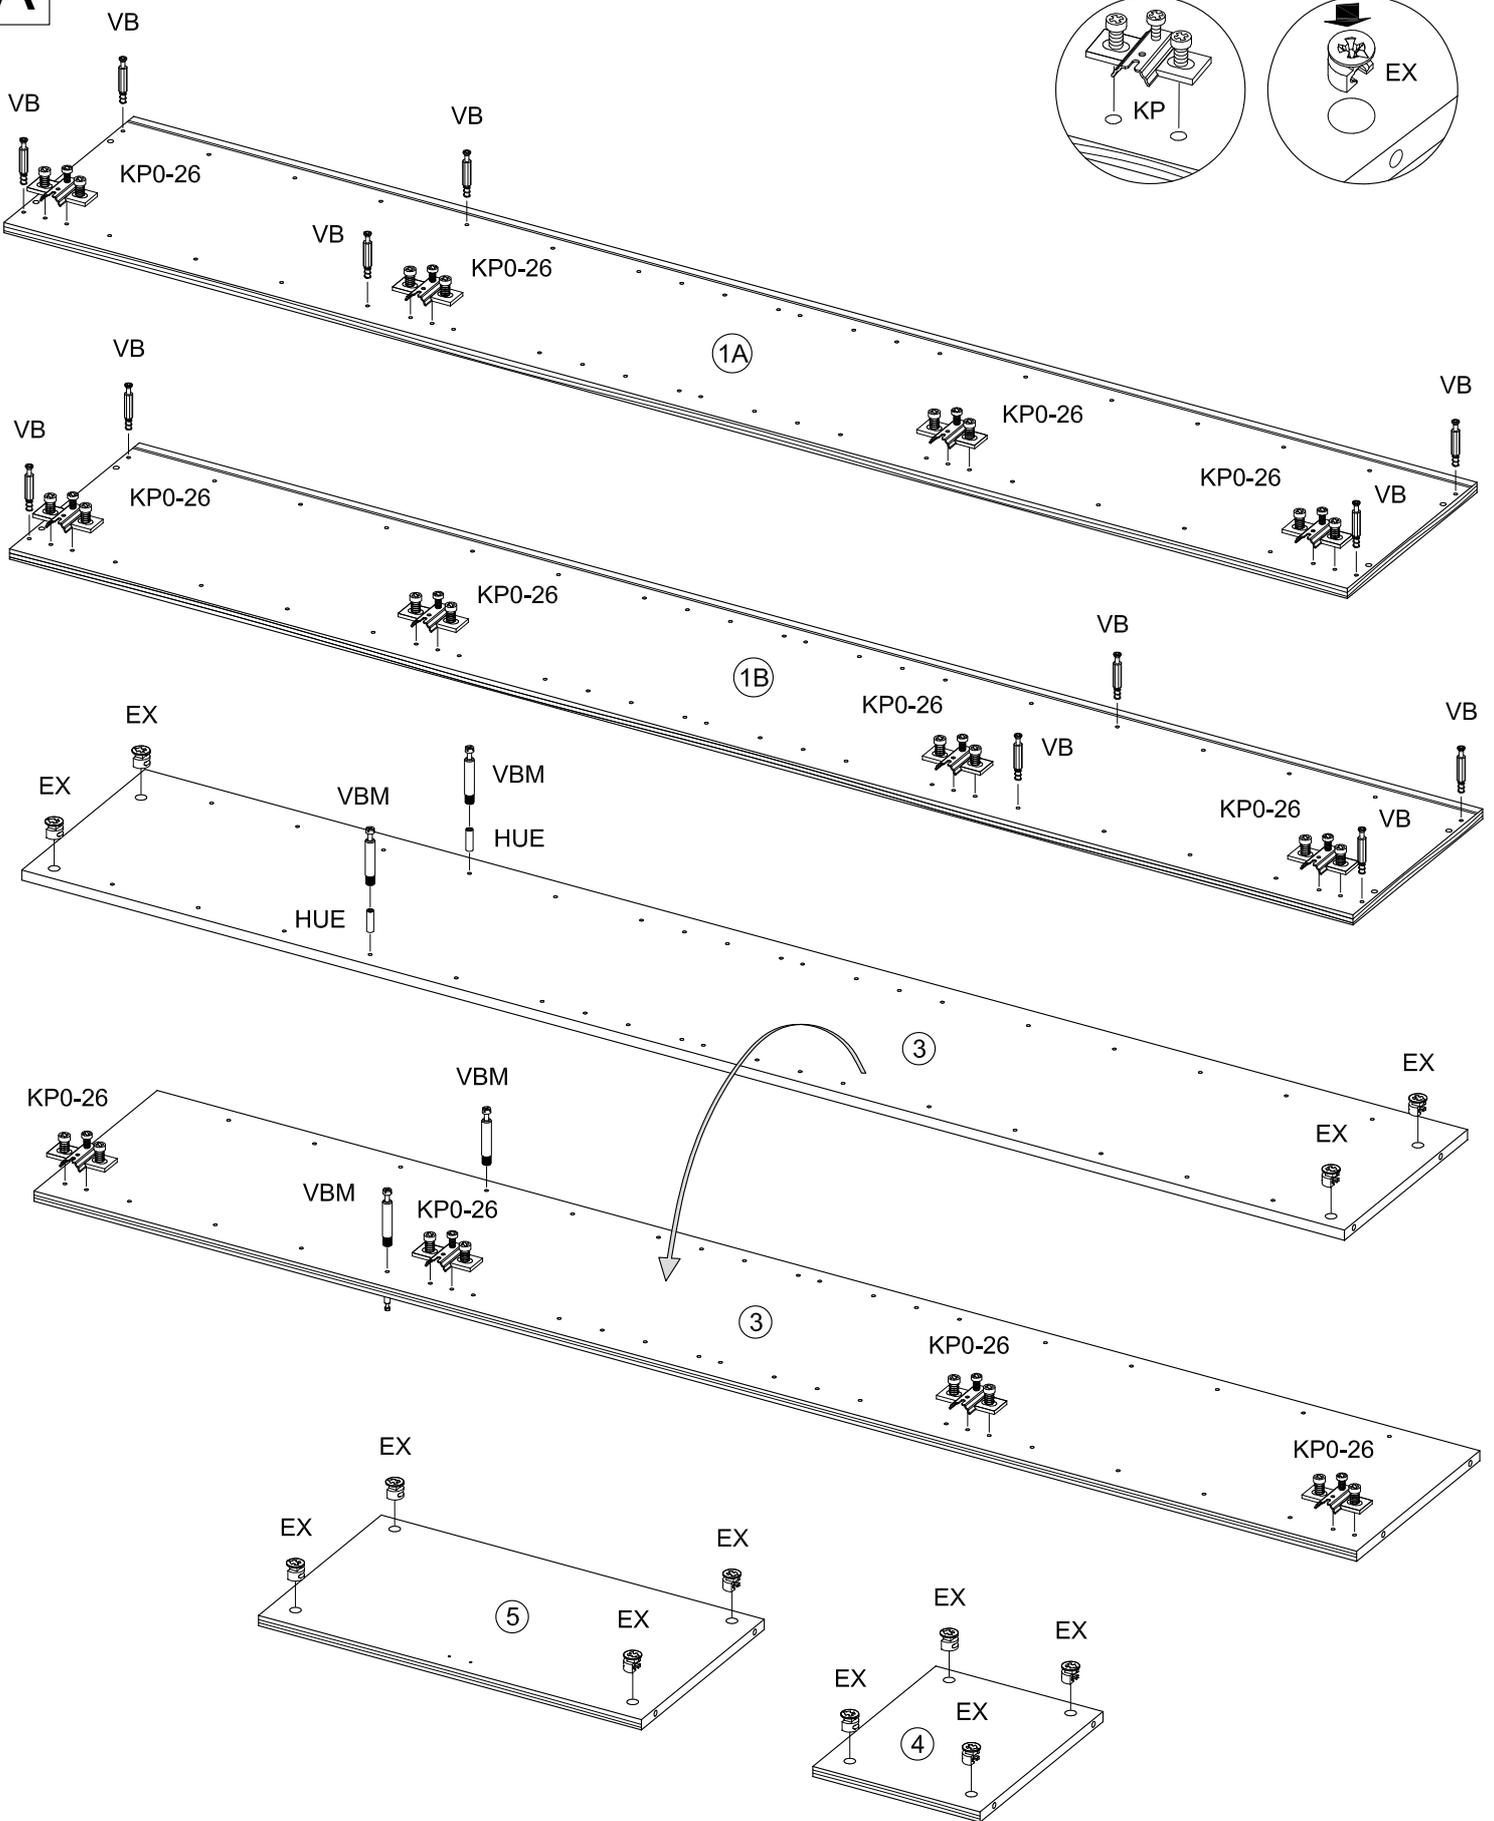
A

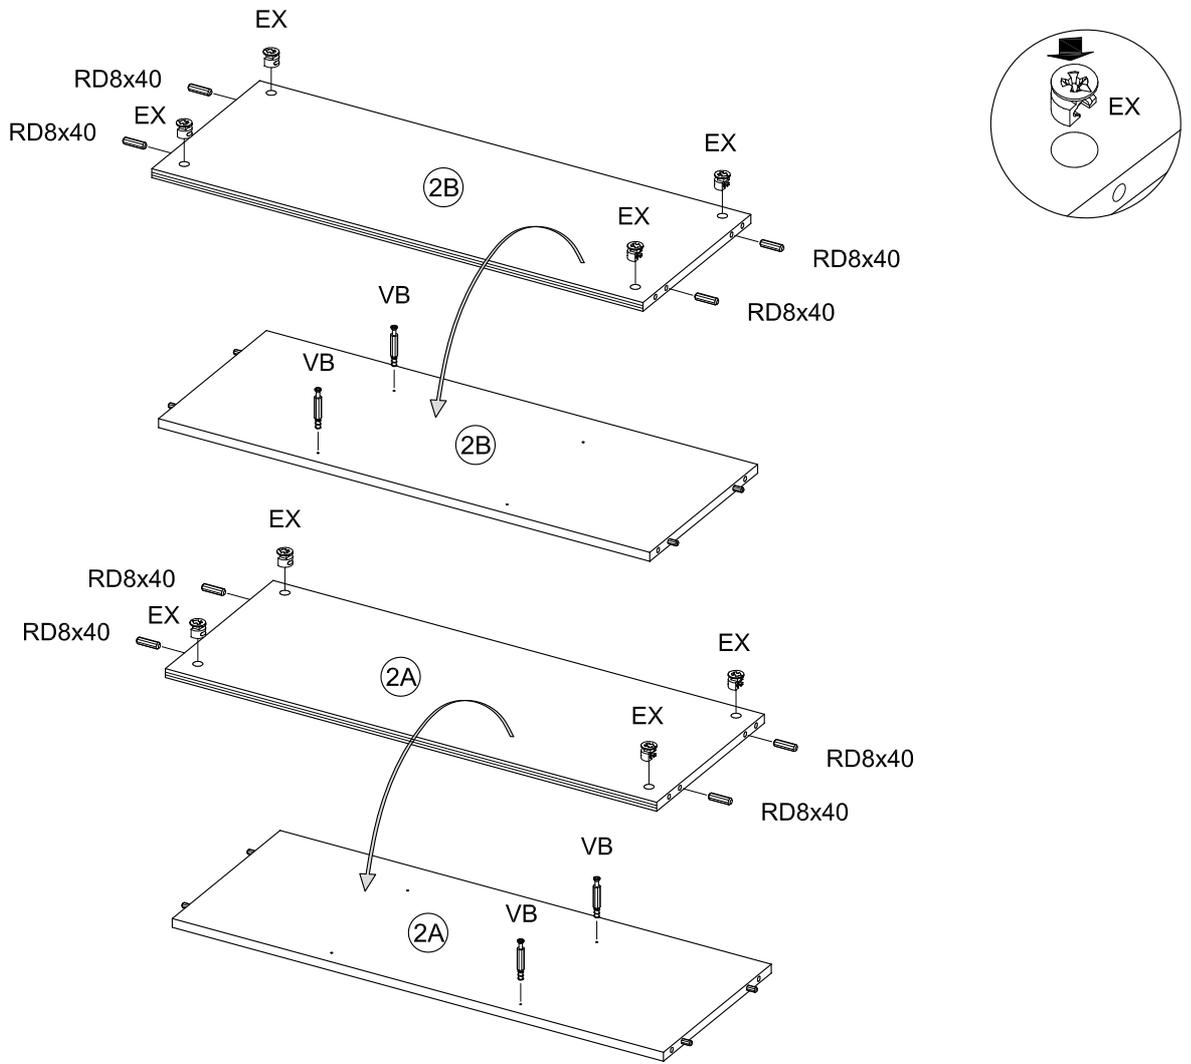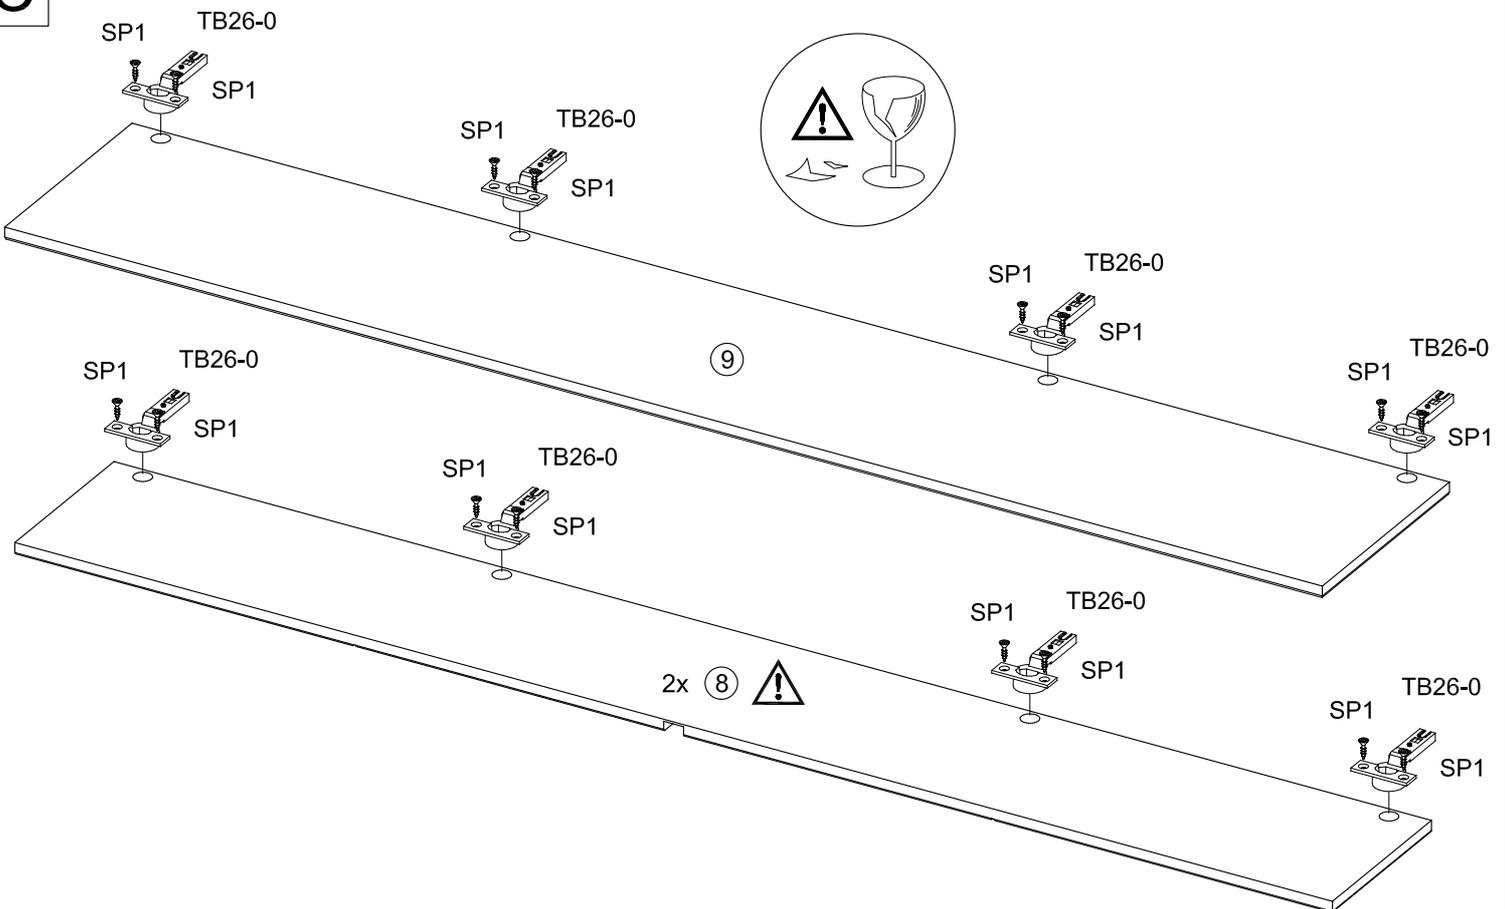B**C**

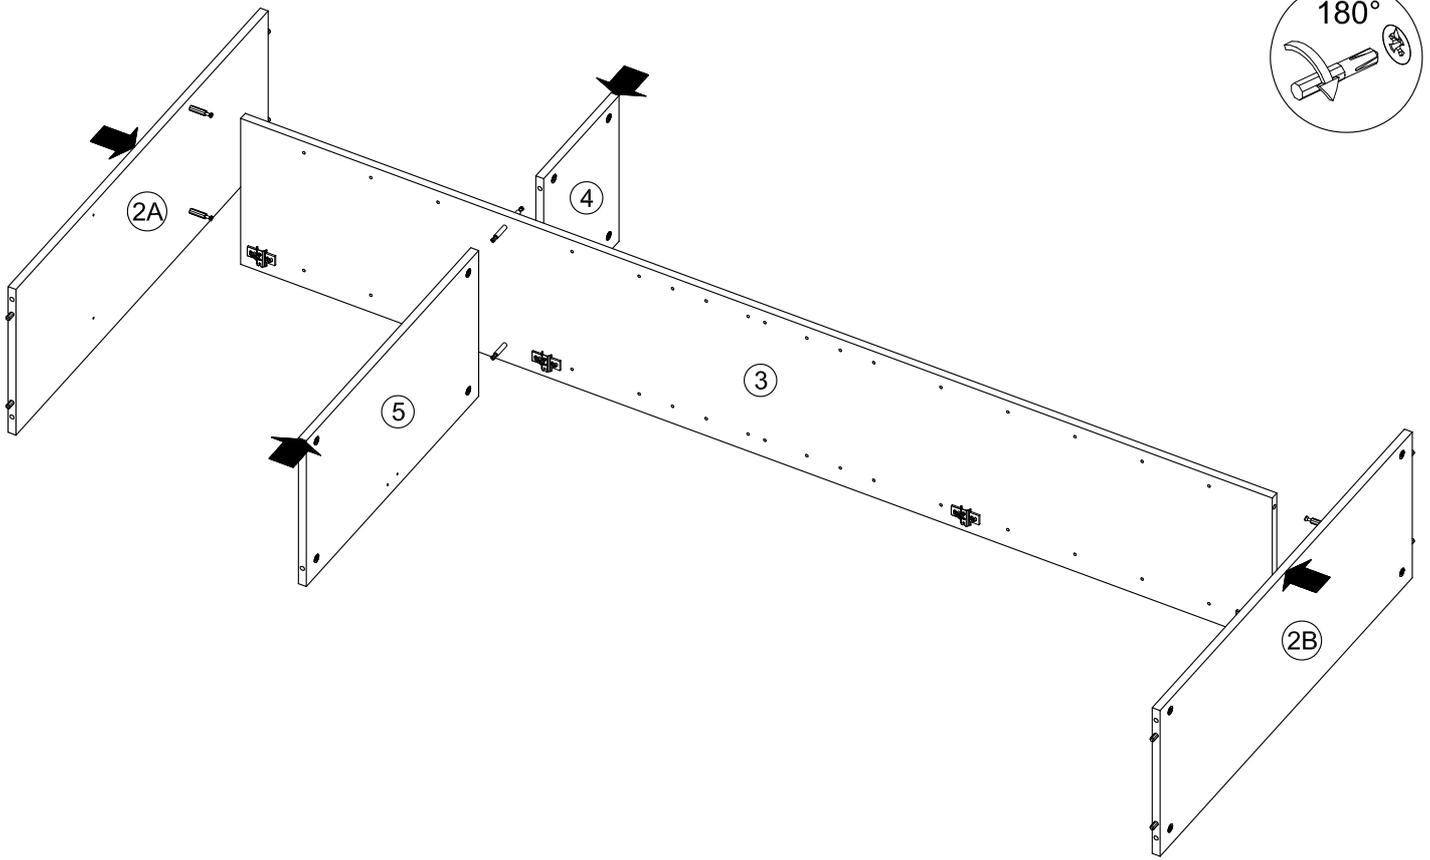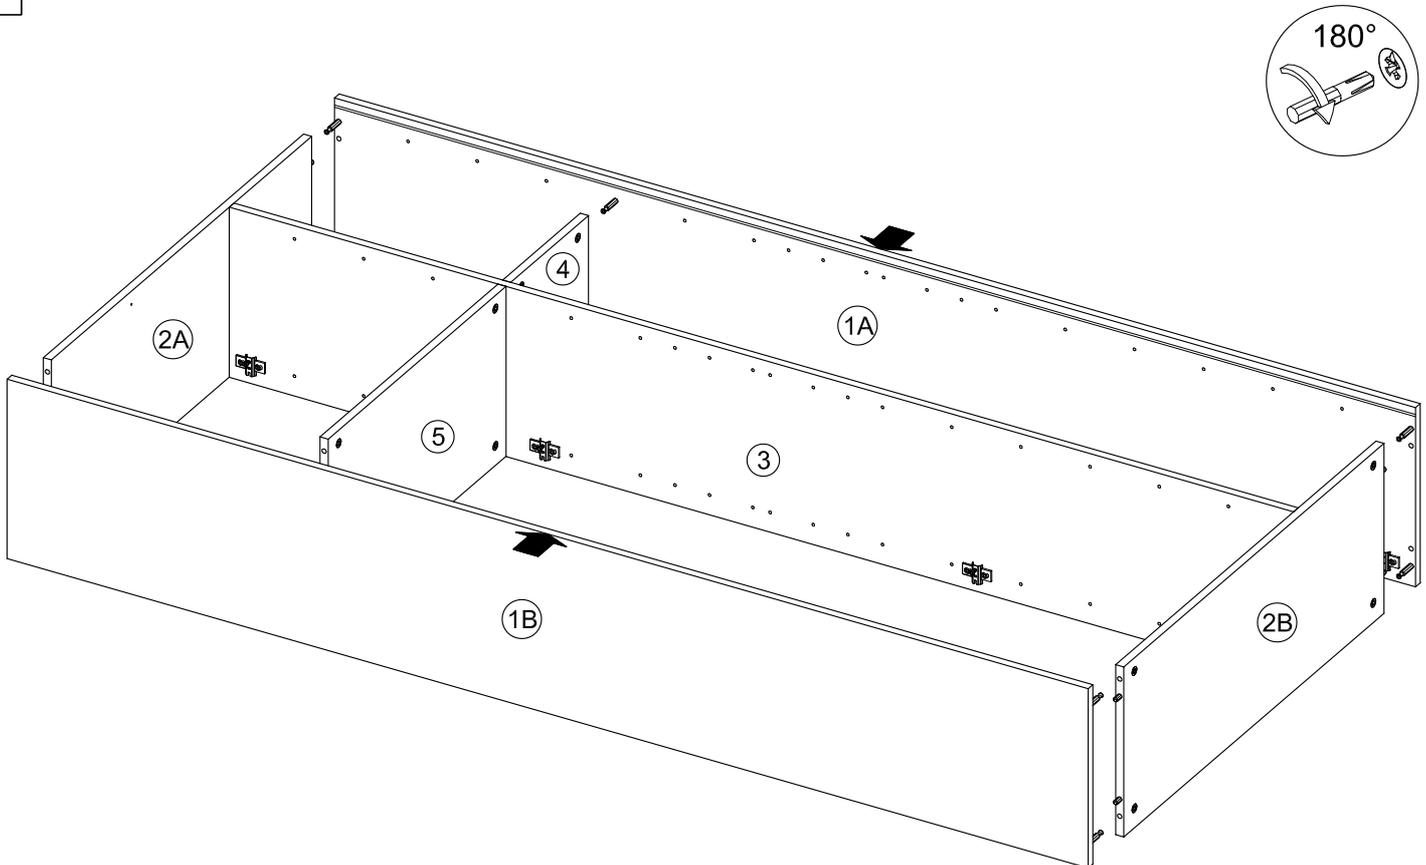
D**E**

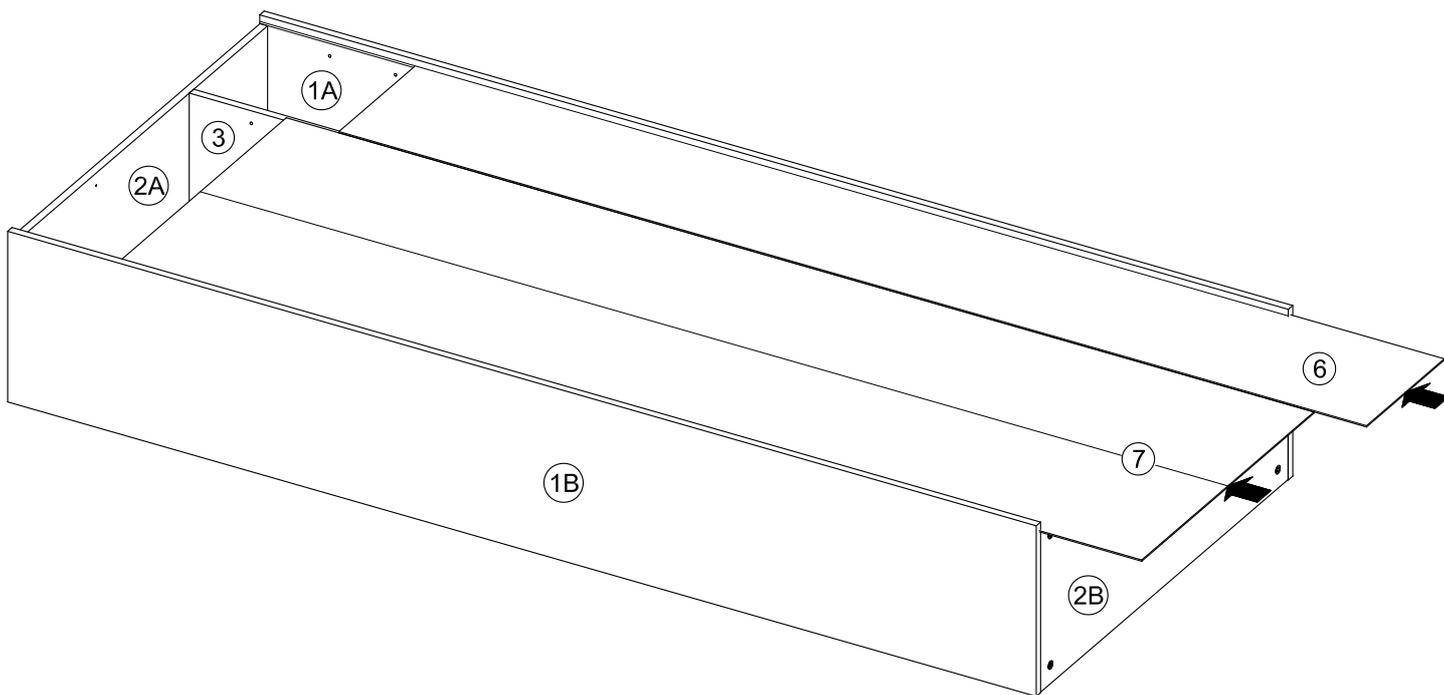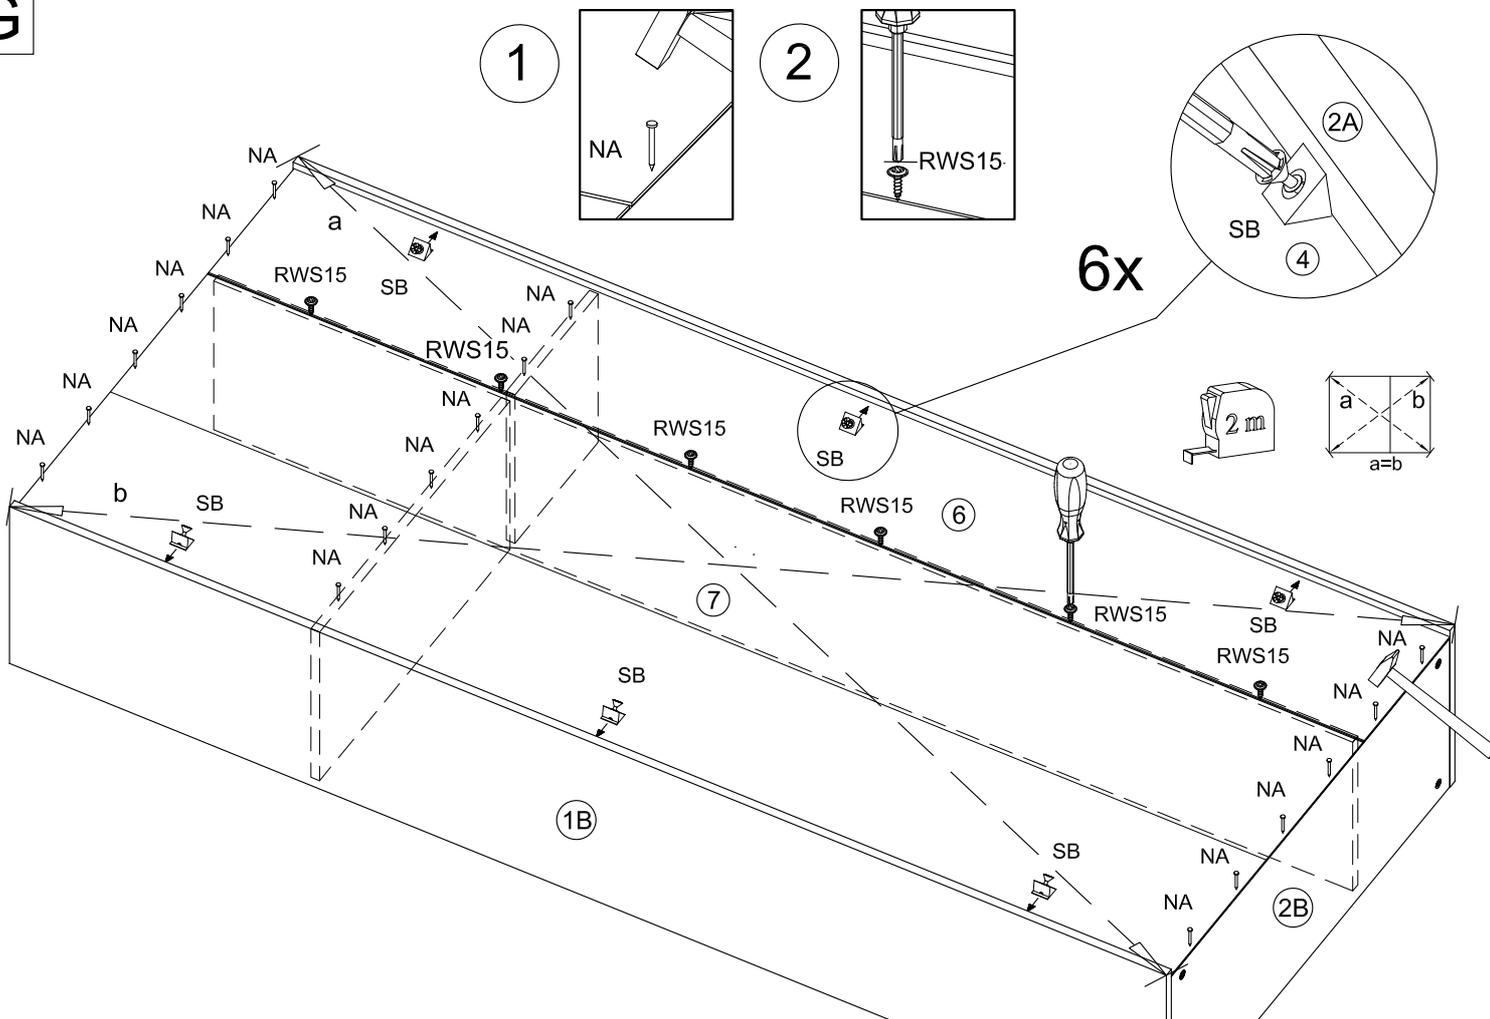F**G**

H

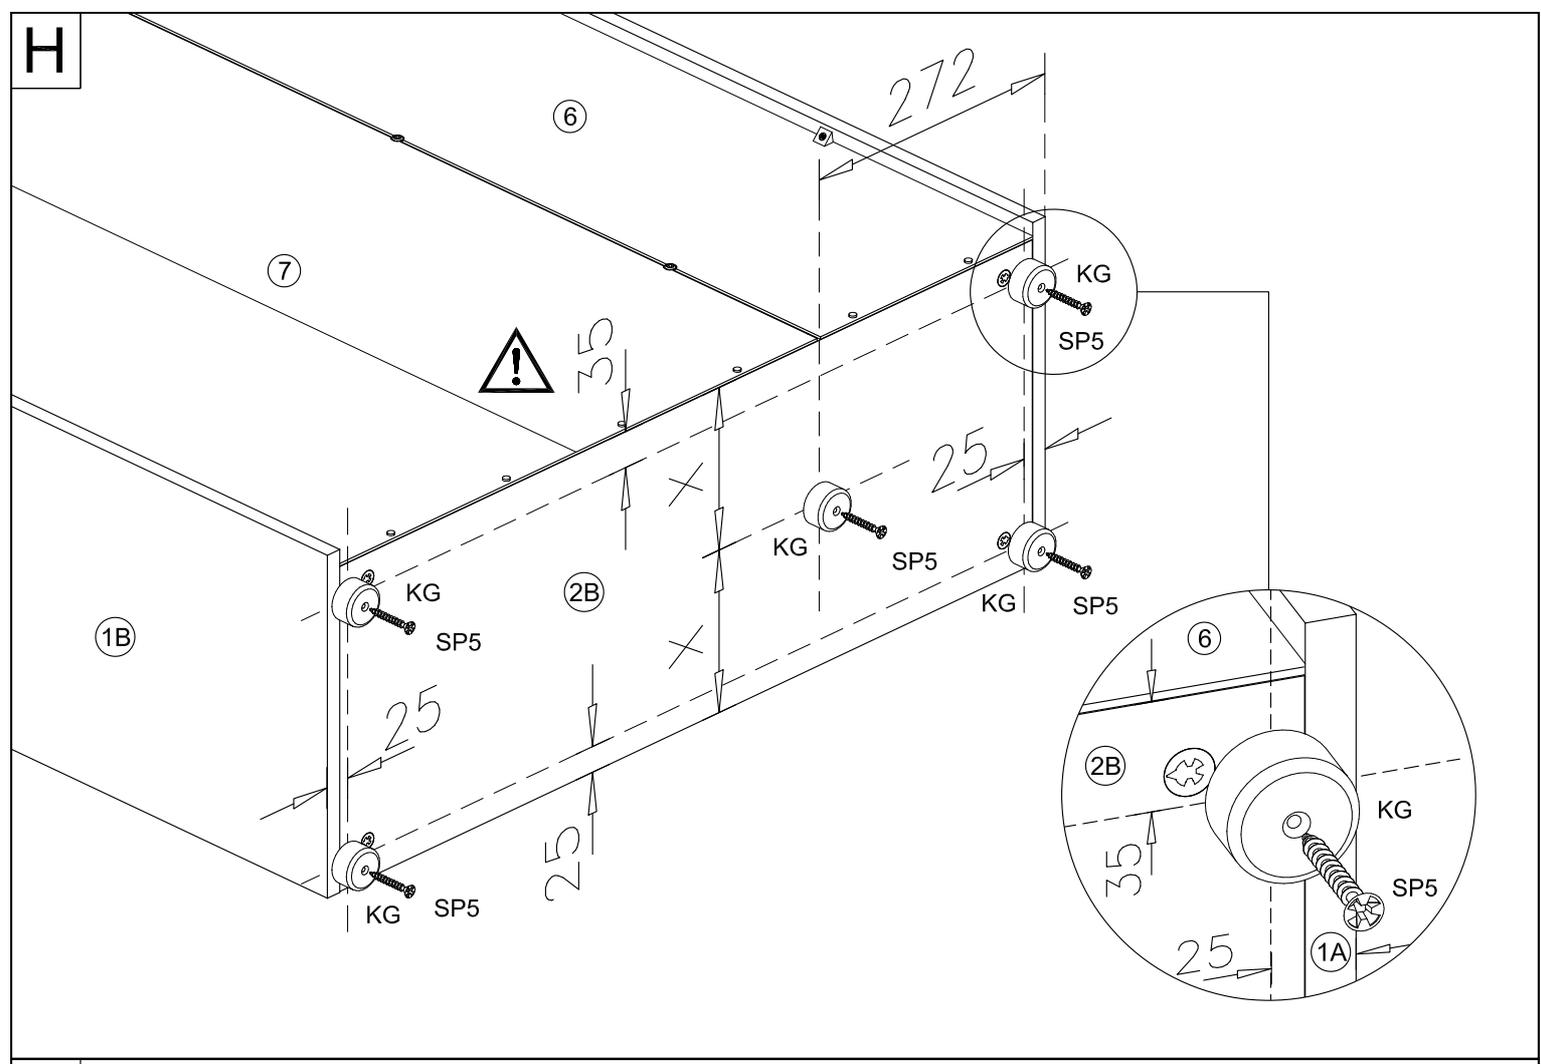

I

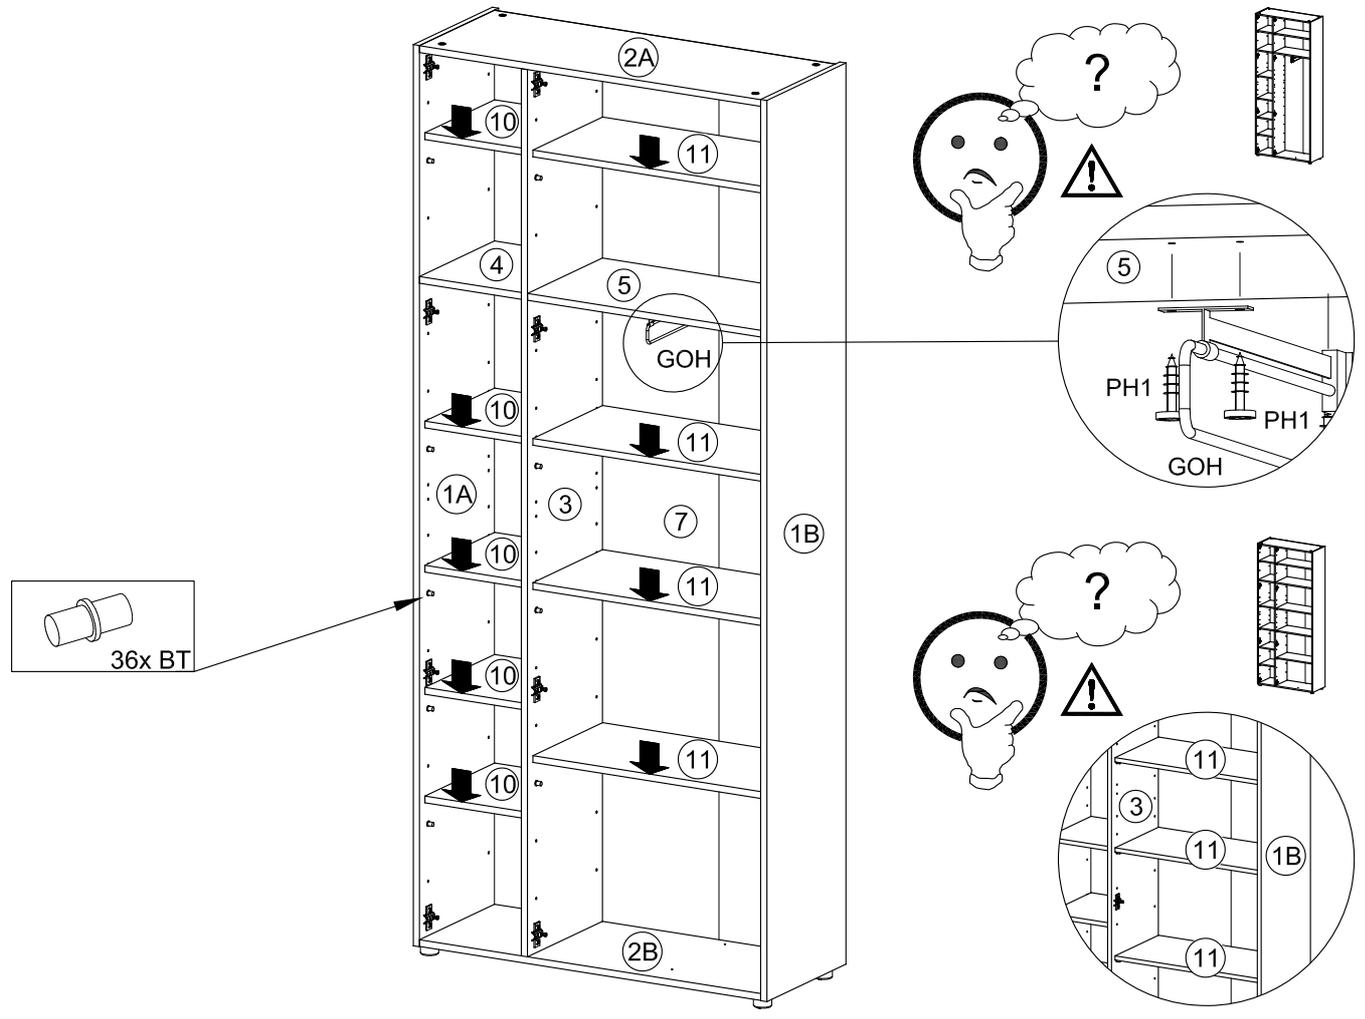

J



Befestigungsmaterial für die Kippsicherung ist der Wandeigenschaft anzupassen!

