


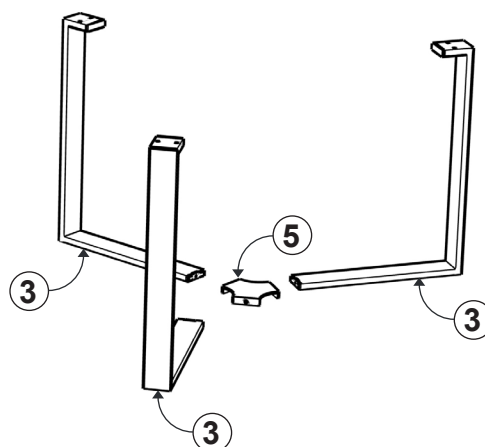
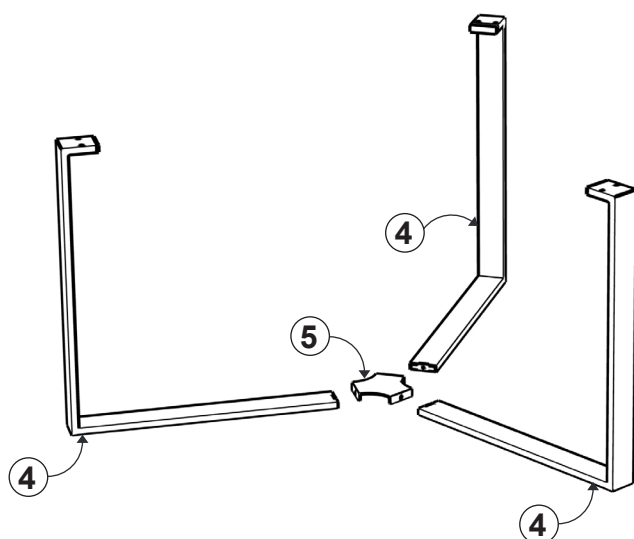
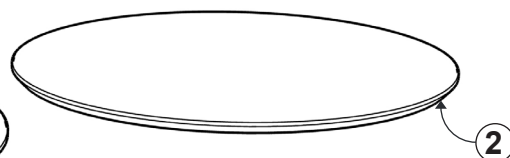
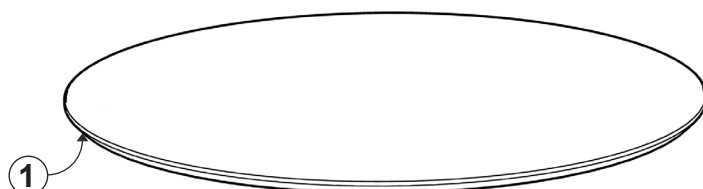
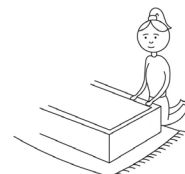
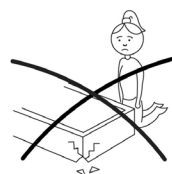
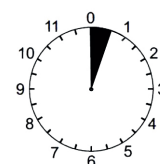


Massa CT

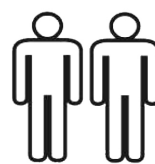


1 / 1	1	x1	Ø80x18
1 / 1	2	x1	Ø60x18
1 / 1	3	x3	382x238x40
1 / 1	4	x3	432x338x40
1 / 1	5	x2	80x80x13

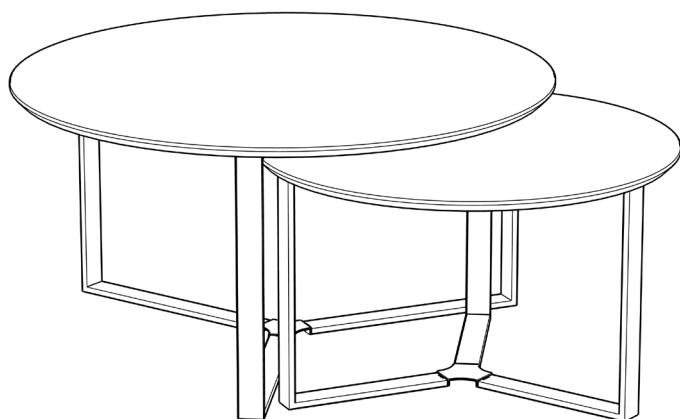

A


M6x16



x6

B


M6x20



x12

C

Ø16x6



x12





D



SW4






x1

I.




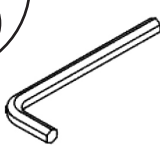
A  M6x16 x3	B  M6x20 x6	C  Ø16x6 x6	D  SW4 x1
--	--	---	--

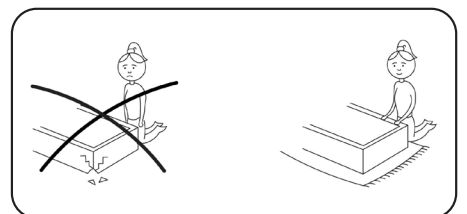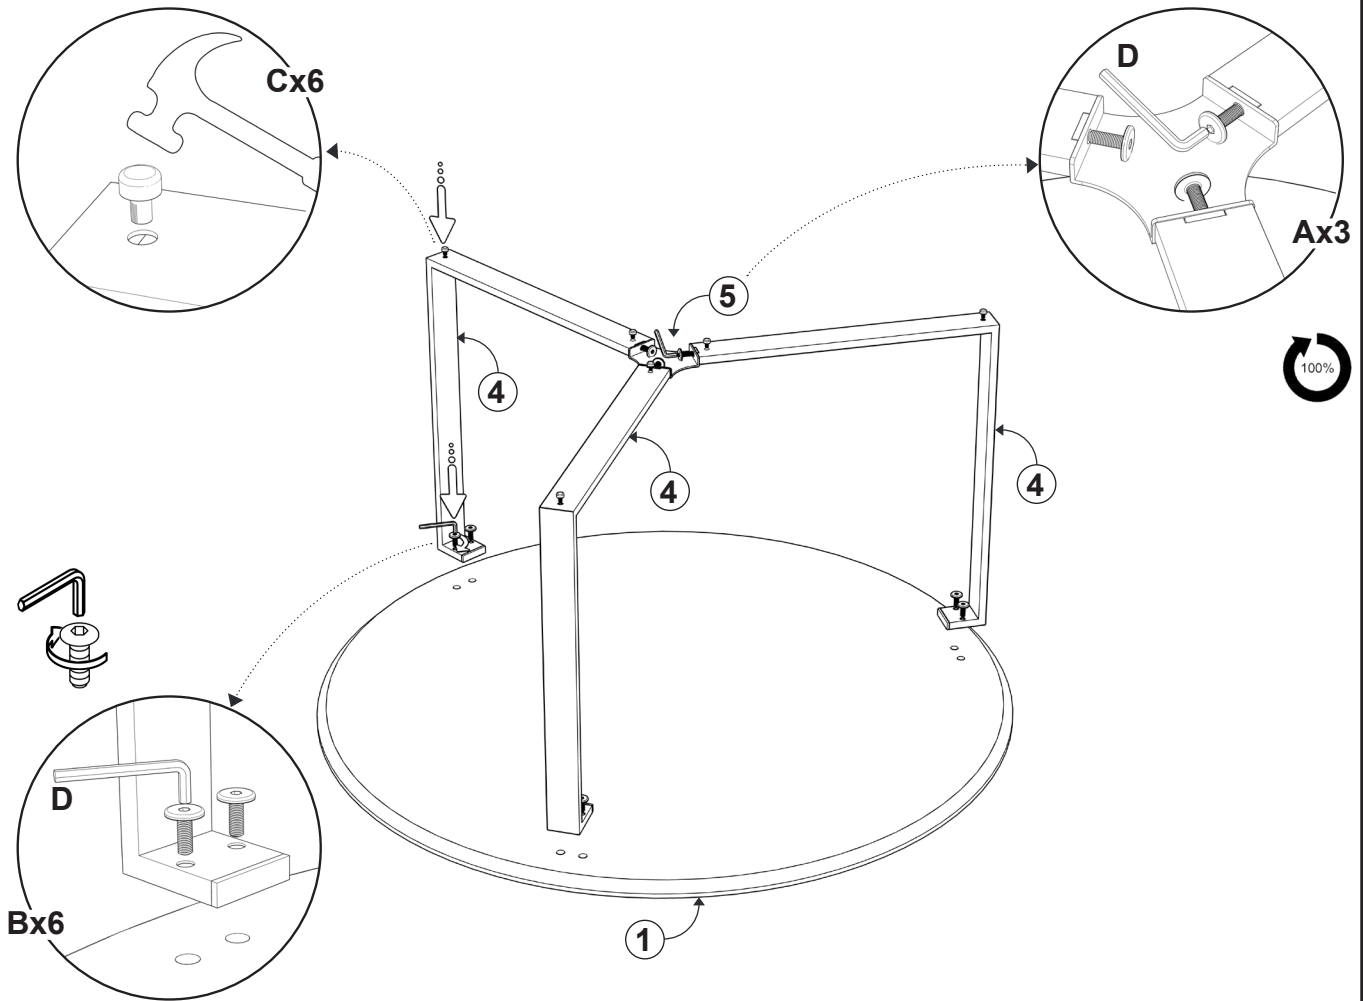

II.

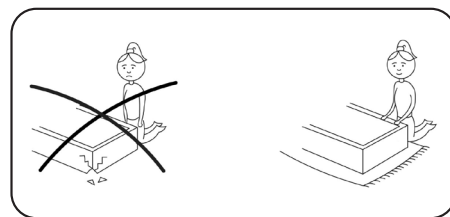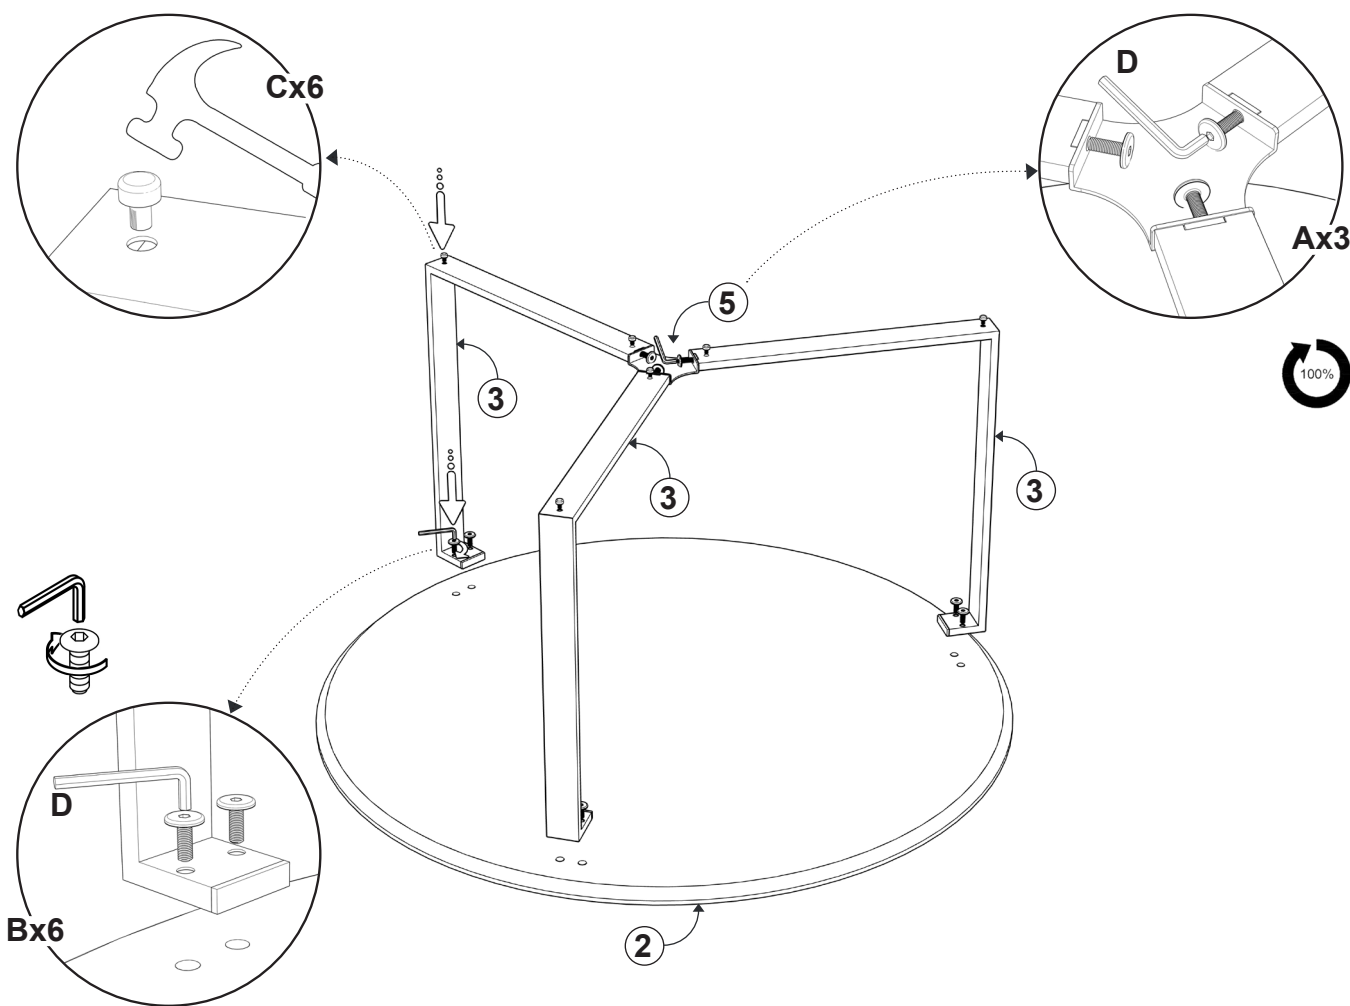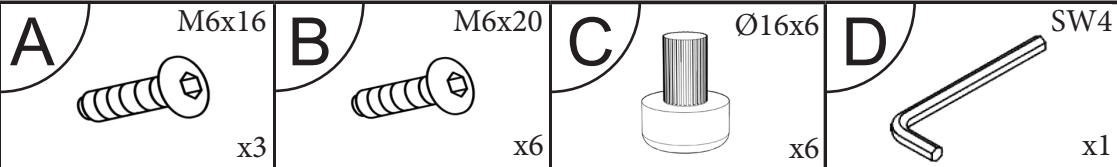

III.

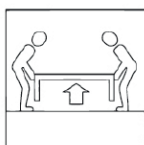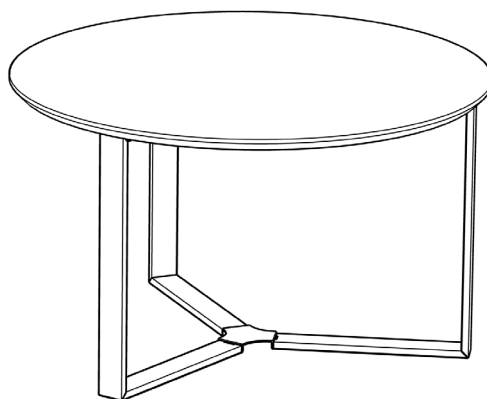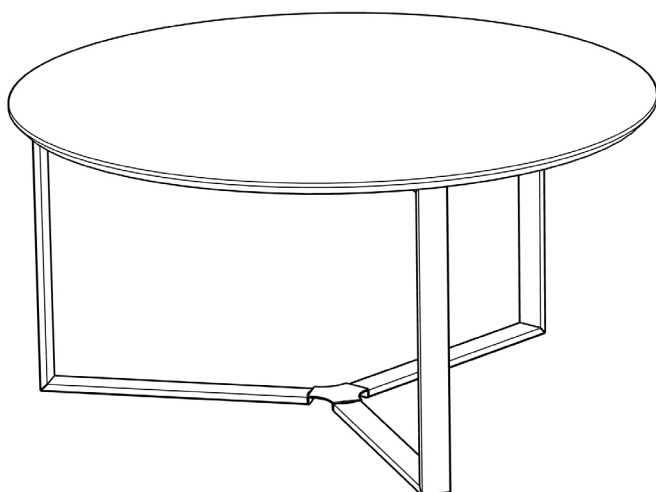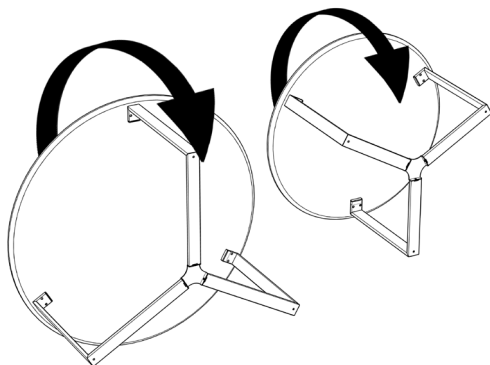

**LE TRI
+ FACILE**



Séparez les éléments avant de tri