
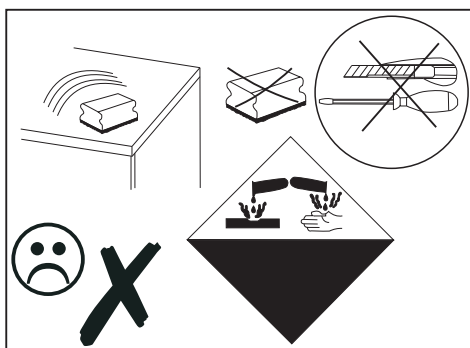
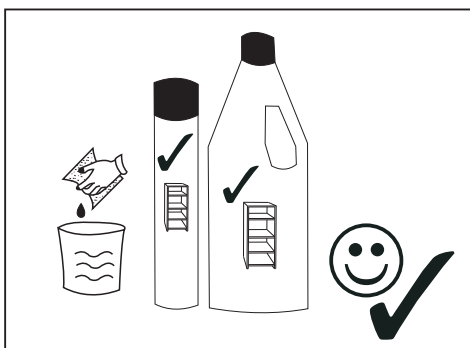
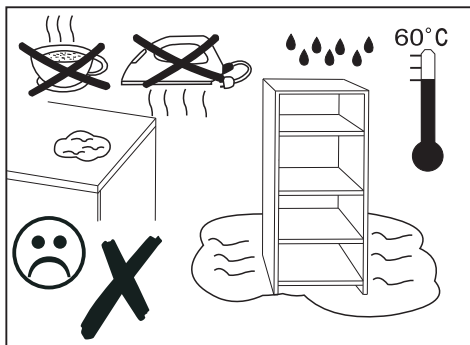
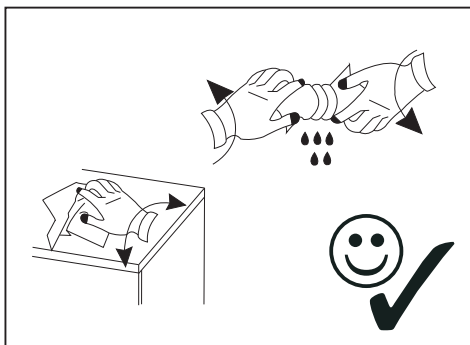
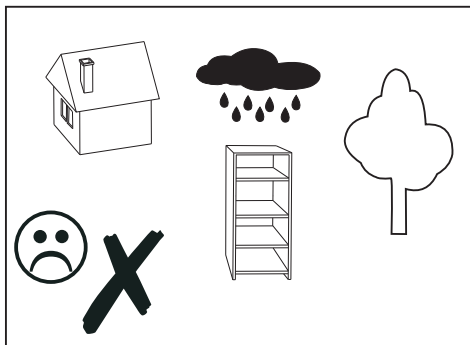


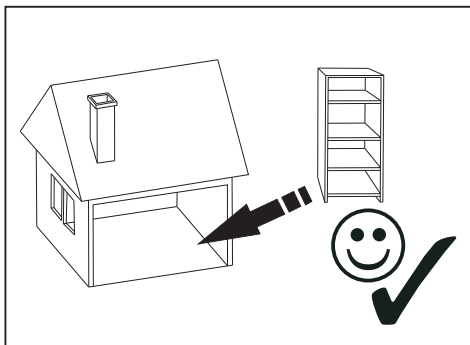



VCM.
my home


service@vcm-gruppe.de



Aufbauanleitung

Artikel: **VCM Unterschrank Flandu II**

Serv. Ref. #031



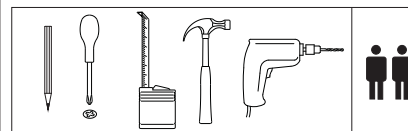
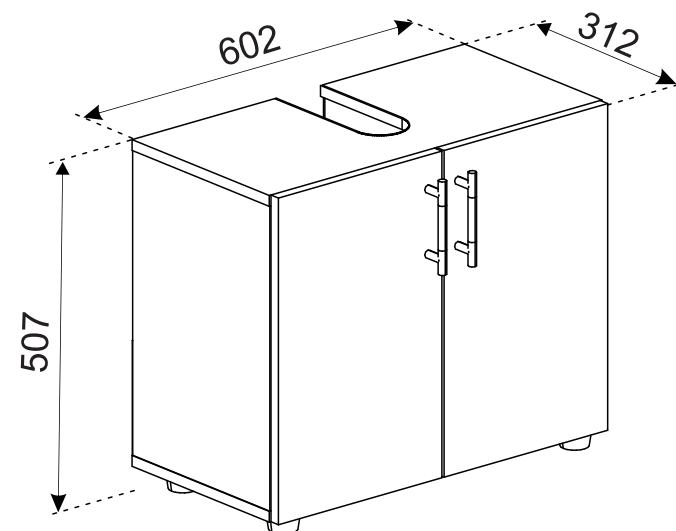





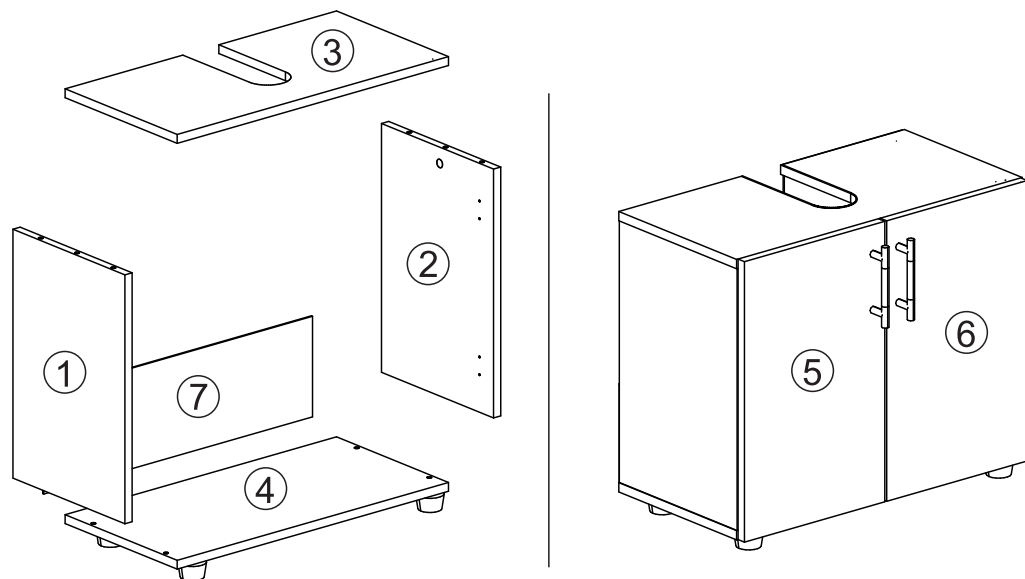








25x  A	4x  B	4x  C ø 8x30 mm
2x  D1	4x  N3 ø 4x35 mm	1x  E L-490mm
2x  F1 5x30 mm	2x  F2 16 mm	2x  F3
4x  G1 ø 6,4x50 mm	4x  G2	1x  G3
4x  H1	7x  H2 ø 3,5x25mm	19x  I ø 3.5x16 mm
1x  J	4x  U	1x  E8

No	a*b	x
1	450 x 296	1
2	450 x 296	1
3	602 x 296	1
4	602 x 296	1
5	482 x 296	1
6	482 x 296	1
7	596 x 184	1




VCM Unterschrank Flandu II




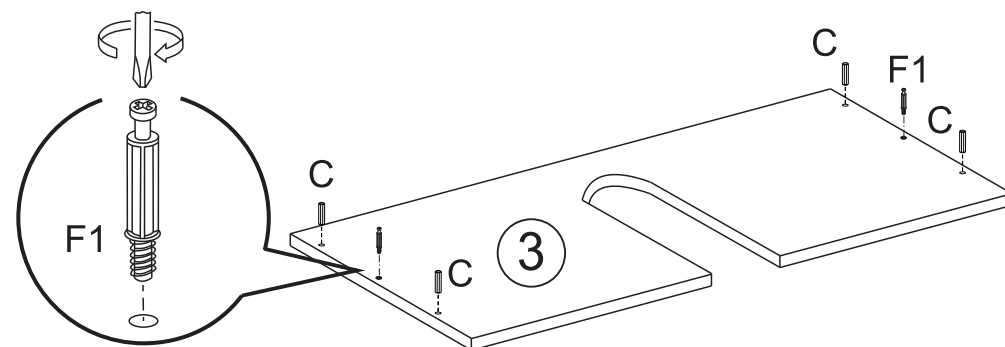

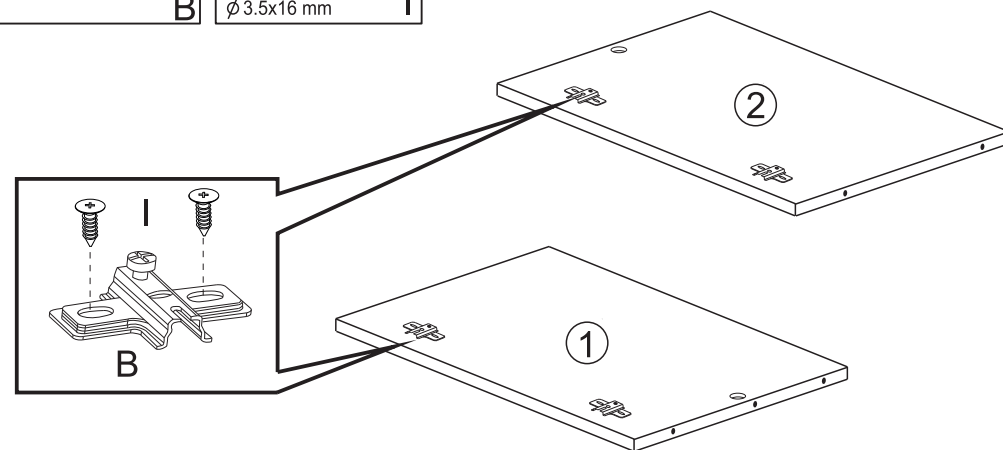



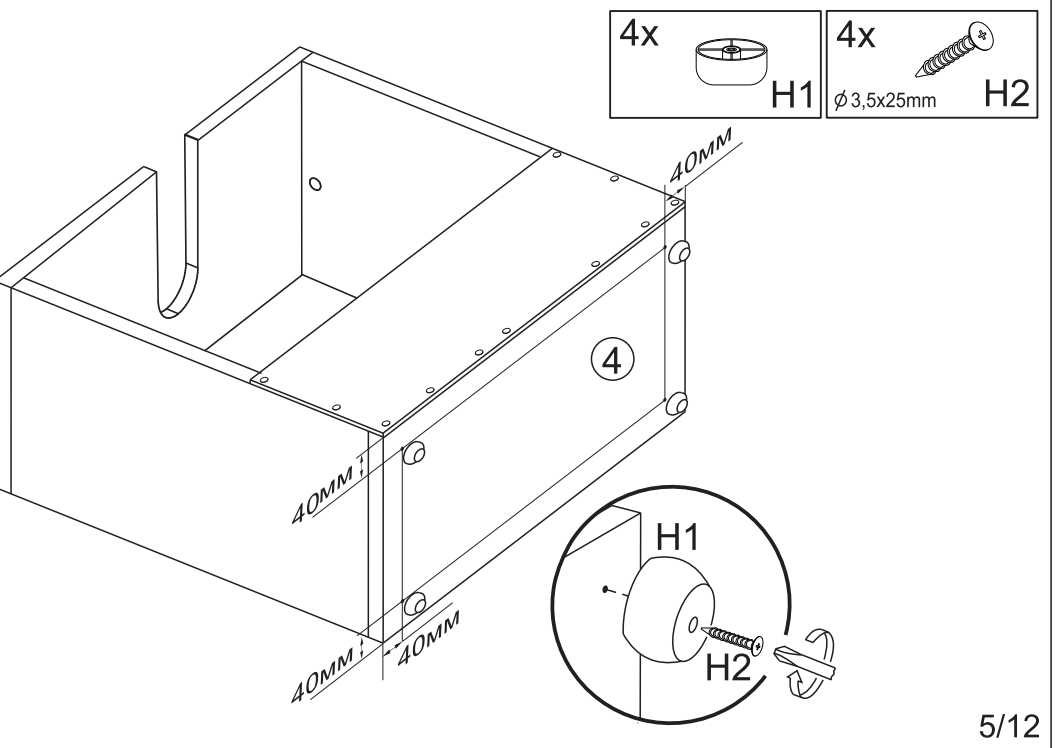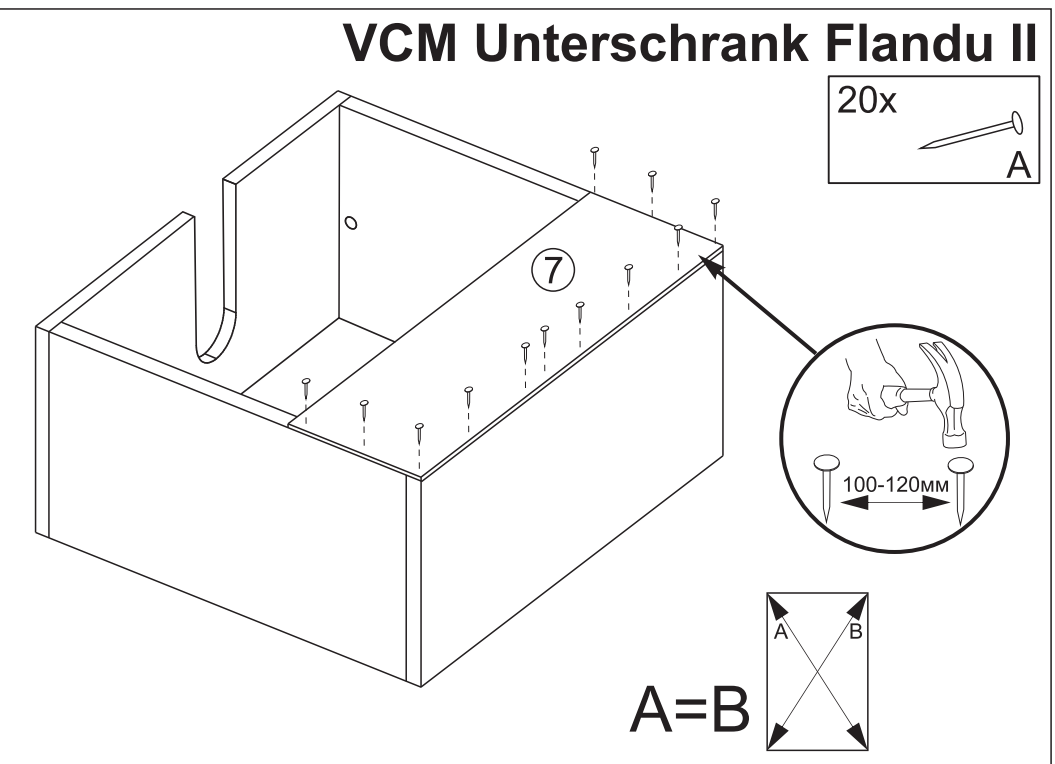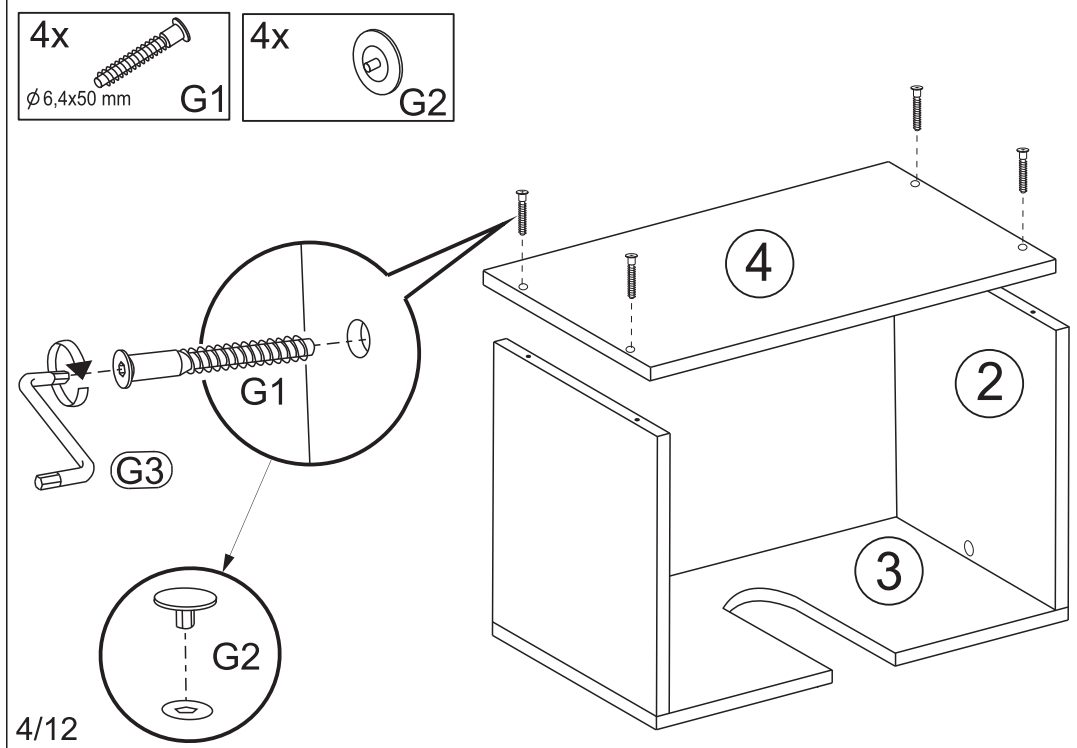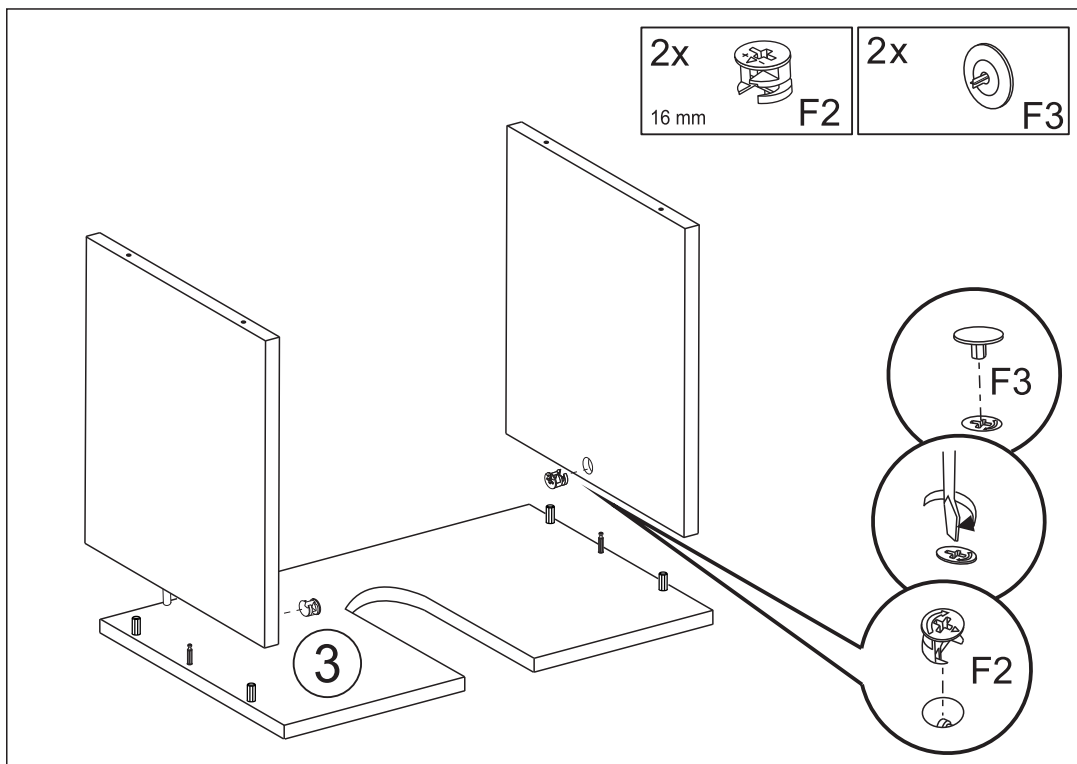


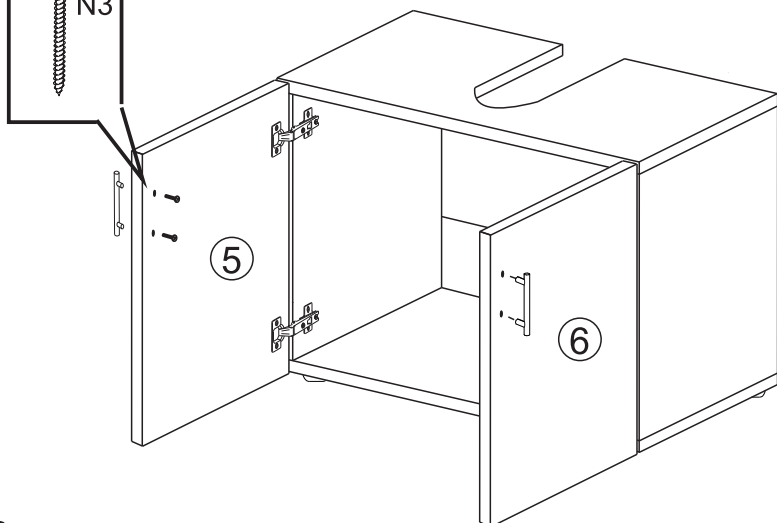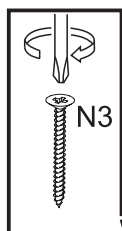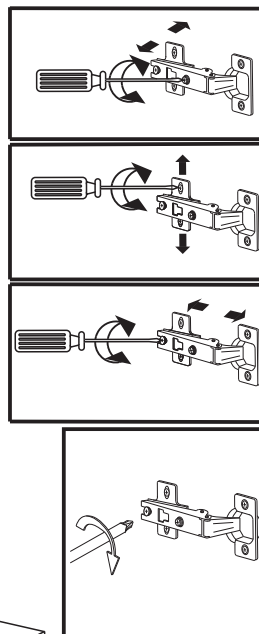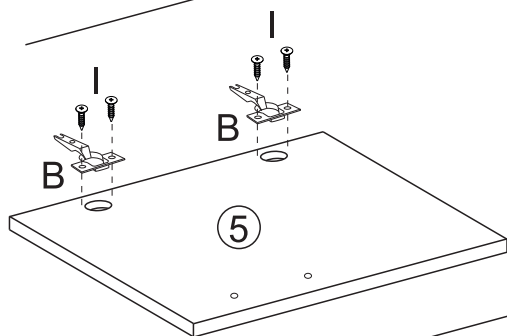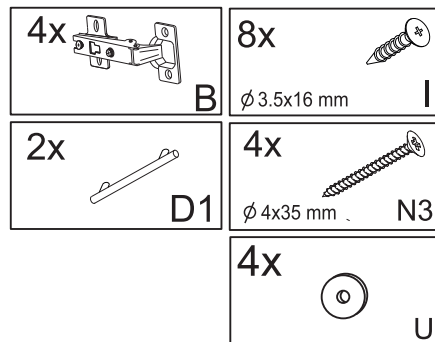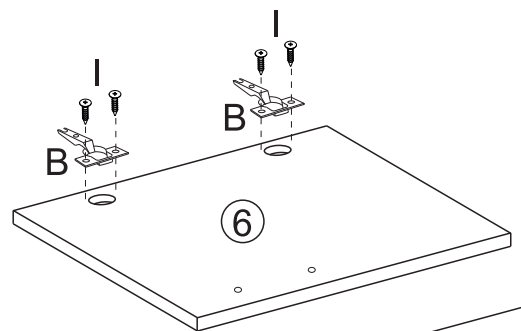

VCM Unterschrank Flandu II

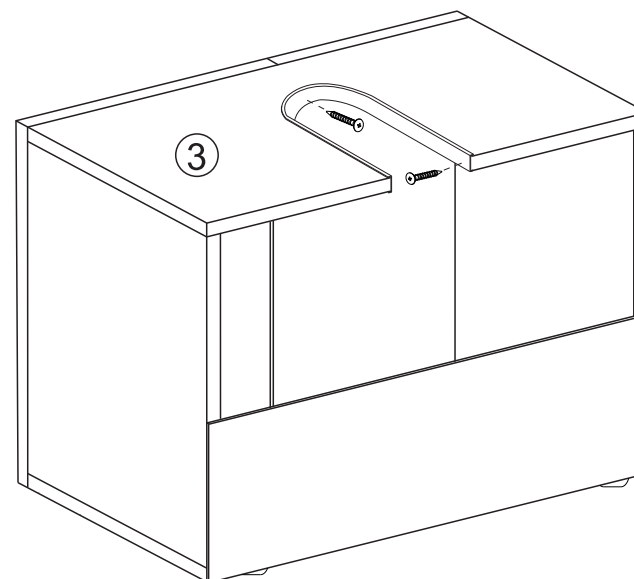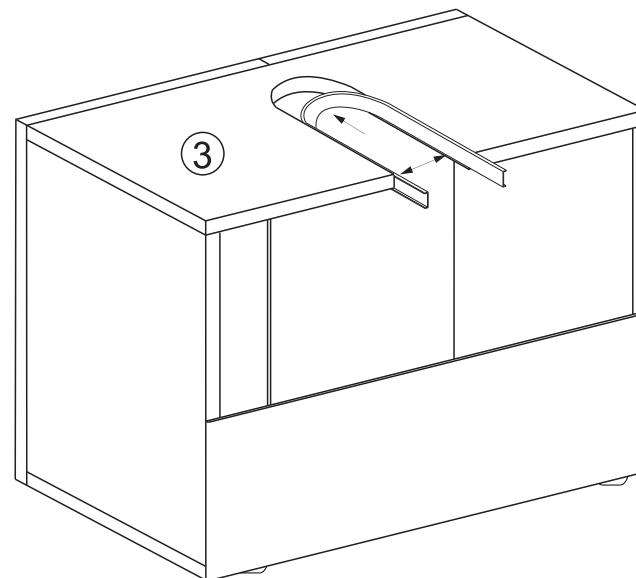

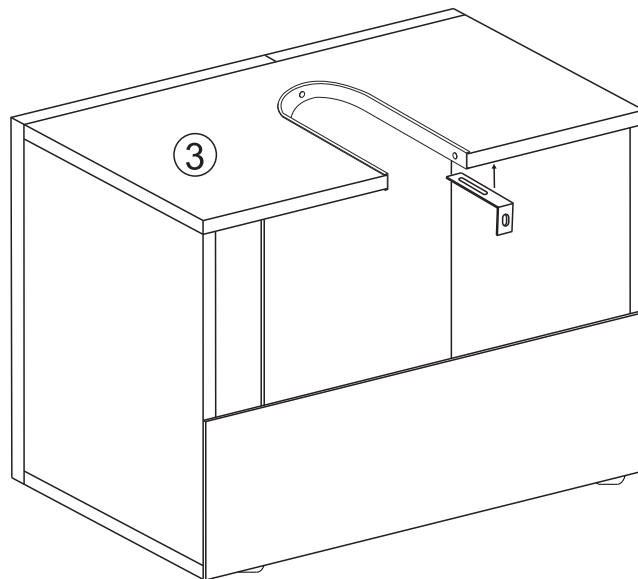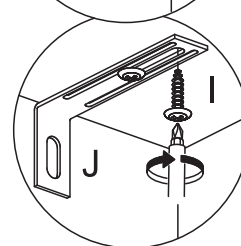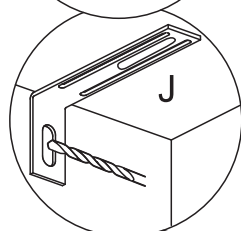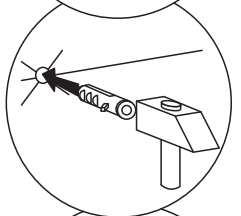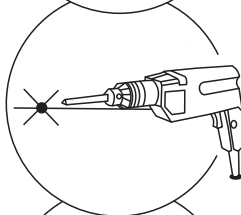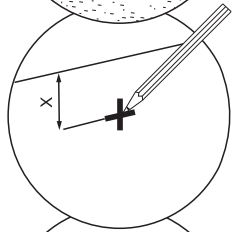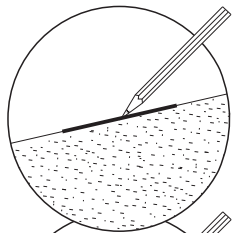

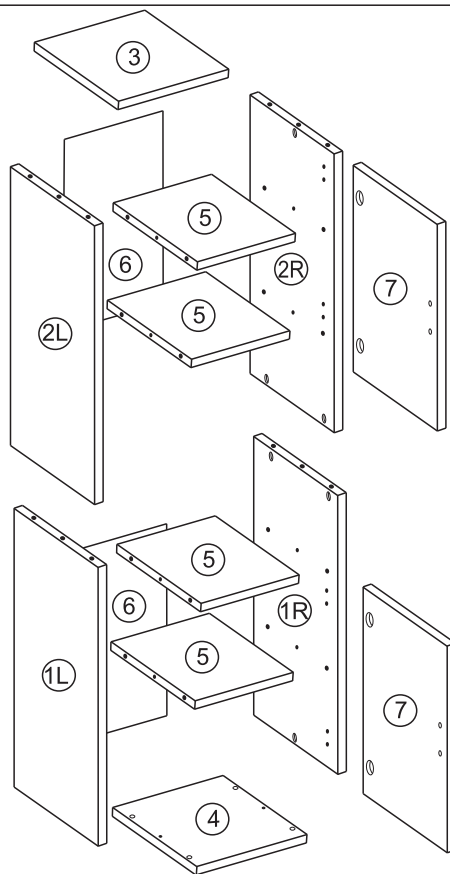

24x ø 8x30 mm A1	2x ø 8x50 mm A2	4x L	48x Q
20x 16 mm D1	20x D	12x 5x30 mm C1	4x 8x56 mm C2
2x I2	1x R	4x M4x25 mm N3	4x K2
19x ø 3.5x16 mm E3	1x S	4x U	
4x ø 4x30 mm E7			

Nº	a*b	x
1L+1R	732x296	1+1
2L+2R	732x296	1+1
3+4	312x296	1+1
5	280x296	4
6	604x308	2
7	608x308	2



VCM.
my home


service@vcm-gruppe.de

Aufbauanleitung


Artikel: **VCM Hochschrank Flandu**


Service Ref.:#086

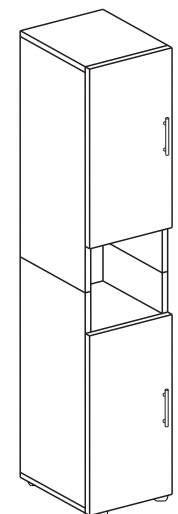
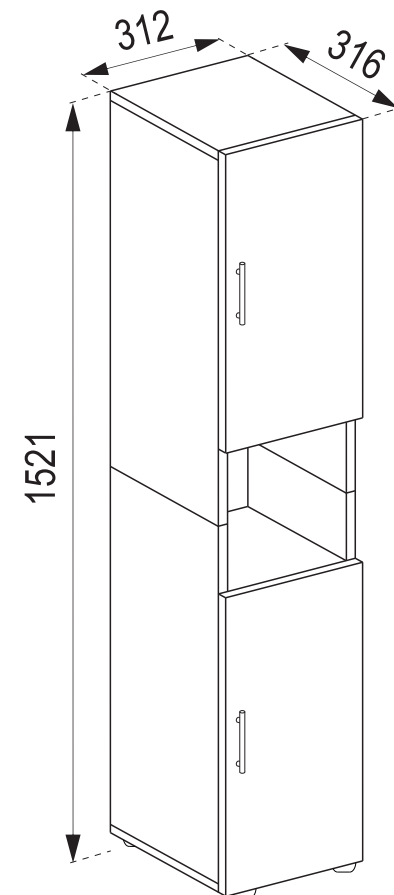


2x  A2
ø 8x50 mm


24x  A1
ø 8x30 mm


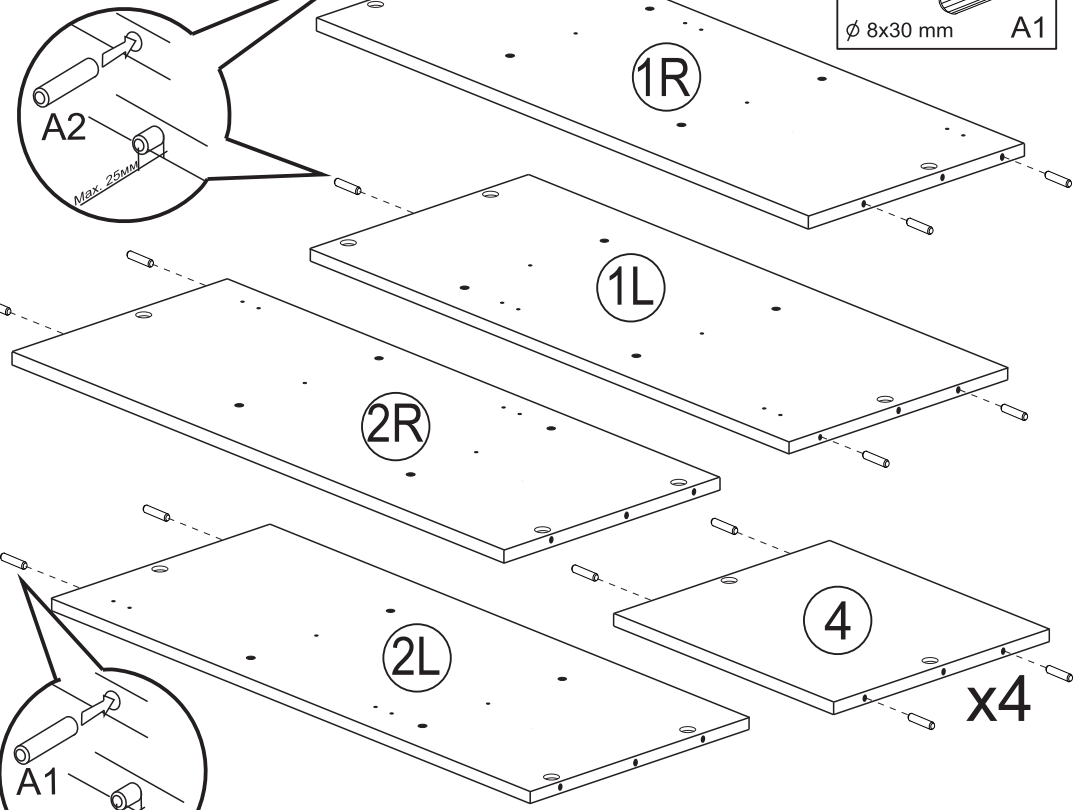


4x  L
8x  E3
ø 3.5x16 mm

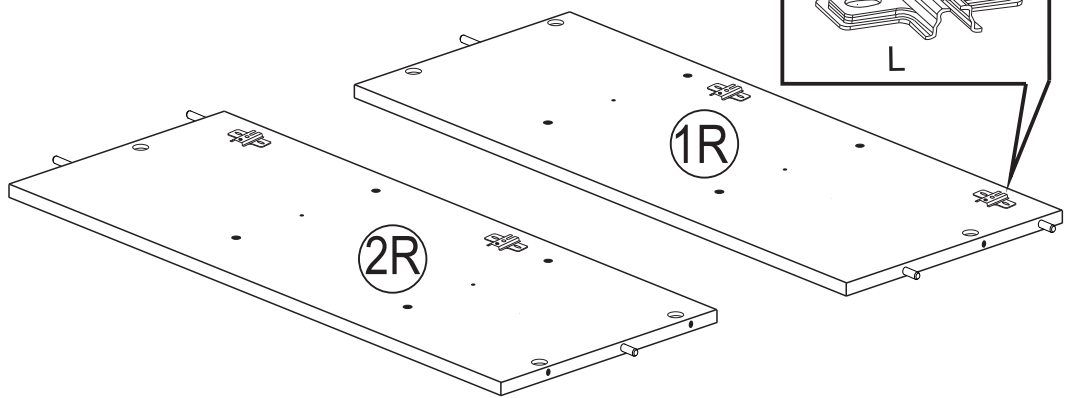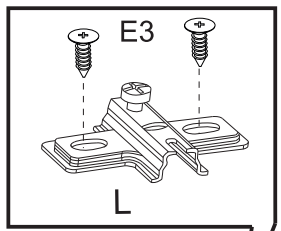





Hochschrank Flandu

12x  C1
5x30 mm

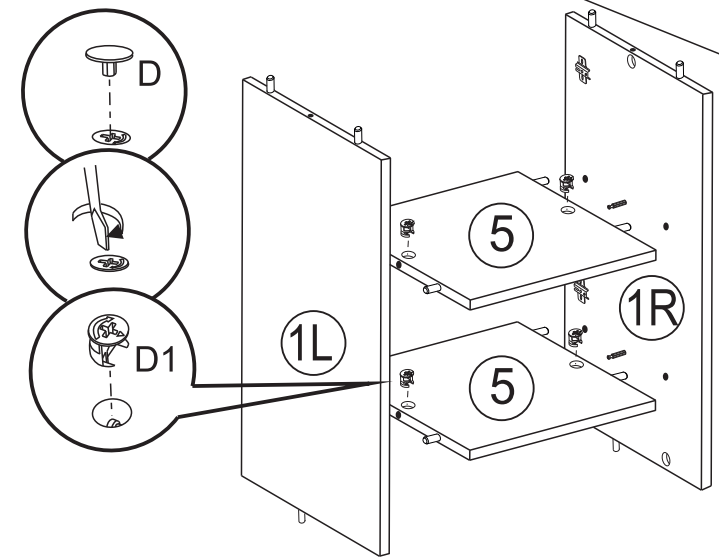
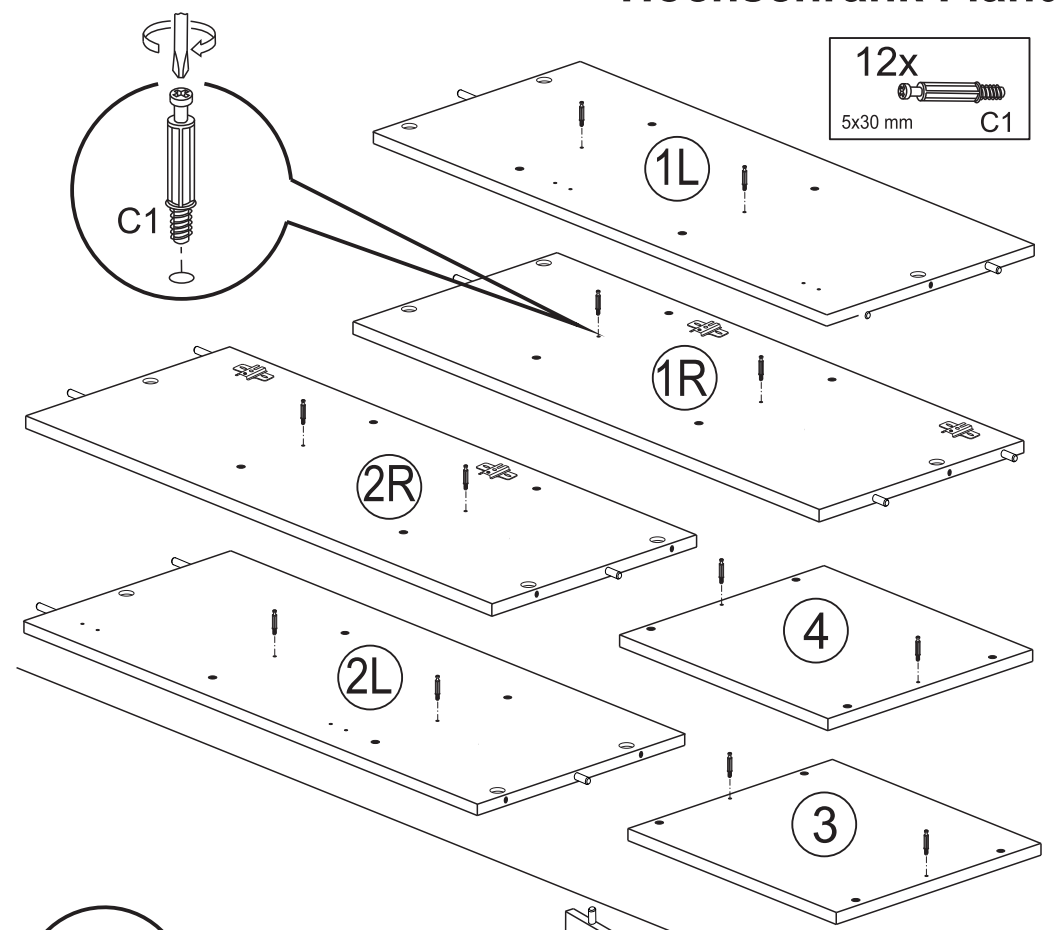












8x  D1
16 mm

8x  D



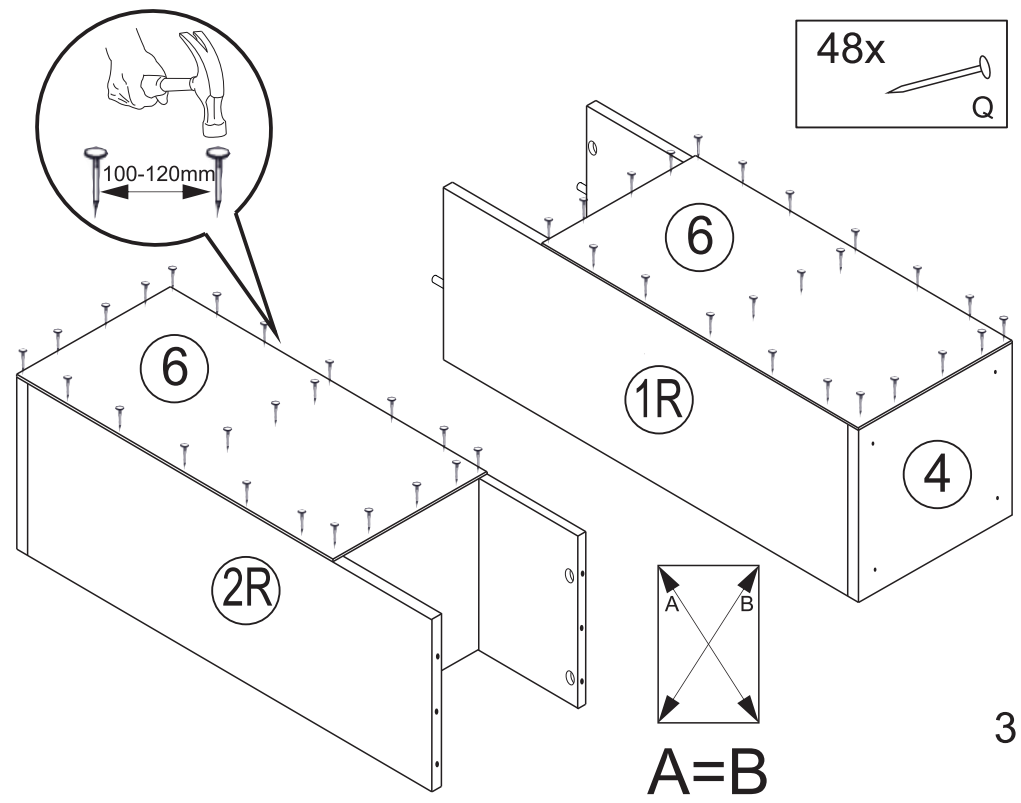
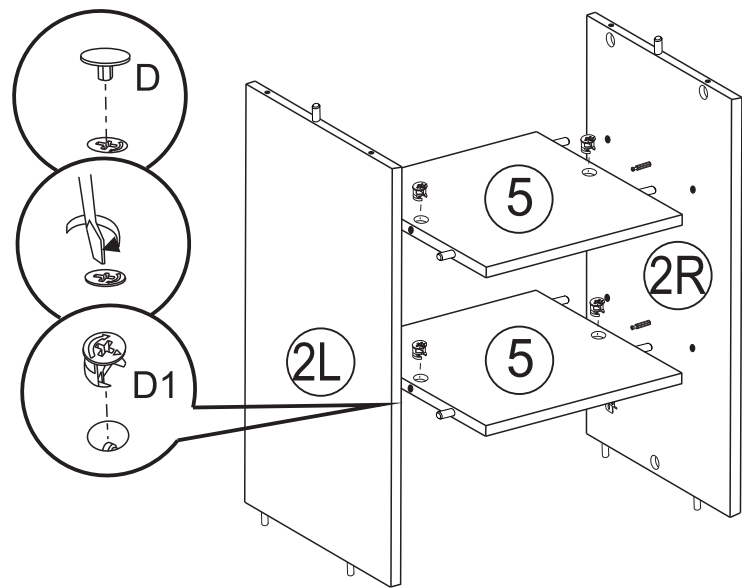
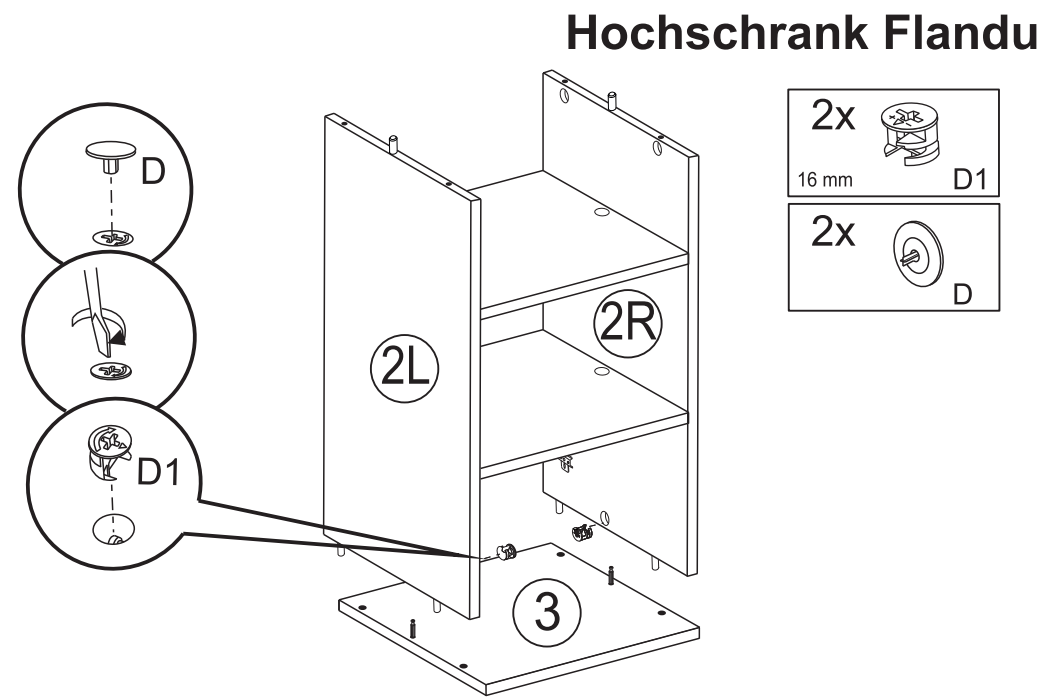
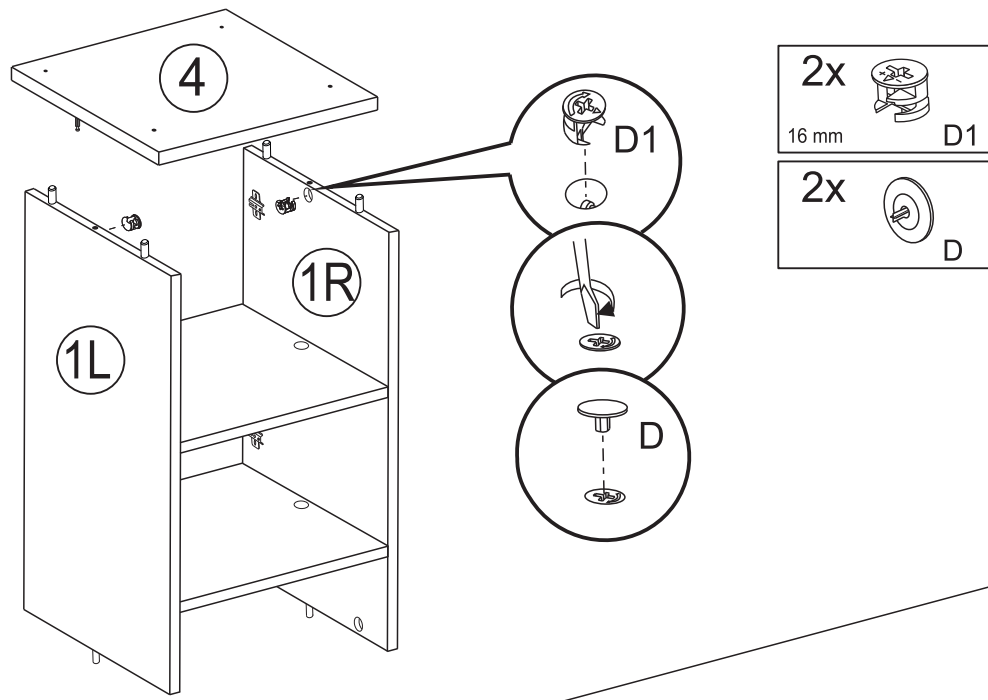



Hochschrank Flandu

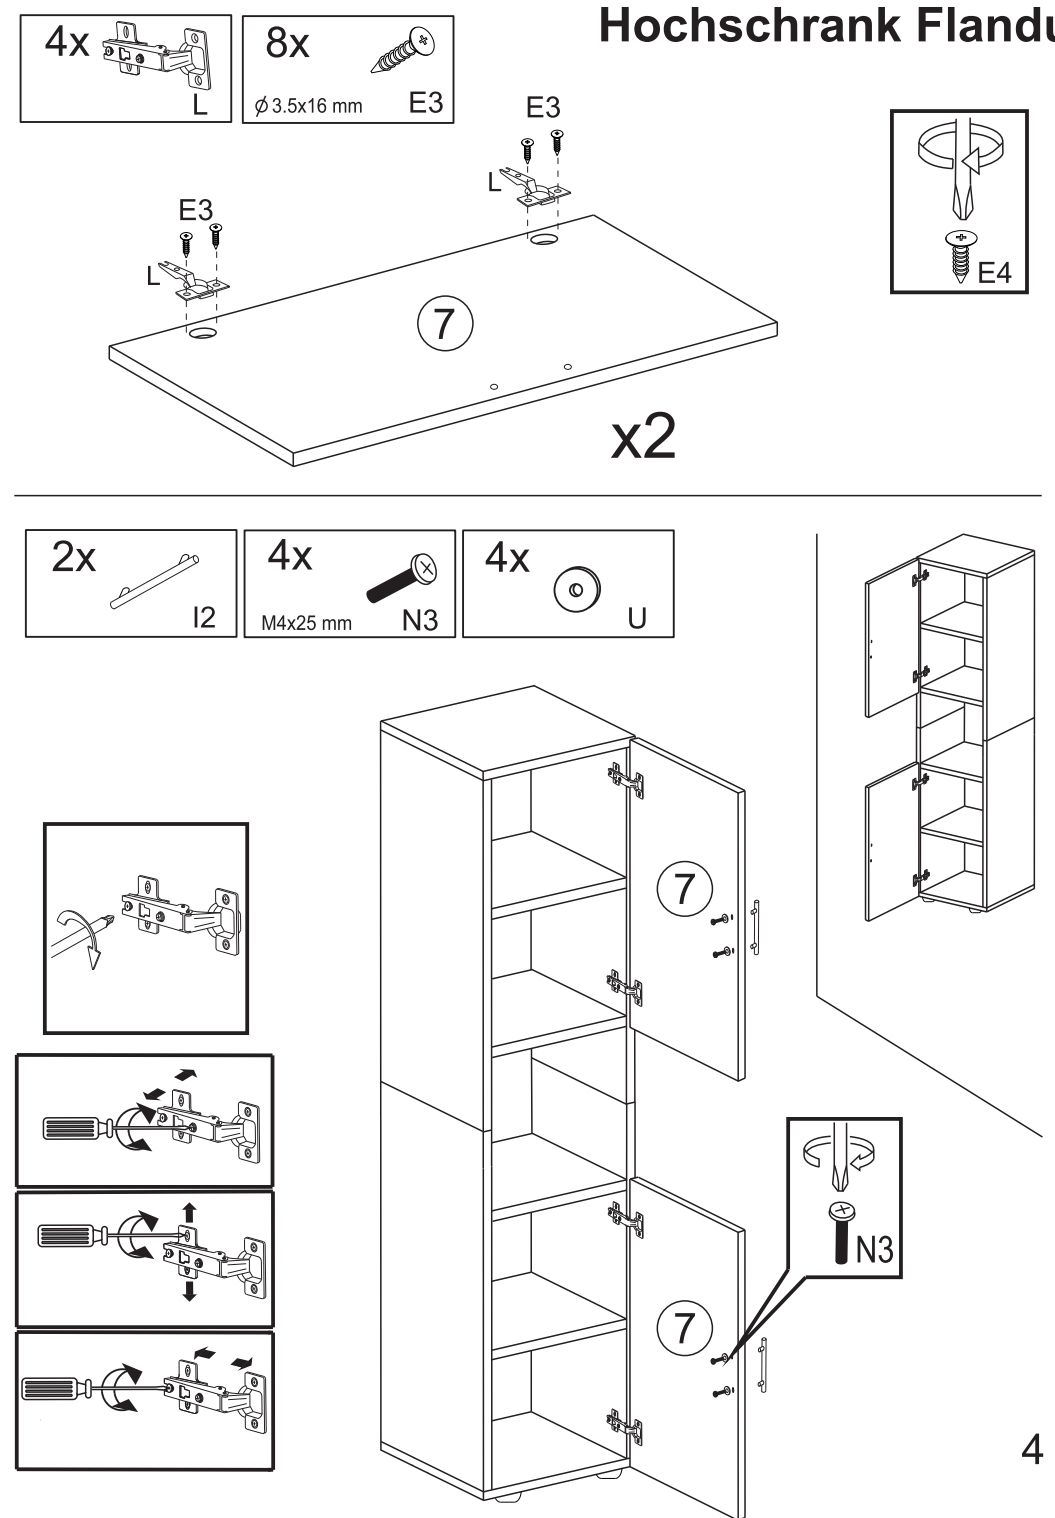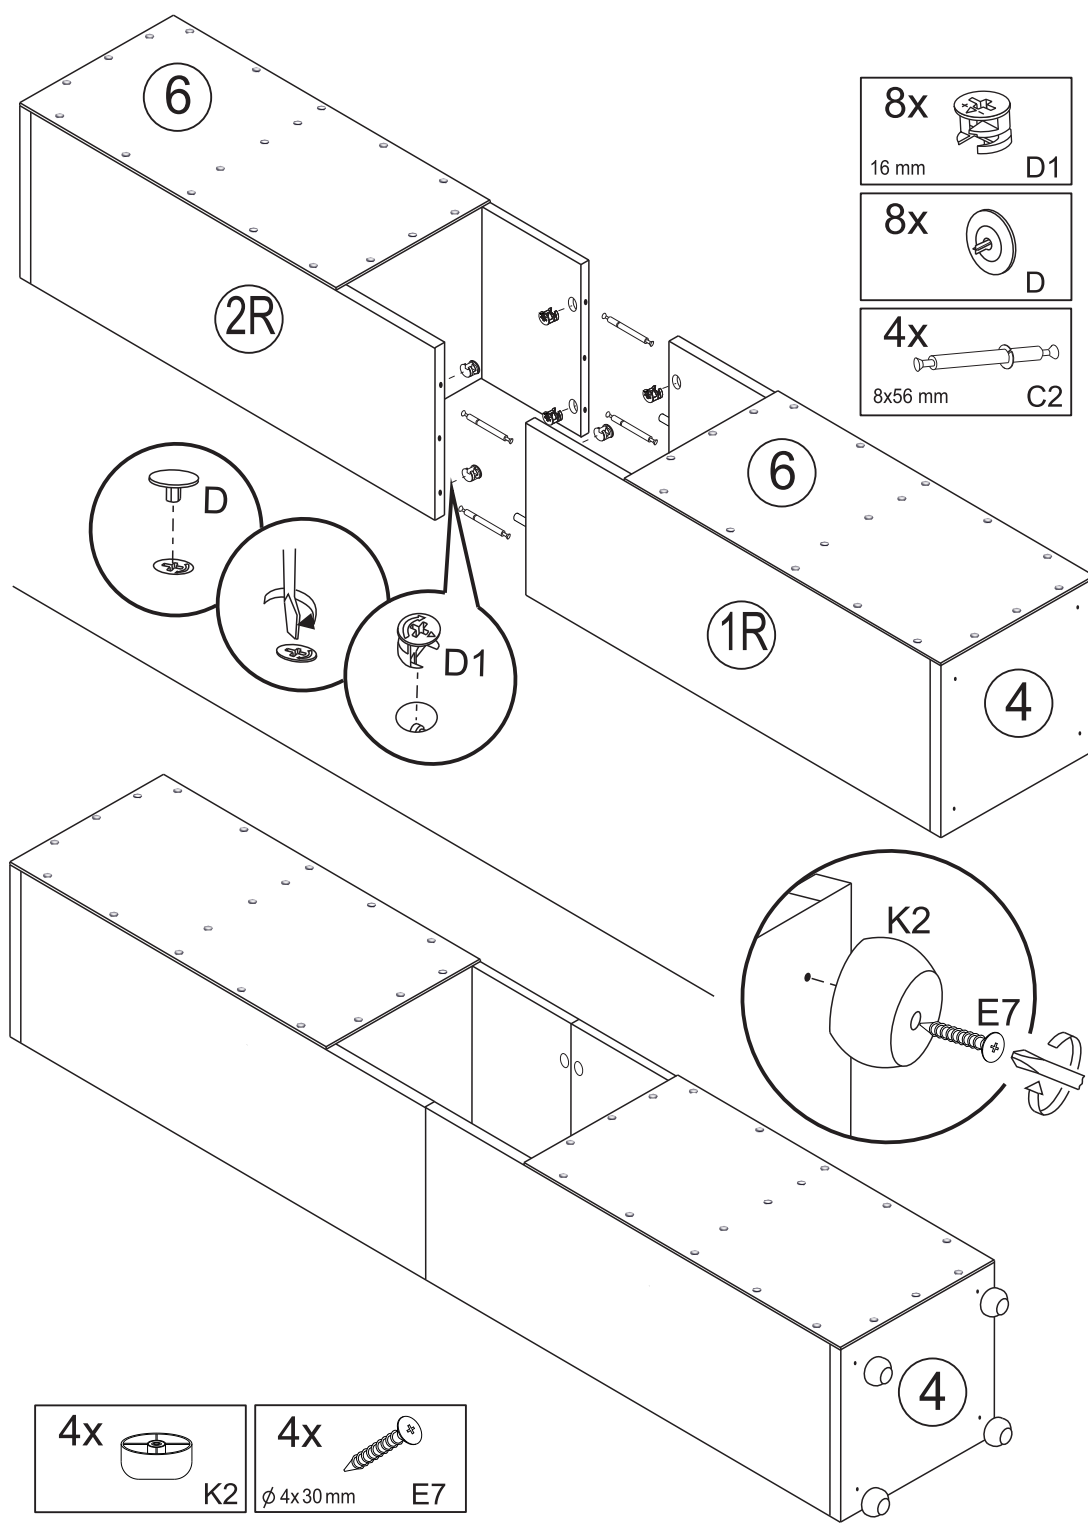

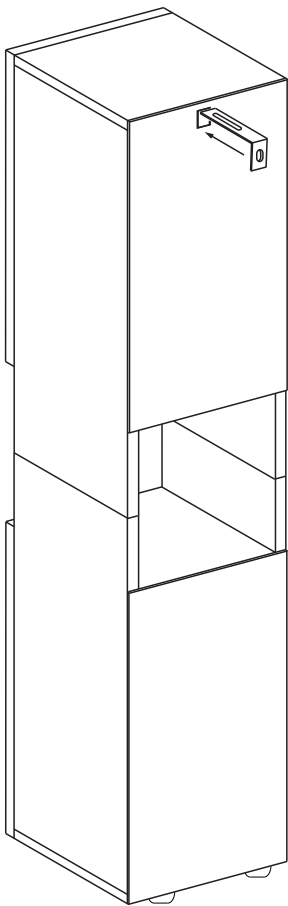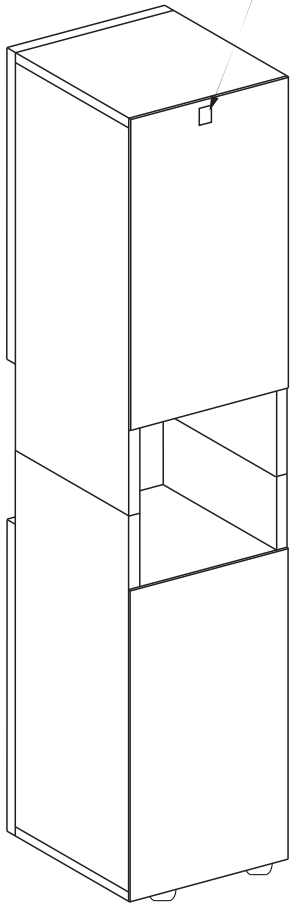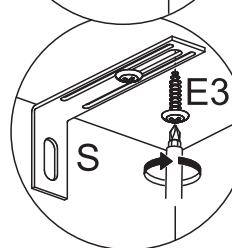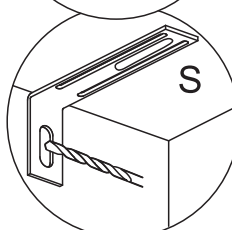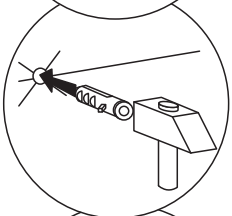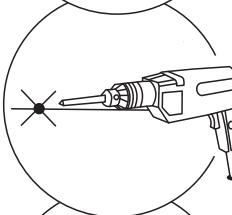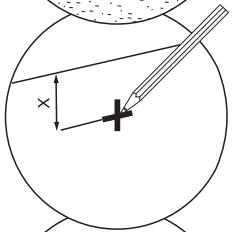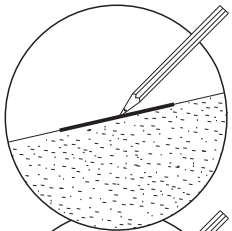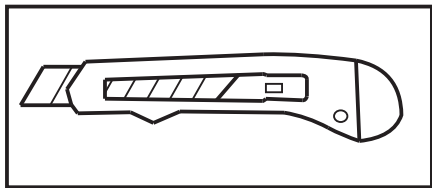

Hochschrank Flandu

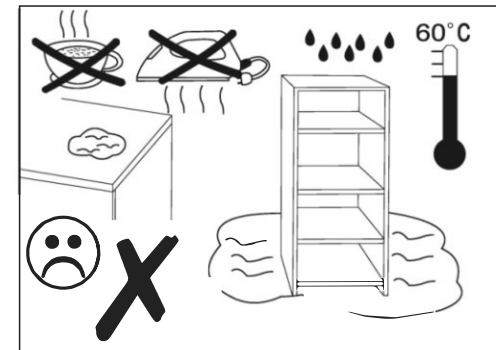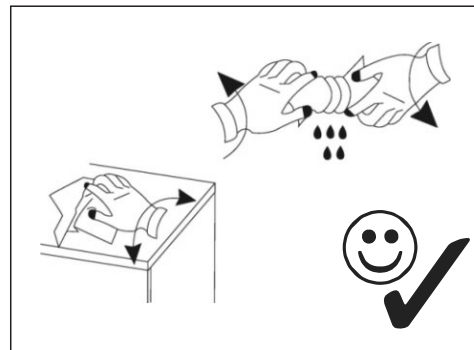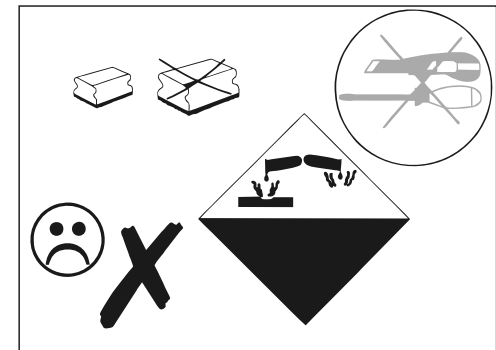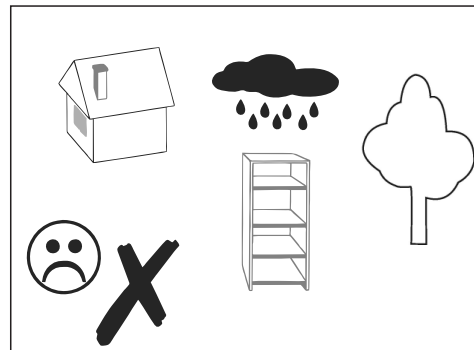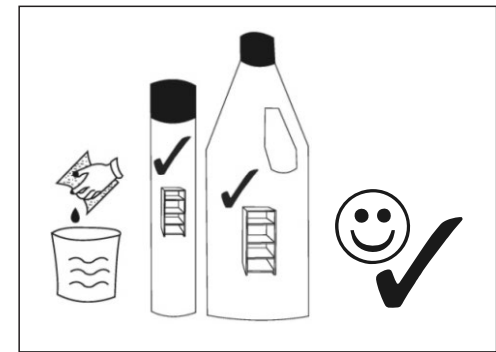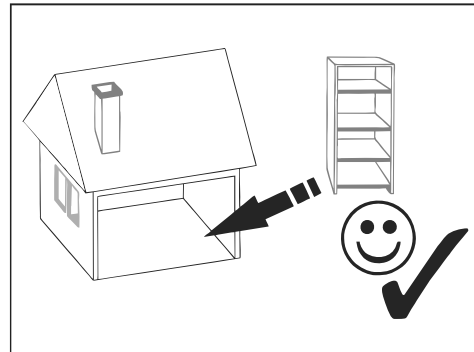

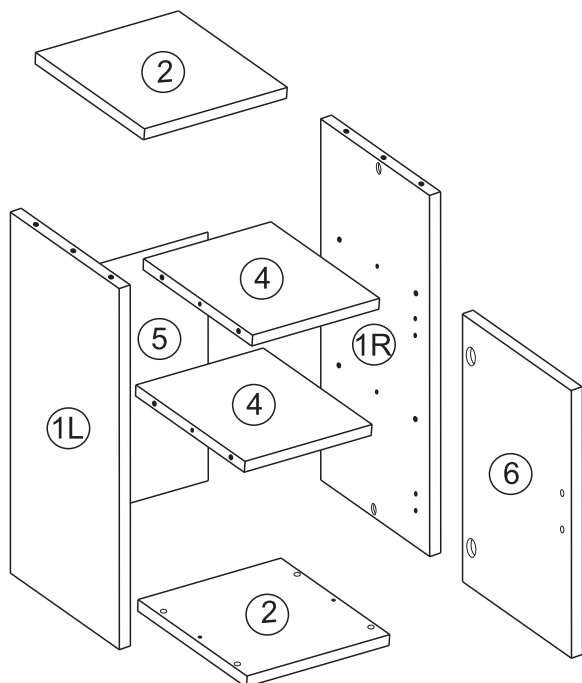

16x Ø 8x30 mm A1	4x K2	2x L
8x 16 mm D1	8x D	8x 5x30 mm C1
1x I2	1x R	2x M4x25 mm N3
11x Ø 3.5x16 mm E3	1x S	2x U
24x Q	4x Ø 4x22 mm E7	

Nº	a*b	x
1L+1R	872x296	1+1
2	312x296	2
4	280x296	2
5	604x308	1
6	608x308	1



VCM.
my home

service@vcm-gruppe.de

Aufbauanleitung




Artikel: **VCM Midischrank Flandu**

Service Ref.:#086


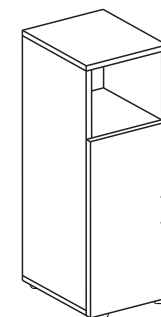
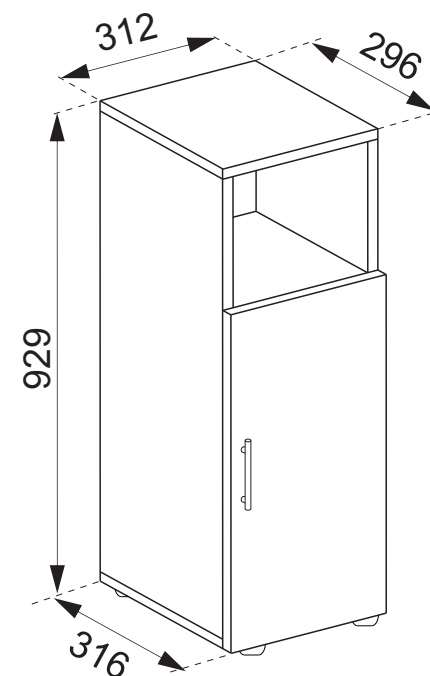


Midischrank Flandu

16x
 ø 8x30 mm A1

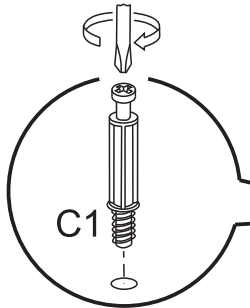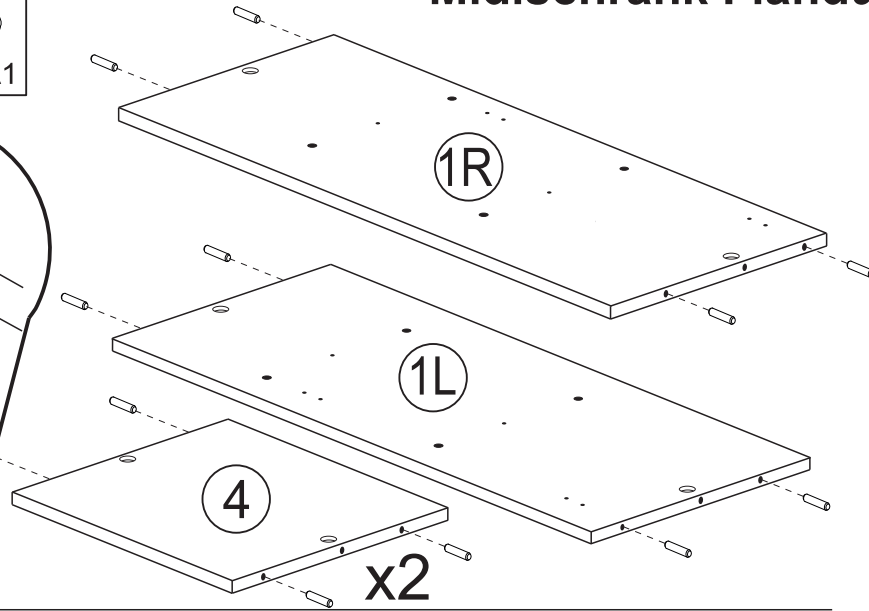
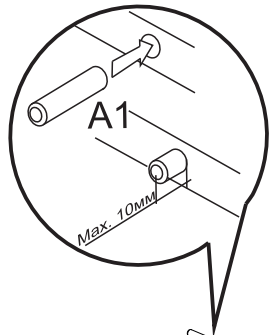


2x L
 4x ø 3.5x16 mm E3
 8x 5x30 mm C1

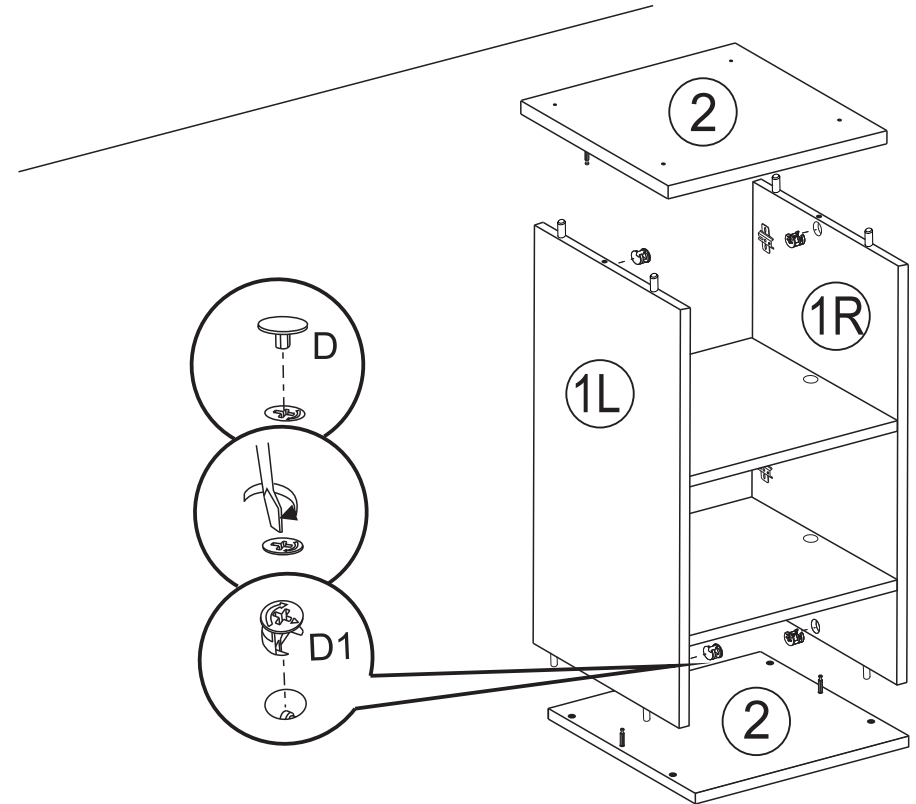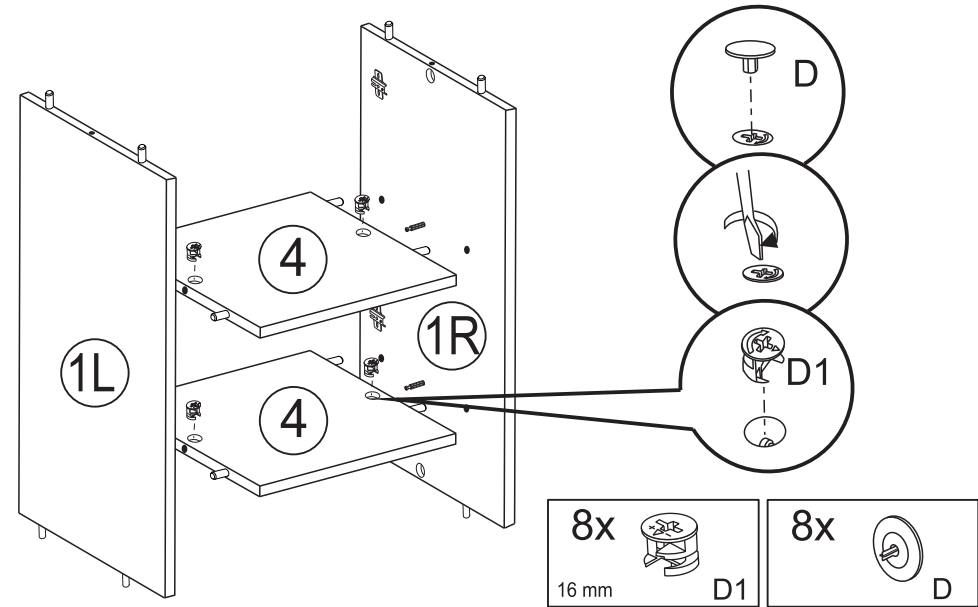
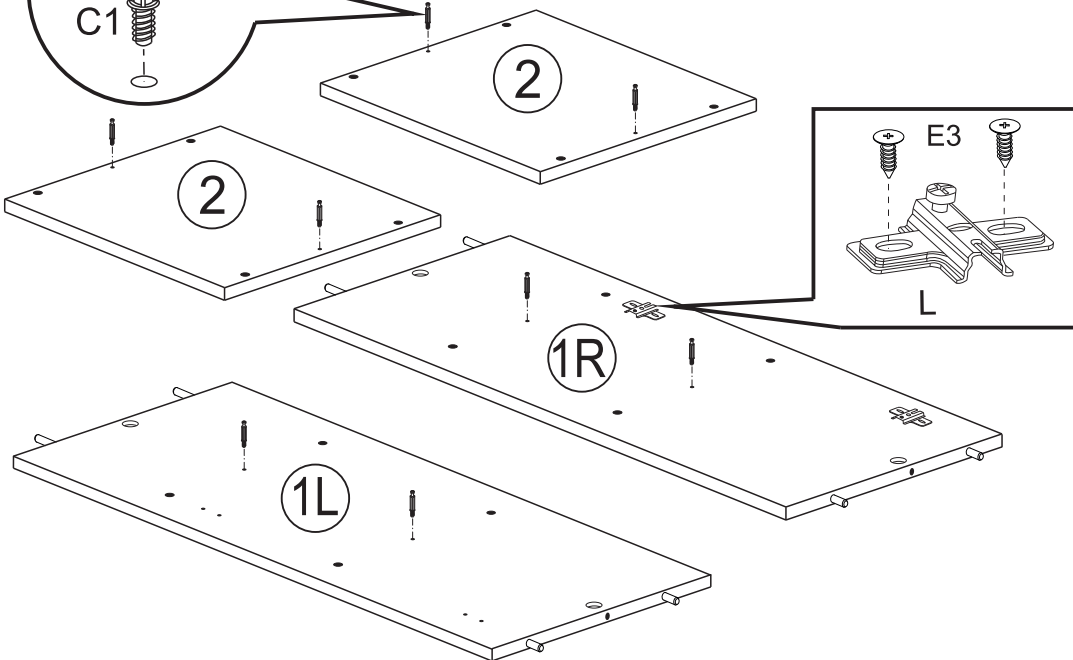


Midischrank Flandu

24x



A=B

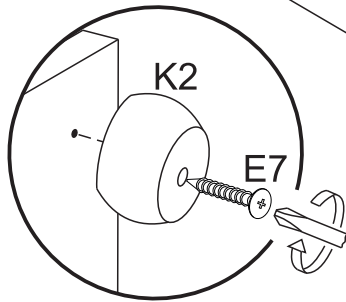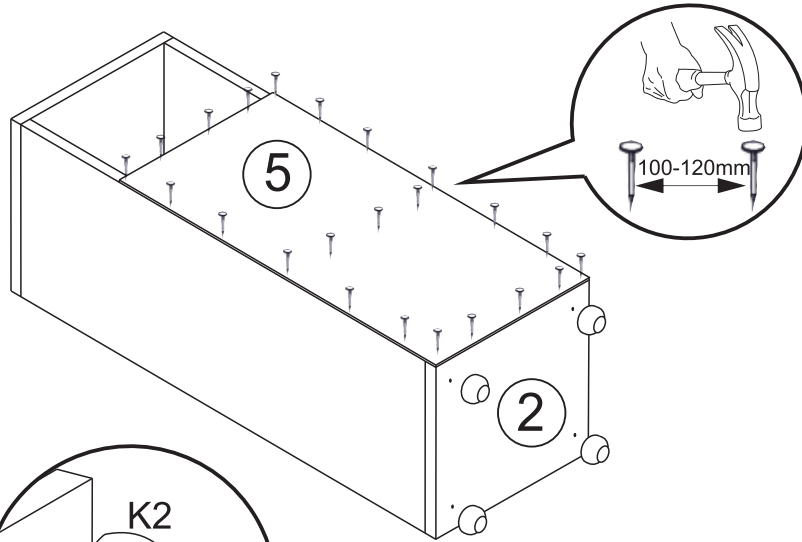

4x



K2


4x



E7

Ø 4x22 mm

2x









L

4x



E3

Ø 3.5x16 mm

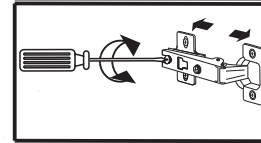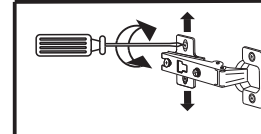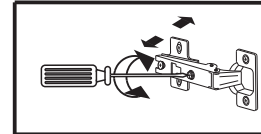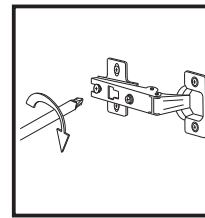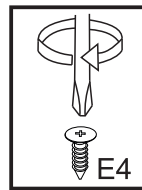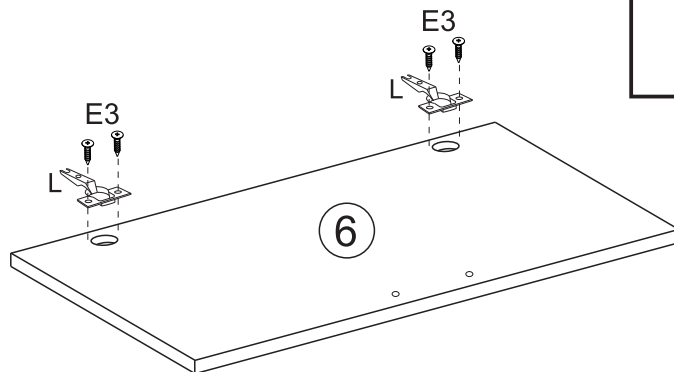

1x



I2

2x




N3

M4x25 mm


2x



U

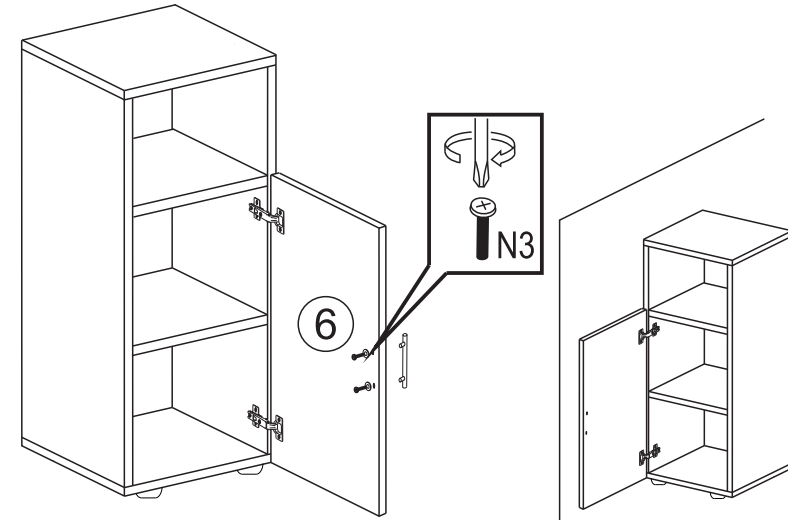

1x





S

3x














E3




Ø 3.5x16 mm

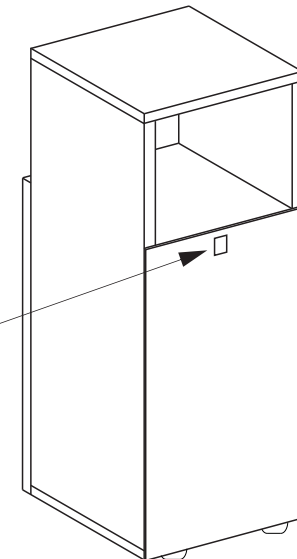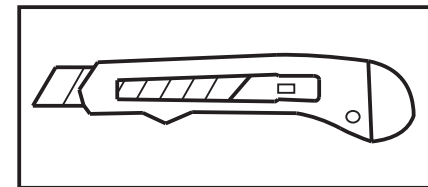

Midischrank Flandu

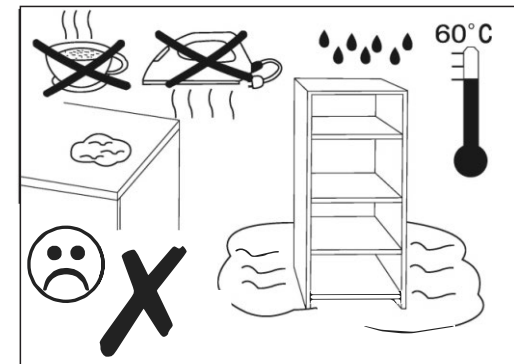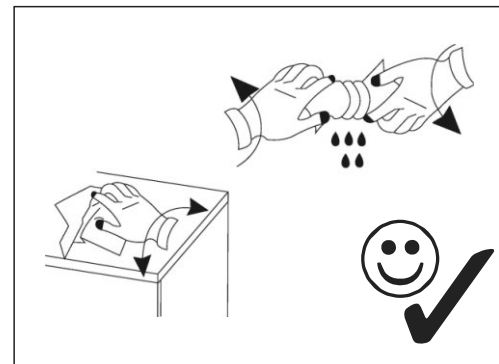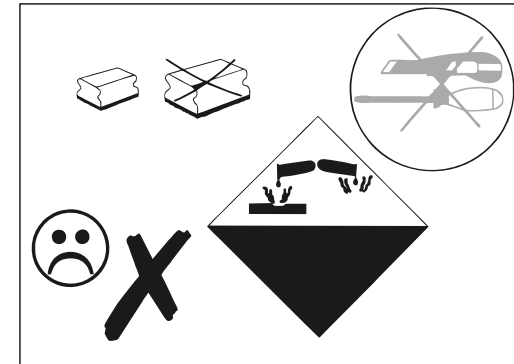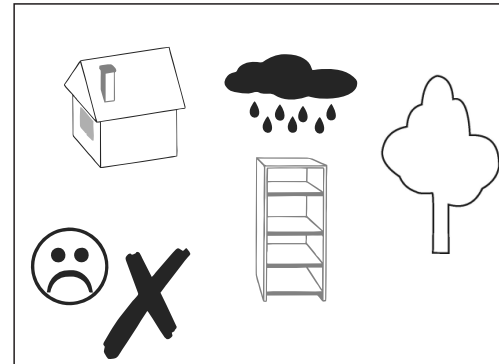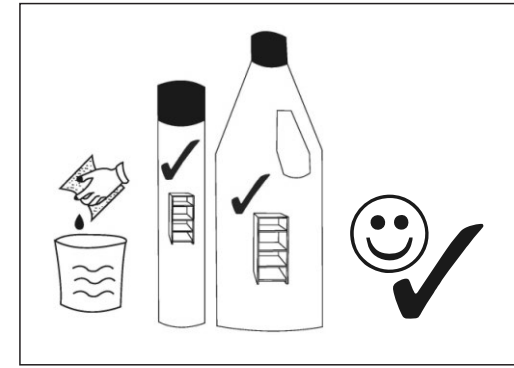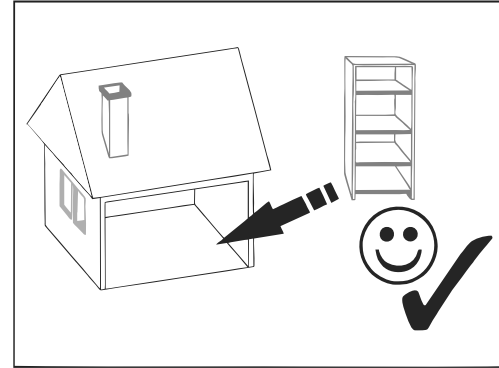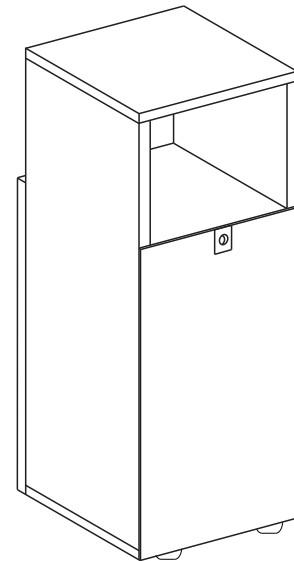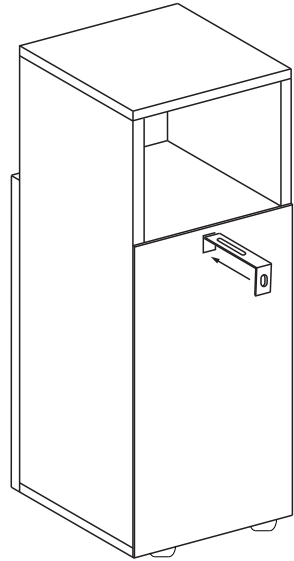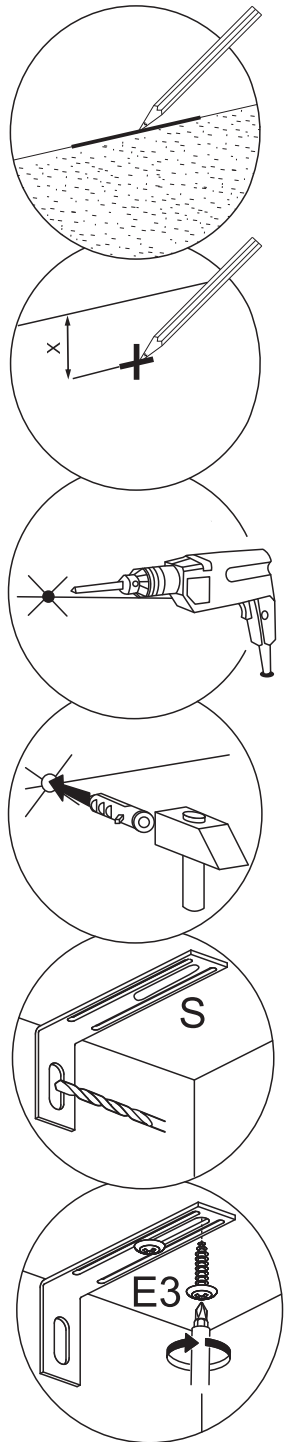

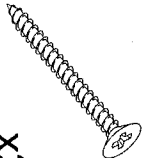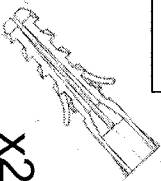1.33  4x50mm x2	1.35  x2	1.36  8x40mm x2	1.5  3,5x16mm x5
--	--	--	---

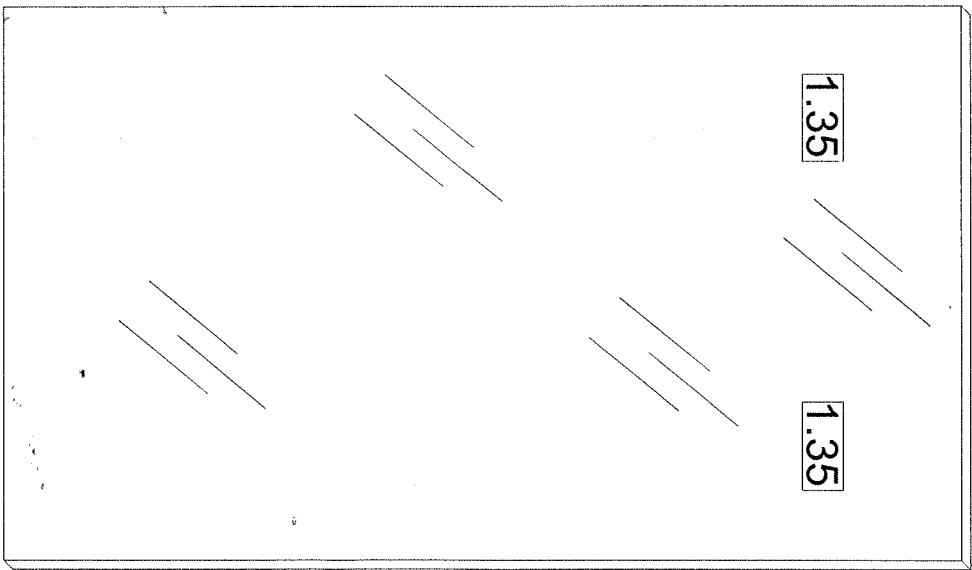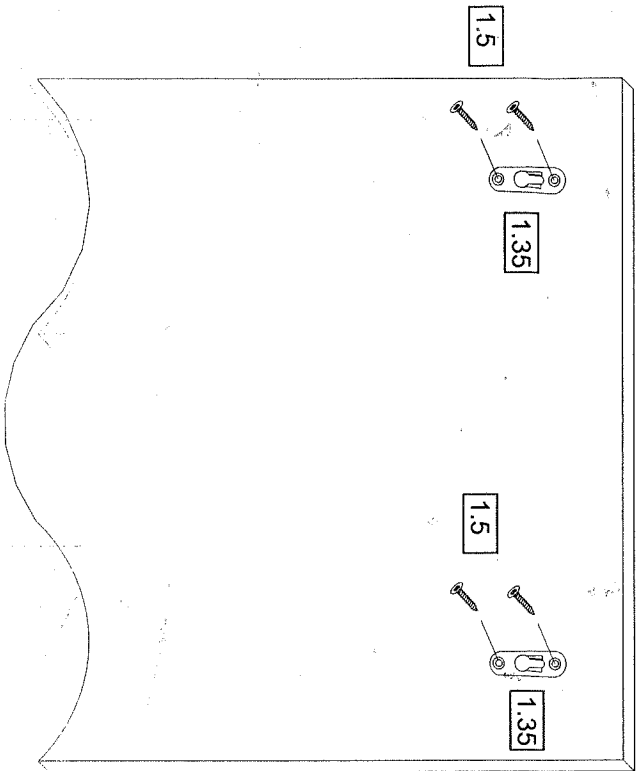

	Important information Read carefully. Keep this information for further reference. GB WARNING Serious or fatal crushing injuries can occur from furniture tip-over. To prevent this furniture from tipping over it must be permanently fixed to the wall. Fixing devices for the wall are not included since different wall materials require different types of fixing devices. Use fixing devices suitable for the walls in your home. For advice on suitable fixing systems, contact your local specialized dealer.	DE ACHTUNG Wenn Möbelstücke umkippen, können ernste oder lebensgefährliche Verletzungen durch Einklemmen die Folge sein. Um zu verhindern, dass das Möbelstück umkippt, muss es fest an der Wand verankert werden. Beschläge für die Wandbefestigung sind nicht beige-packt, da sie von der jeweiligen. Wandbeschaffenheit abhängig sind. Befestigungsbeschläge benutzen, die für die heimischen Wände geeignet sind. Bei diesbezüglichen Fragen den örtlichen Fachhandel zu Rate ziehen.
--	--	--