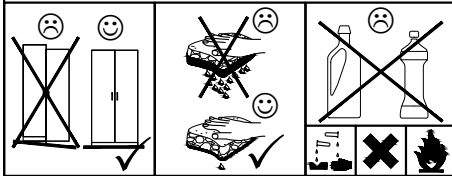
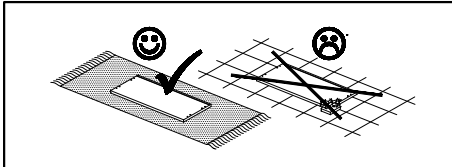


Montageanleitung Rio 3, Kommode 3trg.



DE - Sicherheitsvorschriften

Beachten Sie bitte unbedingt die angegebenen Aufbauvorschriften.

EN - Caution

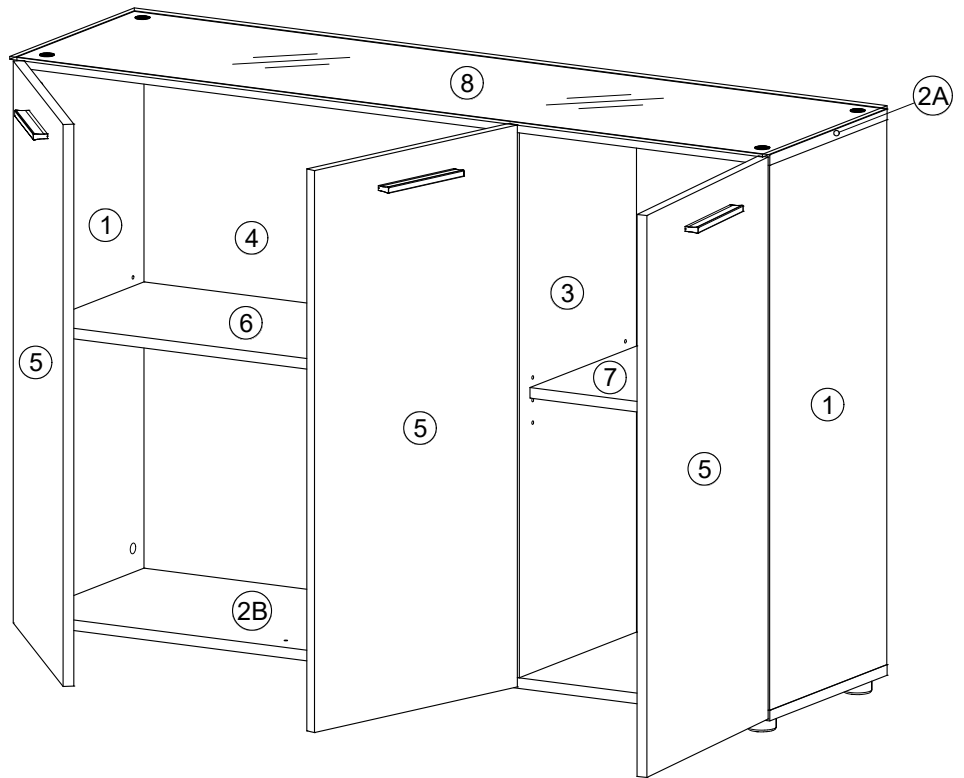
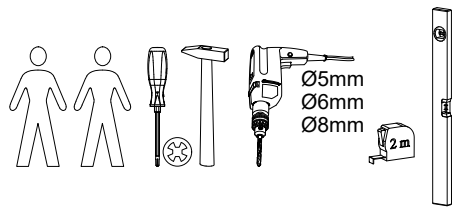
Follow carefully the assembling instructions described in the directions.

















FR - Sécurité

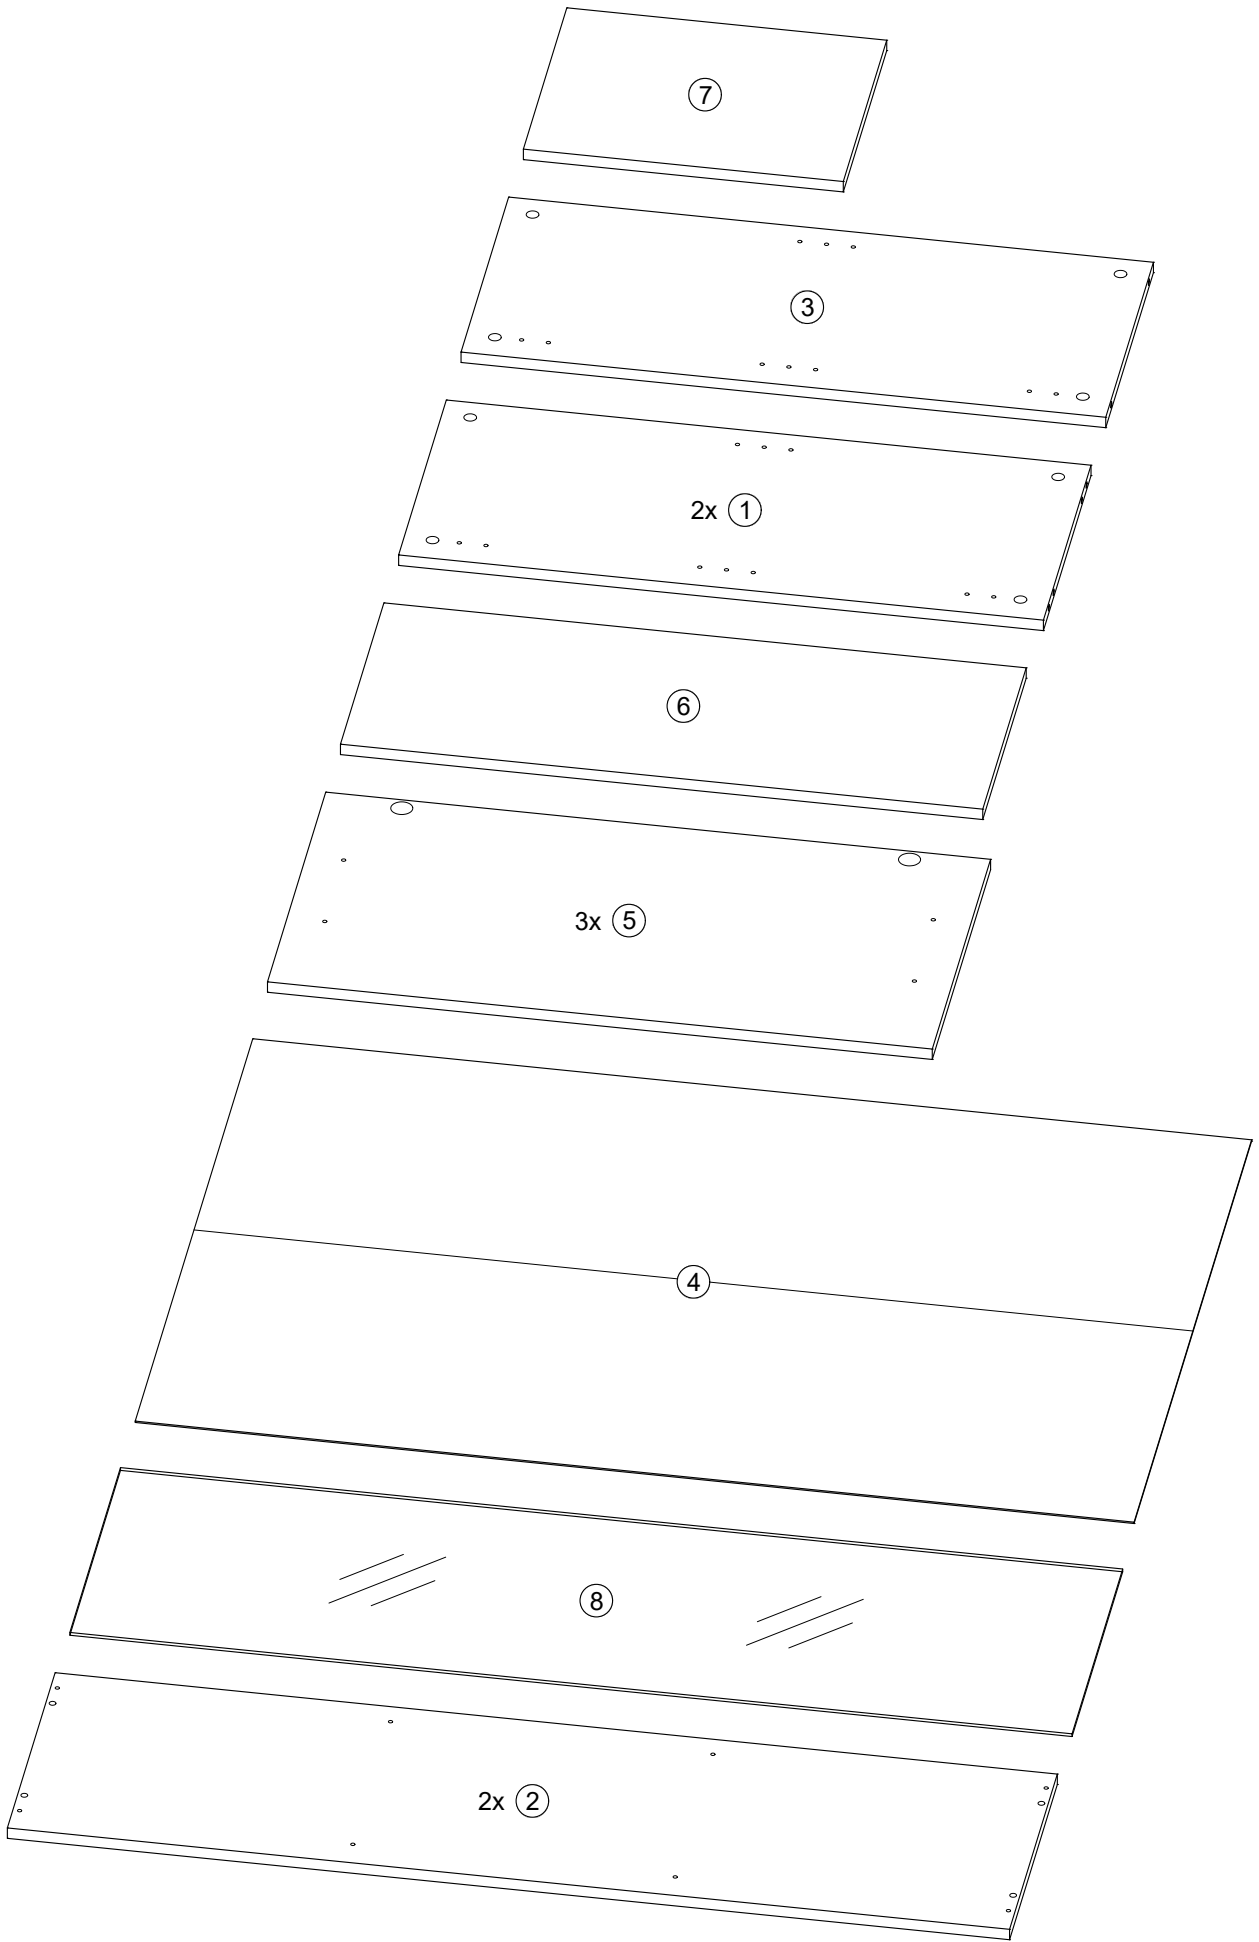
Respecter les instructions de montage décrites dans la notice.

NL - Veiligheid

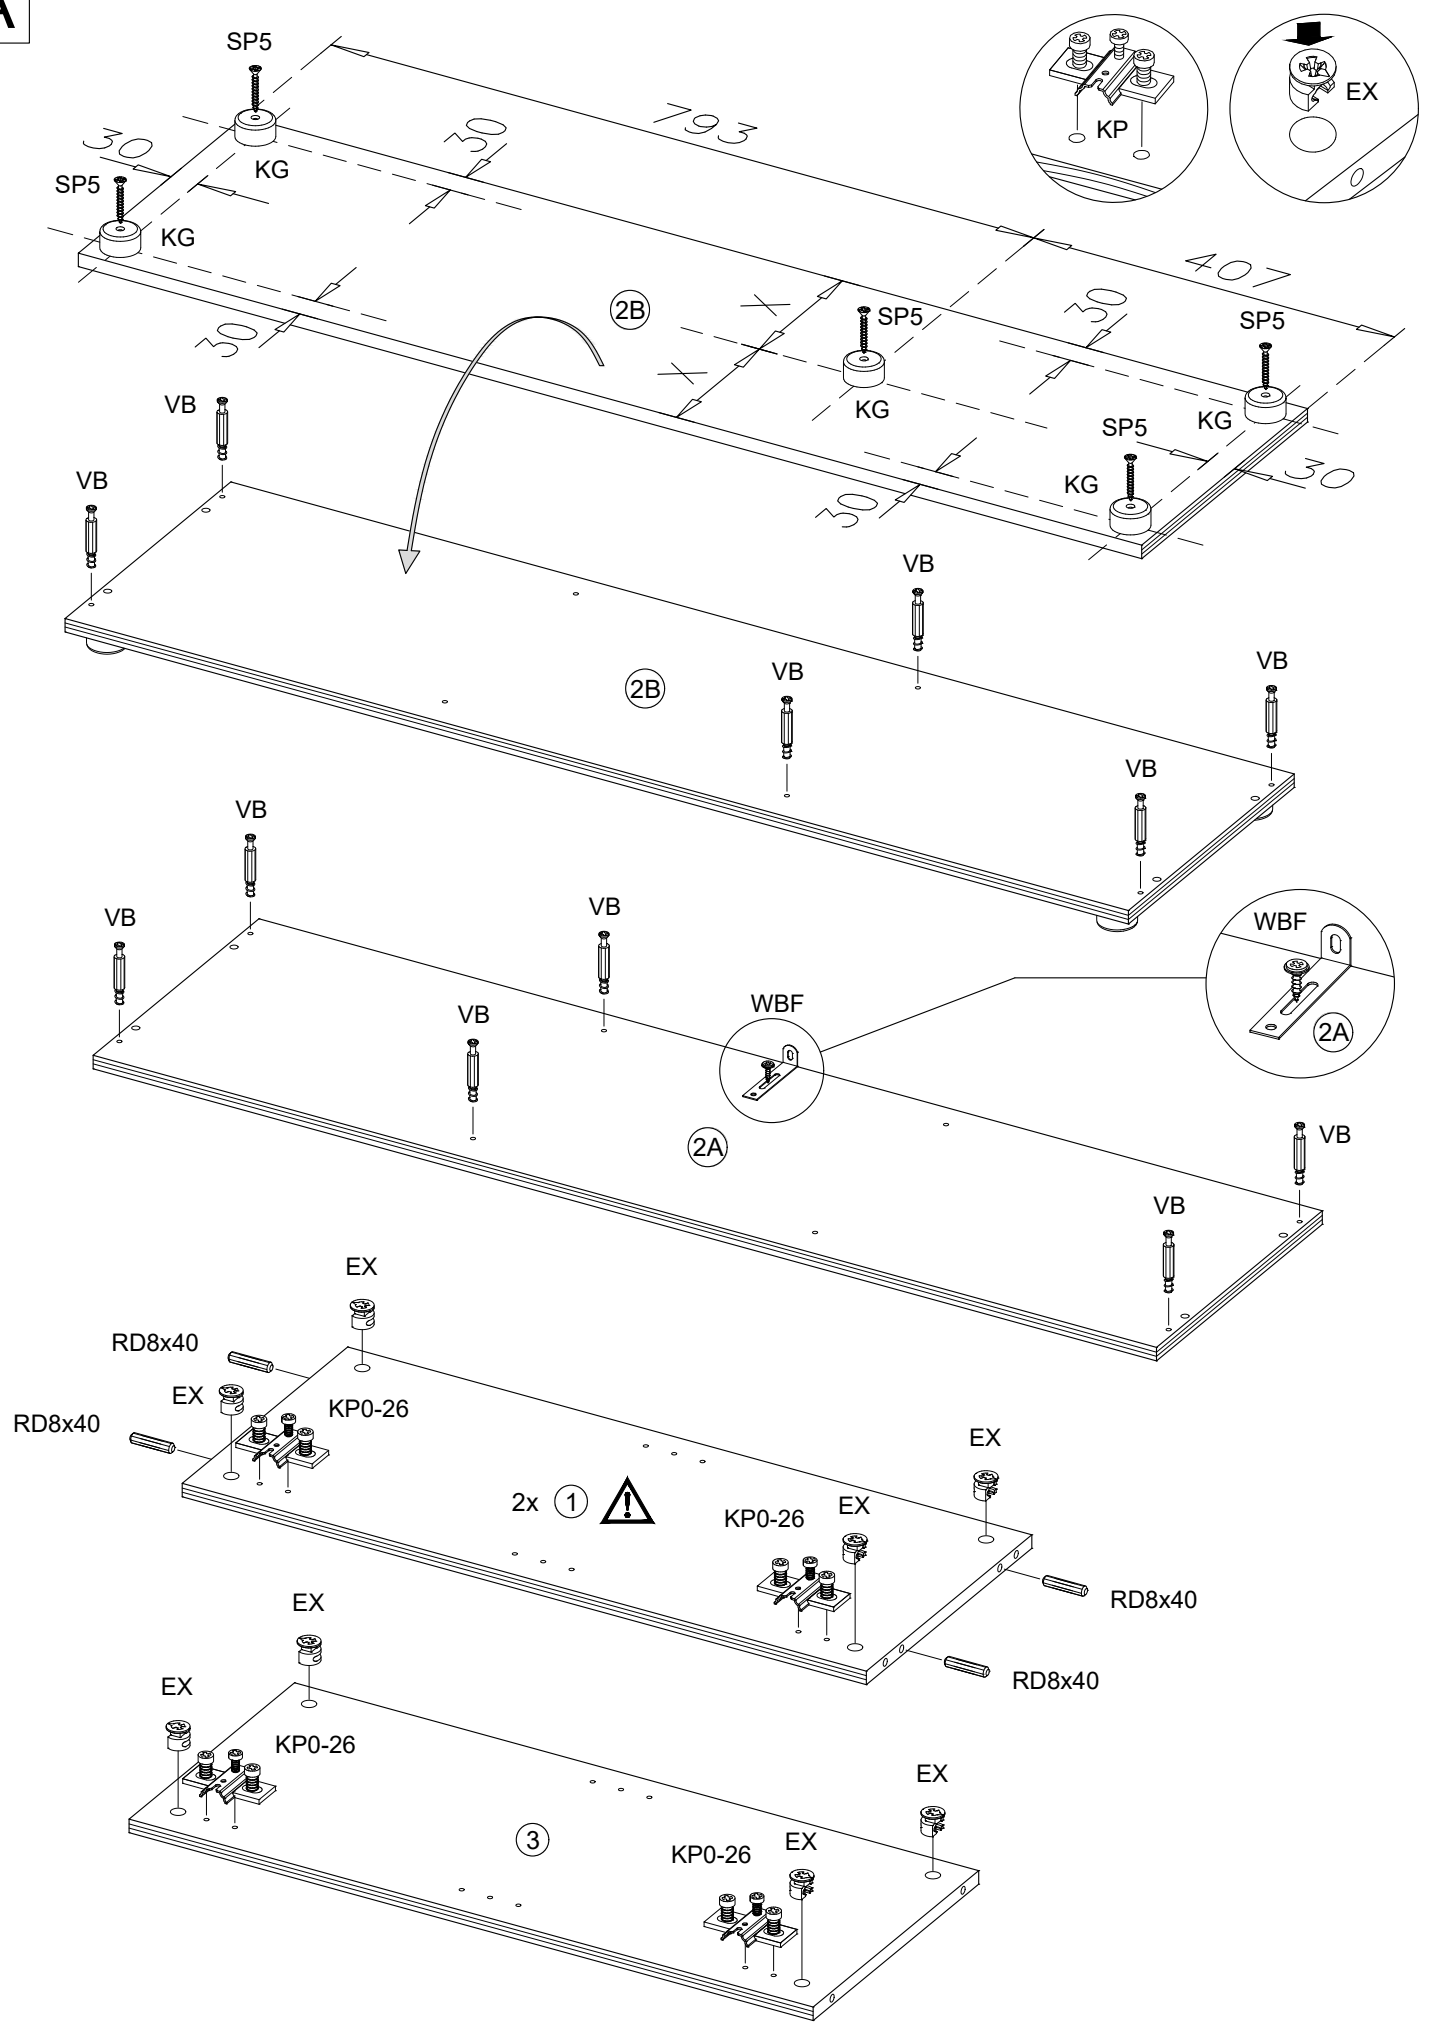
De in de Gebruiksaanwijzing beschreven Instructies respecteren.

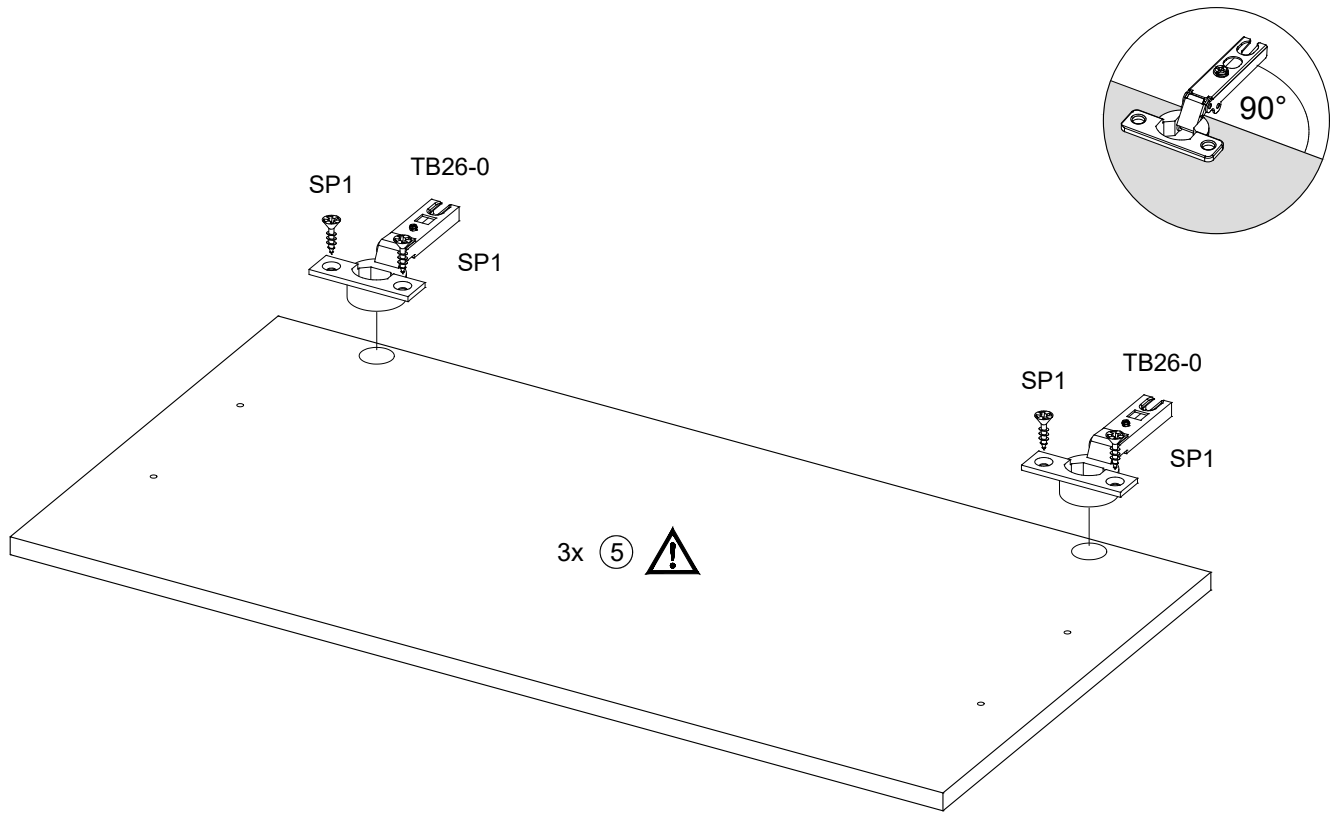
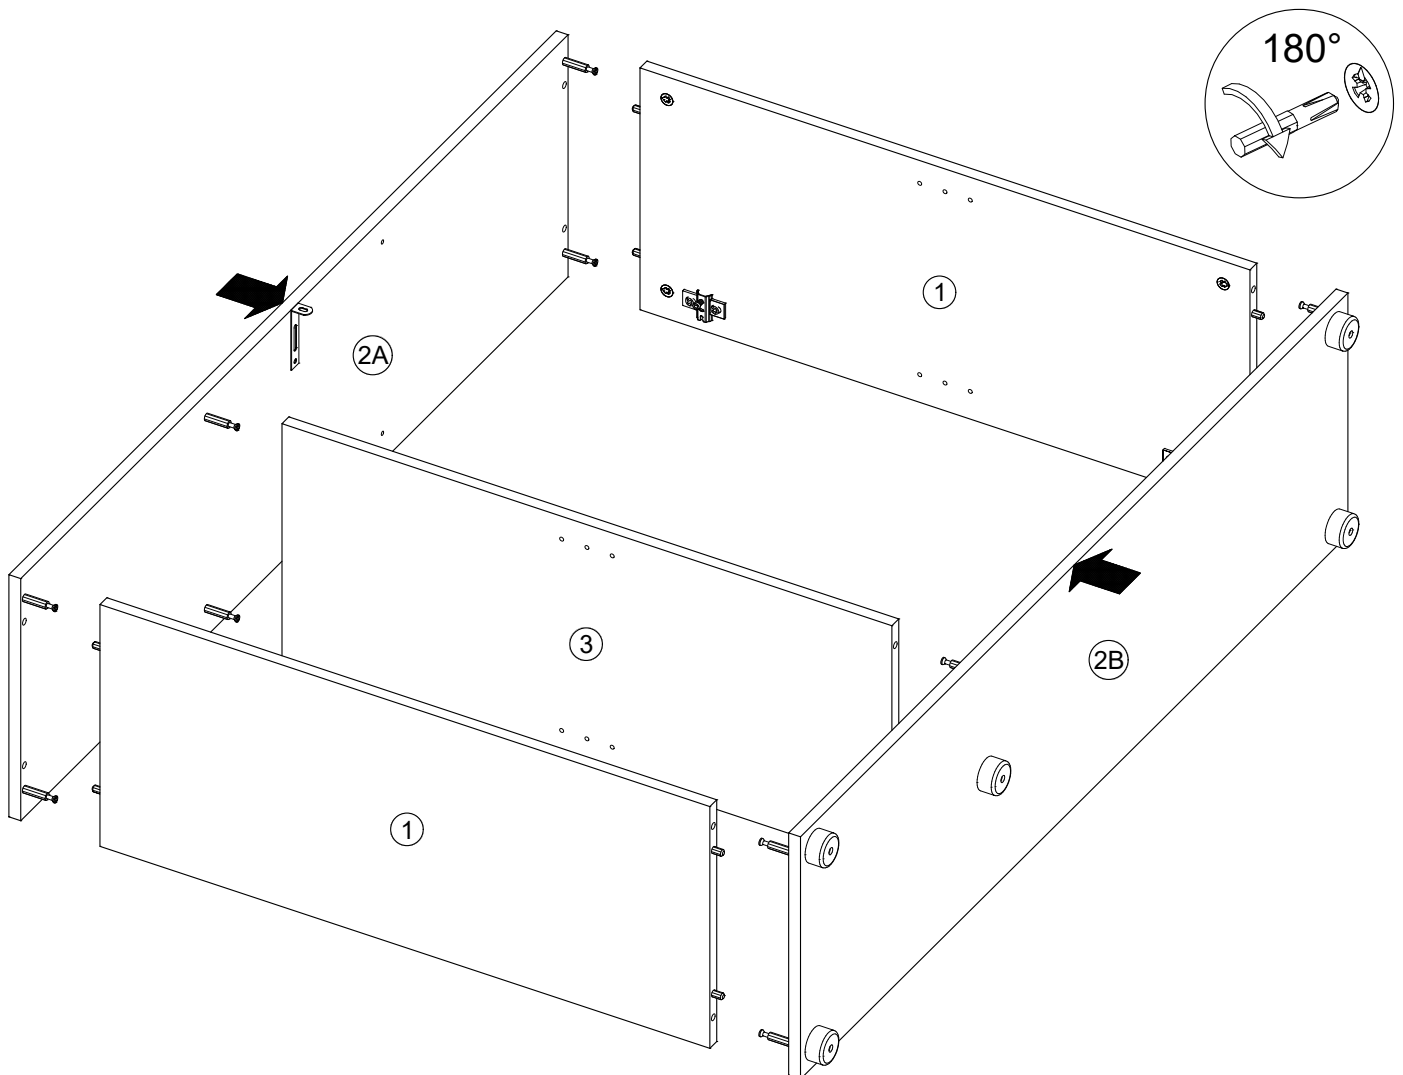


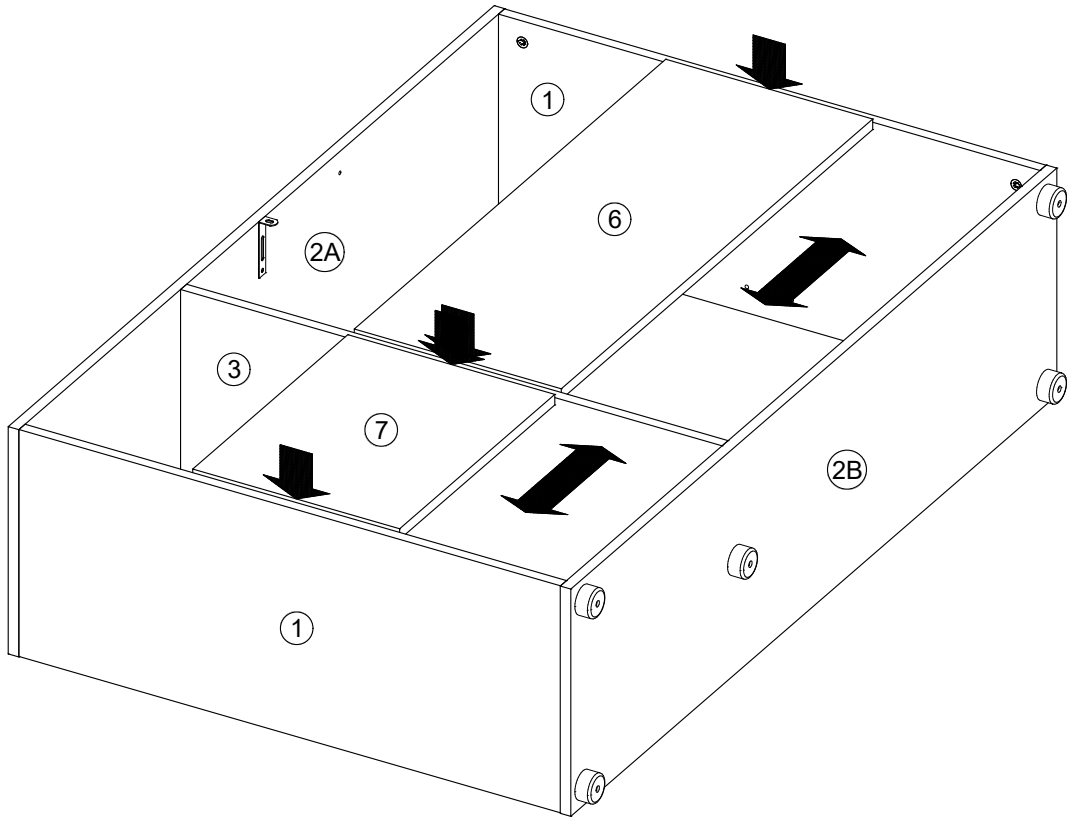
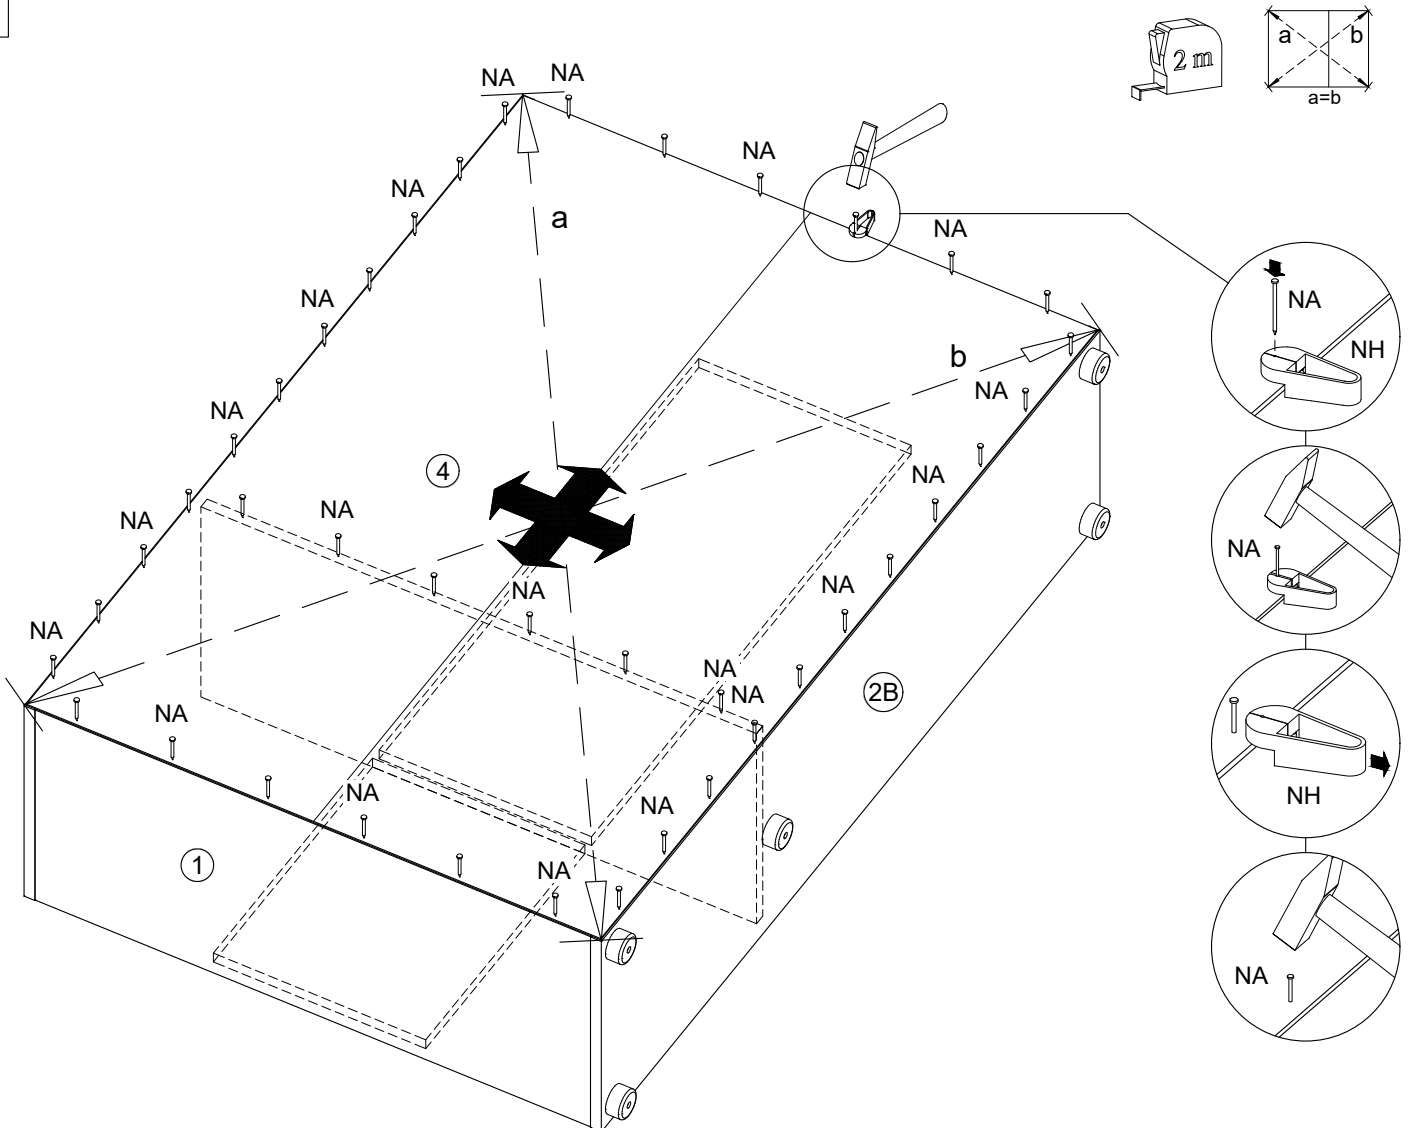
 12x EX	 12x ADK-EX
 12x VB	 8x RD8x40
 6x TB26-0	 6x KP0-26
 12x SP1	 8x BT
 5x KG	 5x SP5
 1x WBF	 4x ASB20
 3x GLD-128	 6x RWS27
 1x NH	 40x NA



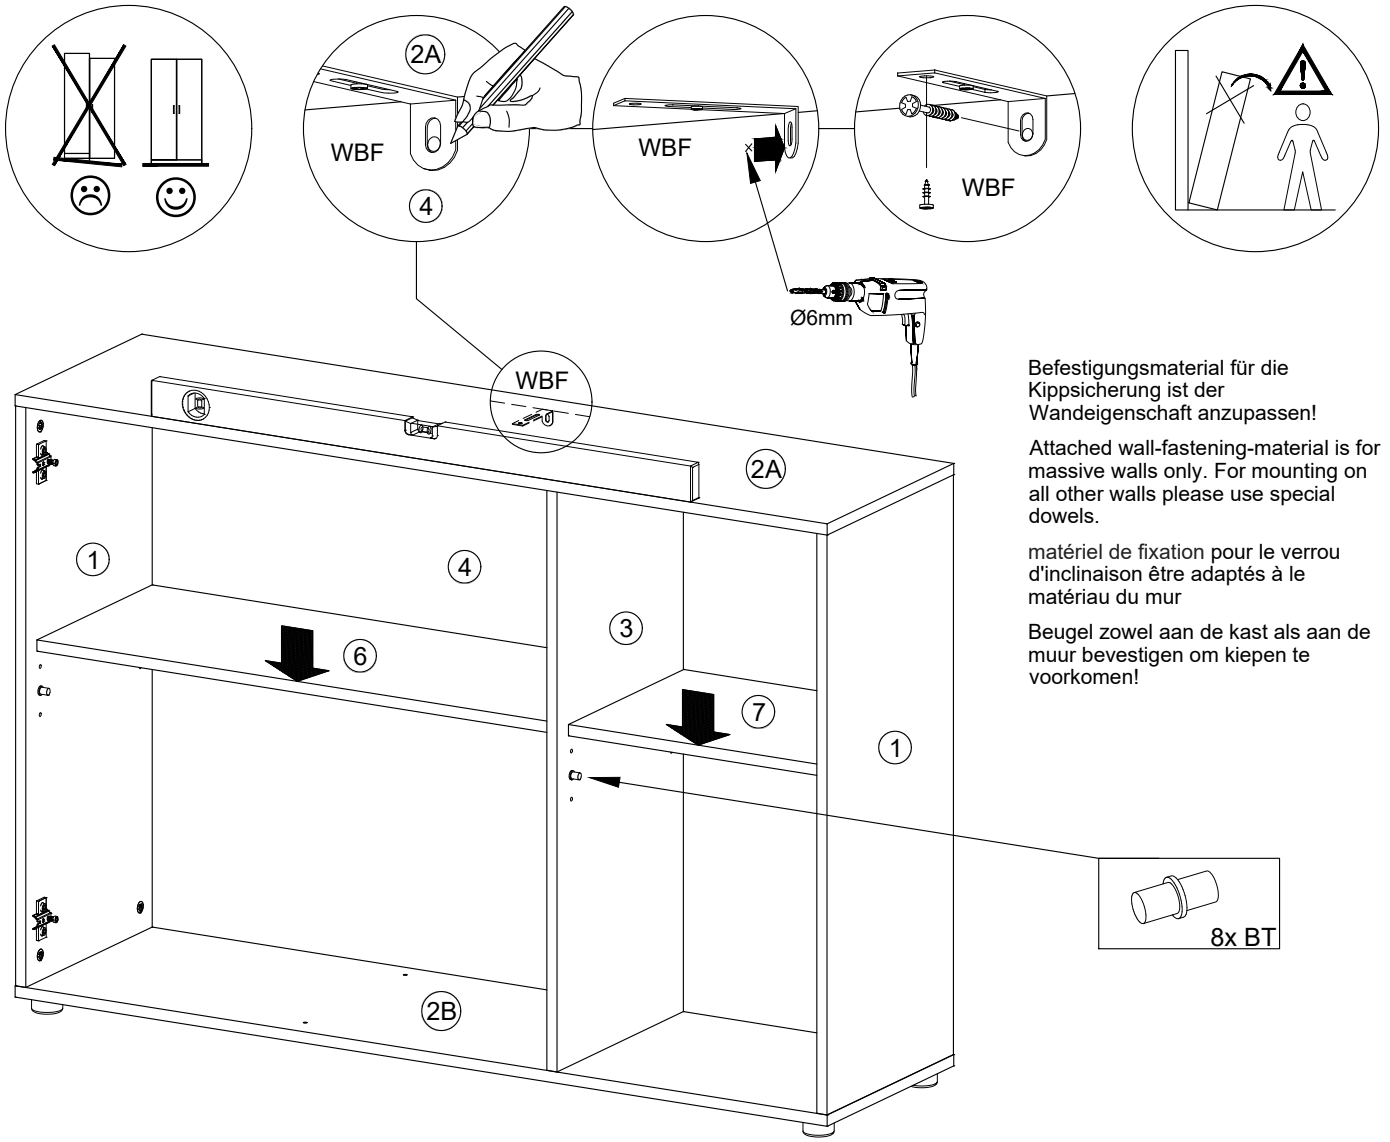
A



B**C**

D**E**

F



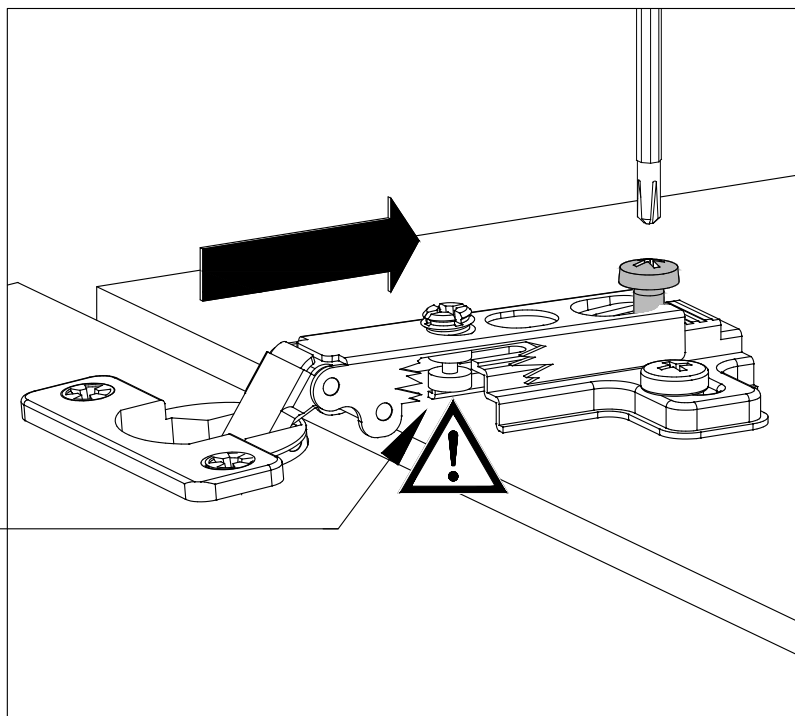
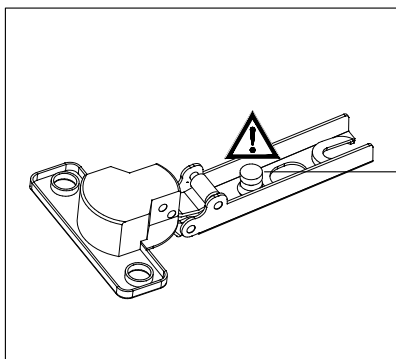

Befestigungsmaterial für die Kippsicherung ist der Wandeigenschaft anzupassen!

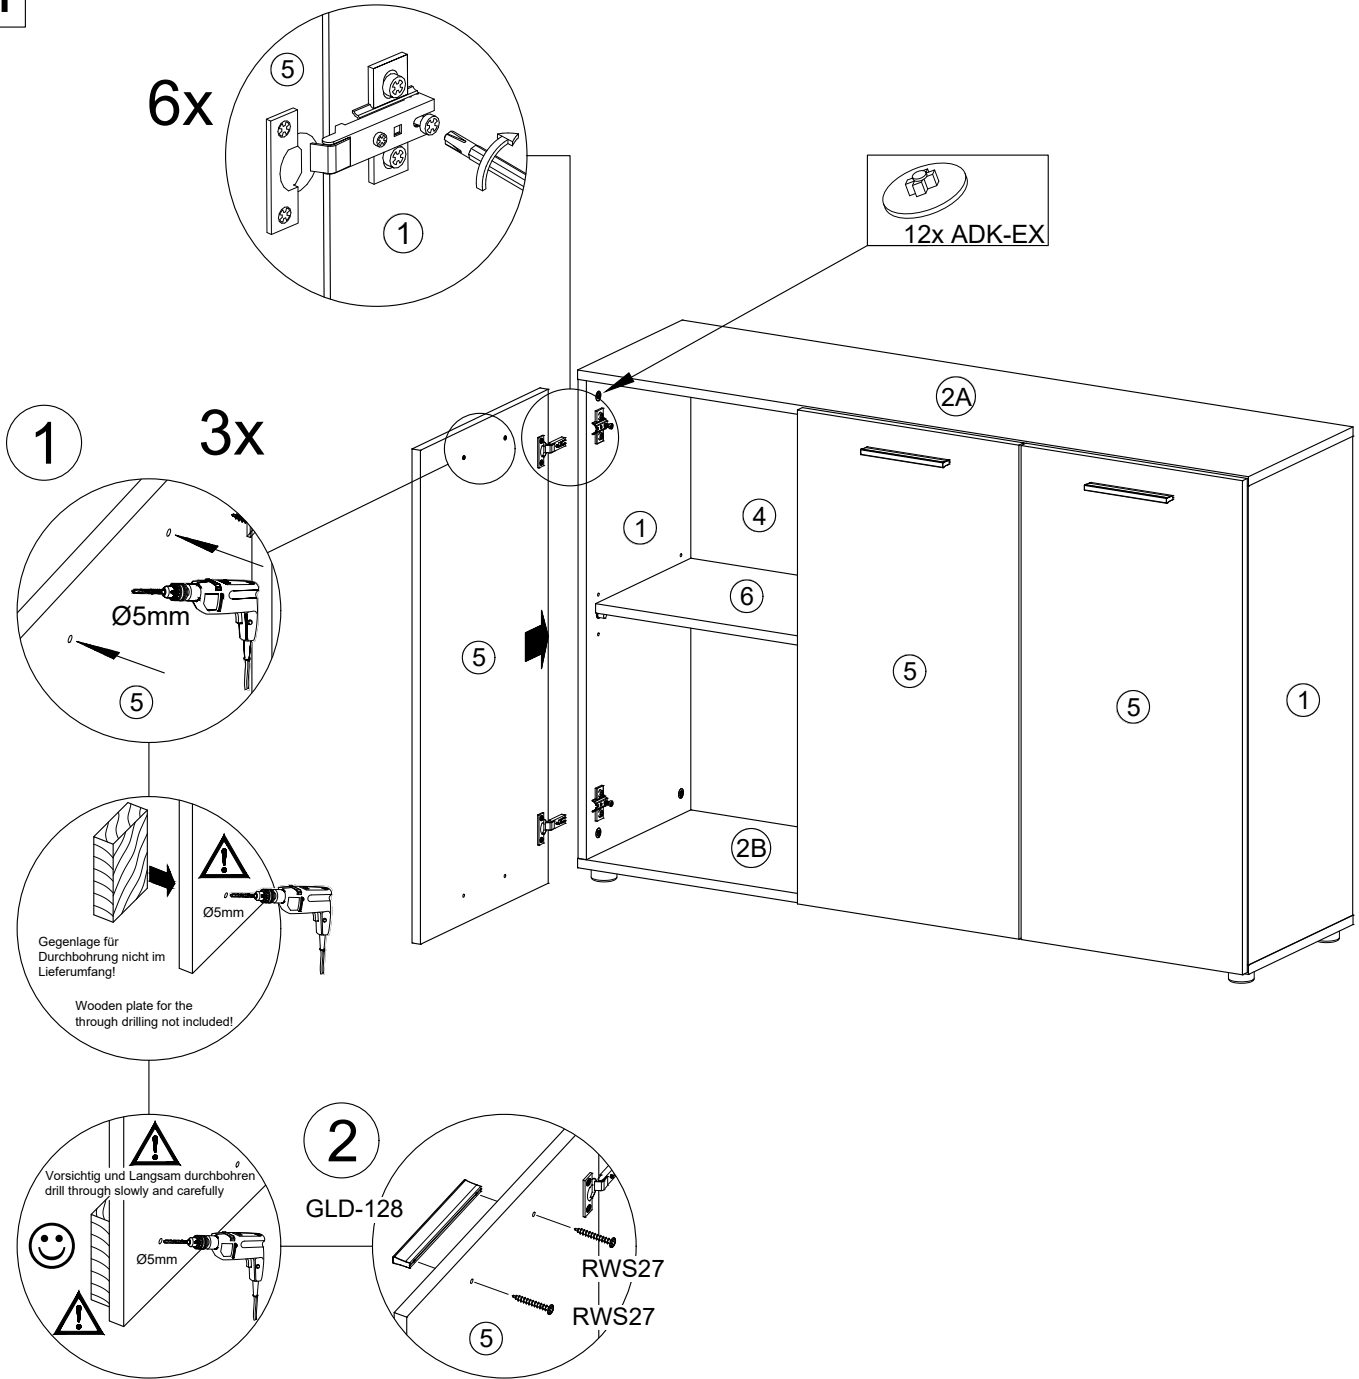
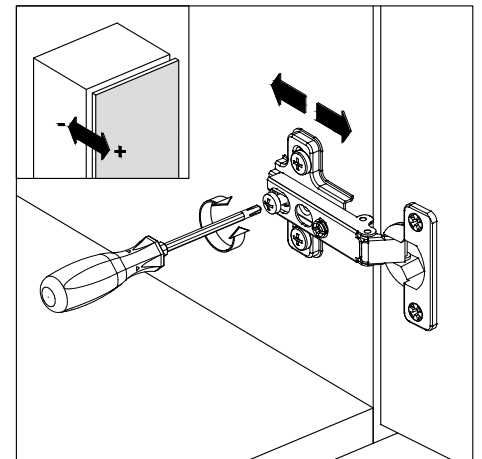
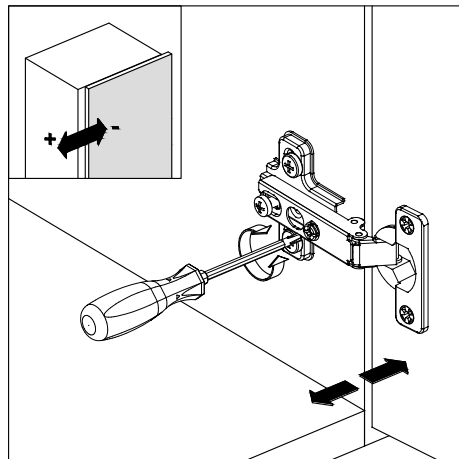
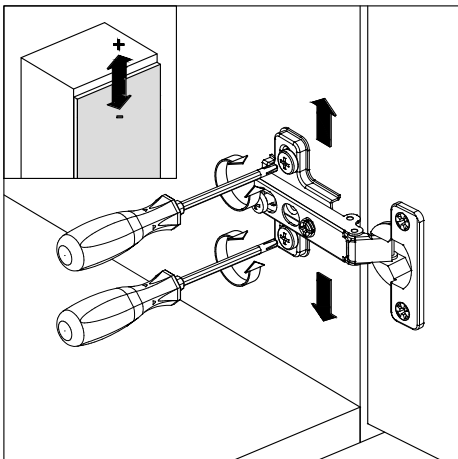
Attached wall-fastening-material is for massive walls only. For mounting on all other walls please use special dowels.

matériel de fixation pour le verrou d'inclinaison être adaptés à le matériau du mur

Beugel zowel aan de kast als aan de muur bevestigen om kiepen te voorkomen!

G



H**I**

J

