
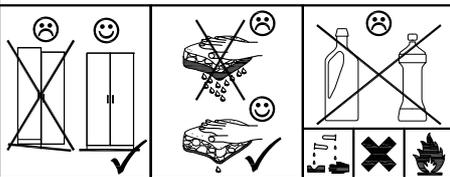


Montageanleitung Bad Bergen Hochschrank

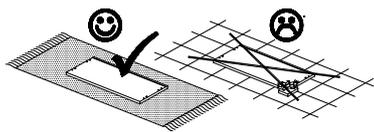

DE - Sicherheitsvorschriften

Beachten Sie bitte unbedingt die angegebenen Aufbauvorschriften.

EN - Caution



Follow carefully the assembling Instructions described in the directions.

FR - Sécurité


Respecter les Instructions de montage décrites dans la notice.

NL - Veiligheid


De In de Gebruiksaanwijzing beschreven Instructies respecteren.

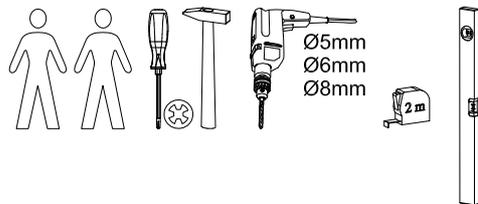


| | |
|------------|-----------|
| 12x ADK-EX | 4x ASD |
| 16x EX | 16x VB |
| 4x RWS15 | 8x RD8x40 |
| 8x SP1 | 4x KP0-26 |
| 4x TB26-0 | 4x SB |
| 2x MS9 | 1x LM |
| 2x SKS2 | 4x ES11 |
| 1x WBF | 8x BT |
| 3x GLD-128 | 6x RWS27 |
| 4x KG | 4x SP5 |

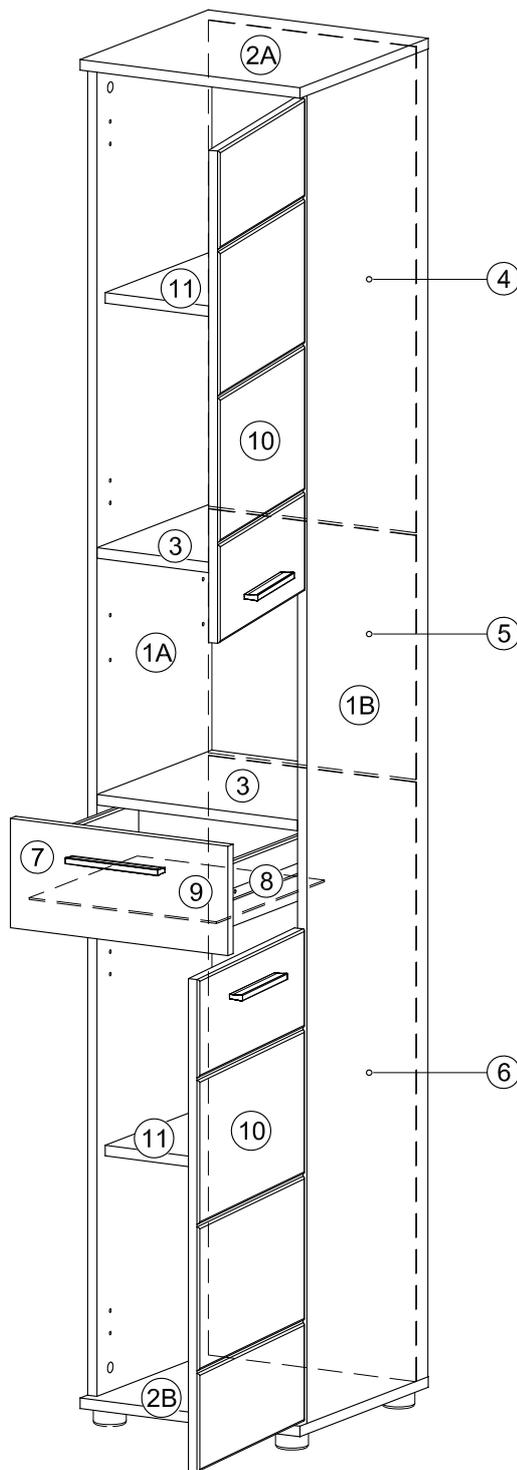

Hinweis: Gezeigte Montage Hochschrank Türen rechts
Hochschrank Türen links spiegelbildlich !

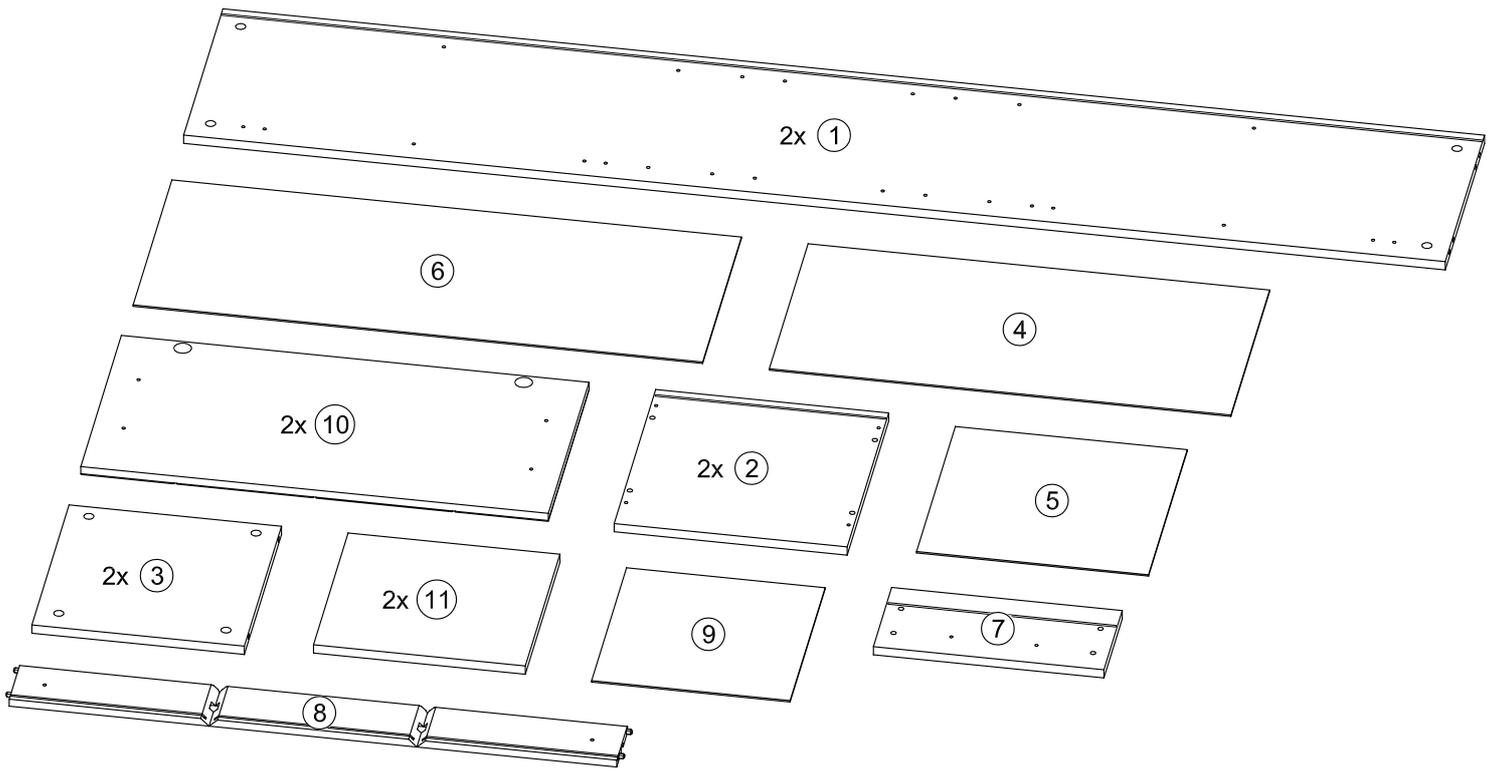


A

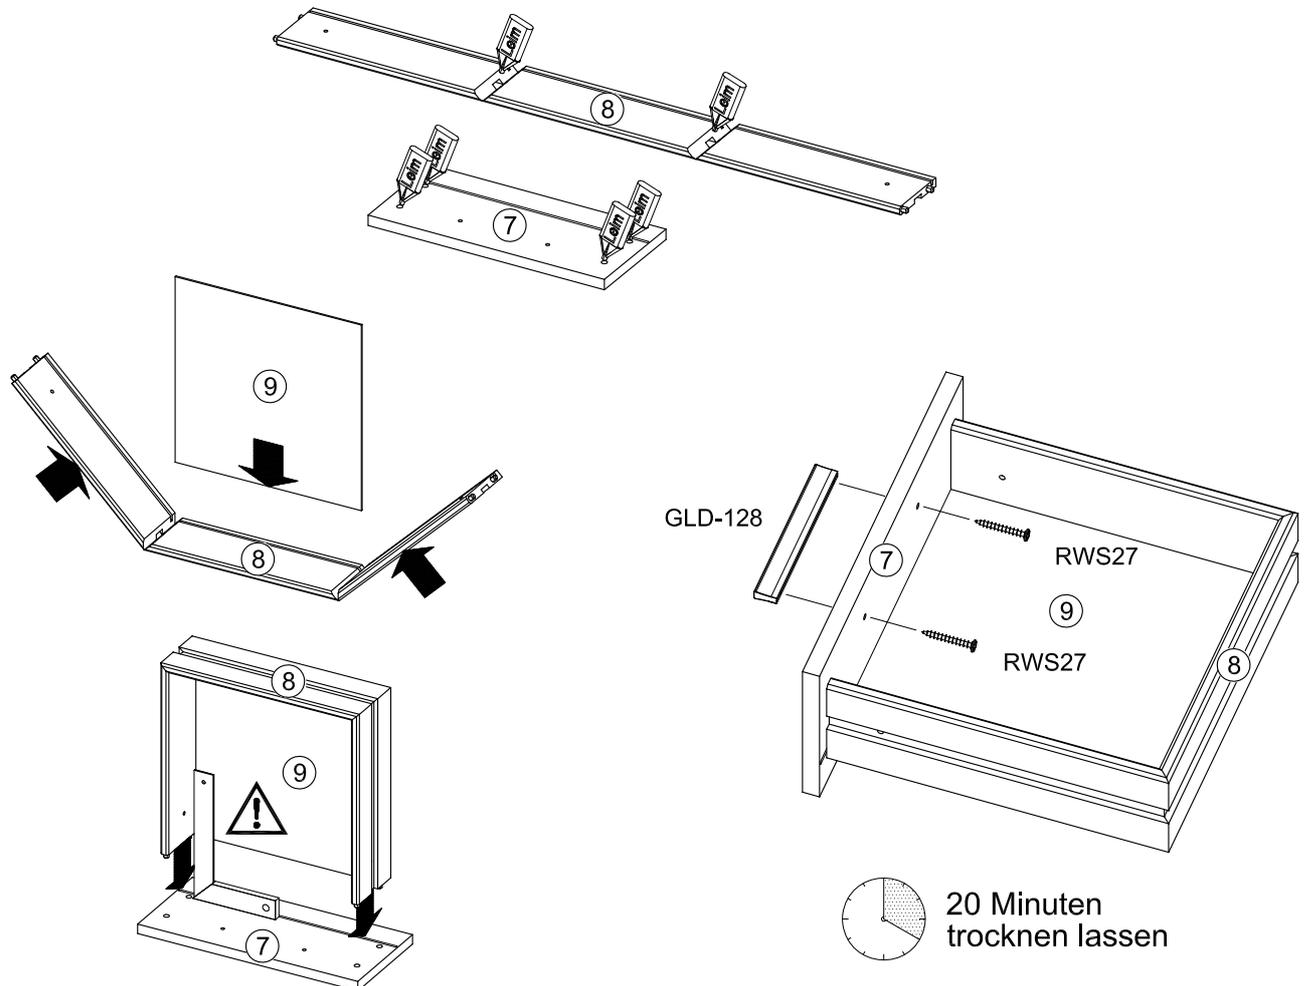





20 Minuten trocknen lassen



B

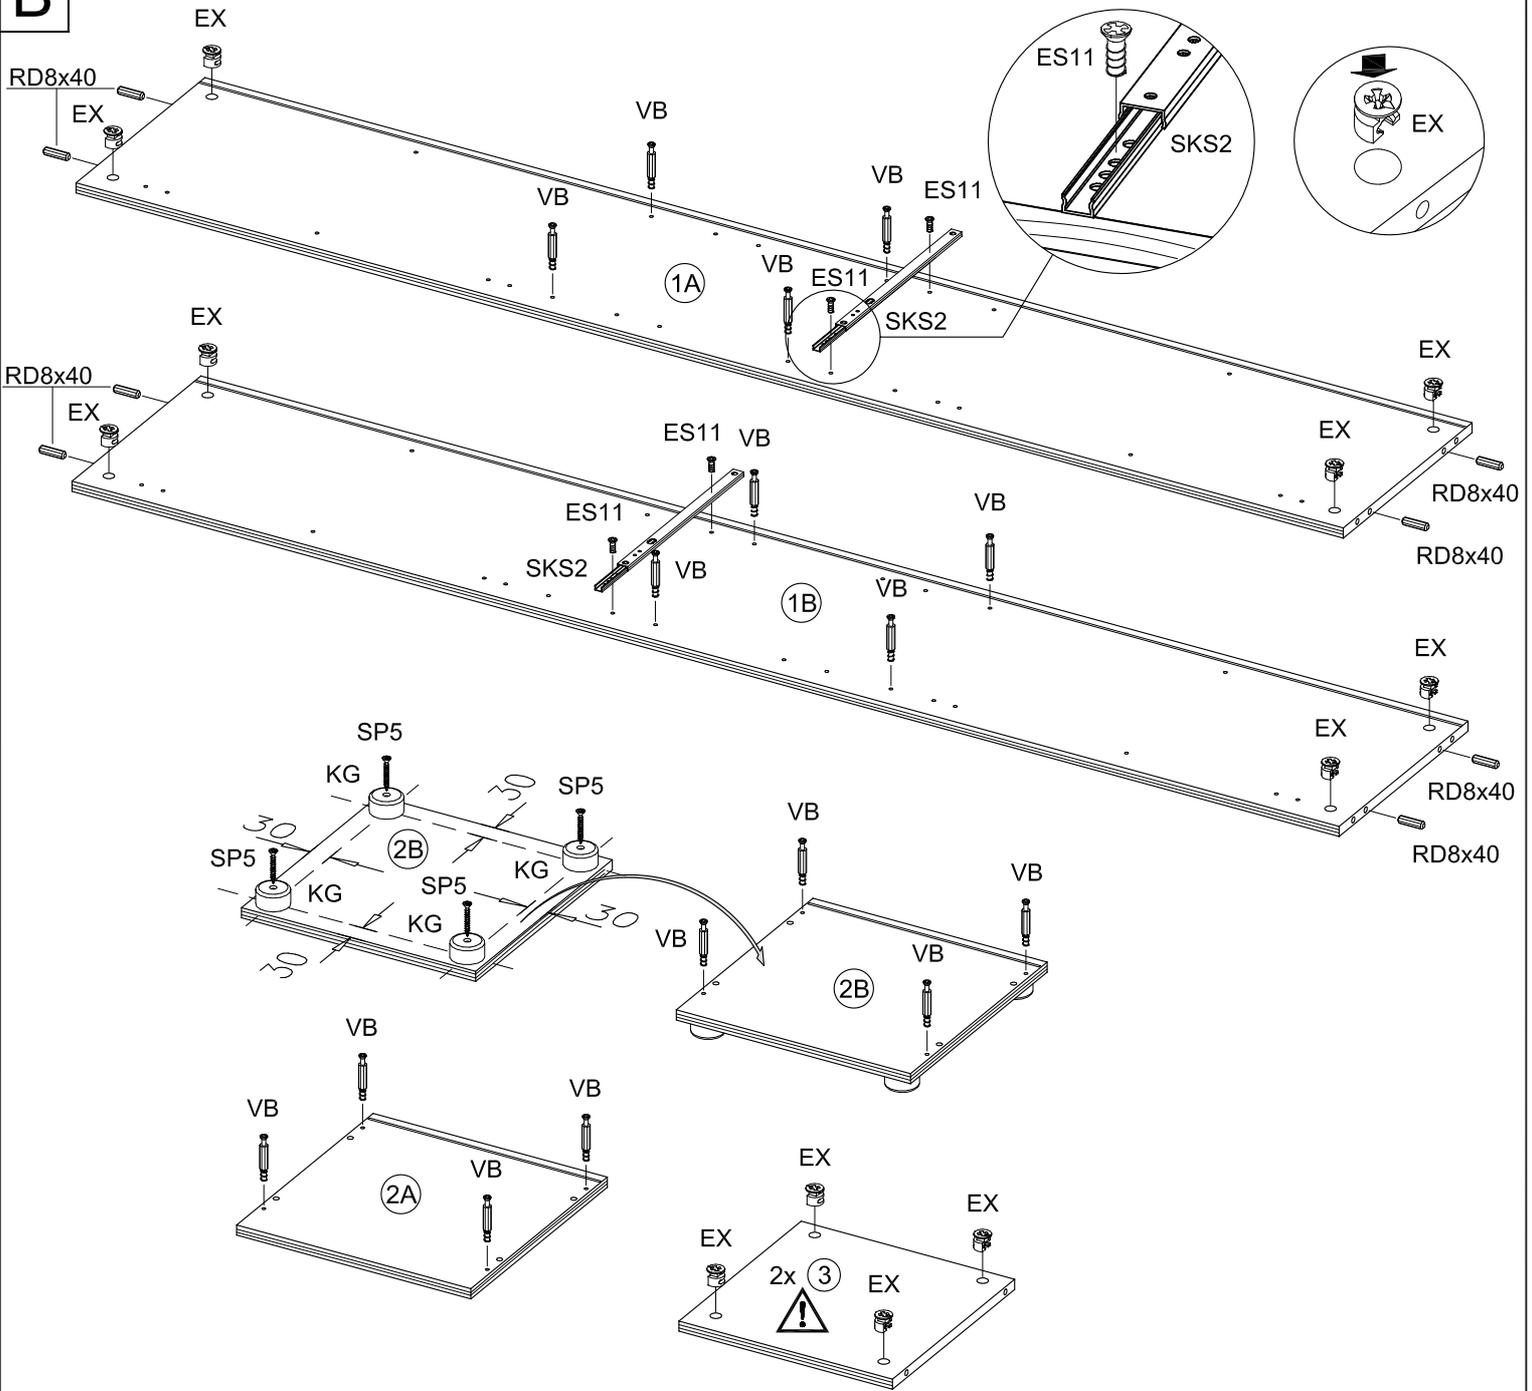

C



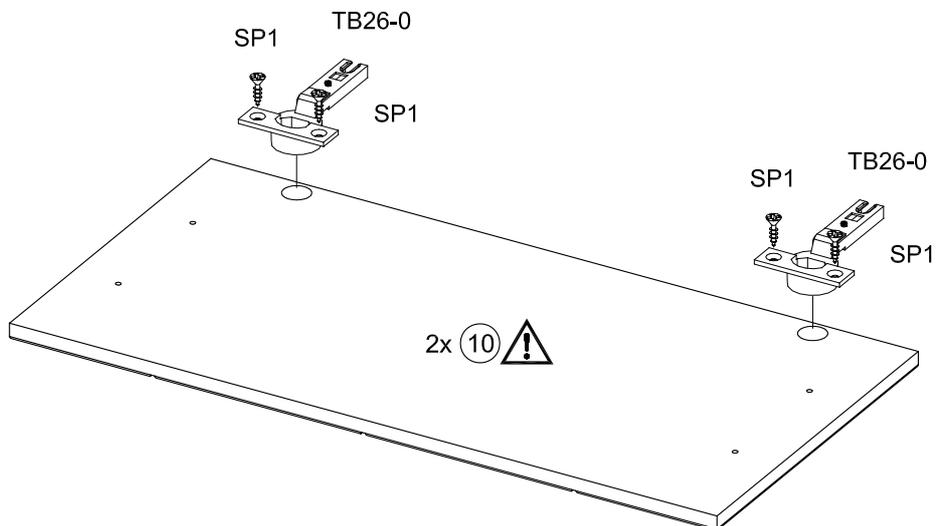


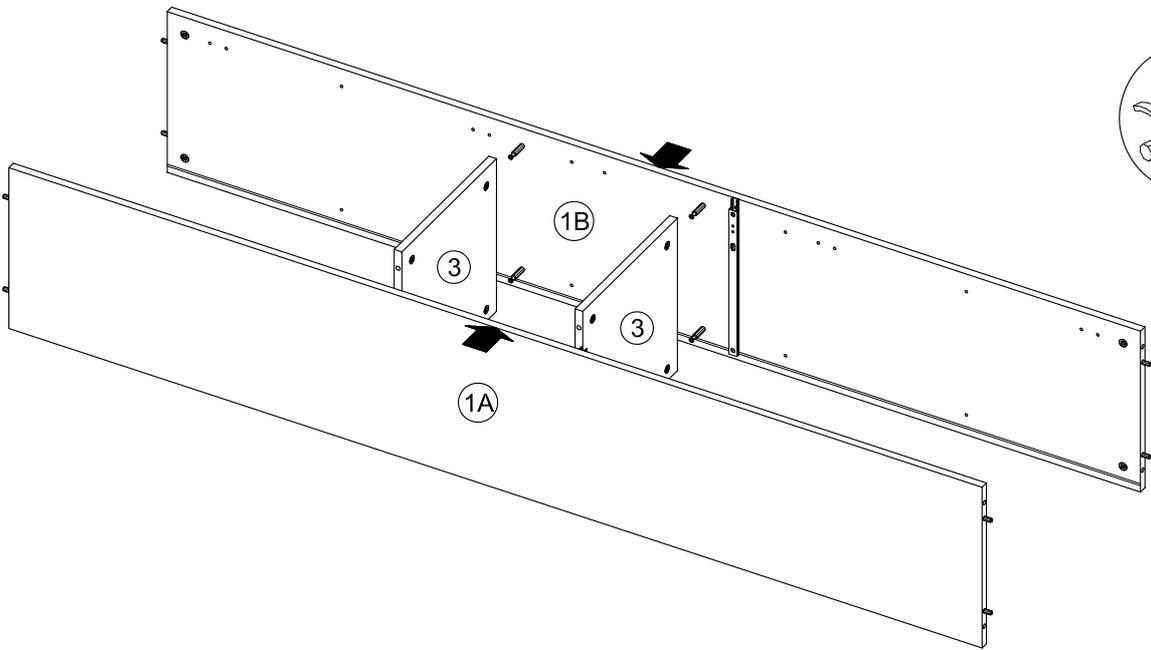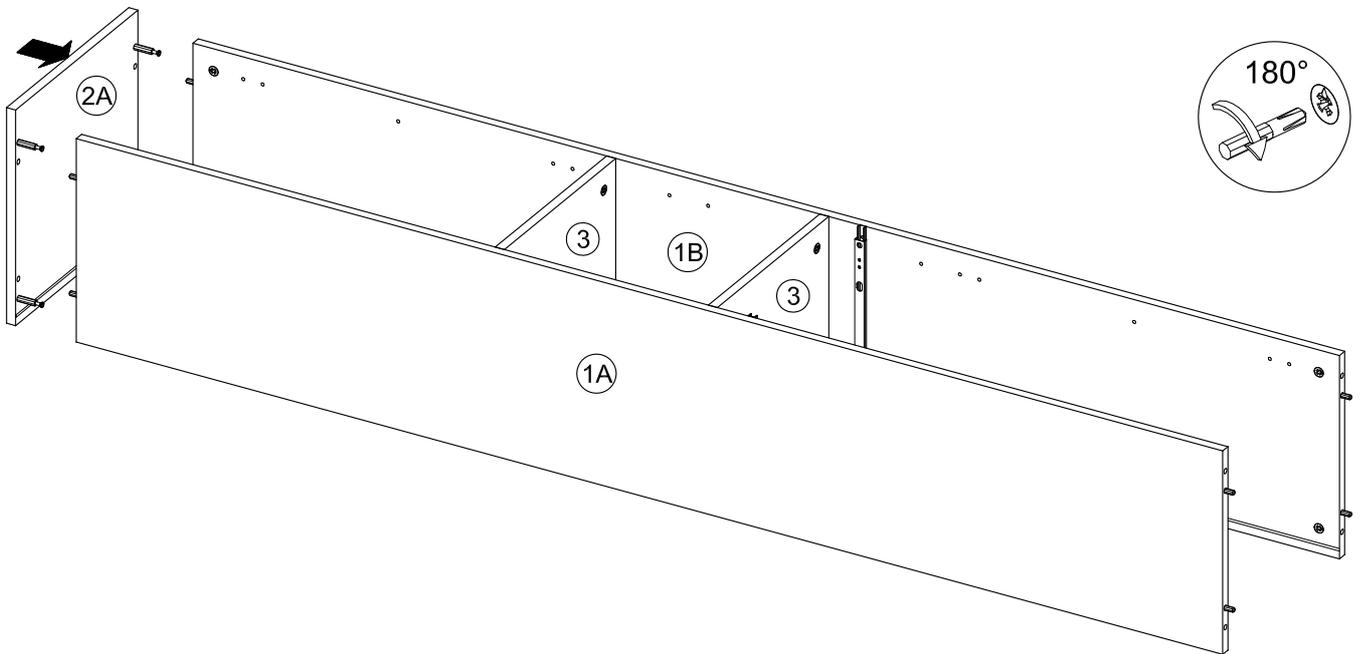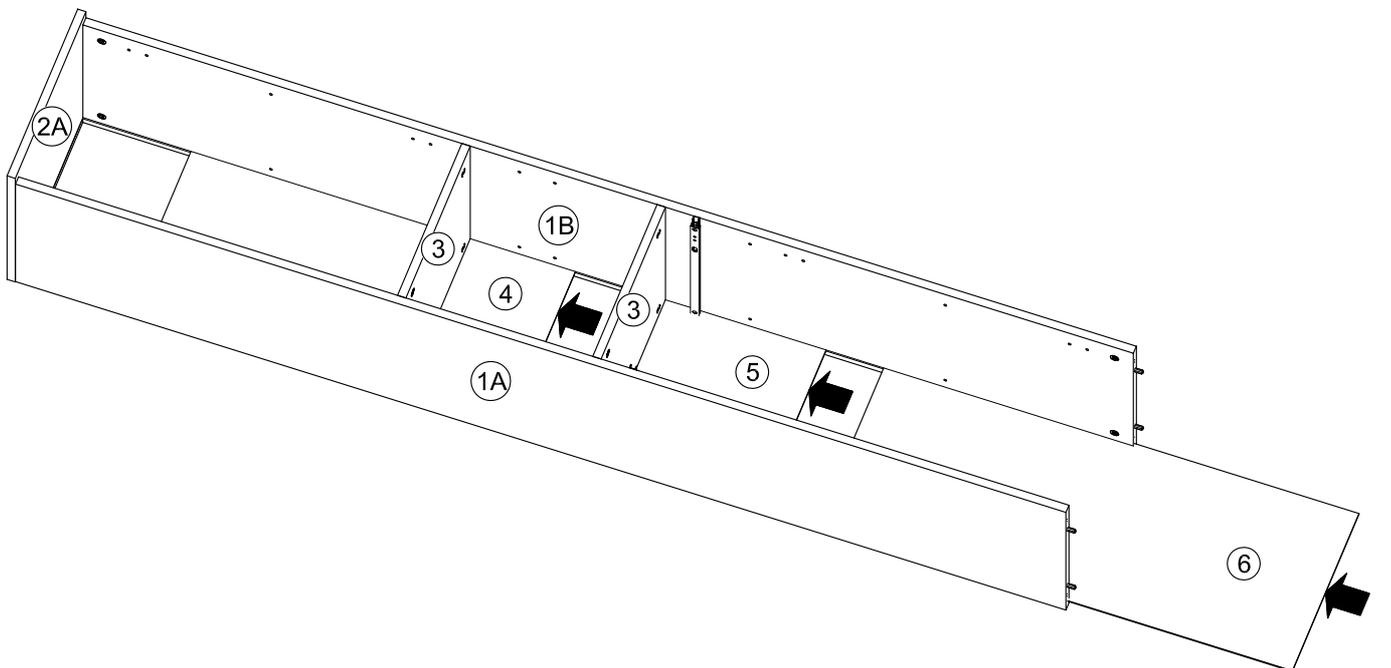D**E****F**

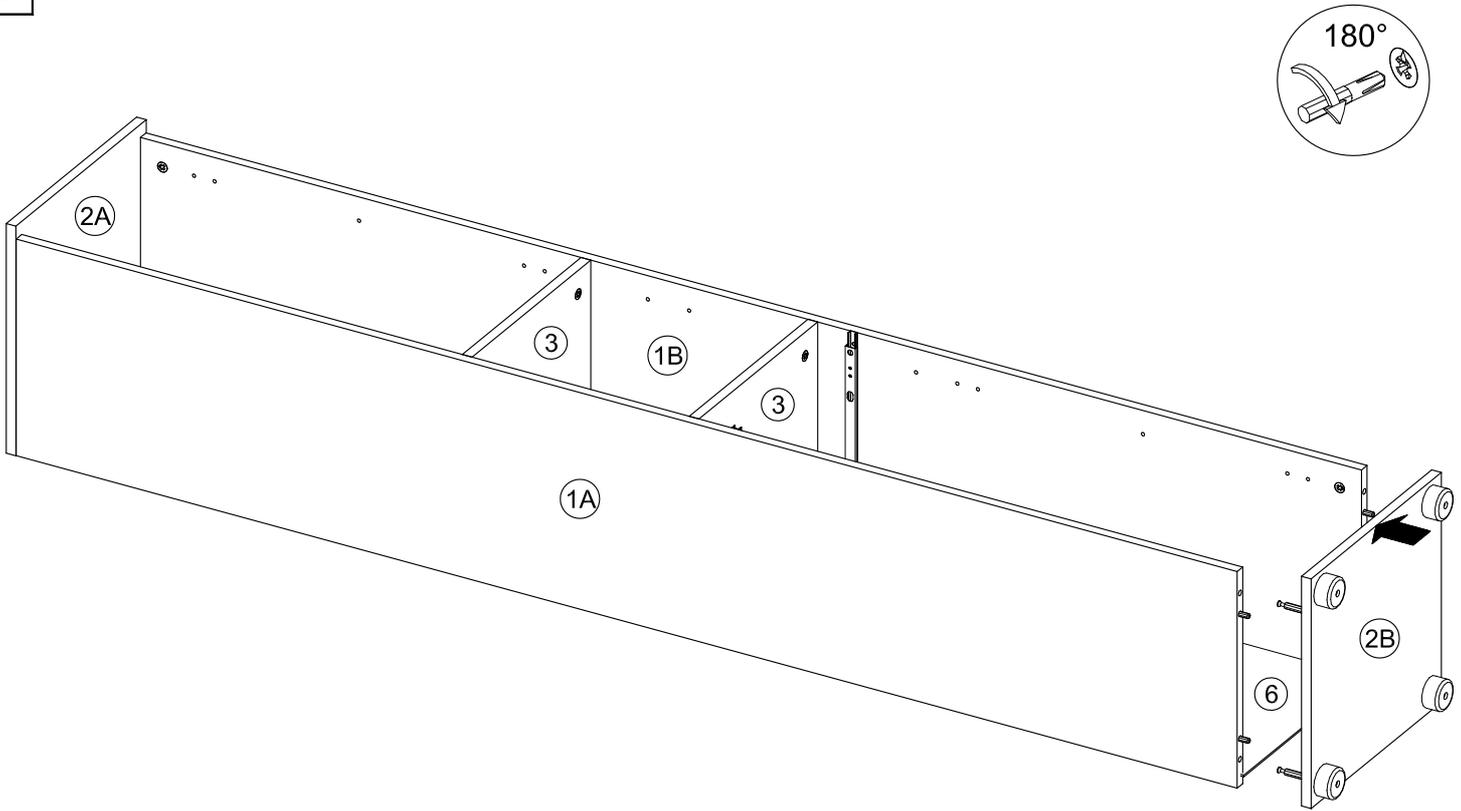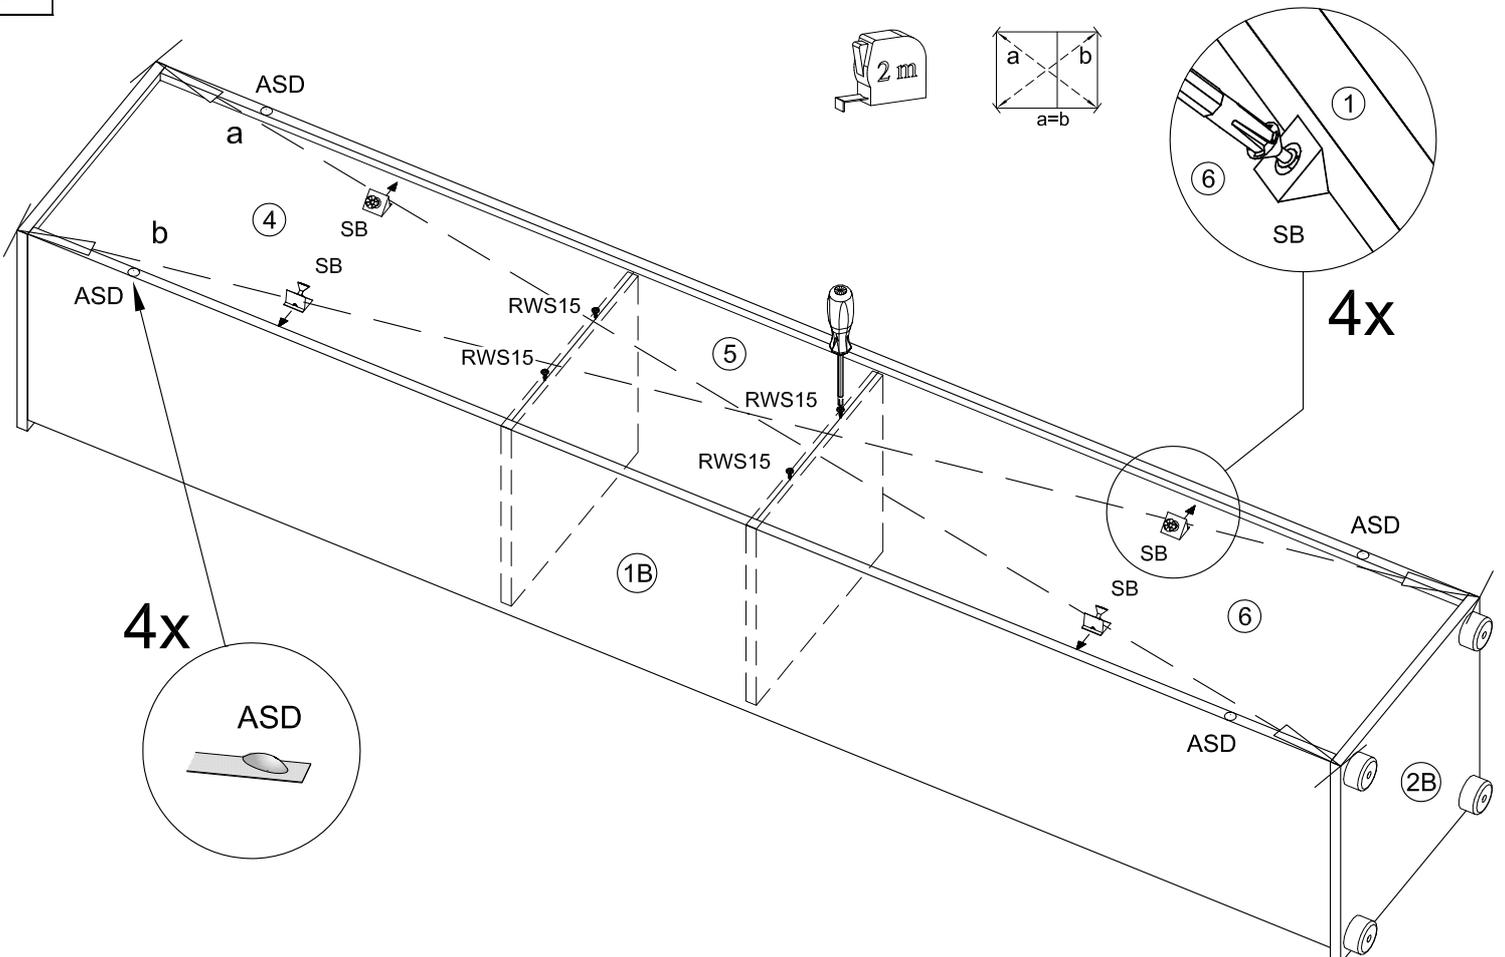G**H**

I

Befestigungsmaterial für die Kippsicherung ist der Wandigkeit anzupassen!

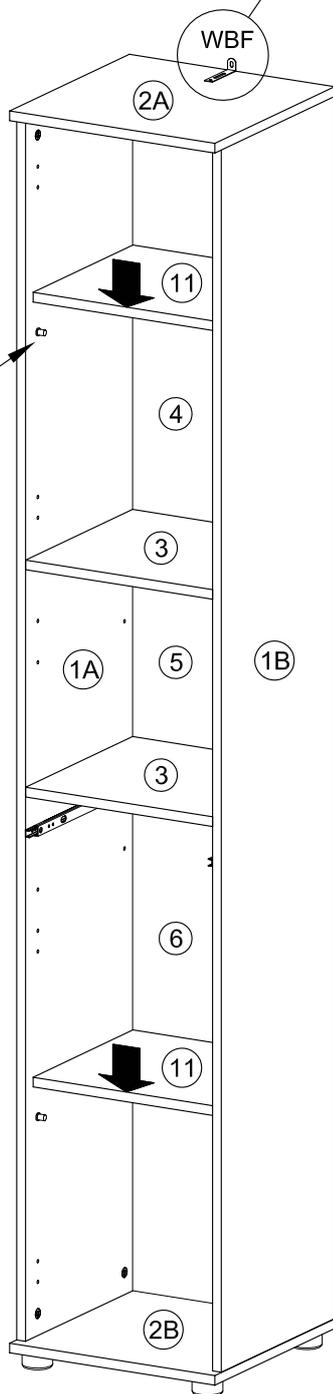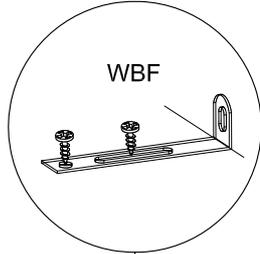

J

