


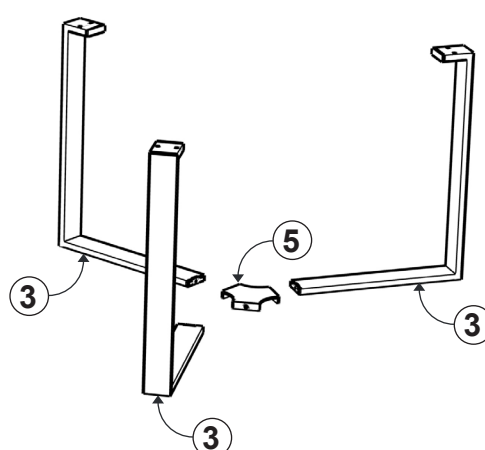
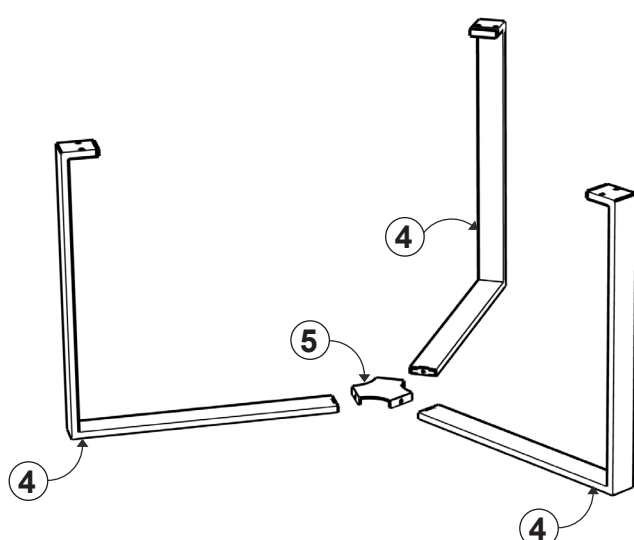
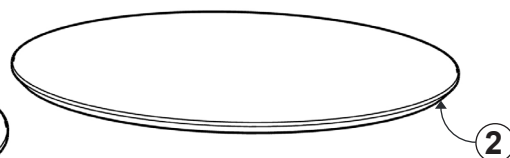
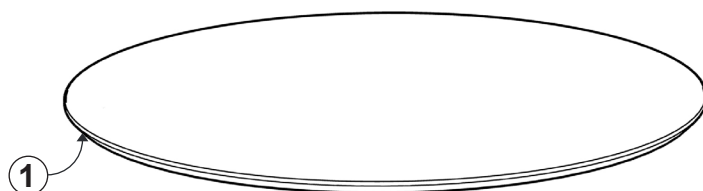
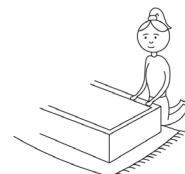
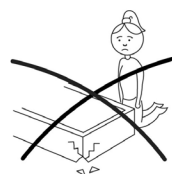
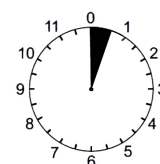
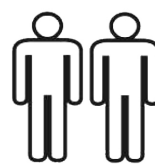
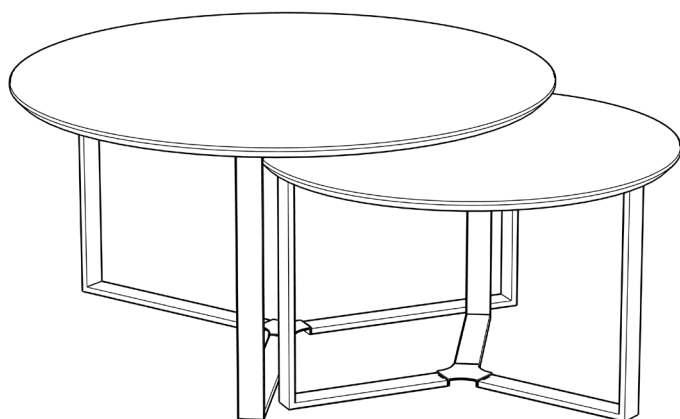
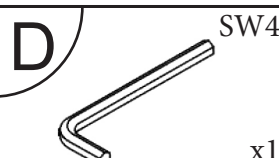
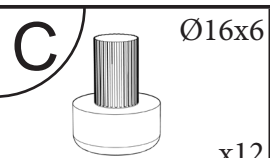


Massa CT

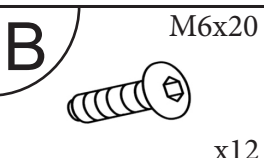


1 / 1	1	x1	Ø80x18
1 / 1	2	x1	Ø60x18
1 / 1	3	x3	382x238x40
1 / 1	4	x3	432x338x40
1 / 1	5	x2	80x80x13

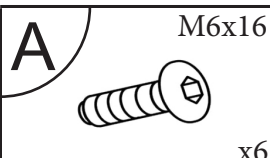

I.

A


M6x16



x3

B


M6x20



x6

C


Ø16x6




x6

D


SW4

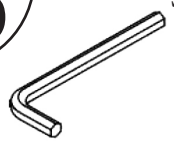


x1

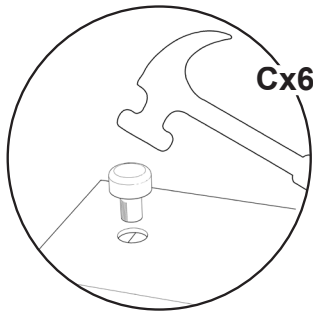



Cx6

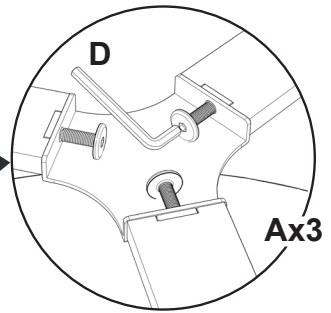




Ax3

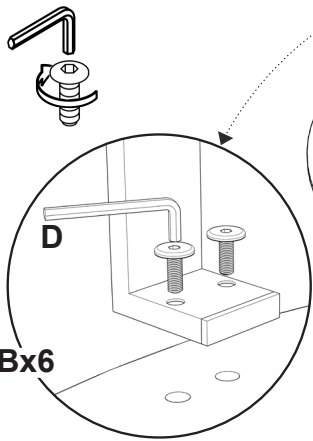





Bx6

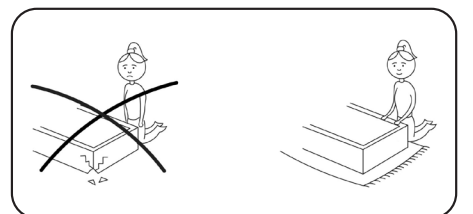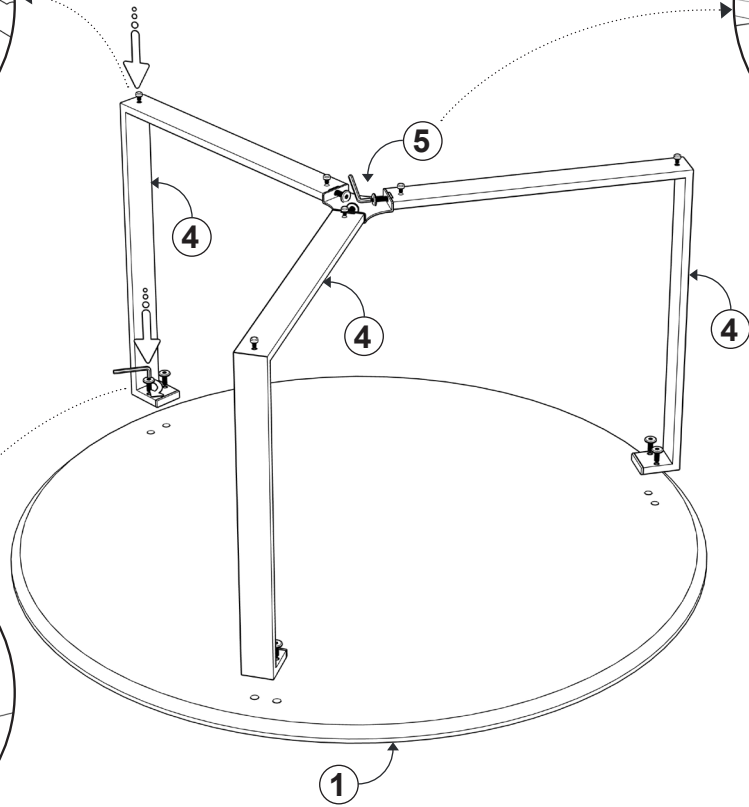

II.

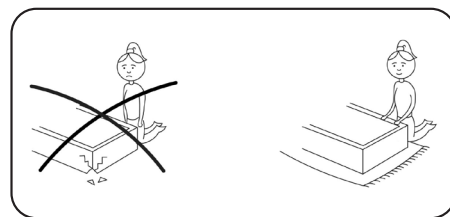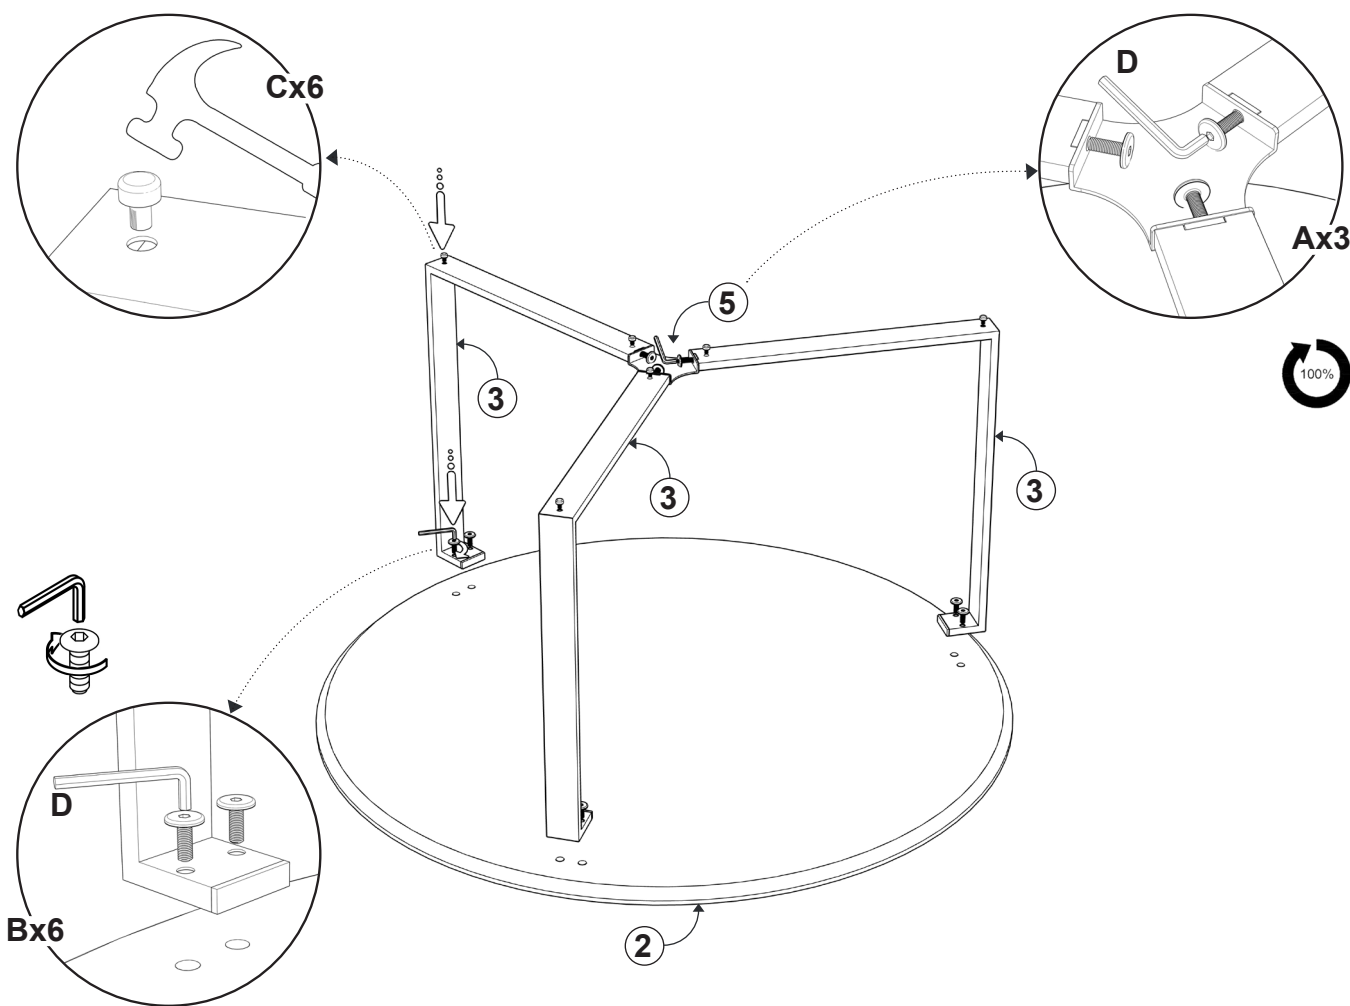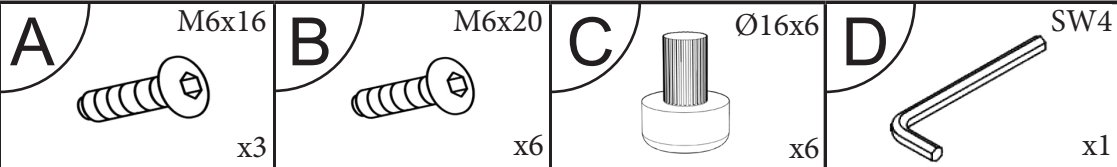

III.

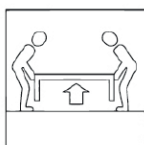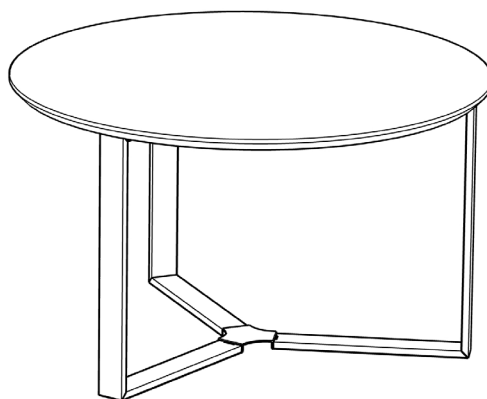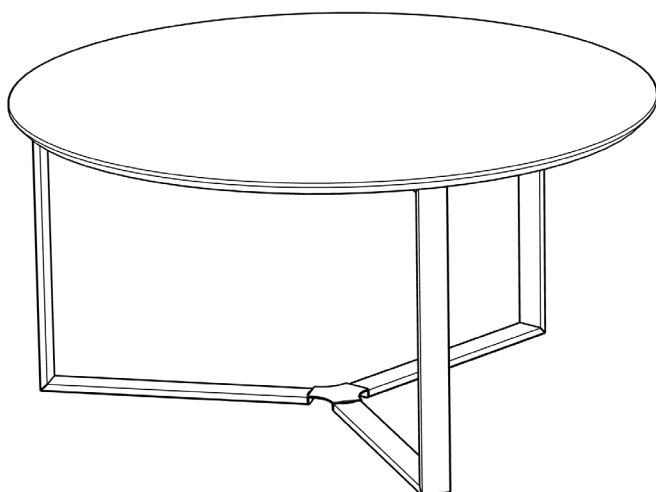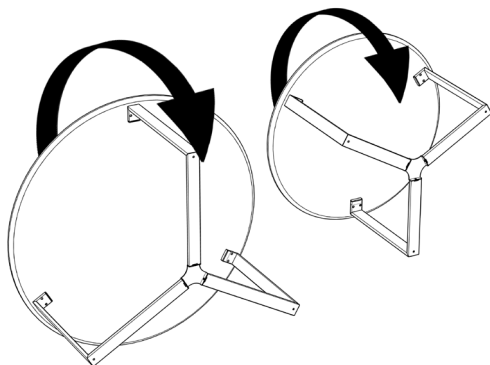

**LE TRI
+ FACILE**



Séparez les éléments avant de tri