
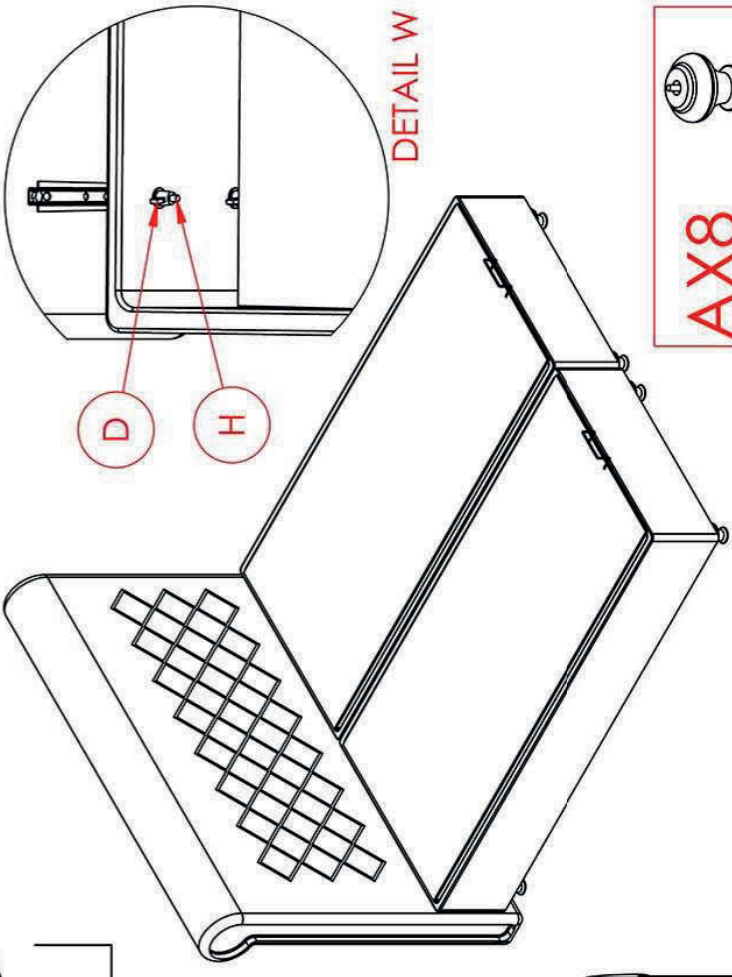
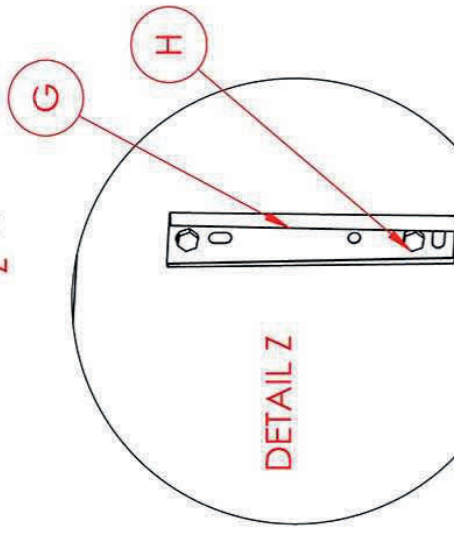
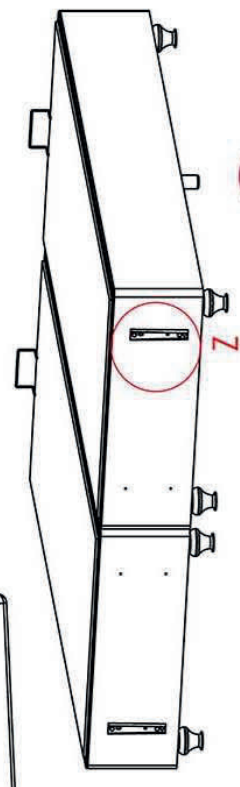
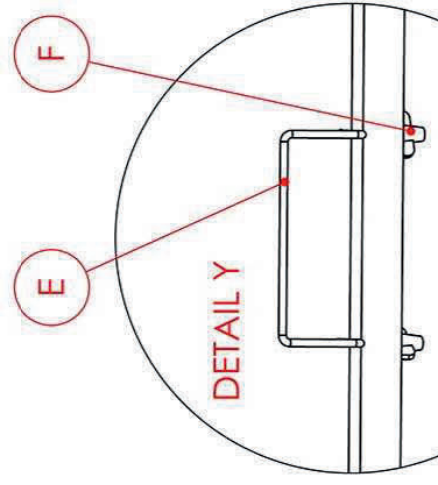
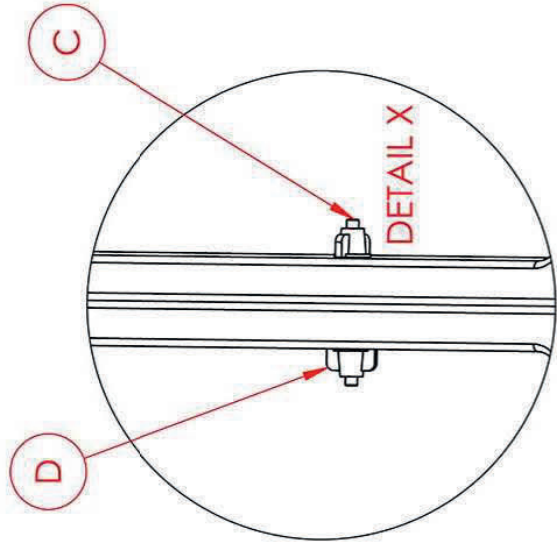


MONTAGEANLEITUNG ENZO

seher BOMIS bader

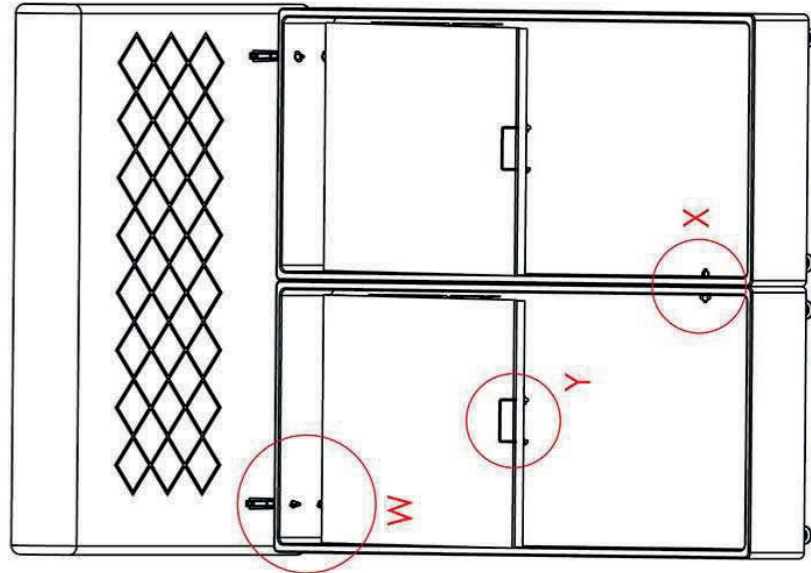

DETAIL W

AX8	BX4	CX1	DX6	EX2	FX4	GX2	HX4