
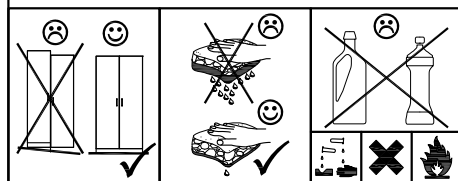


Montageanleitung

Bad Stockholm Waschbeckenunterschrank

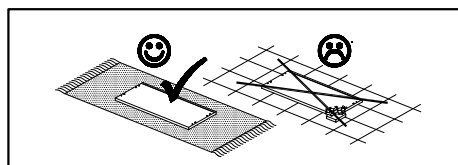

DE - Sicherheitsvorschriften

Beachten Sie bitte unbedingt die angegebenen Aufbauvorschriften.

EN - Caution




Follow carefully the assembling Instructions described in the directions.

FR - Sécurité

Respecter les Instructions de montage décrites dans la notice.

NL - Veiligheid


De In de Gebruiksaanwijzing beschreven Instructies respecteren.

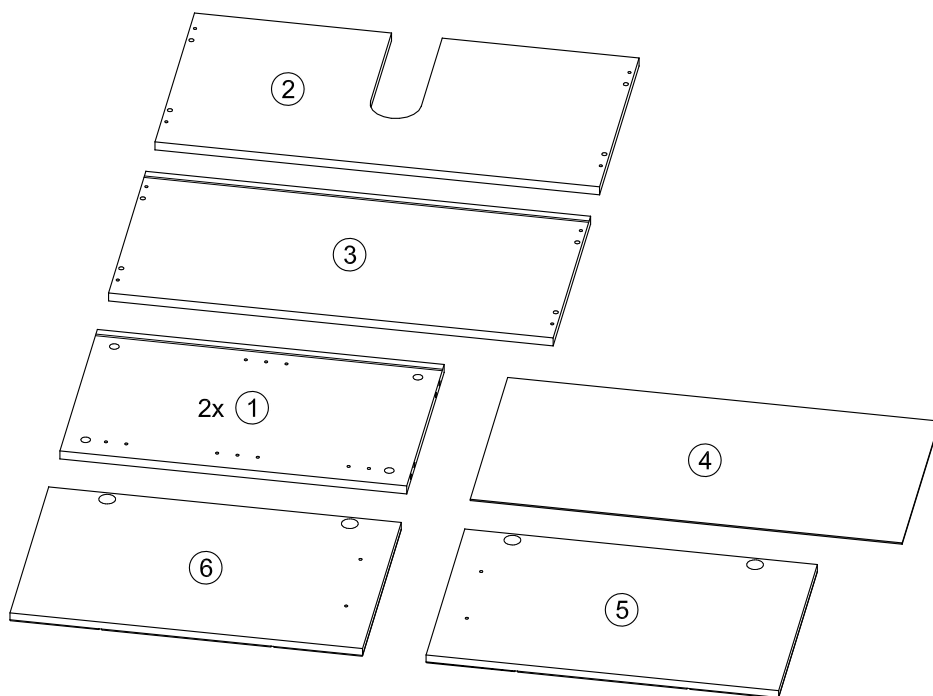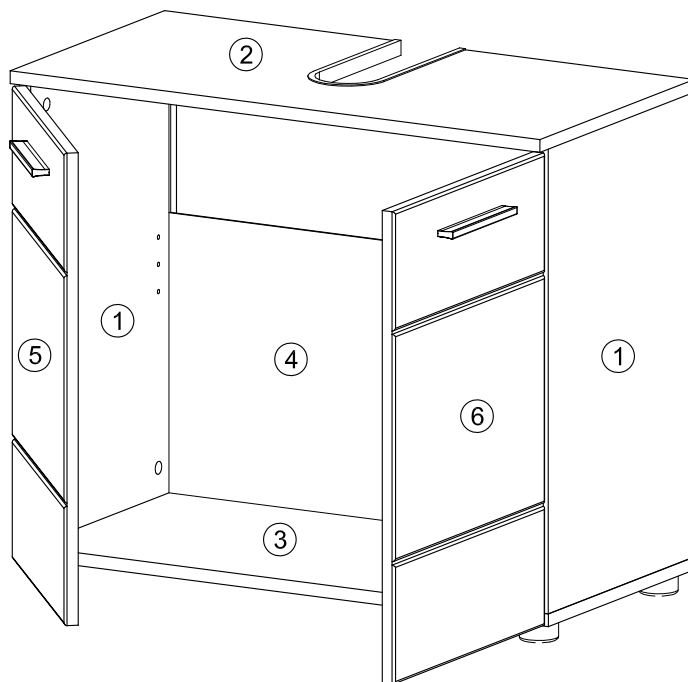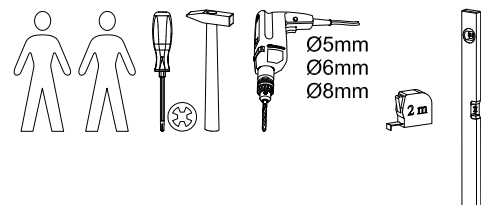


8x EX	8x VB
8x ADK-EX	8x RD8x40
8x SP1	4x KP0-26
4x TB26-0	4x SB
2x GLD-128	4x RWS27
1x WBF	1x KKP
4x KG	4x SP5

Version 1.0


C

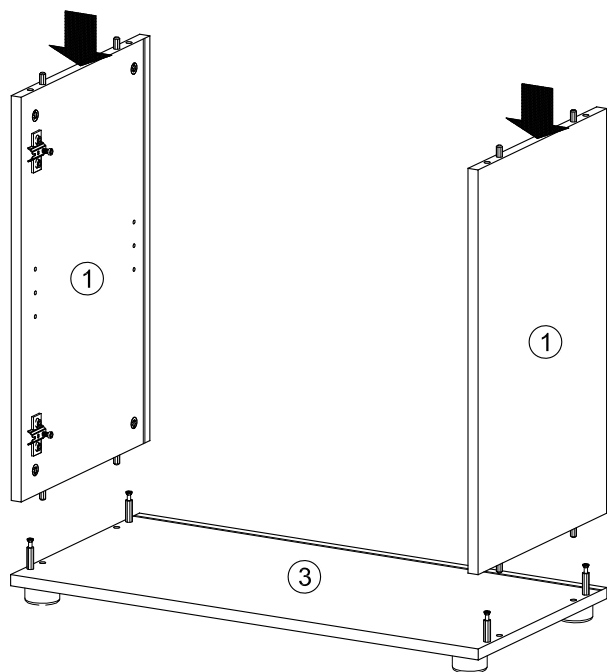


D

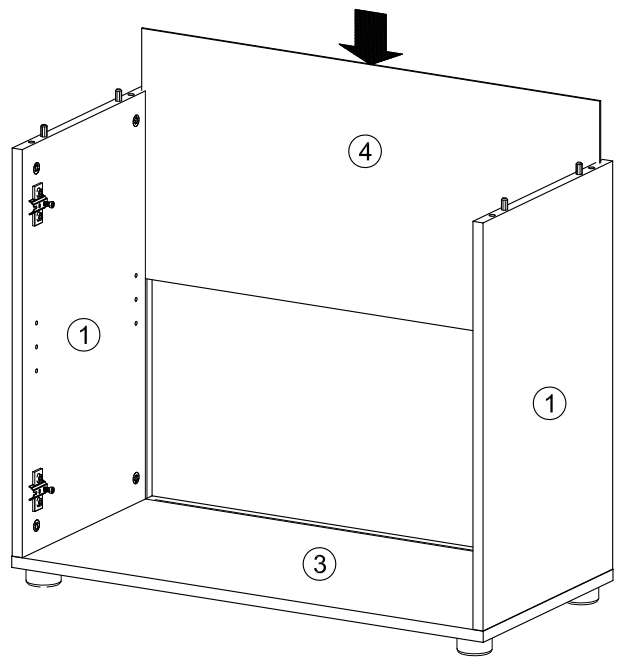

E

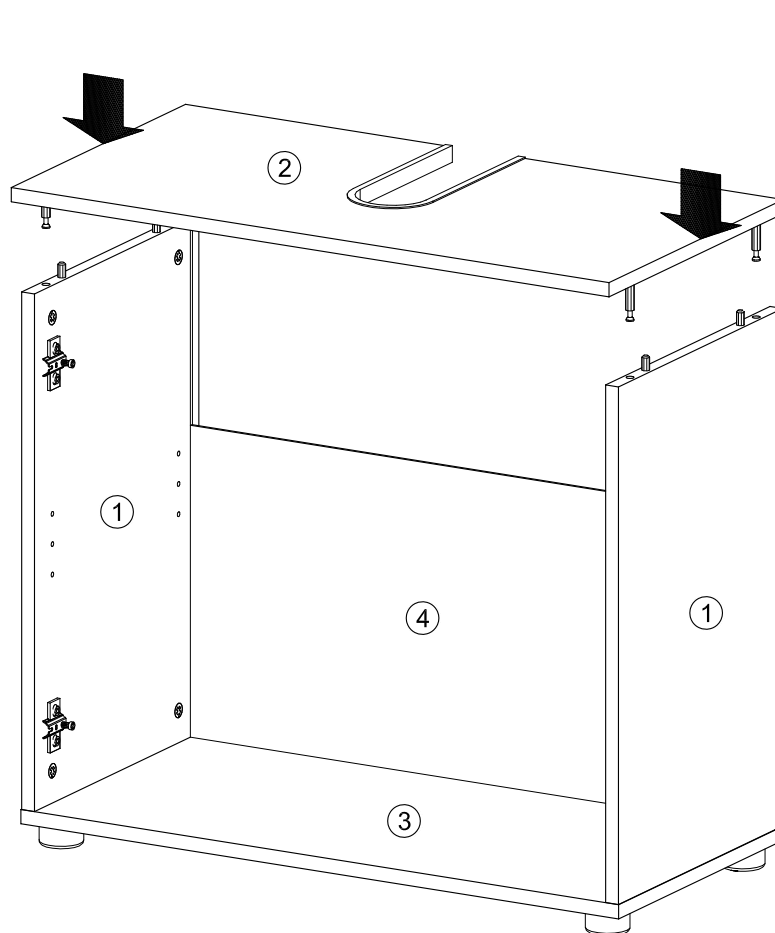

F

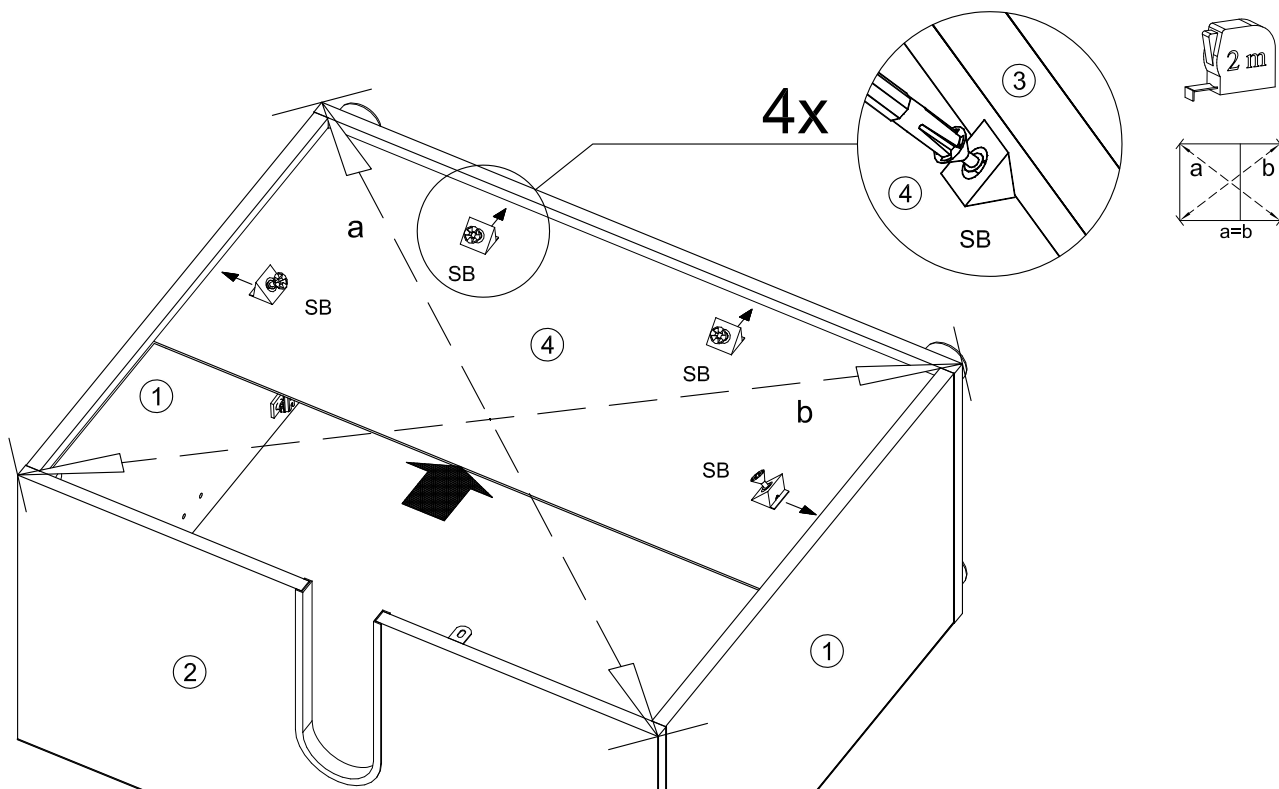

G

Bitte vermeiden Sie alkoholhaltige Substanzen wie Parfums und Deodorants, sowie scharfe Reiniger direkt auf den Glanz-Oberflächen. Nasse Flächen schnellstmöglich trockenwischen, damit die Feuchtigkeit nicht in die Oberfläche eindringt.

