
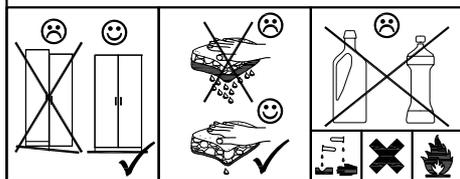


# Montageanleitung Mailand 63 Büro Schrank 4trg., 2SK

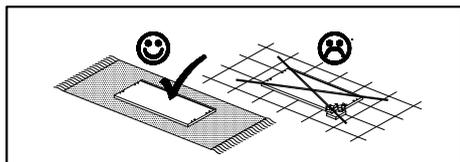

## DE - Sicherheitsvorschriften

Beachten Sie bitte unbedingt die angegebenen Aufbauvorschriften.

## EN - Caution




Follow carefully the assembling instructions described in the directions.

## FR - Sécurité


Respecter les Instructions de montage décrites dans la notice.



## NL - Veiligheid



De In de Gebruiksaanwijzing beschreven Instructies respecteren.

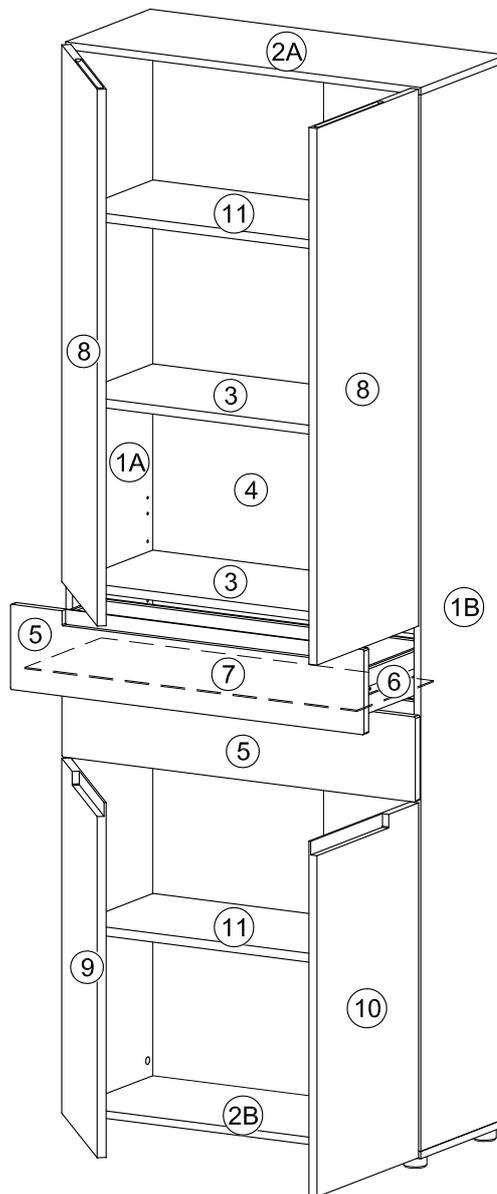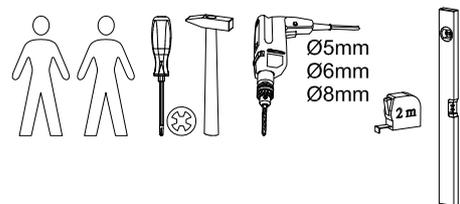


	16x EX		12x ADK-EX
	16x VB		8x40
	3,5x13		8x RD8x40
	16x SP1		8x KP2-35
	8x TB35-0		6x11
	4x SKS2		8x ES11
	12x SB		4x MS9
	5x KG		2x LM
	1x WBF		8x BT2
	3,5x30		5x SP5

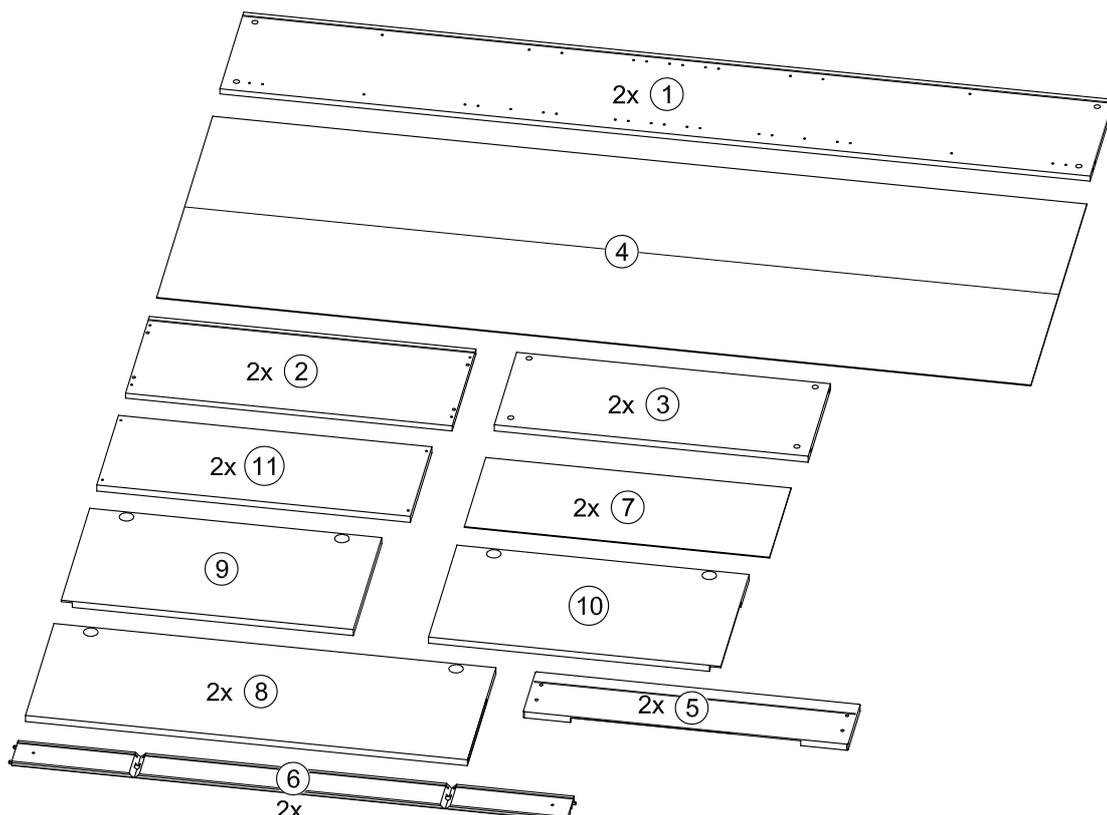

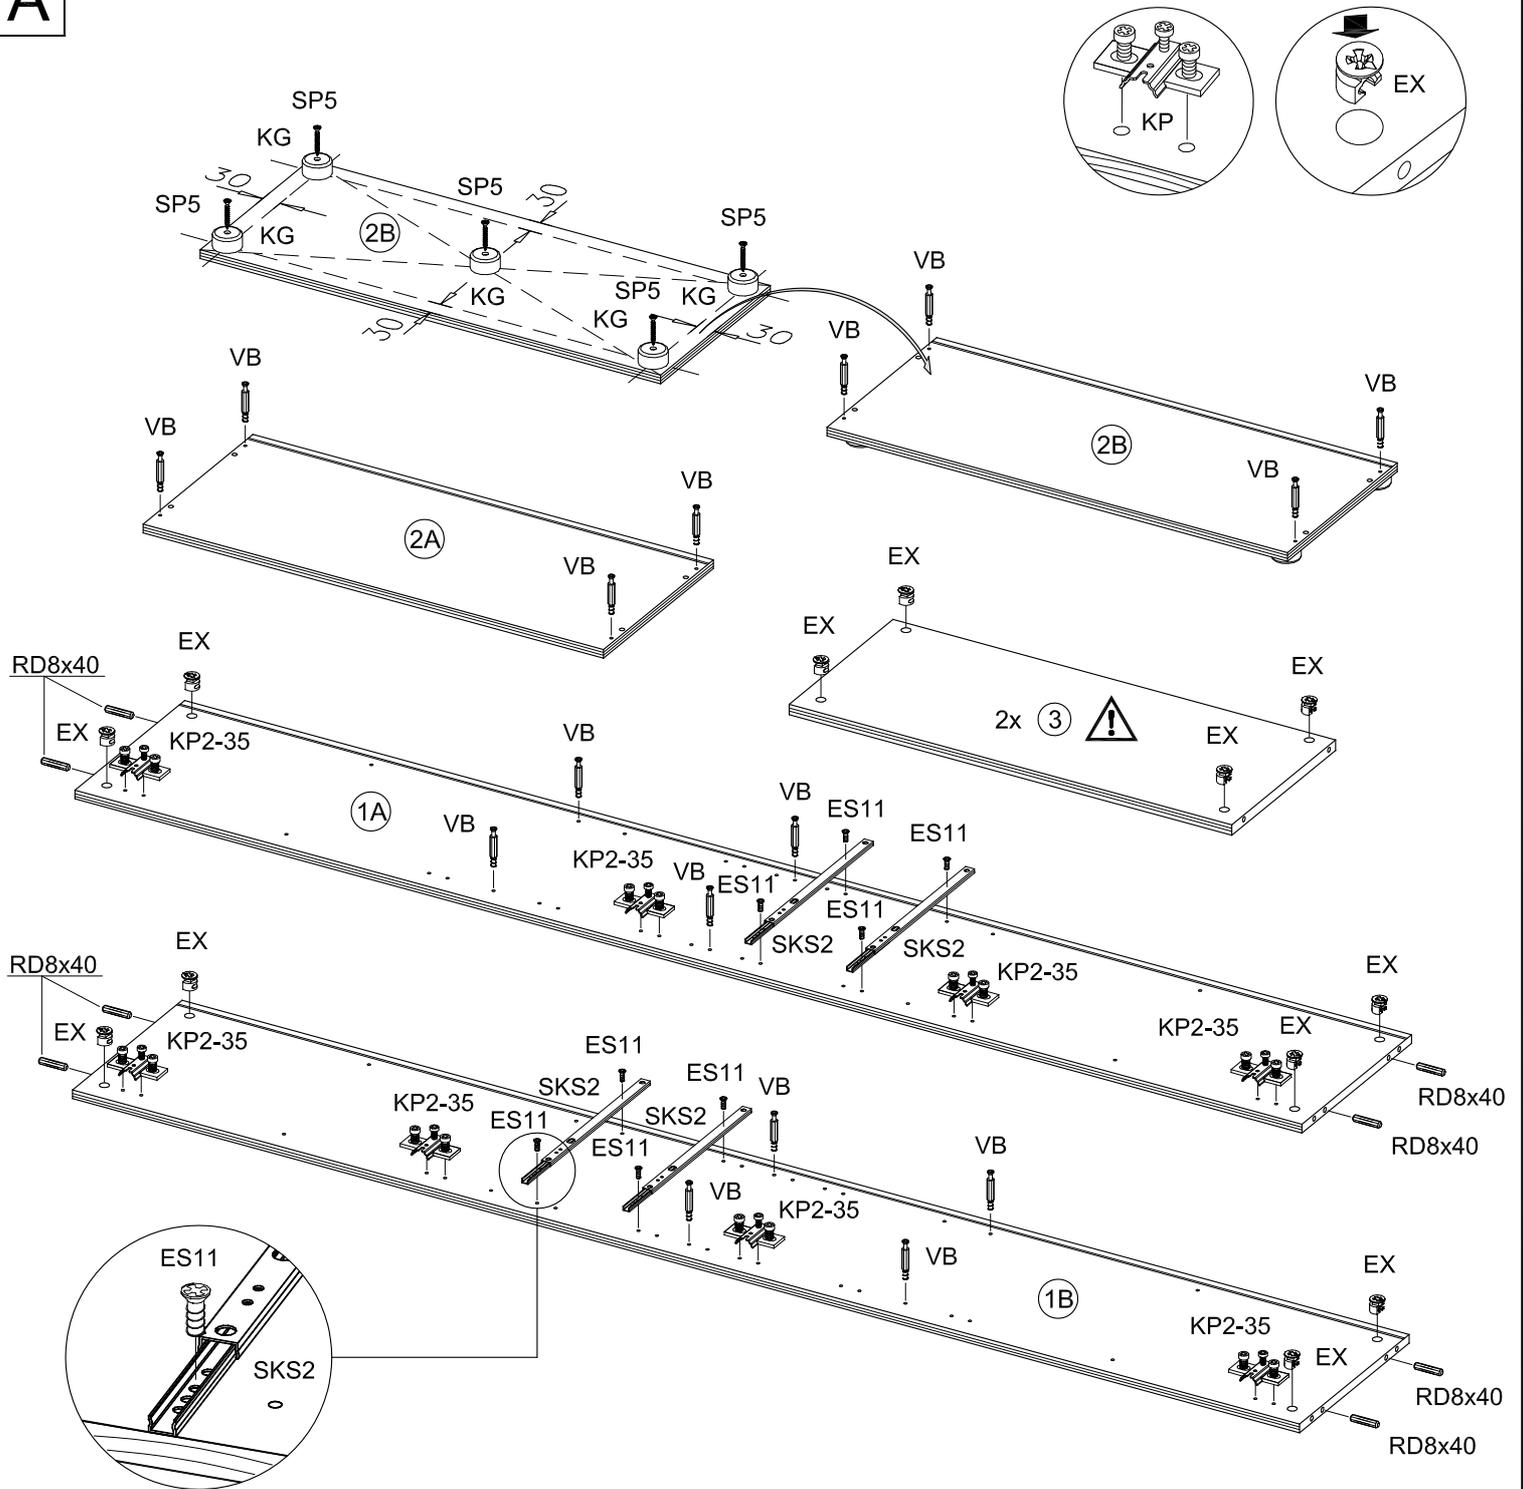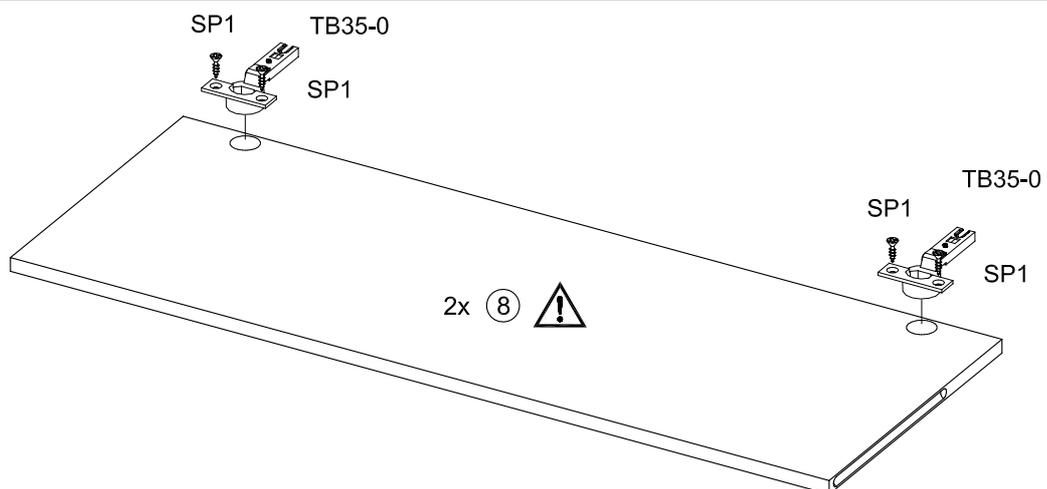
**A****B**

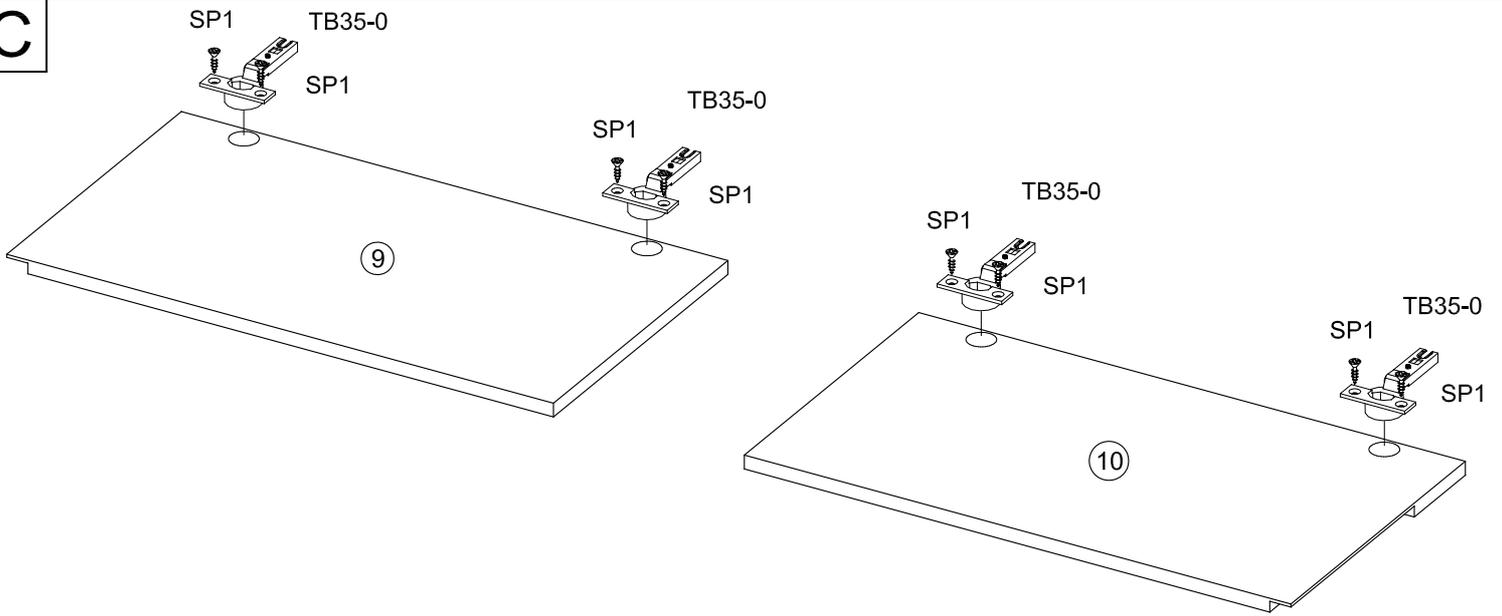
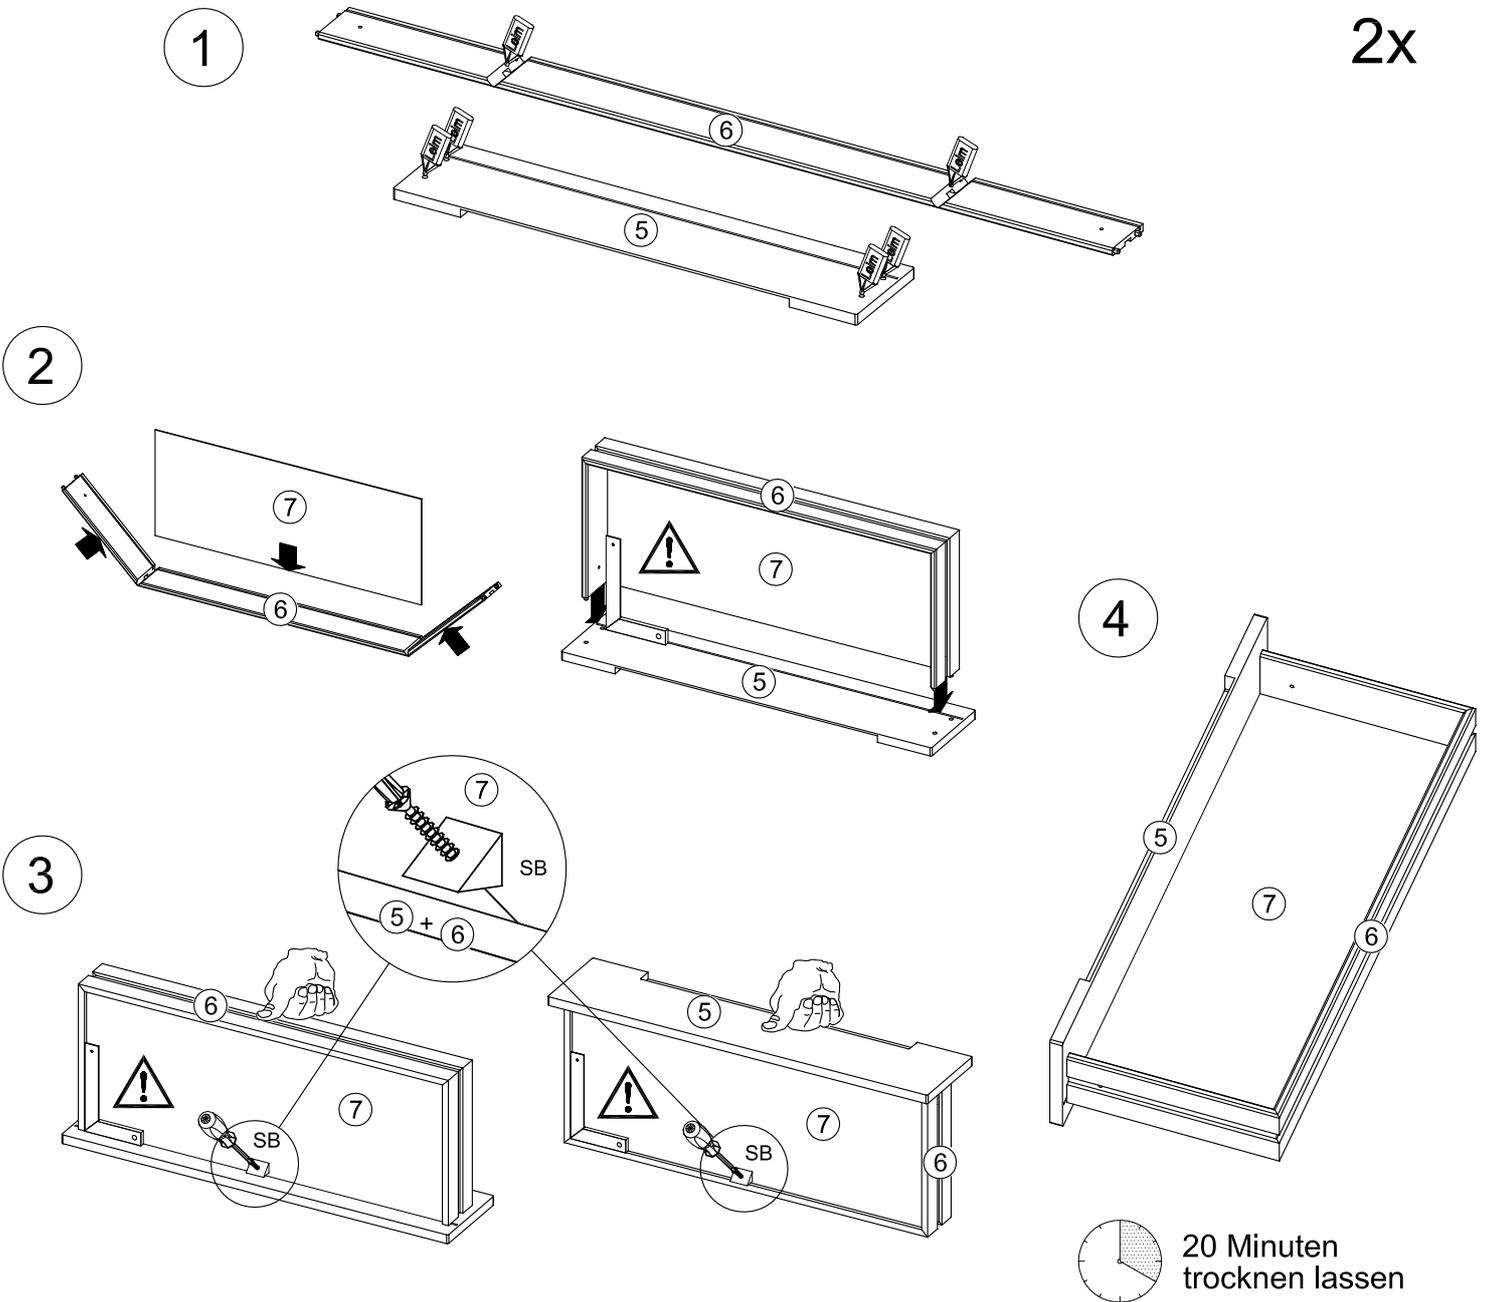
**C****D**



E

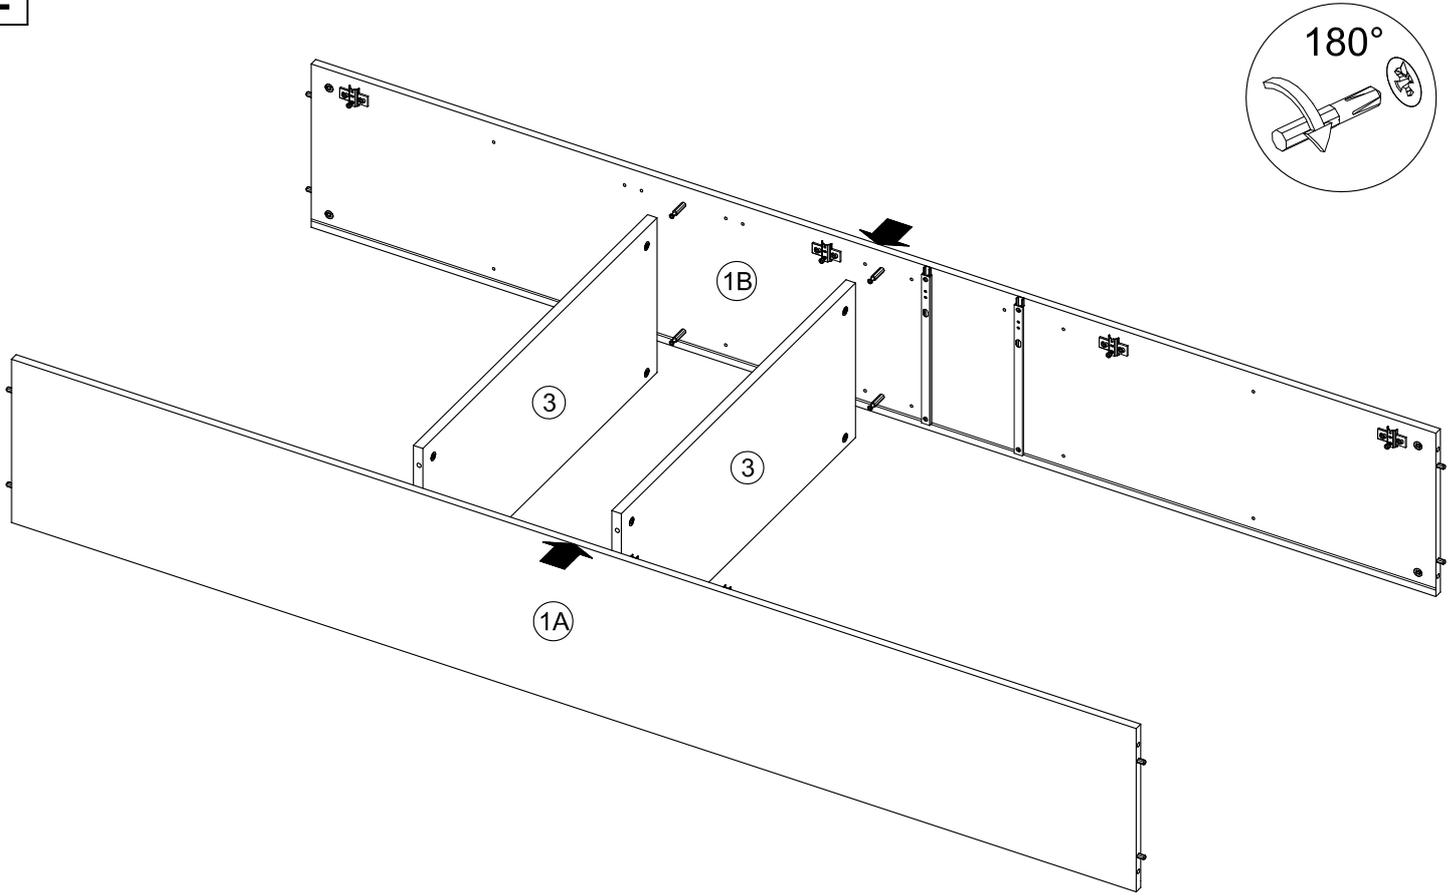


F

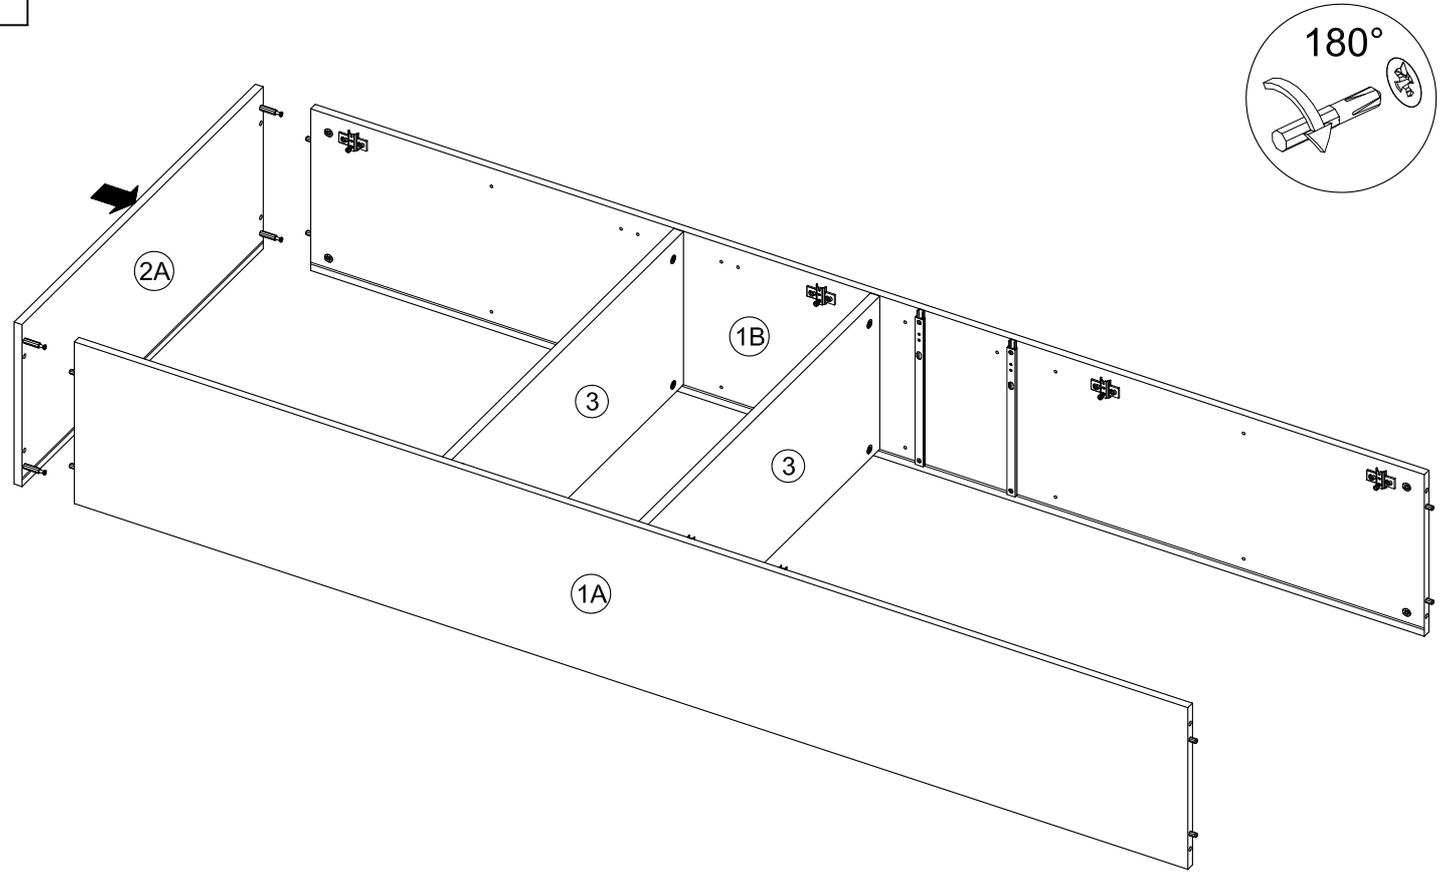

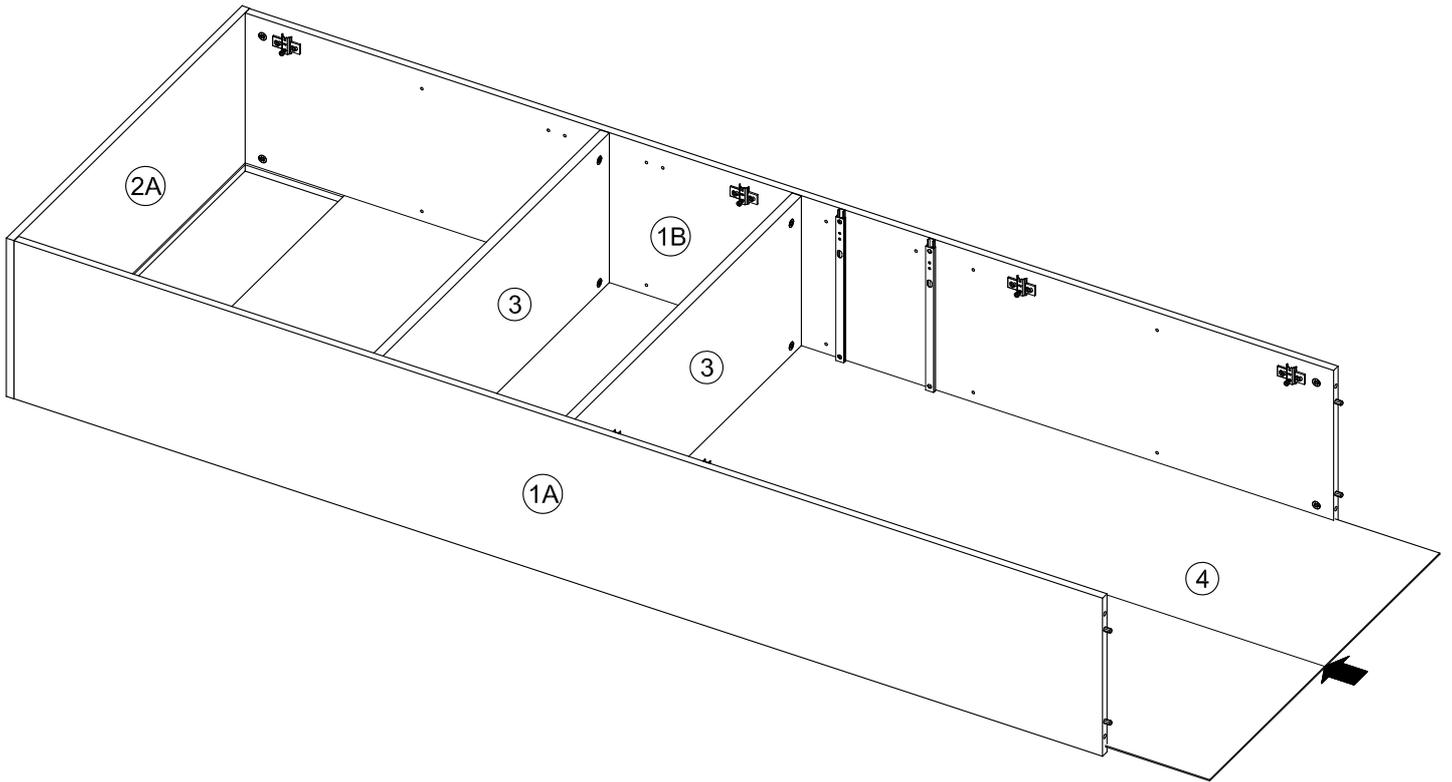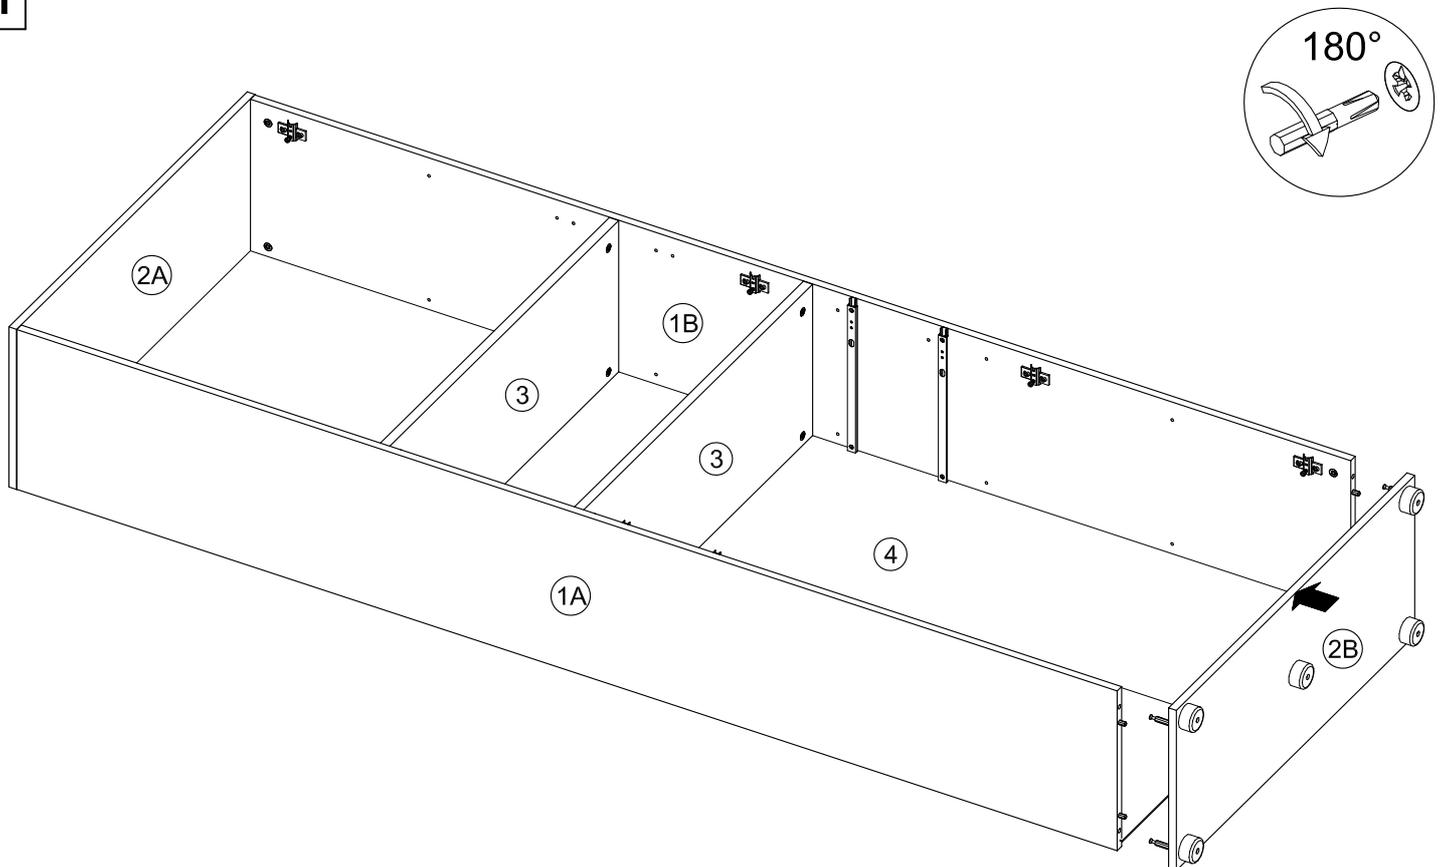**G****H**

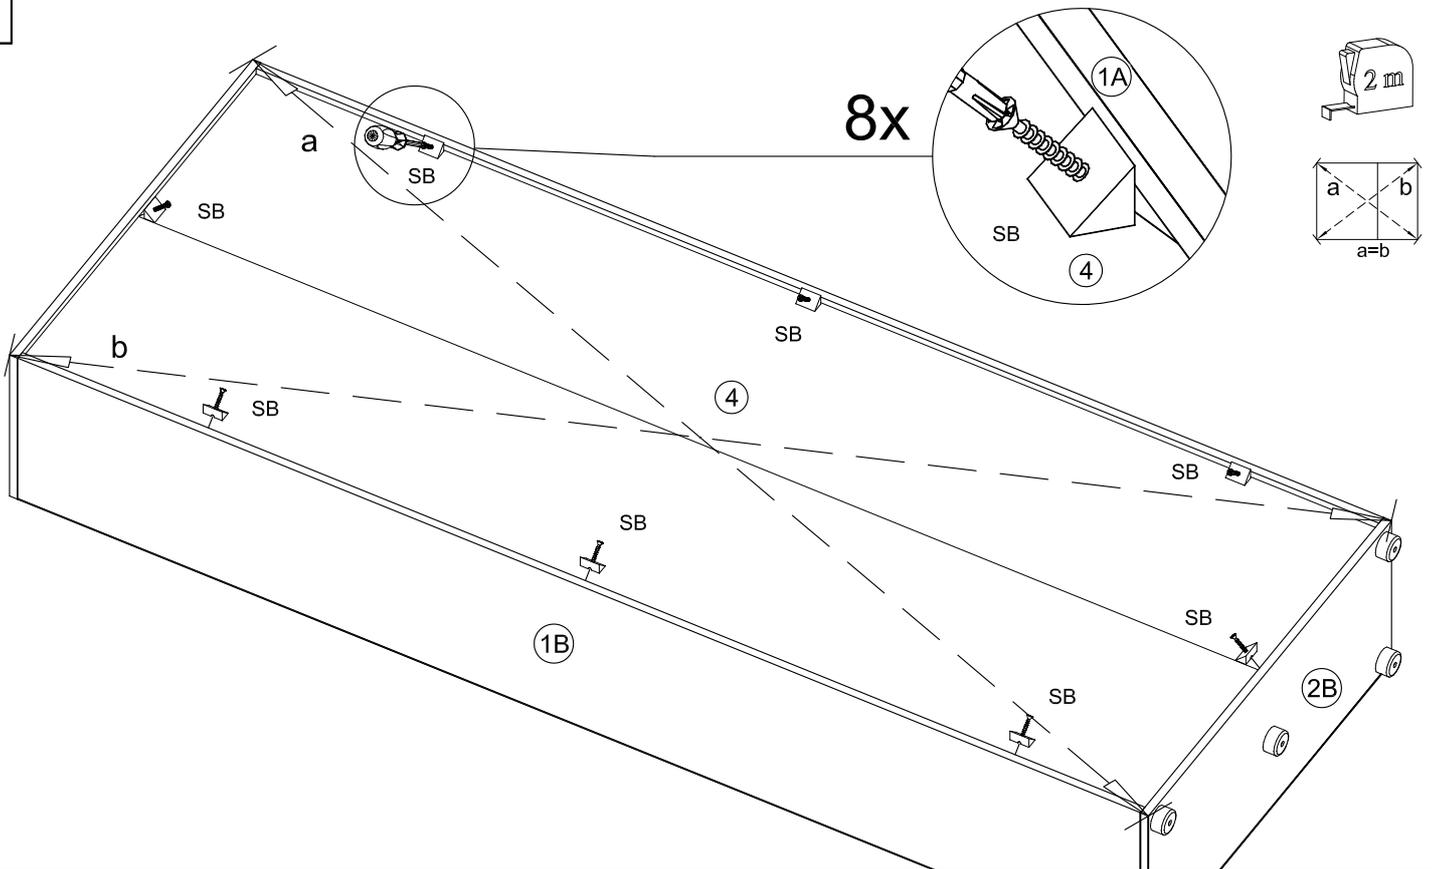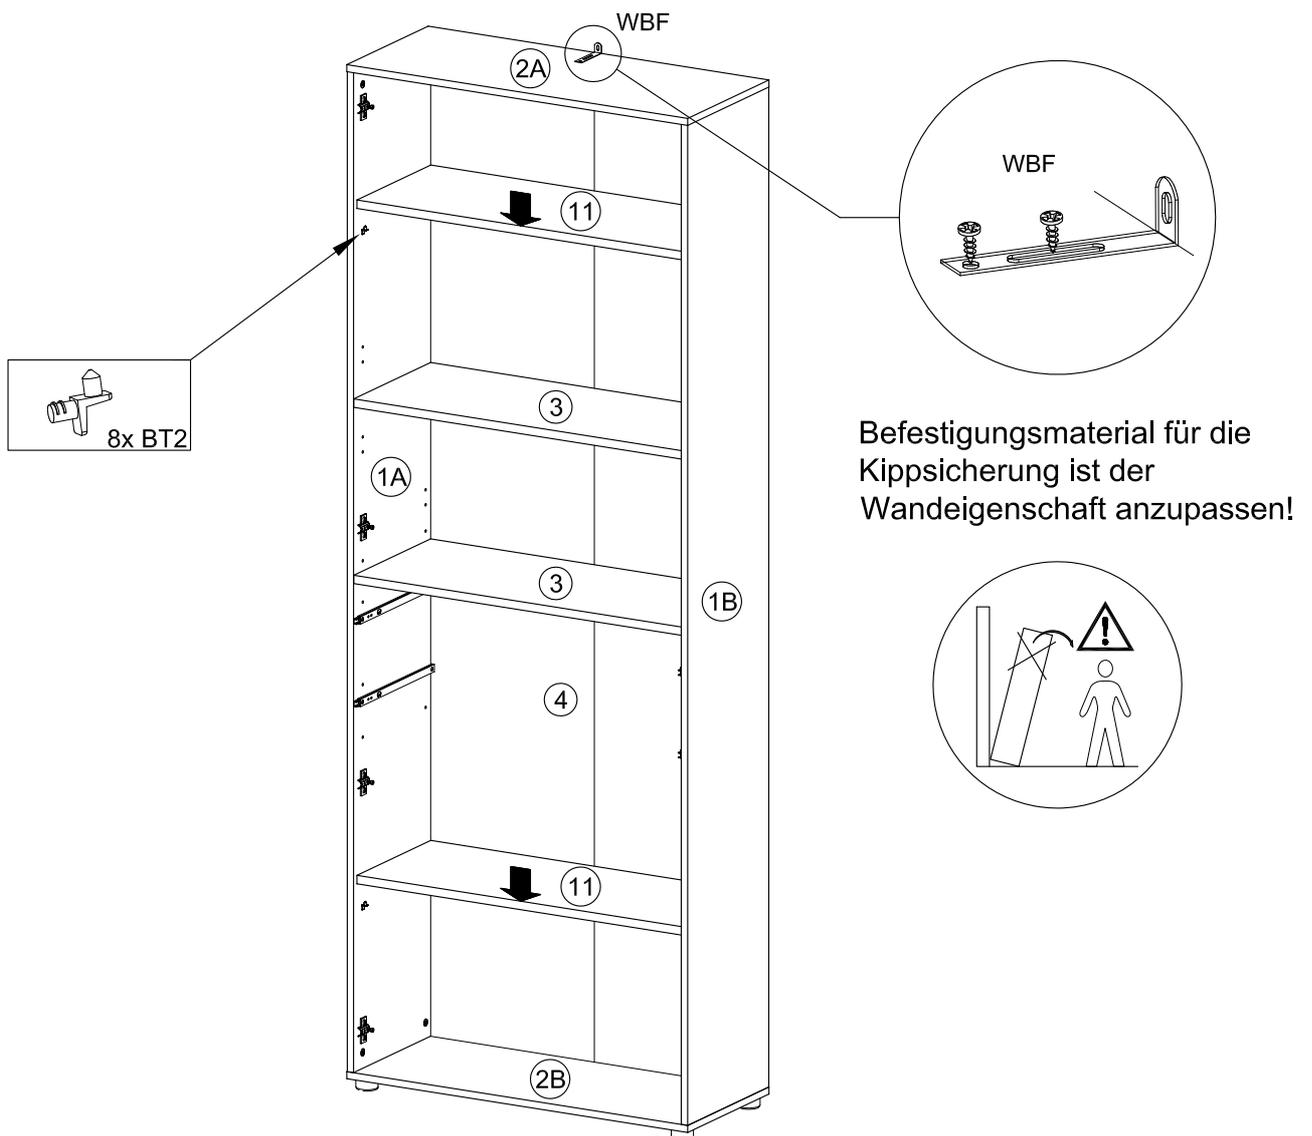**I****J**

K

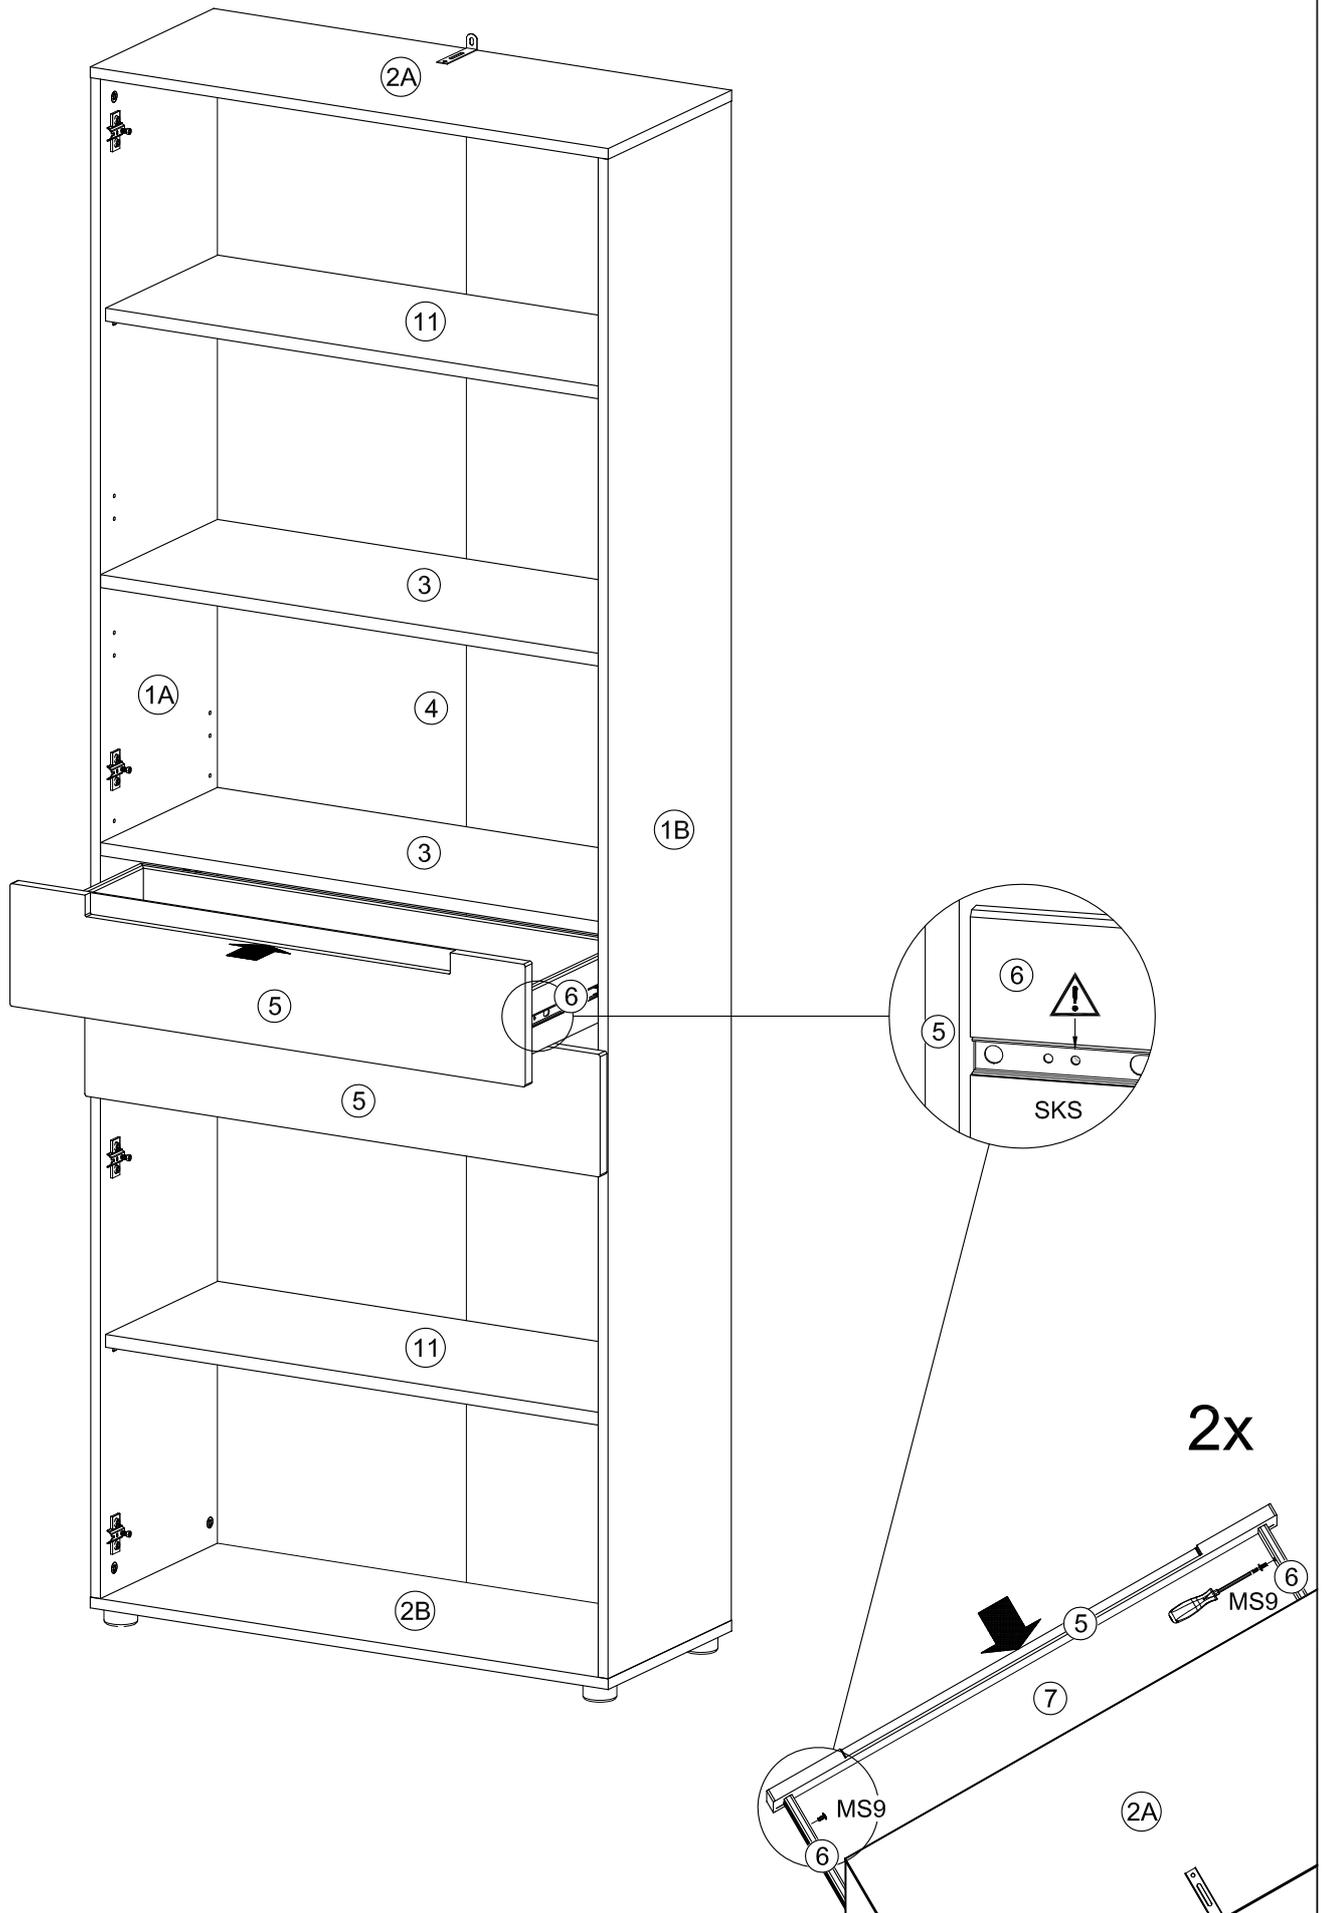

L

12x ADK-EX

